



**PARTS CATALOGUE**  
**MODEL YEAR 2001**  
***COMPETITION***  
**YZ250FN (5NL1)**

STARTING VIN: JYACG10C\*1A000040 and following

| Color Code | Color-Rite Code | Color Name                 | Abbreviation |
|------------|-----------------|----------------------------|--------------|
| 583        | 5829U           | DEEP PURPLISH BLUE SOLID E | DPBSE        |

**OWNERS/SERVICE    LIT-11626-14-46**  
**ASSEMBLY            LIT-11666-14-46**

FOREWORD

-INTRODUCTION-  
To The Yamaha Parts Fiche

This parts fiche lists parts and sub-assemblies for the YZ250FN. When preparing a parts order, please refer to the most recently updated microfiche for this model.

THE YAMAHA PARTS FICHE

SYMBOLS

|          |                                                |
|----------|------------------------------------------------|
| [ ]      | Inactive, no longer available                  |
| U.R.     | Use size (thickness) and/or number as required |
| U.N.     | Use as many as you need                        |
| T        | Number of teeth in a gear                      |
| V        | Voltage for light bulbs                        |
| S        | "S" type oil seal or "S" type circlip          |
| SD,SO,SW | "SD", "SO", or "SW" type oil seal              |
| E,R      | "E" or "R" type circlip                        |
| F/No.    | Frame No. (Applicable Machine No.)             |
| L.M.     | Locally made                                   |
| O.L.     | Obtain locally                                 |
| AP       | Alternate Part                                 |

SUPERSEDED PART NUMBERS

If part 'A' has been superseded by part 'B', the superseding part number "B" will appear in the part number listing with the superseded part number "A" appearing in parentheses immediately following the description.

EXAMPLE:

| Ref. No. | Part No.        | Description                      | Qty. |
|----------|-----------------|----------------------------------|------|
|          | (Part 'B')      | (Part 'A')                       |      |
| 8        | 123-45678-00-00 | CYLINDER (111-12345-00-00) ..... | 1    |

A part that has been supersede to a kit may be identified by a 99999-00000-00 part number appearing in the part number column. The old superseded part number will appear in parentheses immediately following the description. Listed directly below the 99999 part number will be those parts making up the kit. The description of the parts making up the kit will be preceded by a small black dot (.) and the description will be indented one letter space.

EXAMPLE:

| Ref. No. | Part No.        | Description .....          | Qty. |
|----------|-----------------|----------------------------|------|
| 8        | 99999-12345-00  | CYLINDER (111-12345-00-00) | 1    |
|          | 234-56789-00-00 | • HEAD, CYLINDER           | 1    |
|          | 345-67890-00-00 | • GASKET, CYLINDER         | 1    |

SIZES

Except for steel balls (ball sizes are indicated in inches), all parts sizes are indicated in millimeters as in the following examples:

|                              |                                                          |
|------------------------------|----------------------------------------------------------|
| Hose (Rubber or Vinyl) ..... | Inside Diameter - Length                                 |
| O-Ring .....                 | Section Area - Inside Diameter                           |
| Washer, Shim, Collar .....   | Inside Diameter - Outside Diameter<br>Thickness (Length) |

ASSEMBLIES AND COMPONENT PARTS

Assemblies and their component parts, are identified by an indentation of one letter space, and the description is preceded by a dot (.). If two main assemblies are listed, and have the same basic description (i.e.: left and right sides of the same assembly), one will immediately follow the other. If each of these main assemblies is made up of almost the same components, these component parts will be listed immediately under the second main assembly line and will be indicated, as noted above.

 
If the component is the same for both main assemblies, the quantity indicated will be the total required. If the component is not the same for both main assemblies, the quantity for each separate item will be listed separately.

EXAMPLE:


| Description                   | Qty |
|-------------------------------|-----|
| CARBURETOR ASSY, LEFT .....   | 1   |
| CARBURETOR ASSY, RIGHT .....  | 1   |
| . JET, PILOT .....            | 2   |
| . NOZZLE, MAIN .....          | 2   |
| . LEVER, STARTER, LEFT .....  | 1   |
| . LEVER, STARTER, RIGHT ..... | 1   |

APPLICABLE SERIAL NO.

(1) Engine Serial No.

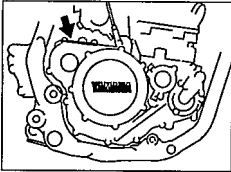

 (2) Frame Serial No.

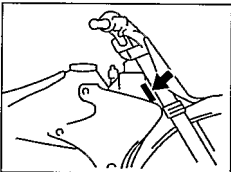


# FOREWORD

## THE YAMAHA PART NUMBER

The Yamaha part number consists of 12 digits. Each number represents a specific piece of information relating to a replacement part. The following is a guide for reading and interpreting the Yamaha part number.
 
### BASIC PART NUMBER CONFIGURATION:

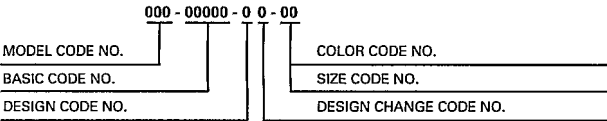

### MODEL CODE NUMBER

FIRST THREE DIGITS . . . 000-00000-00-00

 
Every model in each Yamaha product line is assigned a model number to identify that particular model. All component parts are given the model code number relating to the model on which they were first used.

Example: 4DU-00000-00-00 identifies the XJ600SE.  
3FA-00000-00-00 identifies the YFA1E.

### BASIC CODE NUMBER


MIDDLE FIVE DIGITS . . . 000-00000-00-00

These “Middle Five Digits” indicate the type of part i.e., piston, rings, lower units, etc. The five digits are broken down as follows:



The “Major Classification” indicates the section to which the parts belong, i.e., engine, electrical etc. The “Intermediate” and “Minor Classifications” indicate more specific details.

 Example:



### DESIGN CODE NUMBER: 000-00000-00-00

The design code distinguishes like component parts from one another when specification differences are involved. For example, distinguishing a standard size piston ring from an oversized piston ring.

Example:

4BR-11610- 0 0-00 Standard Piston Ring Set for XJ600SE  
4BR-11610- 2 0-00 Oversize Piston Ring Set for XJ600SE

### DESIGN CHANGE CODE NUMBER: 000-00000-00-00

This code number is used to identify a difference between a new component part and old one when a new part is created by changing the old one.

Example: YFZ350E

2GU-11610-0 0 -00 PISTON RING SET, STD. - ORIGINAL  
2GU-11610-0 1 -00 PISTON RING SET, STD. - FIRST DESIGN CHANGE

 
Only major changes to performance, durability, quality, appearance, cost or interchangeability will affect a part number change.

### COLOR CODE & SIZE CODE NUMBER: 000-00000-00-00

When applicable, the last two digits of the part number identify:

1. Color Code: The painted color or type of plating or surface treatment used on certain parts.
2. Size Code: The last two digits are also used to show the size of parts (mm). Such as the thickness of shims or the size of pistons.

### HARDWARE (Fastener) PART NUMBER CONFIGURATION:

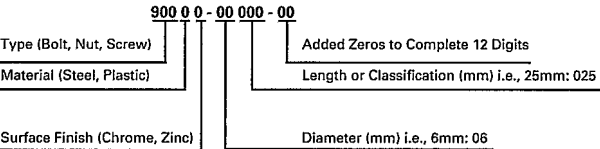

### TYPE:

A fastener part number always begins with the number “9” followed by either a 0, 1, 2, 3, 4, 5, 6, 7 or 8 designating one of eight major divisions within this group.

 
FOREWORD

Example:

- 9 0 000-00000-00 "0" designates various types.
- 9 1 000-00000-00 "1" designates bolts, cotter pins, etc.
- 9 2 000-00000-00 "2" designates screw, nuts, etc.
- 9 3 000-00000-00 "3" designates oil seals, o-rings, bearings, etc.
- 9 4 000-00000-00 "4" designates spark plugs.
- 9 5 000-00000-00 "5" designates bolts and nuts.
- 9 7 000-00000-00 "7" designates ISO bolts.
- 9 8 000-00000-00 "8" designates ISO screws and nuts.

The only major divisions which the mechanic should become familiar with are those related to the general hardware (nuts, bolts, and washers), since these are the most commonly used and most often replaced items. By knowing how to interpret the part number, the dimensions of a piece of hardware can be determined. This can be very helpful during major engine repair, and general parts replacement.


BOLT EXAMPLE:



EXCEPTION:

It is NOT possible to identify the LENGTH of bolts having a 901 prefix. Only the bolt diameter can be identified with this number.

 
NUT AND WASHER EXAMPLE:

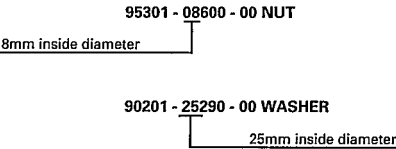


-MODEL LABEL-

A label called "Model Label" is affixed in the location as indicated in (3) below. When using this parts catalogue, please be sure to cross-reference the "model code - production code No." in the catalogue to the "model code - production code No." indicated on the Model Label affixed onto the product concerned.

 "MODEL LABEL" INDICATION




MODEL LABEL AFFIXING LOCATION

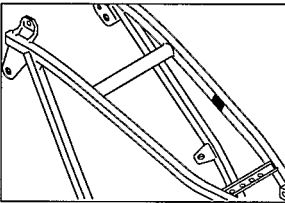 

MODEL CODE - PRODUCTION CODE NUMBER OF MODEL LISTED IN THIS PARTS CATALOG

| Model Code | Production Code No. | Country (destination) |
|------------|---------------------|-----------------------|
| 5NL1       | 010                 | USA                   |
|            |                     |                       |
|            |                     |                       |
|            |                     |                       |

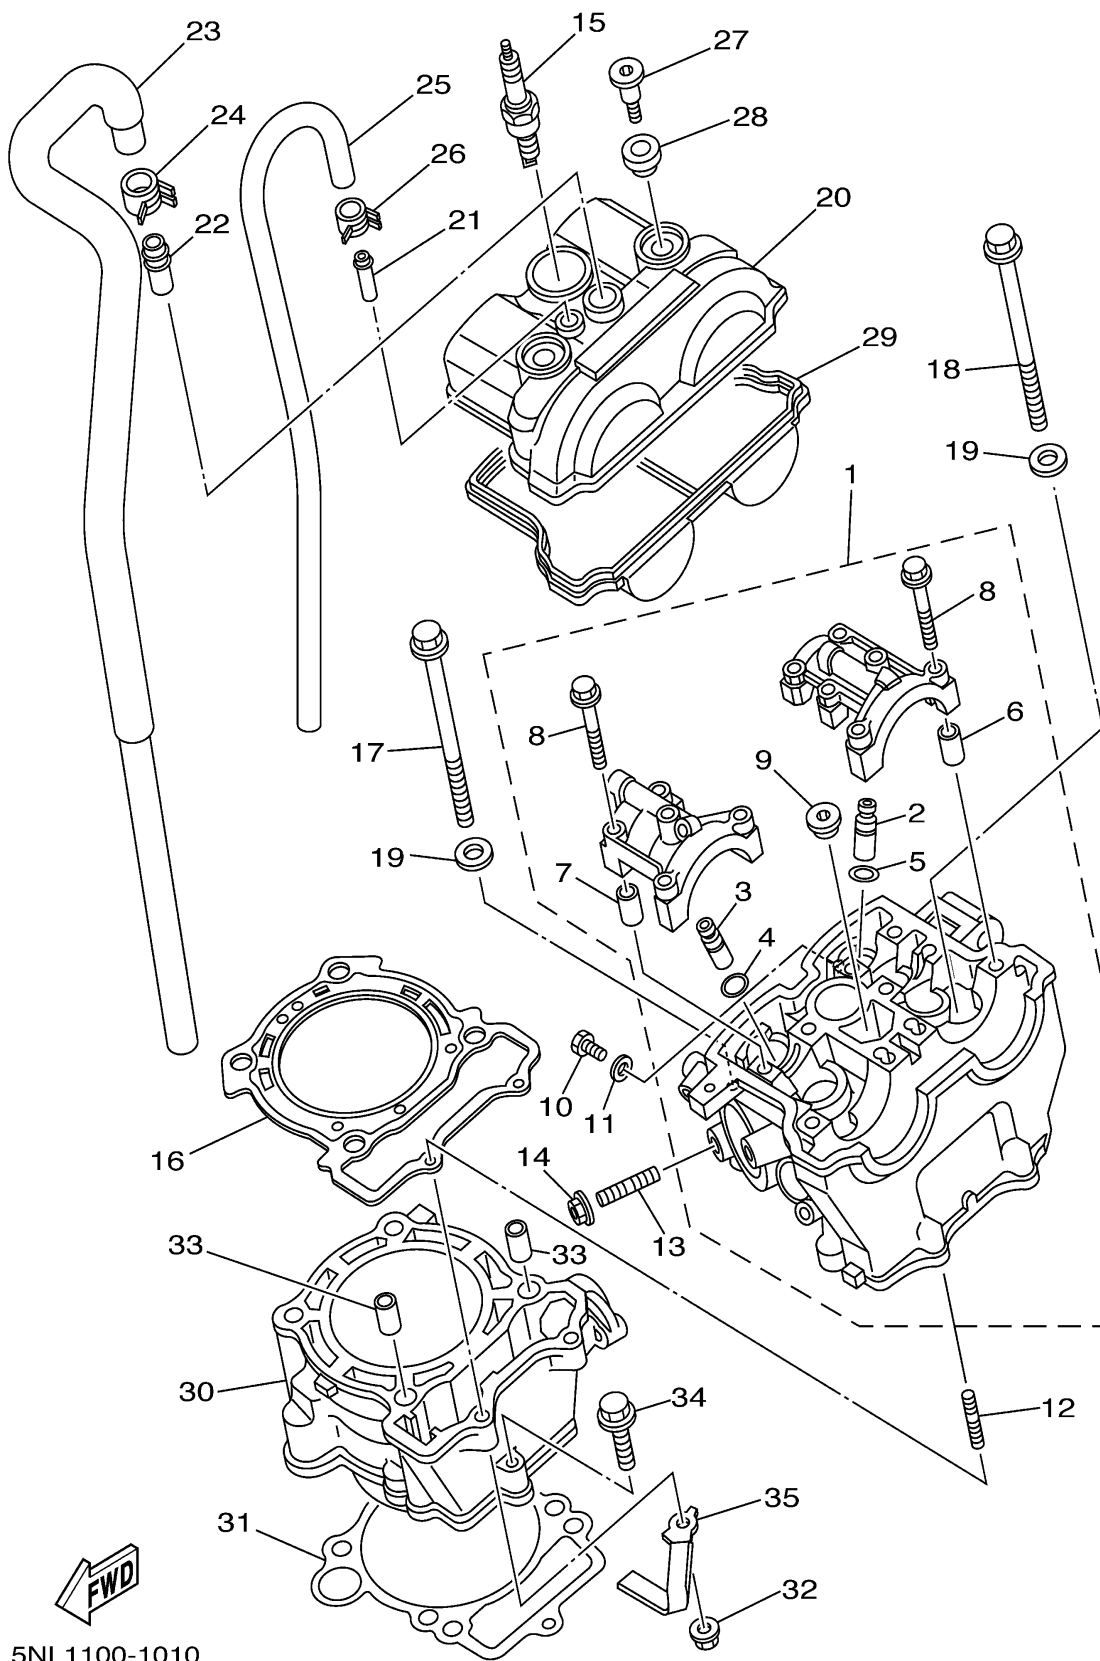 


# CYLINDER

| Ref. No. | Part Number     | Description                        | Qty | Remarks  |
|----------|-----------------|------------------------------------|-----|----------|
| 1        | 5NL-11102-00-00 | CYLINDER HEAD ASSY . . . . .       | 1   | (5NL1)   |
| 2        | 5NL-11133-10-00 | . GUIDE, INTAKE VALVE . . . . .    | 3   | (5NL1)   |
| 3        | 5NL-11134-10-00 | . GUIDE, EXHAUST VALVE . . . . .   | 2   | (5NL1)   |
| 4        | 93440-10153-00  | . CIRCLIP . . . . .                | 2   | (5NL1)   |
| 5        | 93440-07149-00  | . CIRCLIP . . . . .                | 3   | (5NL1)   |
| 6        | 91808-16023-00  | . PIN, DOWEL . . . . .             | 2   | (5NL1)   |
| 7        | 91808-16023-00  | . PIN, DOWEL . . . . .             | 2   | (5NL1)   |
| 8        | 90105-067A6-00  | . BOLT, WASHER BASED . . . . .     | 10  | (5NL1)   |
| 9        | 90340-12112-00  | . PLUG, STRAIGHT SCREW . . . . .   | 1   | (5NL1)   |
| 10       | 95027-06012-00  | BOLT, FLANGE . . . . .             | 1   | (5NL1)   |
| 11       | 90430-06014-00  | GASKET . . . . .                   | 1   | (5NL1)   |
| 12       | 90116-06541-00  | BOLT, STUD . . . . .               | 2   | (5NL1)   |
| 13       | 95617-08620-00  | BOLT, STUD . . . . .               | 1   | (5NL1)   |
| 14       | 95707-08500-00  | NUT, FLANGE . . . . .              | 1   | (5NL1)   |
| 15       | NGK-CR9E0-00-00 | PLUG, SPARK (NGK R CR9E) . . . . . | 1   | AP(5NL1) |
| 16       | 5NL-11181-00-00 | GASKET, CYLINDER HEAD 1 . . . . .  | 1   | (5NL1)   |
| 17       | 90105-09555-00  | BOLT, WASHER BASED . . . . .       | 2   | (5NL1)   |
| 18       | 90105-09002-00  | BOLT, WASHER BASED . . . . .       | 2   | (5NL1)   |
| 19       | 90201-096J9-00  | WASHER, PLATE . . . . .            | 4   | (5NL1)   |
| 20       | 5NL-11191-00-00 | COVER, CYLINDER HEAD 1 . . . . .   | 1   | (5NL1)   |
| 21       | 5BE-11167-00-00 | PIPE, BREATHER 2 . . . . .         | 1   | (5NL1)   |
| 22       | 371-11167-01-00 | PIPE, BREATHER 2 . . . . .         | 1   | (5NL1)   |
| 23       | 5BE-11166-00-00 | PIPE, BREATHER 1 . . . . .         | 1   | (5NL1)   |
| 24       | 90467-14015-00  | CLIP . . . . .                     | 1   | (5NL1)   |
| 25       | 90445-112K0-00  | HOSE (L285) . . . . .              | 1   | (5NL1)   |
| 26       | 90467-11106-00  | CLIP . . . . .                     | 2   | (5NL1)   |
| 27       | 90109-066F0-00  | BOLT . . . . .                     | 2   | (5NL1)   |
| 28       | 4KG-1111G-00-00 | RUBBER, MOUNT 1 . . . . .          | 2   | (5NL1)   |
| 29       | 5NL-11193-00-00 | GASKET, HEAD COVER 1 . . . . .     | 1   | (5NL1)   |

CONTINUED ON NEXT FRAME ➤

 
5NL1100-1010

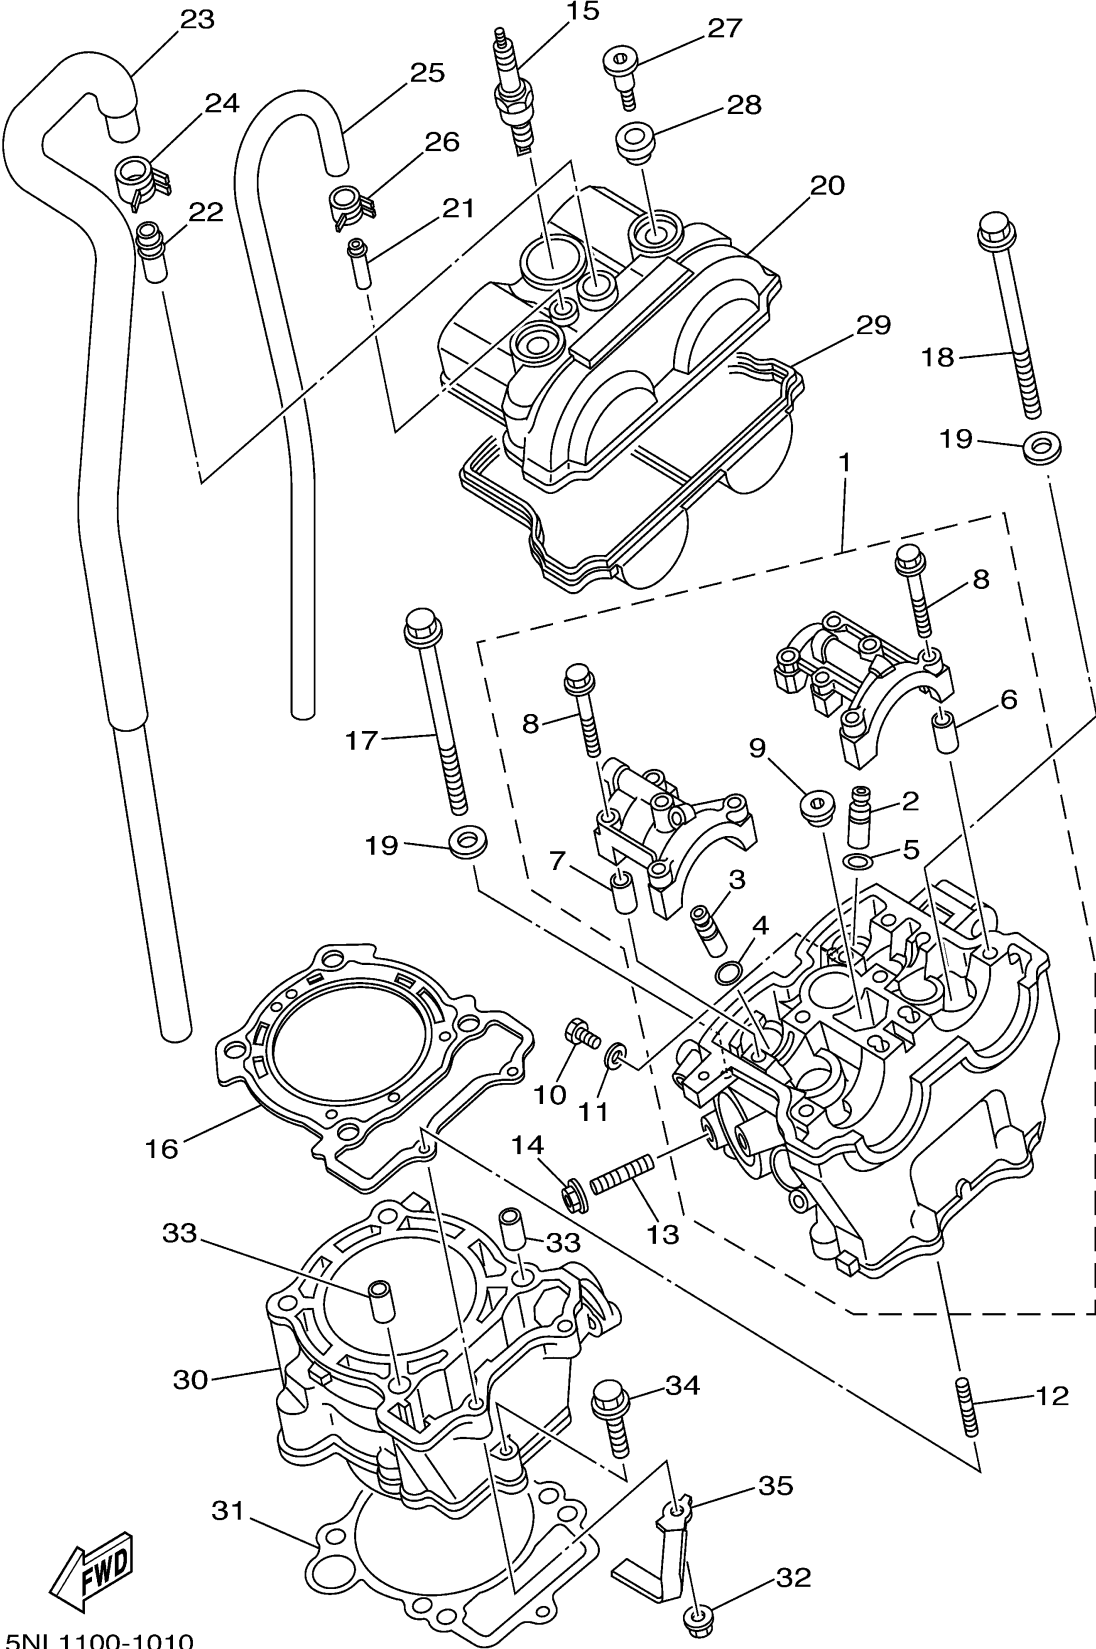

5NL1100-1010

# CYLINDER

 
| Ref. No. | Part Number     | Description            | Qty | Remarks |
|----------|-----------------|------------------------|-----|---------|
| 30       | 5NL-11311-00-00 | CYLINDER 1 .....       | 1   | (5NL1)  |
| 31       | 5NL-11351-00-00 | GASKET, CYLINDER ..... | 1   | (5NL1)  |
| 32       | 95704-06500-00  | NUT, FLANGE .....      | 2   | (5NL1)  |
| 33       | 93612-16254-00  | PIN, DOWEL .....       | 2   | (5NL1)  |
| 34       | 95027-06035-00  | BOLT, FLANGE .....     | 1   | (5NL1)  |
| 35       | 5JG-11387-00-00 | CLAMP, HOSE 1 .....    | 1   | (5NL1)  |

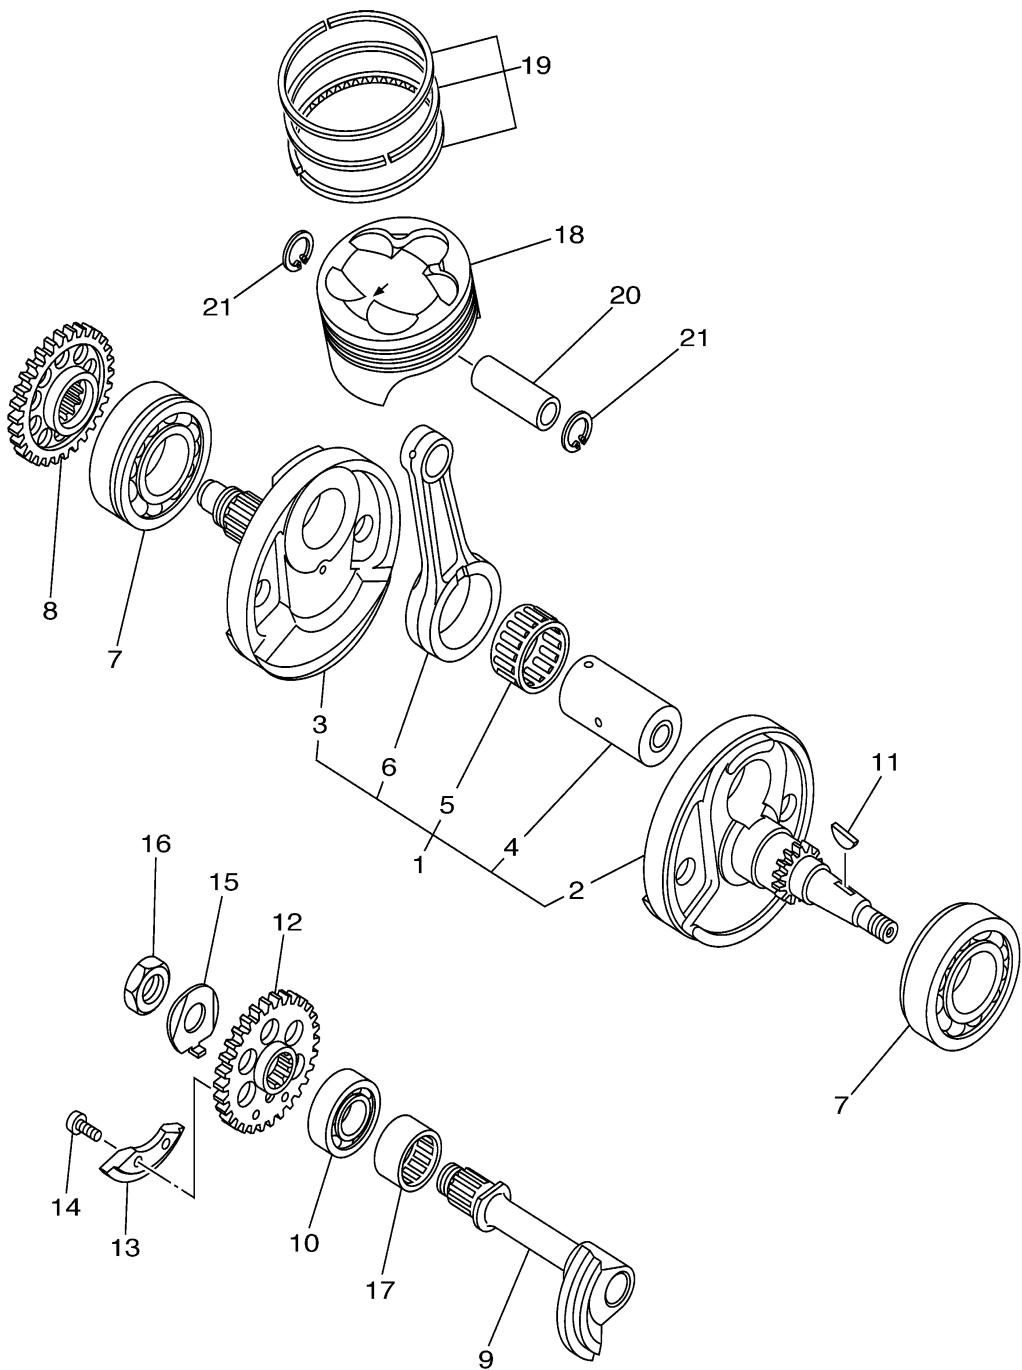

5NL1100-1020


## CRANKSHAFT. PISTON
 
| Ref. No. | Part Number     | Description                 | Qty | Remarks |
|----------|-----------------|-----------------------------|-----|---------|
| 1        | 5NL-11400-00-00 | CRANKSHAFT ASSY .....       | 1   | (5NL1)  |
| 2        | 5NL-11412-00-00 | . CRANK 1 .....             | 1   | (5NL1)  |
| 3        | 5NL-11422-00-00 | . CRANK 2 .....             | 1   | (5NL1)  |
| 4        | 5NL-11681-00-00 | . PIN, CRANK 1 .....        | 1   | (5NL1)  |
| 5        | 93310-63003-00  | . BEARING .....             | 1   | (5NL1)  |
| 6        | 5NL-11651-00-00 | . ROD, CONNECTING .....     | 1   | (5NL1)  |
| 7        | 93306-20648-00  | BEARING .....               | 2   | (5NL1)  |
| 8        | 5NL-11536-00-00 | GEAR, DRIVE .....           | 1   | (5NL1)  |
| 9        | 5NL-11455-00-00 | SHAFT 1 .....               | 1   | (5NL1)  |
| 10       | 93306-20335-00  | BEARING .....               | 1   | (5NL1)  |
| 11       | 90280-03001-00  | KEY, WOODRUFF .....         | 1   | (5NL1)  |
| 12       | 5NL-11531-00-00 | GEAR, BALANCE WT .....      | 1   | (5NL1)  |
| 13       | 5NL-11454-00-00 | WEIGHT 1 .....              | 1   | (5NL1)  |
| 14       | 90149-06250-00  | SCREW .....                 | 2   | (5NL1)  |
| 15       | 90215-14204-00  | WASHER, LOCK .....          | 1   | (5NL1)  |
| 16       | 90170-14171-00  | NUT .....                   | 1   | (5NL1)  |
| 17       | 93311-32261-00  | BEARING .....               | 1   | (5NL1)  |
| 18       | 5NL-11631-00-00 | PISTON (STD) .....          | 1   | (5NL1)  |
| 19       | 5NL-11603-00-00 | PISTON RING SET (STD) ..... | 1   | (5NL1)  |
| 20       | 5NL-11633-00-00 | PIN, PISTON .....           | 1   | (5NL1)  |
| 21       | 93420-16086-00  | CIRCLIP .....               | 2   | (5NL1)  |

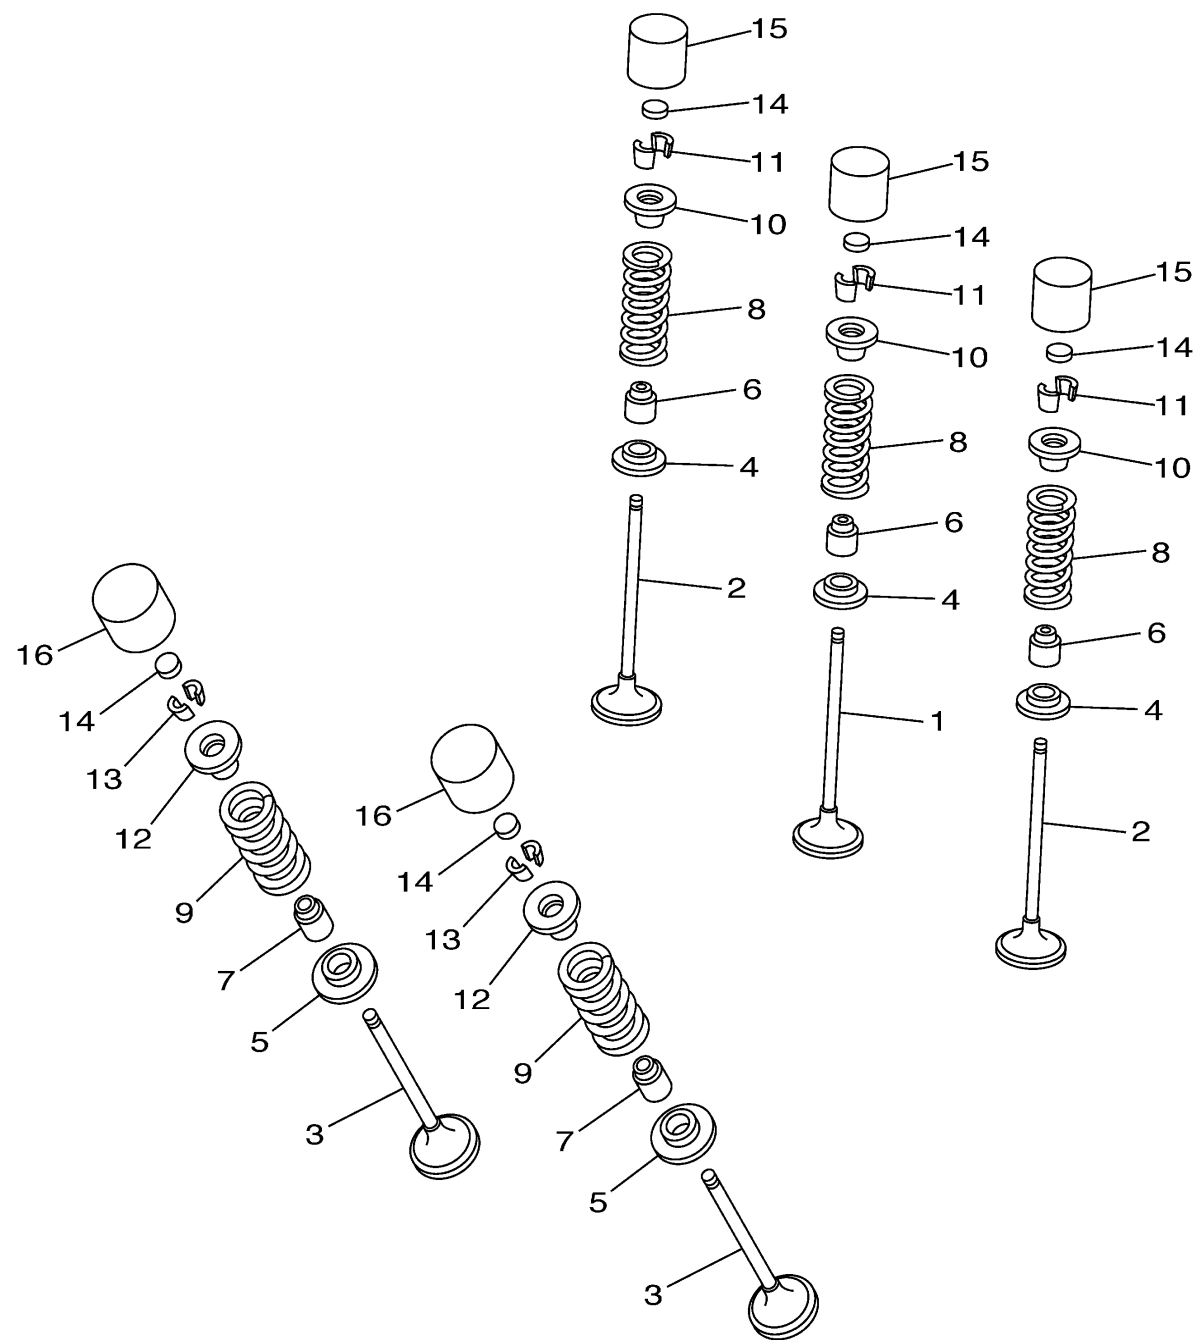


# VALVE
 
| Ref. No. | Part Number     | Description                  | Qty | Remarks  |
|----------|-----------------|------------------------------|-----|----------|
| 1        | 5NL-12111-00-00 | VALVE, INTAKE .....          | 1   | (5NL1)   |
| 2        | 5NL-12112-00-00 | VALVE, INTAKE 2 .....        | 2   | (5NL1)   |
| 3        | 5NL-12121-00-00 | VALVE, EXHAUST .....         | 2   | (5NL1)   |
| 4        | 5NL-12116-00-00 | SEAT, VALVE SPRING .....     | 3   | (5NL1)   |
| 5        | 3GM-12126-00-00 | SEAT, VALVE SPRING 2 .....   | 2   | (5NL1)   |
| 6        | 4TV-12119-00-00 | SEAL, VALVE STEM .....       | 3   | (5NL1)   |
| 7        | 4SV-12119-00-00 | SEAL, VALVE STEM .....       | 2   | (5NL1)   |
| 8        | 5NL-12113-00-00 | SPRING, VALVE INNER .....    | 3   | (5NL1)   |
| 9        | 5NL-12114-00-00 | SPRING, VALVE OUTER .....    | 2   | (5NL1)   |
| 10       | 1HX-12117-00-00 | RETAINER, VALVE SPRING ..    | 3   | (5NL1)   |
| 11       | 1HX-12118-00-00 | COTTER, VALVE .....          | 6   | (5NL1)   |
| 12       | 1WG-12117-00-00 | RETAINER, VALVE SPRING ..    | 2   | (5NL1)   |
| 13       | 1WG-12118-00-00 | COTTER, VALVE .....          | 4   | (5NL1)   |
| 14       | 1HX-12168-00-00 | PAD, ADJUSTING 2 (1.20) .... | 5   | UR(5NL1) |
|          | 1HX-12168-20-00 | PAD, ADJUSTING 2 (1.25) .... | 5   | UR(5NL1) |
|          | 1HX-12168-40-00 | PAD, ADJUSTING 2 (1.30) .... | 5   | UR(5NL1) |
|          | 1HX-12168-60-00 | PAD, ADJUSTING 2 (1.35) .... | 5   | UR(5NL1) |
|          | 1HX-12168-80-00 | PAD, ADJUSTING 2 (1.40) .... | 5   | UR(5NL1) |
|          | 1HX-12168-A0-00 | PAD, ADJUSTING 2 (1.45) .... | 5   | UR(5NL1) |
|          | 1HX-12168-F0-00 | PAD, ADJUSTING 2 (1.50) .... | 5   | UR(5NL1) |
|          | 1HX-12168-H1-00 | PAD, ADJUSTING 2 (1.55) .... | 5   | UR(5NL1) |
|          | 1HX-12168-K1-00 | PAD, ADJUSTING 2 (1.60) .... | 5   | UR(5NL1) |
|          | 1HX-12168-M1-00 | PAD, ADJUSTING 2 (1.65) .... | 5   | UR(5NL1) |
|          | 1HX-12168-R1-00 | PAD, ADJUSTING 2 (1.70) .... | 5   | UR(5NL1) |
|          | 1HX-12168-U1-00 | PAD, ADJUSTING 2 (1.75) .... | 5   | UR(5NL1) |
|          | 1HX-12168-W1-00 | PAD, ADJUSTING 2 (1.80) .... | 5   | UR(5NL1) |
|          | 1HX-12168-Y1-00 | PAD, ADJUSTING 2 (1.85) .... | 5   | UR(5NL1) |
|          | 1HX-12169-11-00 | PAD, ADJUSTING 2 (1.90) .... | 5   | UR(5NL1) |
|          | 1HX-12169-31-00 | PAD, ADJUSTING 2 (1.95) .... | 5   | UR(5NL1) |

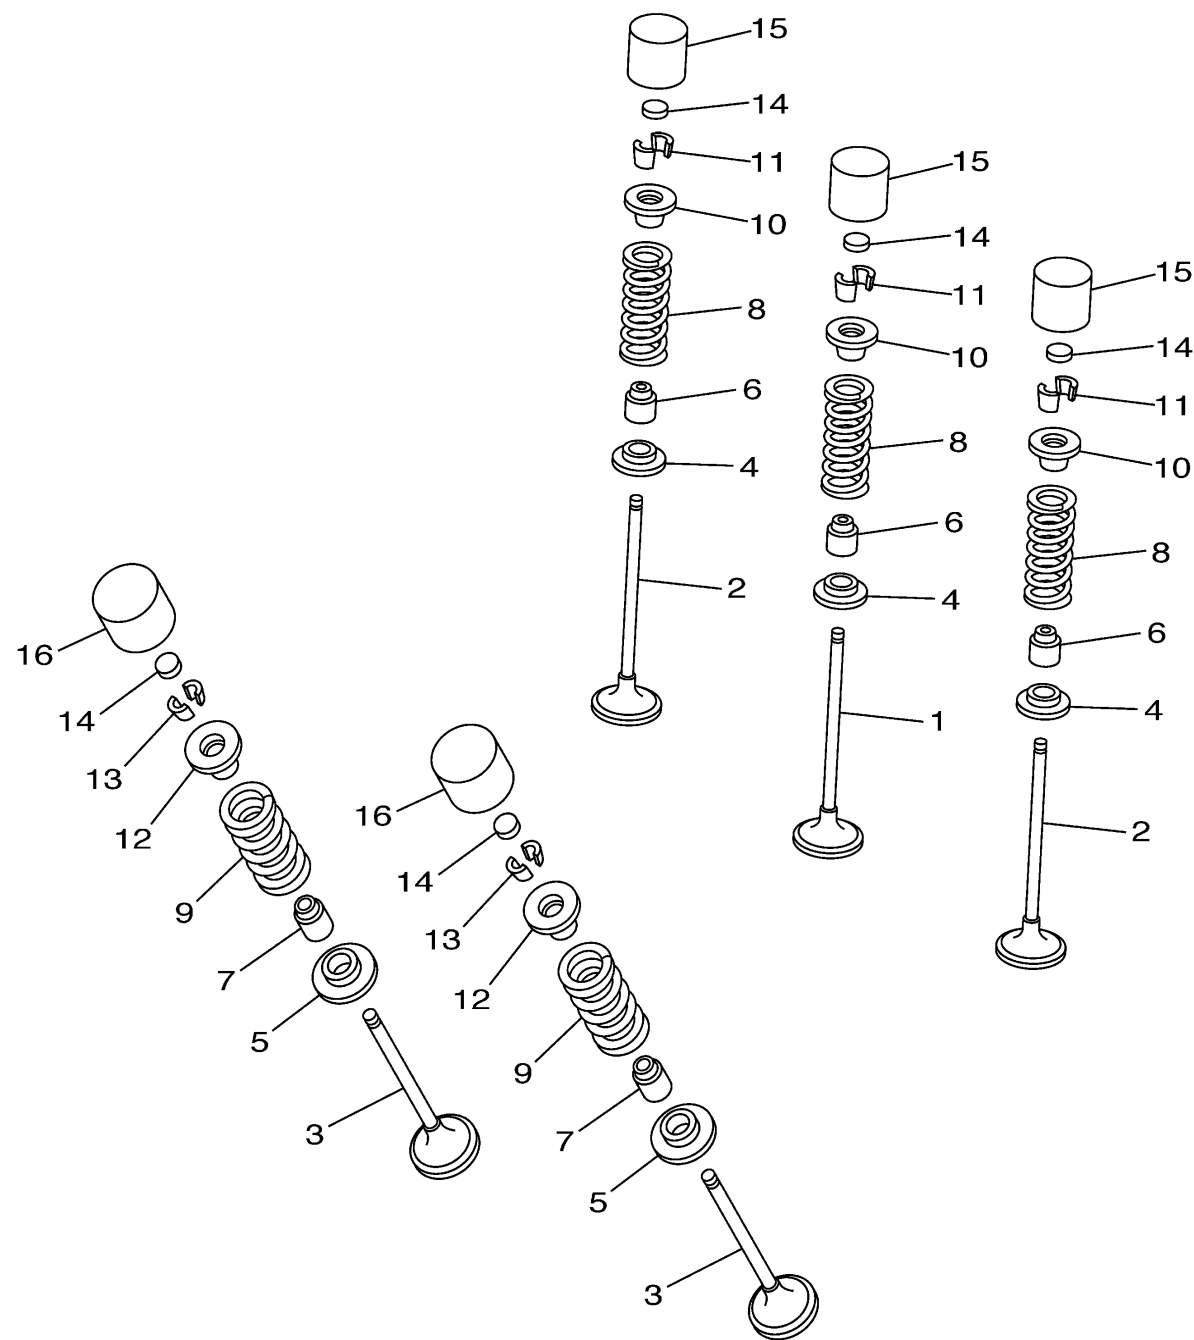

VALVE

| Ref. No. | Part Number     | Description             | Qty | Remarks         |
|----------|-----------------|-------------------------|-----|-----------------|
| 14       | 1HX-12169-50-00 | PAD, ADJUSTING 2 (2.00) | 5   | UR(5NL1)        |
|          | 1HX-12169-70-00 | PAD, ADJUSTING 2 (2.05) | 5   | UR(5NL1)        |
|          | 1HX-12169-90-00 | PAD, ADJUSTING 2 (2.10) | 5   | UR(5NL1)        |
|          | 1HX-12169-E0-00 | PAD, ADJUSTING 2 (2.15) | 5   | UR(5NL1)        |
|          | 1HX-12169-G0-00 | PAD, ADJUSTING 2 (2.20) | 5   | UR(5NL1)        |
|          | 1HX-12169-J0-00 | PAD, ADJUSTING 2 (2.25) | 5   | UR(5NL1)        |
|          | 1HX-12169-L0-00 | PAD, ADJUSTING 2 (2.30) | 5   | UR(5NL1)        |
|          | 1HX-12169-N0-00 | PAD, ADJUSTING 2 (2.35) | 5   | UR(5NL1)        |
|          | 1HX-12169-T0-00 | PAD, ADJUSTING 2 (2.40) | 5   | UR(5NL1)        |
| 15       | 3LN-12153-00-00 | LIFTER, VALVE           | 3   | UR BLACK(5NL1)  |
|          | 3LN-12153-10-00 | LIFTER, VALVE           | 3   | UR YELLOW(5NL1) |
|          | 3LN-12153-20-00 | LIFTER, VALVE           | 3   | UR BLUE(5NL1)   |
|          | 3LN-12153-30-00 | LIFTER, VALVE           | 3   | UR RED(5NL1)    |
| 16       | 3FV-12153-00-00 | LIFTER, VALVE           | 2   | UR BLACK(5NL1)  |
|          | 3FV-12153-10-00 | LIFTER, VALVE           | 2   | UR YELLOW(5NL1) |
|          | 3FV-12153-20-00 | LIFTER, VALVE           | 2   | UR BLUE(5NL1)   |
|          | 3FV-12153-30-00 | LIFTER, VALVE           | 2   | UR(5NL1)        |

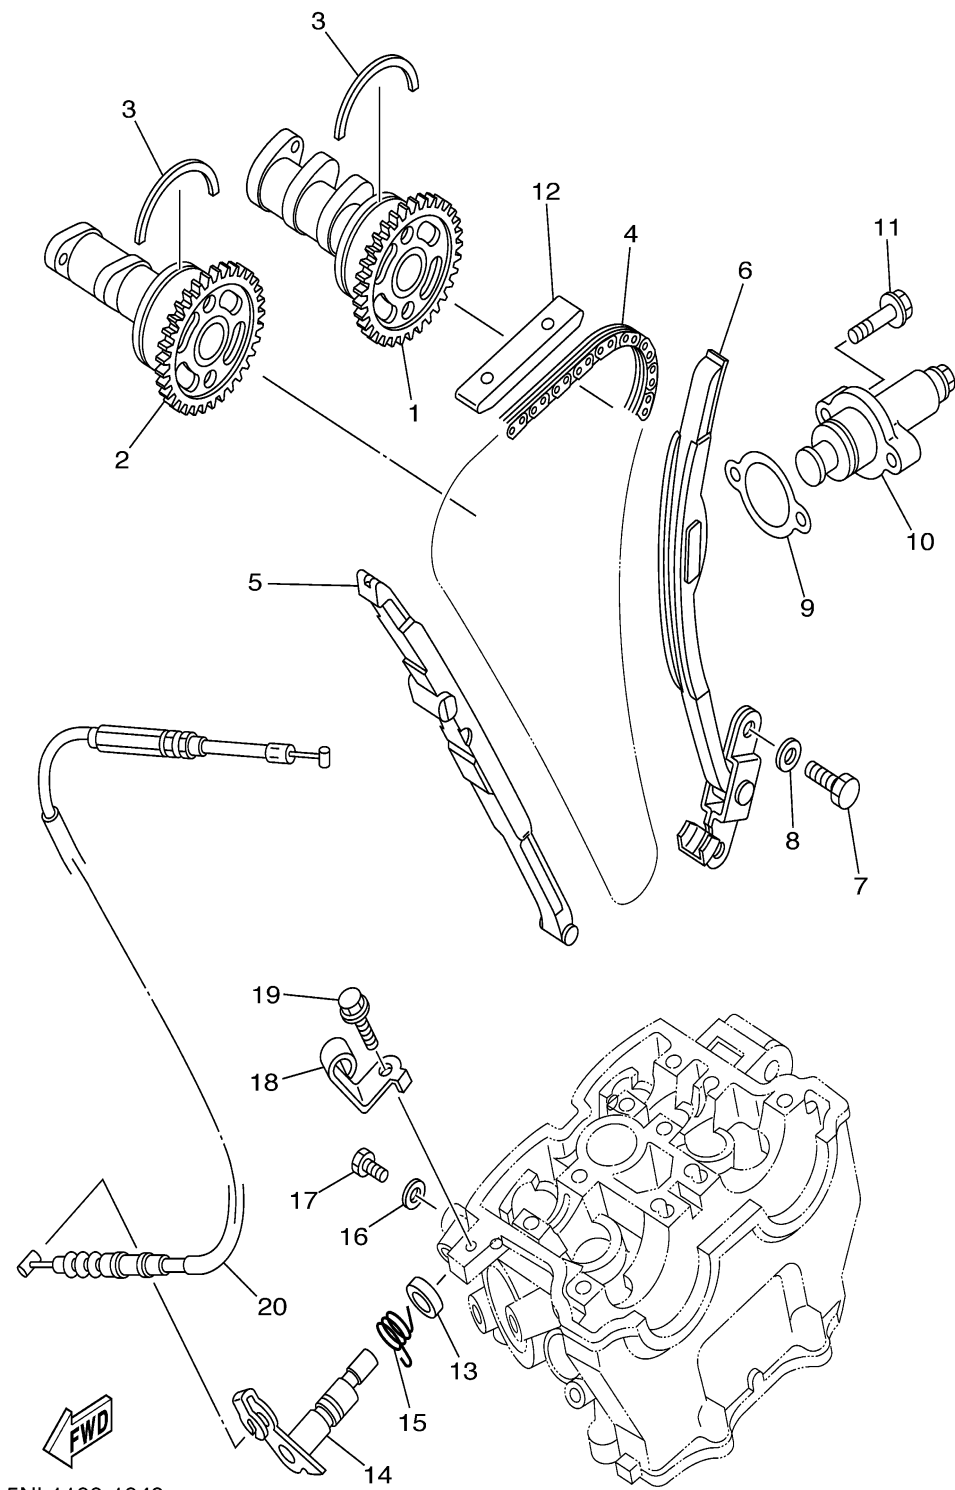 


# CAMSHAFT. CHAIN


| Ref. No. | Part Number     | Description               | Qty | Remarks |
|----------|-----------------|---------------------------|-----|---------|
| 1        | 5NL-12170-00-00 | CAMSHAFT ASSY 1 .....     | 1   | (5NL1)  |
| 2        | 5NL-12180-00-00 | CAMSHAFT ASSY 2 .....     | 1   | (5NL1)  |
| 3        | 93440-41178-00  | CIRCLIP .....             | 2   | (5NL1)  |
| 4        | 94591-53114-00  | CHAIN .....               | 1   | (5NL1)  |
| 5        | 5NL-12251-00-00 | DAMPER, CHAIN 1 .....     | 1   | (5NL1)  |
| 6        | 5NL-12252-00-00 | DAMPER, CHAIN 2 .....     | 1   | (5NL1)  |
| 7        | 97027-06016-00  | BOLT .....                | 2   | (5NL1)  |
| 8        | 92907-06600-00  | WASHER, PLATE .....       | 2   | (5NL1)  |
| 9        | 4FM-12213-00-00 | GASKET, TENSIONER CASE .. | 1   | (5NL1)  |
| 10       | 5BE-12210-00-00 | TENSIONER ASSY, CAM CHAIN | 1   | (5NL1)  |
| 11       | 95027-06025-00  | BOLT, FLANGE .....        | 2   | (5NL1)  |
| 12       | 5BE-12241-00-00 | GUIDE, STOPPER 2 .....    | 1   | (5NL1)  |
| 13       | 93102-12224-00  | OIL SEAL .....            | 1   | (5NL1)  |
| 14       | 5BE-12280-10-00 | DECOMPRESSION ASSY .....  | 1   | (5NL1)  |
| 15       | 90508-162B2-00  | SPRING, TORSION .....     | 1   | (5NL1)  |
| 16       | 90430-06014-00  | GASKET .....              | 1   | (5NL1)  |
| 17       | 90109-06418-00  | BOLT .....                | 1   | (5NL1)  |
| 18       | 5NL-12283-00-00 | BRACKET, DECOMPRESSION .  | 1   | (5NL1)  |
| 19       | 95827-06014-00  | BOLT, FLANGE .....        | 1   | (5NL1)  |
| 20       | 5BE-12292-10-00 | CABLE, DECOMPRESSION ...  | 1   | (5NL1)  |

WATER PUMP
 
| Ref. No. | Part Number     | Description                      | Qty | Remarks |
|----------|-----------------|----------------------------------|-----|---------|
| 1        | 5NL-12459-00-00 | GEAR, IMPELLER SHAFT . . . .     | 1   | (5NL1)  |
| 2        | 90201-08512-00  | WASHER, PLATE . . . . .          | 1   | (5NL1)  |
| 3        | 93440-07182-00  | CIRCLIP . . . . .                | 1   | (5NL1)  |
| 4        | 5DH-12451-00-00 | IMPELLER, WATER PUMP . . . .     | 1   | (5NL1)  |
| 5        | 90201-08512-00  | WASHER, PLATE . . . . .          | 1   | (5NL1)  |
| 6        | 93109-11073-00  | OIL SEAL . . . . .               | 1   | (5NL1)  |
| 7        | 93102-12106-00  | OIL SEAL (SD 12-22-5 HS) . . . . | 1   | (5NL1)  |
| 8        | 93306-00105-00  | BEARING (B6001) . . . . .        | 1   | (5NL1)  |
| 9        | 5NL-12422-00-00 | COVER, HOUSING . . . . .         | 1   | (5NL1)  |
| 10       | 5NL-12439-00-00 | O-RING . . . . .                 | 1   | (5NL1)  |
| 11       | 93604-10011-00  | PIN, DOWEL . . . . .             | 2   | (5NL1)  |
| 12       | 90430-06014-00  | GASKET . . . . .                 | 1   | (5NL1)  |
| 13       | 95027-06025-00  | BOLT, FLANGE . . . . .           | 3   | (5NL1)  |
| 14       | 95027-06065-00  | BOLT, FLANGE . . . . .           | 1   | (5NL1)  |
| 15       | 95027-06012-00  | BOLT, FLANGE . . . . .           | 1   | (5NL1)  |

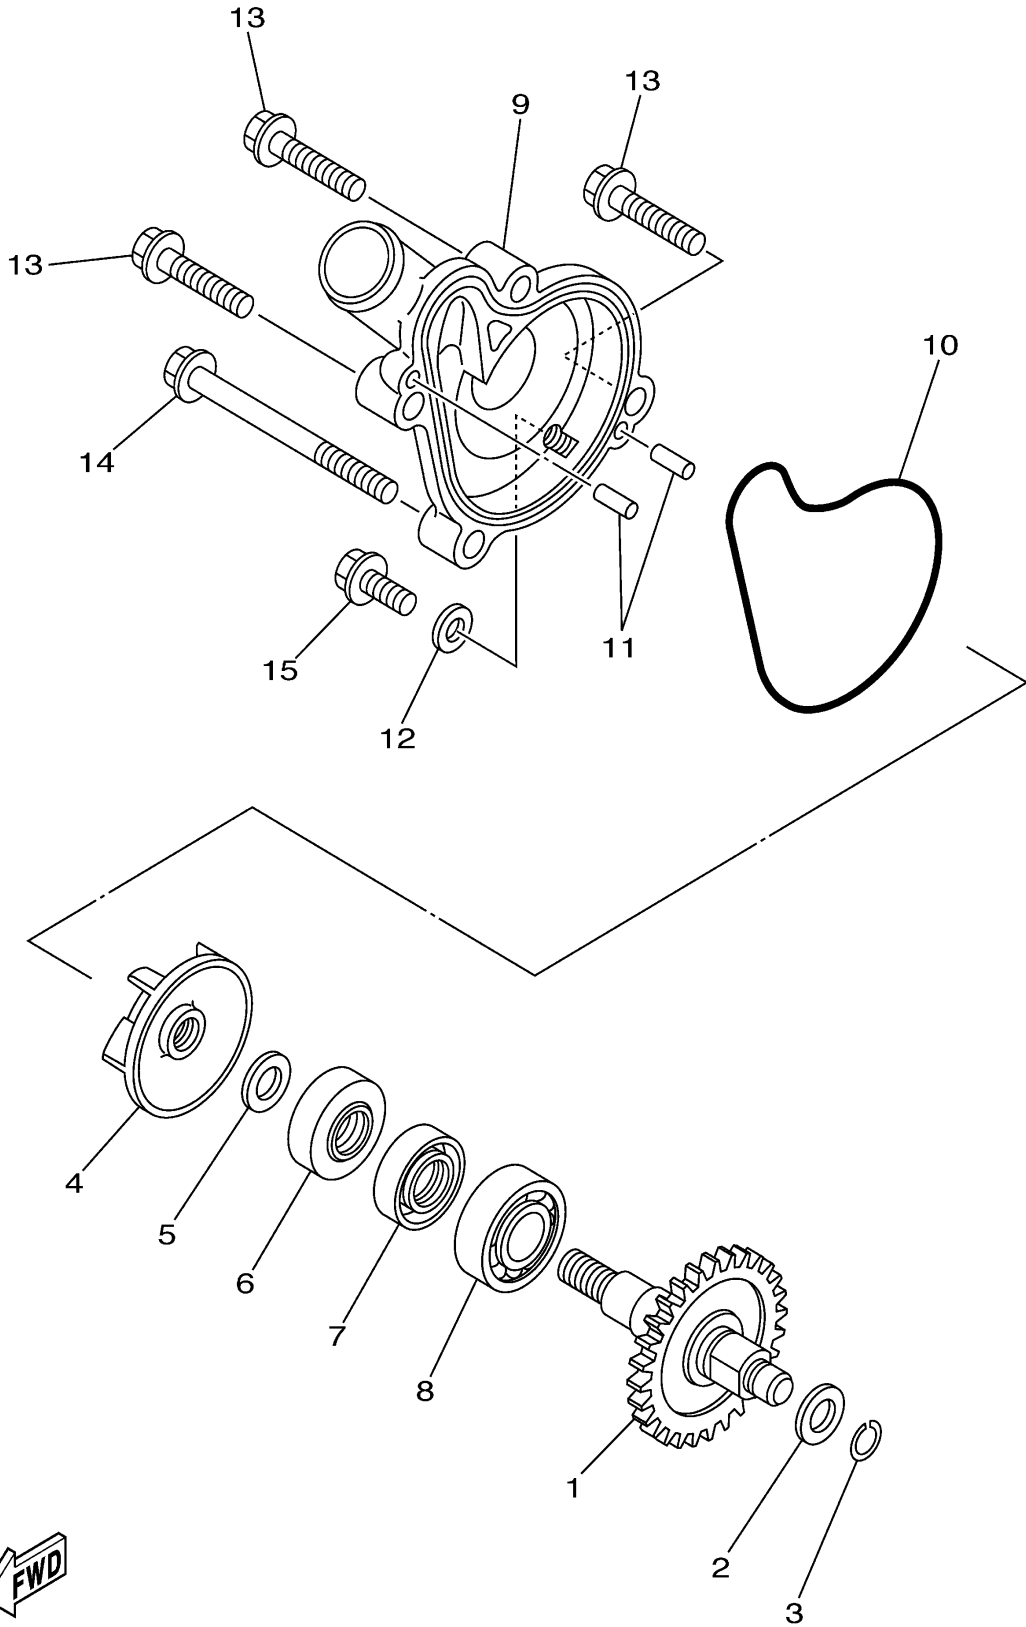


  
5NL1100-1050

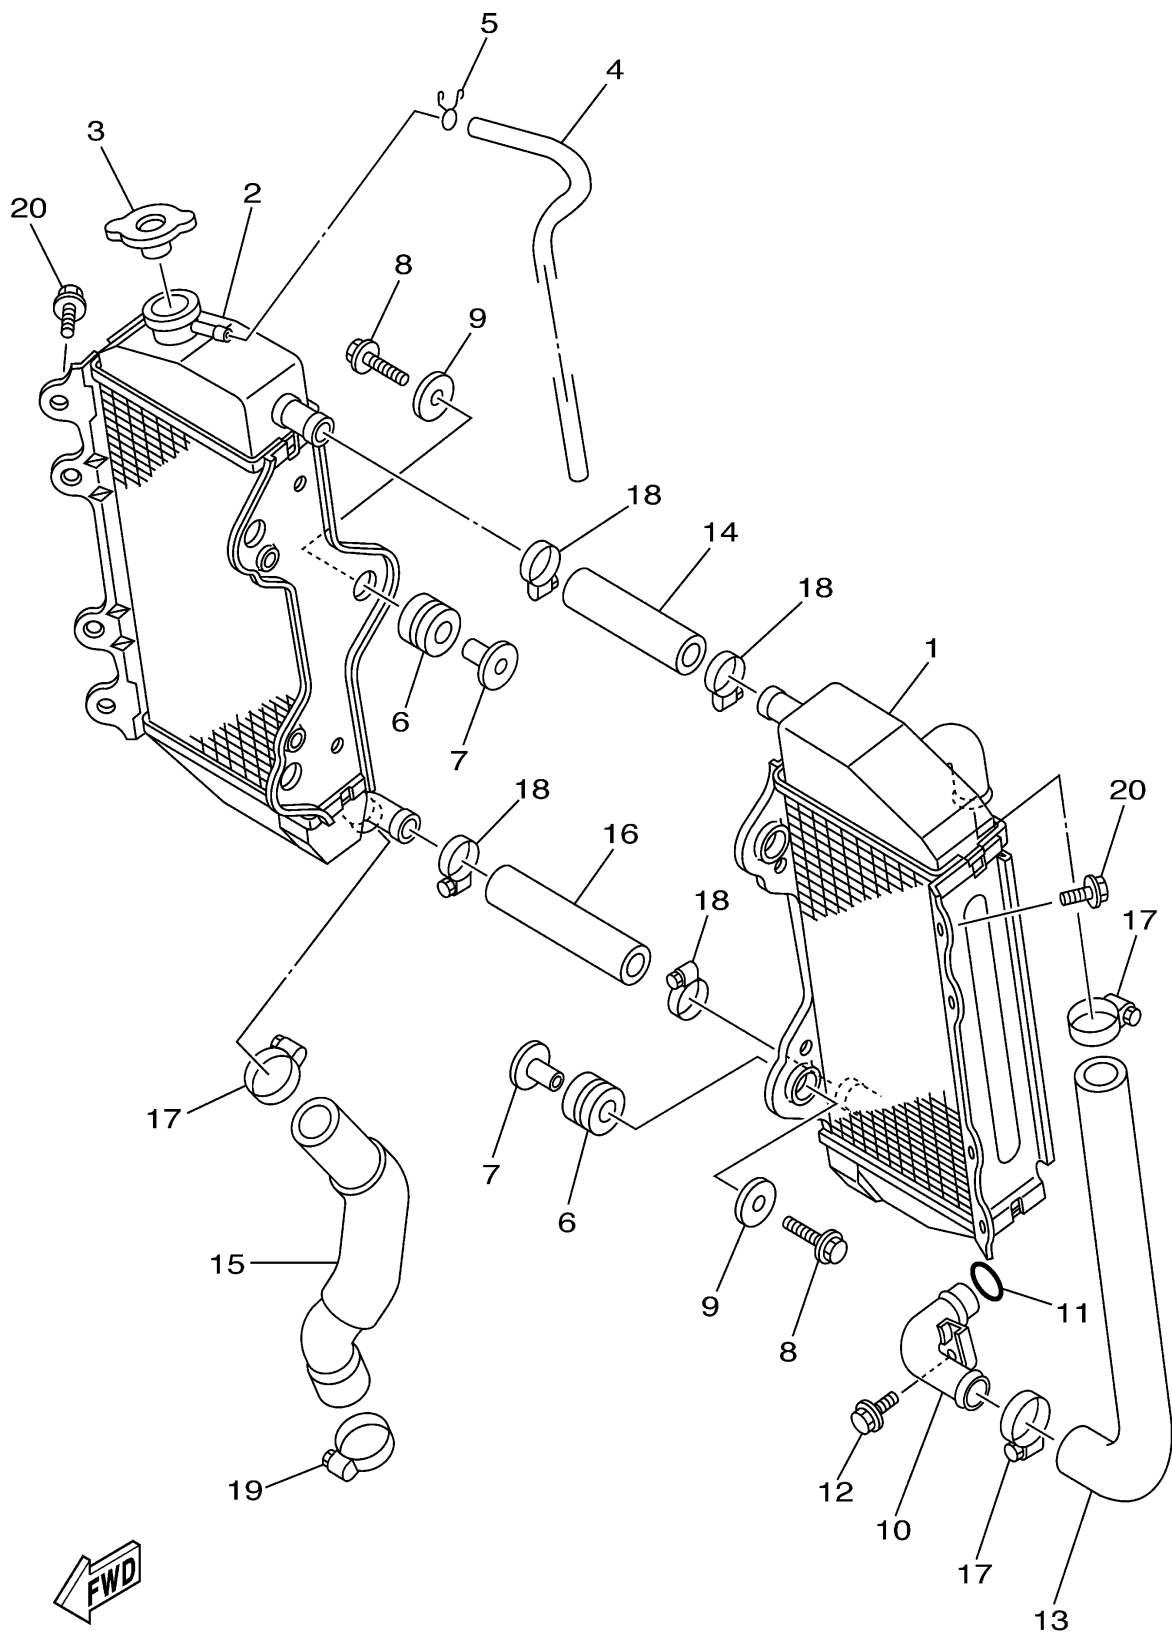 

5NL1100-1060


# RADIATOR. HOSE
 
| Ref. No. | Part Number     | Description                | Qty | Remarks |
|----------|-----------------|----------------------------|-----|---------|
| 1        | 5NL-1240A-00-00 | RADIATOR ASSY .....        | 1   | (5NL1)  |
| 2        | 5NL-12461-00-00 | RADIATOR ASSY .....        | 1   | (5NL1)  |
| 3        | 5HD-12462-00-00 | CAP, RADIATOR .....        | 1   | (5NL1)  |
| 4        | 91A20-05065-00  | TUBE, FLEXIBLE VINYL ..... | 1   | (5NL1)  |
| 5        | 90467-09006-00  | CLIP .....                 | 1   | (5NL1)  |
| 6        | 90480-15528-00  | GROMMET .....              | 6   | (5NL1)  |
| 7        | 90387-0614M-00  | COLLAR .....               | 6   | (5NL1)  |
| 8        | 95027-06025-00  | BOLT, FLANGE .....         | 6   | (5NL1)  |
| 9        | 90201-06071-00  | WASHER, PLATE .....        | 6   | (5NL1)  |
| 10       | 5NL-12481-00-00 | PIPE 1 .....               | 1   | (5NL1)  |
| 11       | 93210-15414-00  | O-RING .....               | 1   | (5NL1)  |
| 12       | 95027-06012-00  | BOLT, FLANGE .....         | 1   | (5NL1)  |
| 13       | 5NL-12576-00-00 | HOSE 1 .....               | 1   | (5NL1)  |
| 14       | 5NL-12577-00-00 | HOSE 2 .....               | 1   | (5NL1)  |
| 15       | 5NL-12578-00-00 | HOSE 3 .....               | 1   | (5NL1)  |
| 16       | 5NL-12579-00-00 | HOSE 4 .....               | 1   | (5NL1)  |
| 17       | 90450-25037-00  | HOSE CLAMP ASSY .....      | 3   | (5NL1)  |
| 18       | 90450-22017-00  | HOSE CLAMP ASSY .....      | 4   | (5NL1)  |
| 19       | 90450-32015-00  | HOSE CLAMP ASSY .....      | 1   | (5NL1)  |
| 20       | 95827-06010-00  | BOLT, FLANGE .....         | 2   | (5NL1)  |

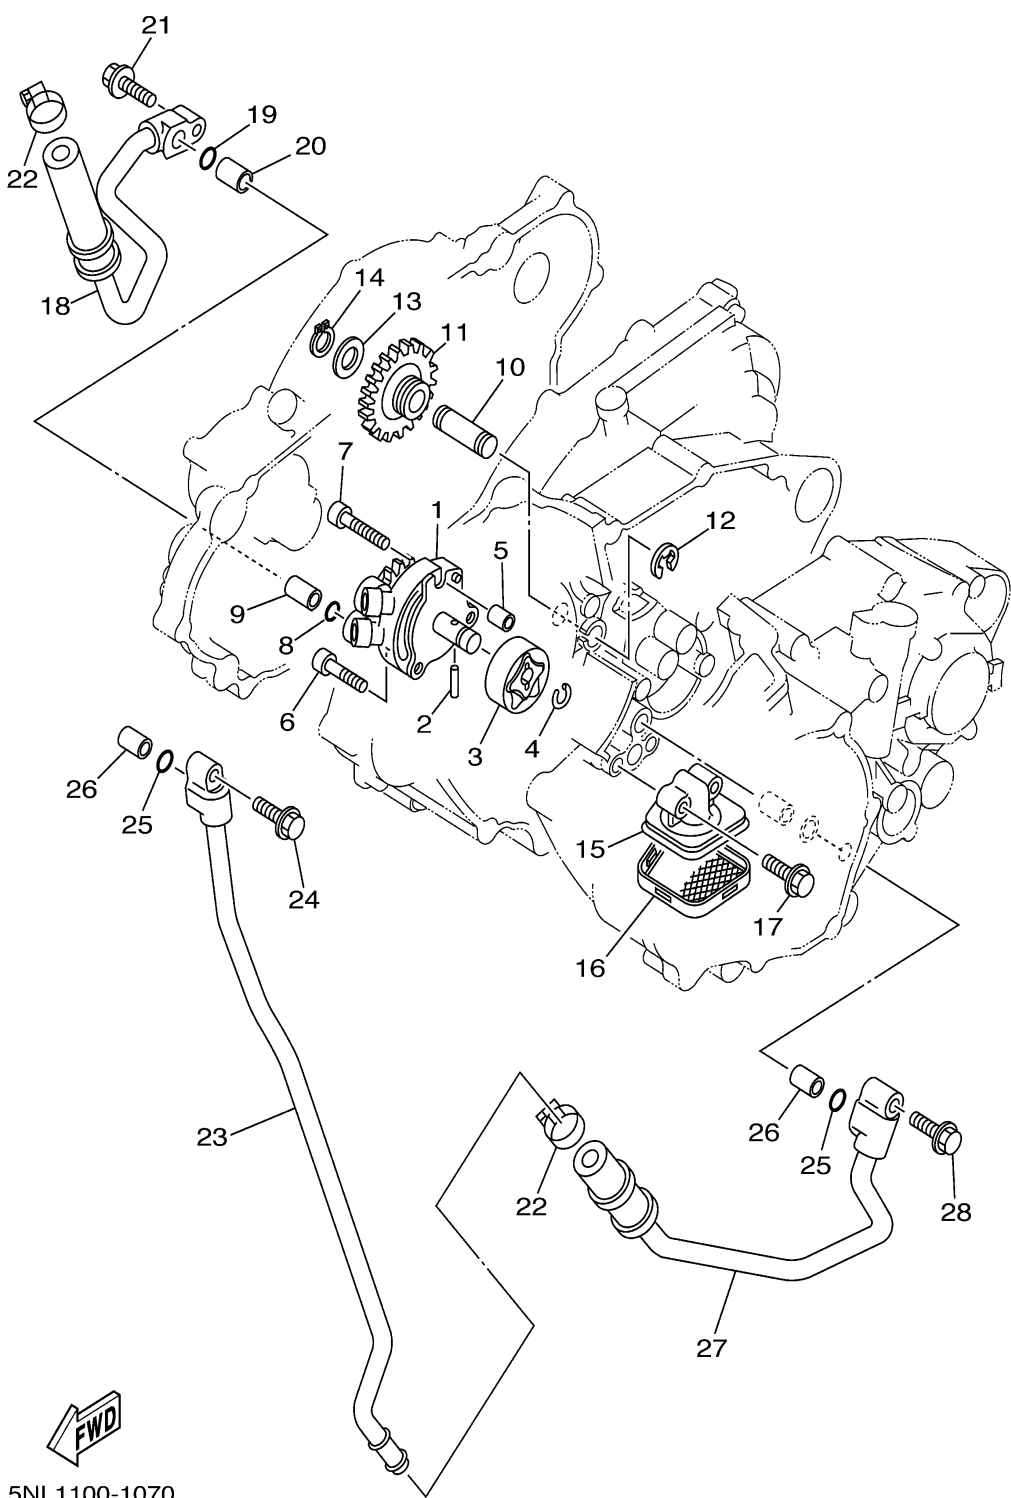


# OIL PUMP
 
| Ref. No. | Part Number     | Description                     | Qty | Remarks |
|----------|-----------------|---------------------------------|-----|---------|
| 1        | 5NL-13300-00-00 | OIL PUMP ASSY .....             | 1   | (5NL1)  |
| 2        | 93603-16219-00  | PIN, DOWEL .....                | 1   | (5NL1)  |
| 3        | 5NL-13320-00-00 | ROTOR ASSY 2 .....              | 1   | (5NL1)  |
| 4        | 93440-10153-00  | CIRCLIP .....                   | 1   | (5NL1)  |
| 5        | 99530-08012-00  | PIN, DOWEL .....                | 1   | (5NL1)  |
| 6        | 91317-06025-00  | BOLT, HEXAGON SOCKET HEAD ..... | 2   | (5NL1)  |
| 7        | 91314-06030-00  | BOLT .....                      | 1   | (5NL1)  |
| 8        | 93210-10197-00  | O-RING .....                    | 1   | (5NL1)  |
| 9        | 99530-10114-00  | PIN, DOWEL .....                | 1   | (5NL1)  |
| 10       | 5BE-13342-00-00 | SHAFT, IDLE GEAR .....          | 1   | (5NL1)  |
| 11       | 5NL-13341-00-00 | GEAR, OIL PUMP IDLE .....       | 1   | (5NL1)  |
| 12       | 99001-08600-00  | CIRCLIP .....                   | 1   | (5NL1)  |
| 13       | 90201-12166-00  | WASHER, PLATE .....             | 1   | (5NL1)  |
| 14       | 99009-12400-00  | CIRCLIP .....                   | 1   | (5NL1)  |
| 15       | 5NL-13412-00-00 | HOUSING, STRAINER .....         | 1   | (5NL1)  |
| 16       | 5NL-13411-00-00 | STRAINER, OIL .....             | 1   | (5NL1)  |
| 17       | 95027-06025-00  | BOLT, FLANGE .....              | 2   | (5NL1)  |
| 18       | 5NL-13464-00-00 | HOSE, OIL 1 .....               | 1   | (5NL1)  |
| 19       | 93210-10197-00  | O-RING .....                    | 1   | (5NL1)  |
| 20       | 99530-10114-00  | PIN, DOWEL .....                | 1   | (5NL1)  |
| 21       | 95027-06025-00  | BOLT, FLANGE .....              | 1   | (5NL1)  |
| 22       | 90450-22017-00  | HOSE CLAMP ASSY .....           | 2   | (5NL1)  |
| 23       | 5NL-13416-00-00 | PIPE, OIL 1 .....               | 1   | (5NL1)  |
| 24       | 95024-06020-00  | BOLT, FLANGE .....              | 1   | (5NL1)  |
| 25       | 93210-10197-00  | O-RING .....                    | 2   | (5NL1)  |
| 26       | 99530-10114-00  | PIN, DOWEL .....                | 2   | (5NL1)  |
| 27       | 5NL-13465-00-00 | HOSE, OIL 2 .....               | 1   | (5NL1)  |
| 28       | 95027-06025-00  | BOLT, FLANGE .....              | 1   | (5NL1)  |

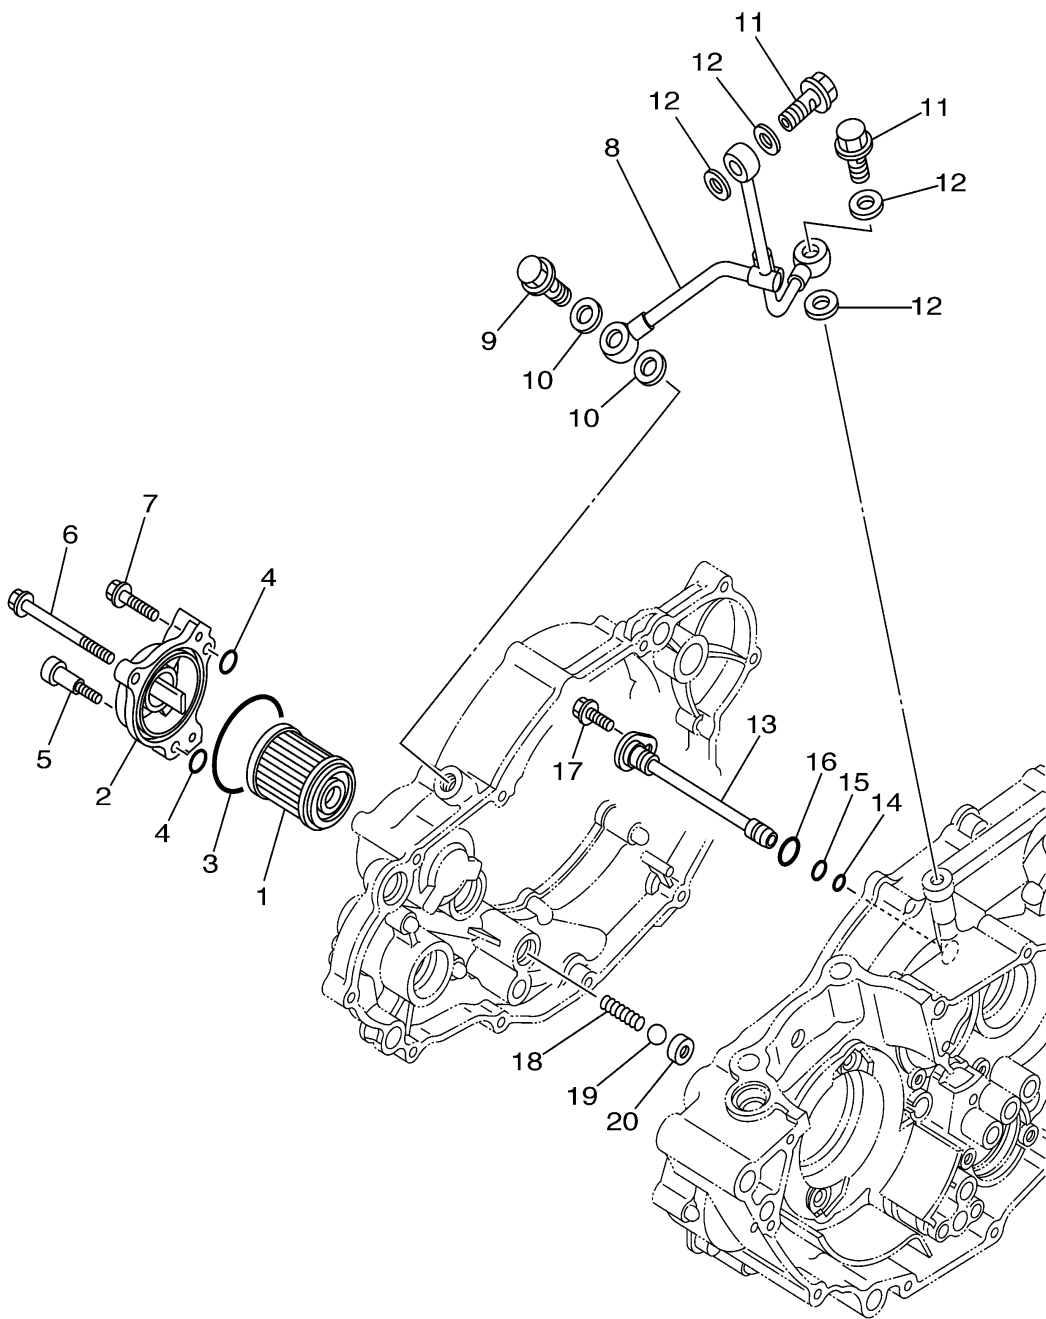

# OIL CLEANER

 
| Ref. No. | Part Number     | Description                   | Qty | Remarks |
|----------|-----------------|-------------------------------|-----|---------|
| 1        | 1UY-13440-02-00 | ELEMENT ASSY, OIL CLEANER     | 1   | (5NL1)  |
| 2        | 5BE-13447-00-00 | COVER, OIL ELEMENT . . . . .  | 1   | (5NL1)  |
| 3        | 93210-47675-00  | O-RING . . . . .              | 1   | (5NL1)  |
| 4        | 93210-07135-00  | O-RING . . . . .              | 3   | (5NL1)  |
| 5        | 90109-065G2-00  | BOLT . . . . .                | 1   | (5NL1)  |
| 6        | 95027-06065-00  | BOLT, FLANGE . . . . .        | 1   | (5NL1)  |
| 7        | 95027-06025-00  | BOLT, FLANGE . . . . .        | 1   | (5NL1)  |
| 8        | 5NL-13161-00-00 | PIPE, DELIVERY 1 . . . . .    | 1   | (5NL1)  |
| 9        | 90401-10159-00  | BOLT, UNION . . . . .         | 1   | (5NL1)  |
| 10       | 90430-10188-00  | GASKET . . . . .              | 2   | (5NL1)  |
| 11       | 90401-08038-00  | BOLT, UNION . . . . .         | 2   | (5NL1)  |
| 12       | 90430-08119-00  | GASKET . . . . .              | 4   | (5NL1)  |
| 13       | 5NL-13171-00-00 | PIPE, DELIVERY 2 . . . . .    | 1   | (5NL1)  |
| 14       | 93210-07003-00  | O-RING . . . . .              | 1   | (5NL1)  |
| 15       | 93210-09008-00  | O-RING . . . . .              | 1   | (5NL1)  |
| 16       | 93210-12759-00  | O-RING . . . . .              | 1   | (5NL1)  |
| 17       | 95027-06012-00  | BOLT, FLANGE . . . . .        | 1   | (5NL1)  |
| 18       | 90501-043E0-00  | SPRING, COMPRESSION . . . . . | 1   | (5NL1)  |
| 19       | 93503-08007-00  | BALL . . . . .                | 1   | (5NL1)  |
| 20       | 583-13113-00-00 | SEAT, CHECK BALL . . . . .    | 1   | (5NL1)  |

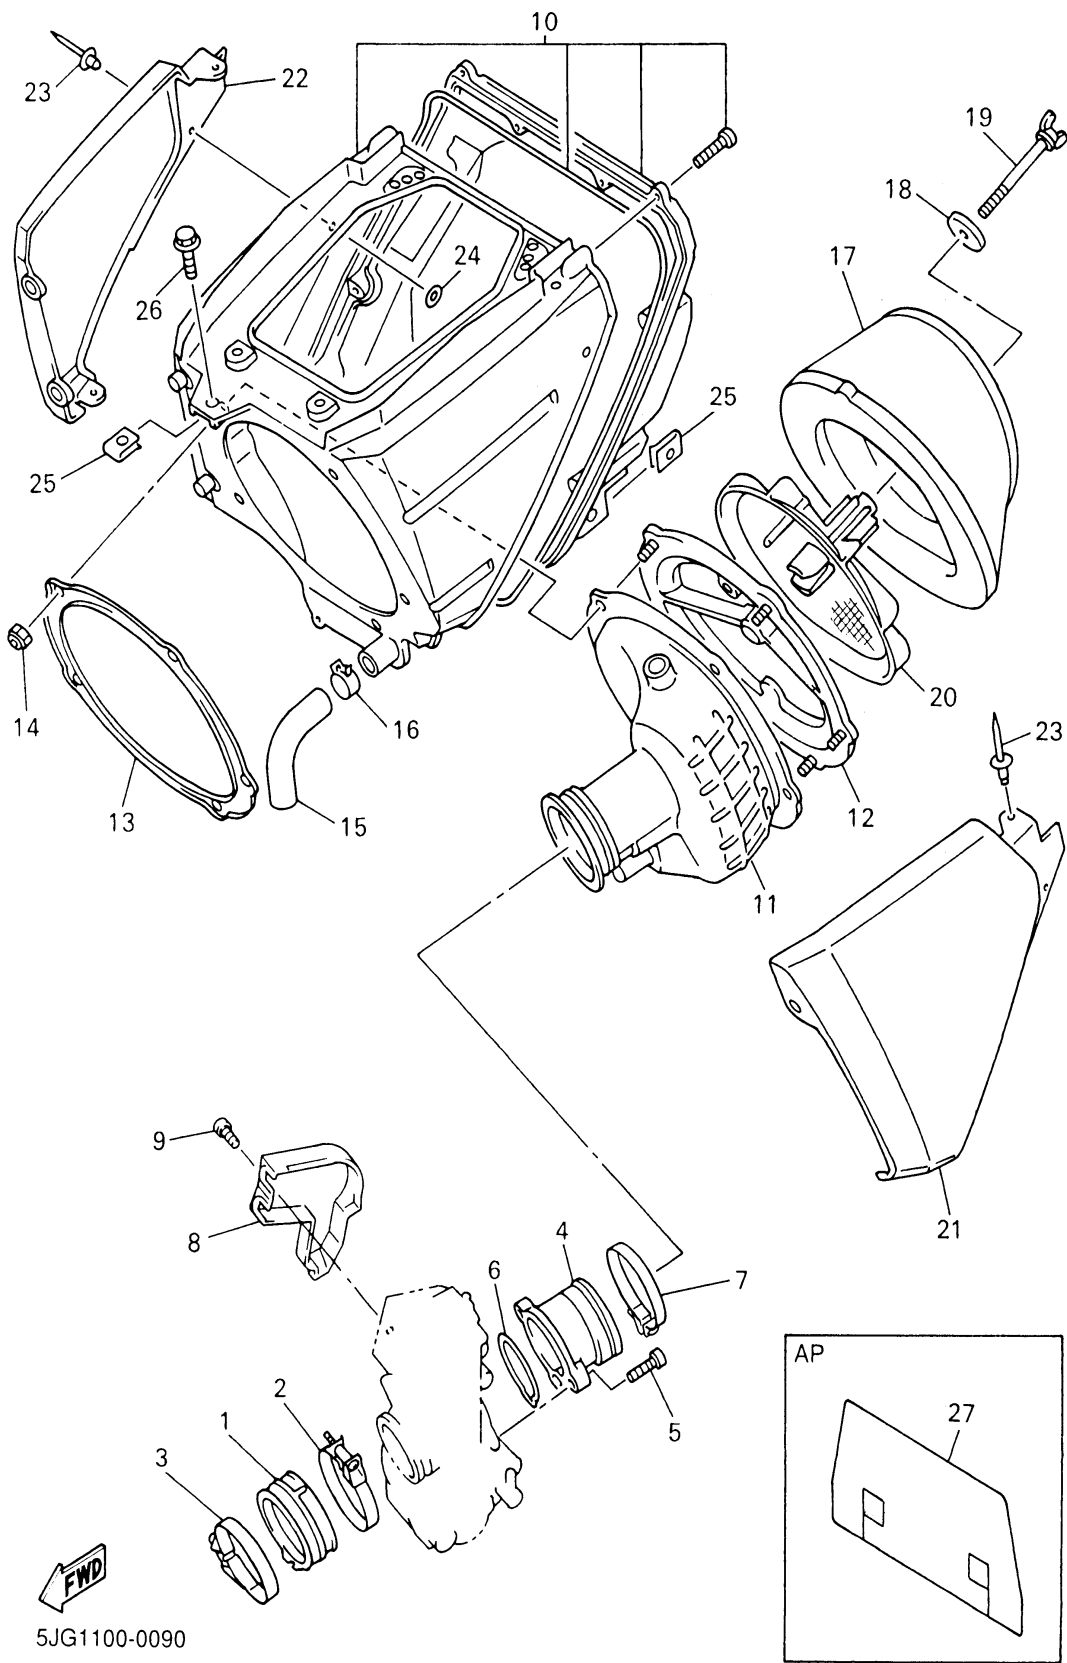

# INTAKE

| Ref. No. | Part Number     | Description           | Qty | Remarks  |
|----------|-----------------|-----------------------|-----|----------|
| 1        | 5NL-13597-00-00 | JOINT, CARBURETOR 3   | 1   | (5NL1)   |
| 2        | 90450-57092-00  | HOSE CLAMP ASSY       | 1   | (5NL1)   |
| 3        | 90450-54093-00  | HOSE CLAMP ASSY       | 1   | (5NL1)   |
| 4        | 5JG-1440F-01-00 | JOINT, AIR FILTER 1   | 1   | (5NL1)   |
| 5        | 91317-05014-00  | BOLT                  | 2   | (5NL1)   |
| 6        | 4FN-14561-00-00 | O-RING                | 1   | (5NL1)   |
| 7        | 90450-61001-00  | HOSE CLAMP ASSY       | 1   | (5NL1)   |
| 8        | 5JG-14293-01-00 | COVER 1               | 1   | (5NL1)   |
| 9        | 5JG-14428-00-00 | BOLT                  | 1   | (5NL1)   |
| 10       | 5JG-14401-00-00 | AIR CLEANER CASE ASSY | 1   | (5NL1)   |
| 11       | 5JG-14453-00-00 | JOINT, AIR CLEANER 1  | 1   | (5NL1)   |
| 12       | 3JD-14459-01-00 | HOLDER, GUIDE         | 1   | (5NL1)   |
| 13       | 5MV-14477-00-00 | PLATE                 | 1   | (5NL1)   |
| 14       | 95607-05100-00  | NUT, U                | 5   | (5NL1)   |
| 15       | 5BE-1443E-00-00 | PIPE, DRAIN           | 1   | (5NL1)   |
| 16       | 90467-17089-00  | CLIP                  | 1   | (5NL1)   |
| 17       | 4XM-14451-00-00 | ELEMENT, AIR CLEANER  | 1   | (5NL1)   |
| 18       | 90209-06096-00  | WASHER                | 1   | (5NL1)   |
| 19       | 90122-06035-00  | BOLT, WING            | 1   | (5NL1)   |
| 20       | 5BE-14458-00-00 | GUIDE                 | 1   | (5NL1)   |
| 21       | 5BE-1441A-10-00 | COVER, CLEANER CASE 1 | 1   | (5NL1)   |
| 22       | 5BE-1441E-10-00 | COVER, CLEANER CASE 2 | 1   | (5NL1)   |
| 23       | 90267-32070-00  | RIVET, BLIND          | 5   | (5NL1)   |
| 24       | 90201-03313-00  | WASHER, PLATE         | 5   | (5NL1)   |
| 25       | 90183-06023-00  | NUT, SPRING           | 2   | (5NL1)   |
| 26       | 95027-06012-00  | BOLT, FLANGE          | 1   | (5NL1)   |
| 27       | 5JG-14417-00-00 | COVER 1               | 1   | AP(5NL1) |

 
# CARBURETOR

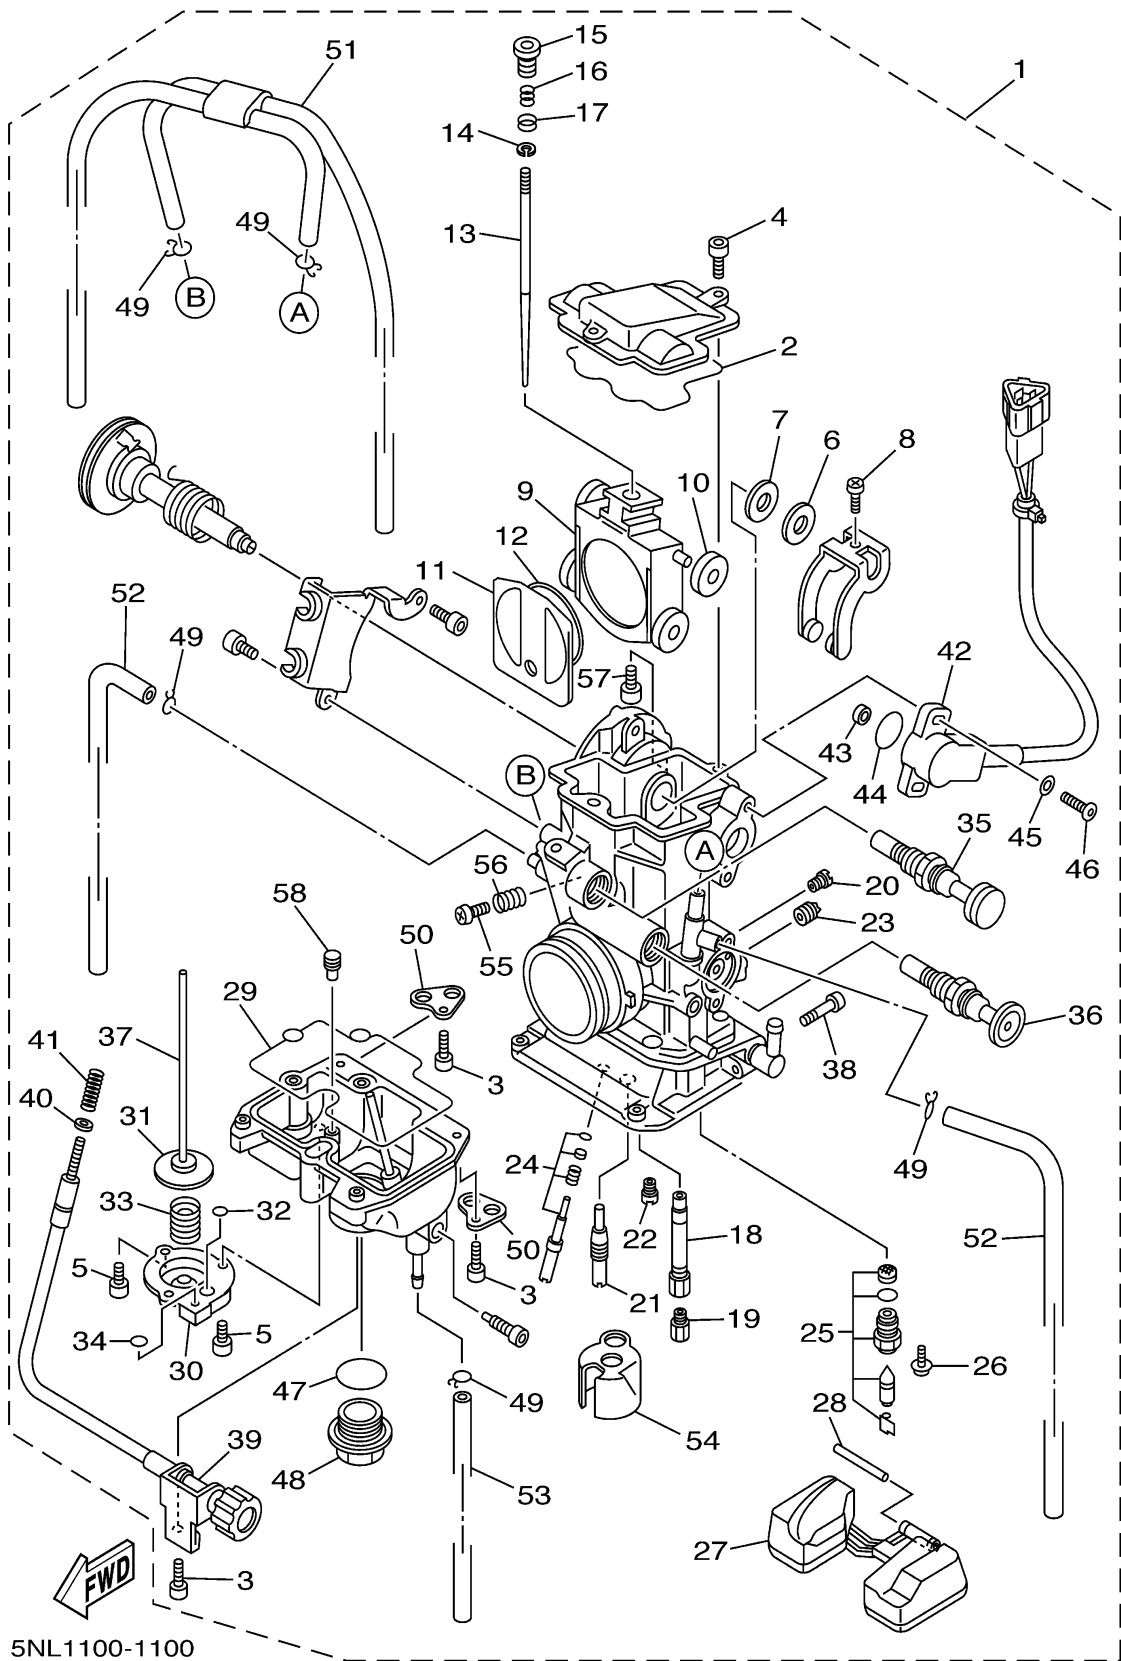

| Ref. No. | Part Number     | Description                       | Qty | Remarks   |
|----------|-----------------|-----------------------------------|-----|-----------|
| 1        | 5NL-14101-00-00 | CARBURETOR ASSY 1 . . . . .       | 1   | (5NL1)    |
| 2        | 5JG-14959-00-00 | . GASKET . . . . .                | 1   | (5NL1)    |
| 3        | 91316-04012-00  | . BOLT . . . . .                  | 4   | (5NL1)    |
| 4        | 91316-04012-00  | . BOLT . . . . .                  | 2   | (5NL1)    |
| 5        | 91316-04008-00  | . BOLT . . . . .                  | 3   | (5NL1)    |
| 6        | 90202-08045-00  | . WASHER, PLATE . . . . .         | 1   | (5NL1)    |
| 7        | 5JG-14951-00-00 | . WASHER . . . . .                | 1   | (5NL1)    |
| 8        | 5JG-14522-00-00 | . SCREW, ADJUST . . . . .         | 1   | (5NL1)    |
| 9        | 5JG-14388-00-00 | . VALVE, VACUUM CONTROL . . . . . | 1   | (5NL1)    |
| 10       | 3TJ-14267-40-00 | . ROLLER . . . . .                | 1   | (5NL1)    |
| 11       | 5JG-14546-00-00 | . VALVE, NEEDLE . . . . .         | 1   | (5NL1)    |
| 12       | 4FN-14997-00-00 | . SEAL . . . . .                  | 1   | (5NL1)    |
| 13       | 5NL-14916-E1-00 | . NEEDLE (OBELQ) . . . . .        | 1   | AP(5NL1)  |
|          | 5NL-14916-EL-00 | . NEEDLE (OBELL) . . . . .        | 1   | AP(5NL1)  |
|          | 5NL-14916-EM-00 | . NEEDLE (OBELM) . . . . .        | 1   | AP(5NL1)  |
|          | 5NL-14916-EN-00 | . NEEDLE (OBELN) . . . . .        | 1   | AP(5NL1)  |
|          | 5NL-14916-EP-00 | . NEEDLE (OBELP) . . . . .        | 1   | STD(5NL1) |
|          | 5NL-14916-ER-00 | . NEEDLE (OBELR) . . . . .        | 1   | AP(5NL1)  |
|          | 5NL-14916-ES-00 | . NEEDLE (OBELS) . . . . .        | 1   | AP(5NL1)  |
| 14       | 3TJ-14159-40-00 | . CLIP . . . . .                  | 1   | (5NL1)    |
| 15       | 5JG-14521-00-00 | . SCREW, ADJUST . . . . .         | 1   | (5NL1)    |
| 16       | 5JG-14275-00-00 | . SPRING . . . . .                | 1   | (5NL1)    |
| 17       | 5JG-14264-00-00 | . COLLAR . . . . .                | 1   | (5NL1)    |
| 18       | 5JG-14947-00-00 | . NOZZLE, MAIN . . . . .          | 1   | (5NL1)    |
| 19       | 4MX-14943-40-00 | . JET, MAIN (165) . . . . .       | 1   | AP(5NL1)  |
|          | 4MX-14943-41-00 | . JET, MAIN (170) . . . . .       | 1   | AP(5NL1)  |
|          | 4MX-14943-42-00 | . JET, MAIN (175) . . . . .       | 1   | STD(5NL1) |
|          | 4MX-14943-43-00 | . JET, MAIN (180) . . . . .       | 1   | AP(5NL1)  |
|          | 4MX-14943-44-00 | . JET, MAIN (185) . . . . .       | 1   | AP(5NL1)  |

CONTINUED ON NEXT FRAME ➤

# CARBURETOR

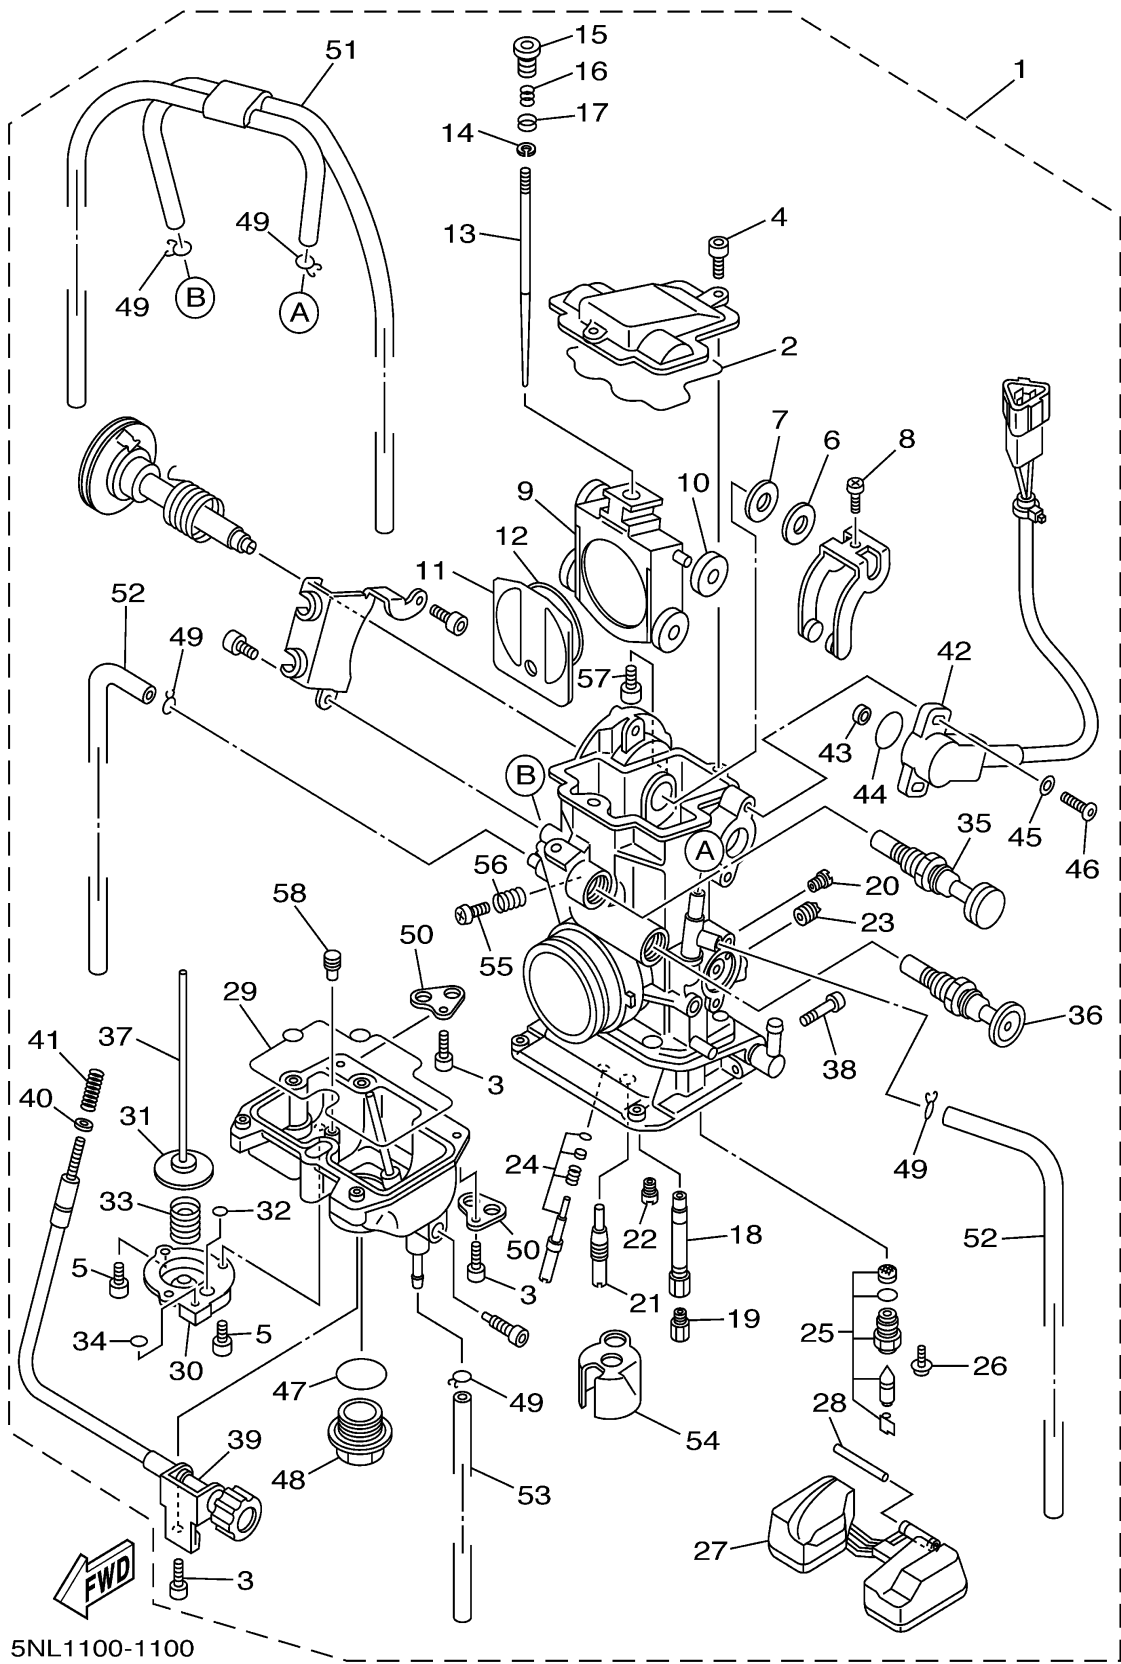 


| Ref. No. | Part Number     | Description        | Qty | Remarks   |
|----------|-----------------|--------------------|-----|-----------|
| 19       | 4MX-14943-45-00 | . JET, MAIN (190)  | 1   | AP(5NL1)  |
|          | 4MX-14943-91-00 | . JET, MAIN (168)  | 1   | AP(5NL1)  |
|          | 4MX-14943-92-00 | . JET, MAIN (172)  | 1   | AP(5NL1)  |
|          | 4MX-14943-93-00 | . JET, MAIN (178)  | 1   | AP(5NL1)  |
|          | 4MX-14943-94-00 | . JET, MAIN (182)  | 1   | AP(5NL1)  |
|          | 4MX-14943-95-00 | . JET, MAIN (188)  | 1   | AP(5NL1)  |
| 20       | 3TJ-14943-47-00 | . JET (200)        | 1   | (5NL1)    |
| 21       | 4MX-14948-01-00 | . JET, SLOW (35)   | 1   | AP(5NL1)  |
|          | 4MX-14948-02-00 | . JET, SLOW (38)   | 1   | AP(5NL1)  |
|          | 4MX-14948-03-00 | . JET, SLOW (40)   | 1   | AP(5NL1)  |
|          | 4MX-14948-04-00 | . JET, SLOW (42)   | 1   | STD(5NL1) |
|          | 4MX-14948-05-00 | . JET, SLOW (45)   | 1   | AP(5NL1)  |
|          | 4MX-14948-06-00 | . JET, SLOW (48)   | 1   | AP(5NL1)  |
|          | 4MX-14948-07-00 | . JET, SLOW (50)   | 1   | AP(5NL1)  |
| 22       | 3TJ-1494F-12-00 | . JET (62)         | 1   | AP(5NL1)  |
|          | 3TJ-1494F-13-00 | . JET (65)         | 1   | AP(5NL1)  |
|          | 3TJ-1494F-14-00 | . JET (68)         | 1   | AP(5NL1)  |
|          | 3TJ-1494F-15-00 | . JET (70)         | 1   | AP(5NL1)  |
|          | 3TJ-1494F-16-00 | . JET (72)         | 1   | STD(5NL1) |
|          | 3TJ-1494F-17-00 | . JET (75)         | 1   | AP(5NL1)  |
|          | 3TJ-1494F-18-00 | . JET (78)         | 1   | AP(5NL1)  |
|          | 3TJ-1494F-19-00 | . JET (80)         | 1   | AP(5NL1)  |
|          | 3TJ-1494F-20-00 | . JET (82)         | 1   | AP(5NL1)  |
| 23       | 7A9-14943-27-00 | . JET (100)        | 1   | (5NL1)    |
| 24       | 5NL-14105-00-00 | . PILOT SCREW SET  | 1   | (5NL1)    |
| 25       | 5BE-14107-00-00 | . NEEDLE VALVE SET | 1   | (5NL1)    |
| 26       | 5BE-14216-00-00 | . SCREW            | 1   | (5NL1)    |
| 27       | 4SR-14985-00-00 | . FLOAT            | 1   | (5NL1)    |
| 28       | 676-14548-00-00 | . PIN, FLOAT ARM   | 1   | (5NL1)    |

CONTINUED ON NEXT FRAME ➤

5NL1100-1100


# CARBURETOR

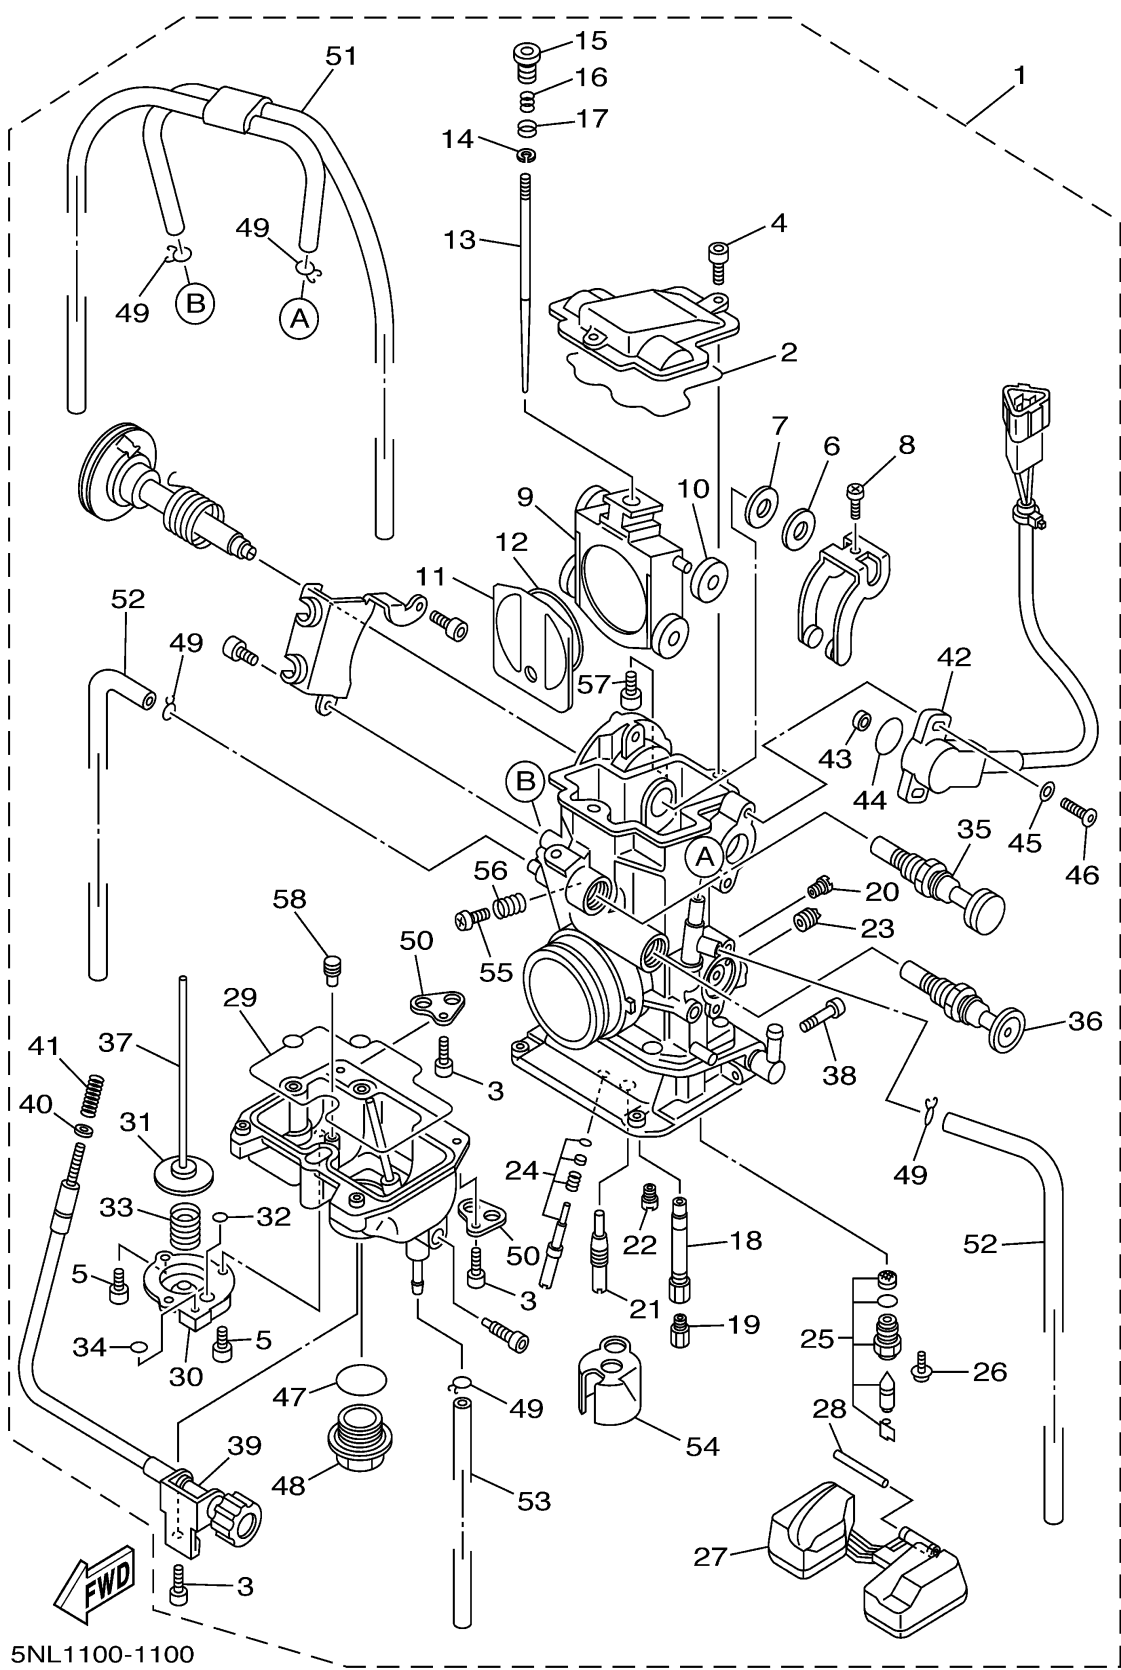 

| Ref. No. | Part Number     | Description                   | Qty | Remarks   |
|----------|-----------------|-------------------------------|-----|-----------|
| 29       | 5JG-14984-00-00 | . GASKET, FLOAT CHAMBER .     | 1   | (5NL1)    |
| 30       | 3TJ-14293-40-00 | . COVER 1 . . . . .           | 1   | (5NL1)    |
| 31       | 5JG-14940-06-00 | . DIAPHRAGM ASSY . . . . .    | 1   | AP(5NL1)  |
|          | 5JG-14940-07-00 | . DIAPHRAGM ASSY . . . . .    | 1   | AP(5NL1)  |
|          | 5JG-14940-08-00 | . DIAPHRAGM ASSY . . . . .    | 1   | AP(5NL1)  |
|          | 5JG-14940-75-00 | . DIAPHRAGM ASSY . . . . .    | 1   | STD(5NL1) |
| 32       | 3TJ-14536-40-00 | . GASKET . . . . .            | 1   | (5NL1)    |
| 33       | 3TJ-14933-40-00 | . SPRING, DIAPHRAGM . . . . . | 1   | (5NL1)    |
| 34       | 6H4-14561-00-00 | . O-RING . . . . .            | 1   | (5NL1)    |
| 35       | 5JG-14171-00-00 | . PLUNGER, STARTER . . . . .  | 1   | (5NL1)    |
| 36       | 5JG-14371-00-00 | . PLUNGER, STARTER . . . . .  | 1   | (5NL1)    |
| 37       | 5JG-14379-00-00 | . ROD, STARTER . . . . .      | 1   | (5NL1)    |
| 38       | 3TJ-14325-40-00 | . SCREW, PAN HEAD . . . . .   | 1   | (5NL1)    |
| 39       | 5JG-14922-00-00 | . SCREW, THROTTLE . . . . .   | 1   | (5NL1)    |
| 40       | 90201-08410-00  | . WASHER, PLATE . . . . .     | 1   | (5NL1)    |
| 41       | 4FN-14934-00-00 | . SPRING, THROTTLE STOP . .   | 1   | (5NL1)    |
| 42       | 5JG-85885-00-00 | . THROTTLE SENSOR ASSY . .    | 1   | (5NL1)    |
| 43       | 5BE-14449-00-00 | . COLLAR . . . . .            | 1   | (5NL1)    |
| 44       | 5BE-14562-00-00 | . O-RING . . . . .            | 1   | (5NL1)    |
| 45       | 4YR-14557-00-00 | . WASHER . . . . .            | 2   | (5NL1)    |
| 46       | 4YR-14216-00-00 | . SCREW . . . . .             | 2   | (5NL1)    |
| 47       | 4MX-14561-00-00 | . O-RING . . . . .            | 1   | (5NL1)    |
| 48       | 4MX-14115-00-00 | . PLUG, SCREW . . . . .       | 1   | (5NL1)    |
| 49       | 3TJ-14137-40-00 | . CLIP . . . . .              | 5   | (5NL1)    |
| 50       | 5BE-14146-00-00 | . PLATE . . . . .             | 2   | (5NL1)    |
| 51       | 5NL-14196-00-00 | . PIPE COMP. . . . .          | 1   | (5NL1)    |
| 52       | 5JG-14197-00-00 | . PIPE . . . . .              | 2   | (5NL1)    |
| 53       | 5JG-14987-00-00 | . HOSE . . . . .              | 1   | (5NL1)    |
| 54       | 5JG-14346-00-00 | . PLATE . . . . .             | 1   | (5NL1)    |


CONTINUED ON NEXT FRAME ➤

# CARBURETOR

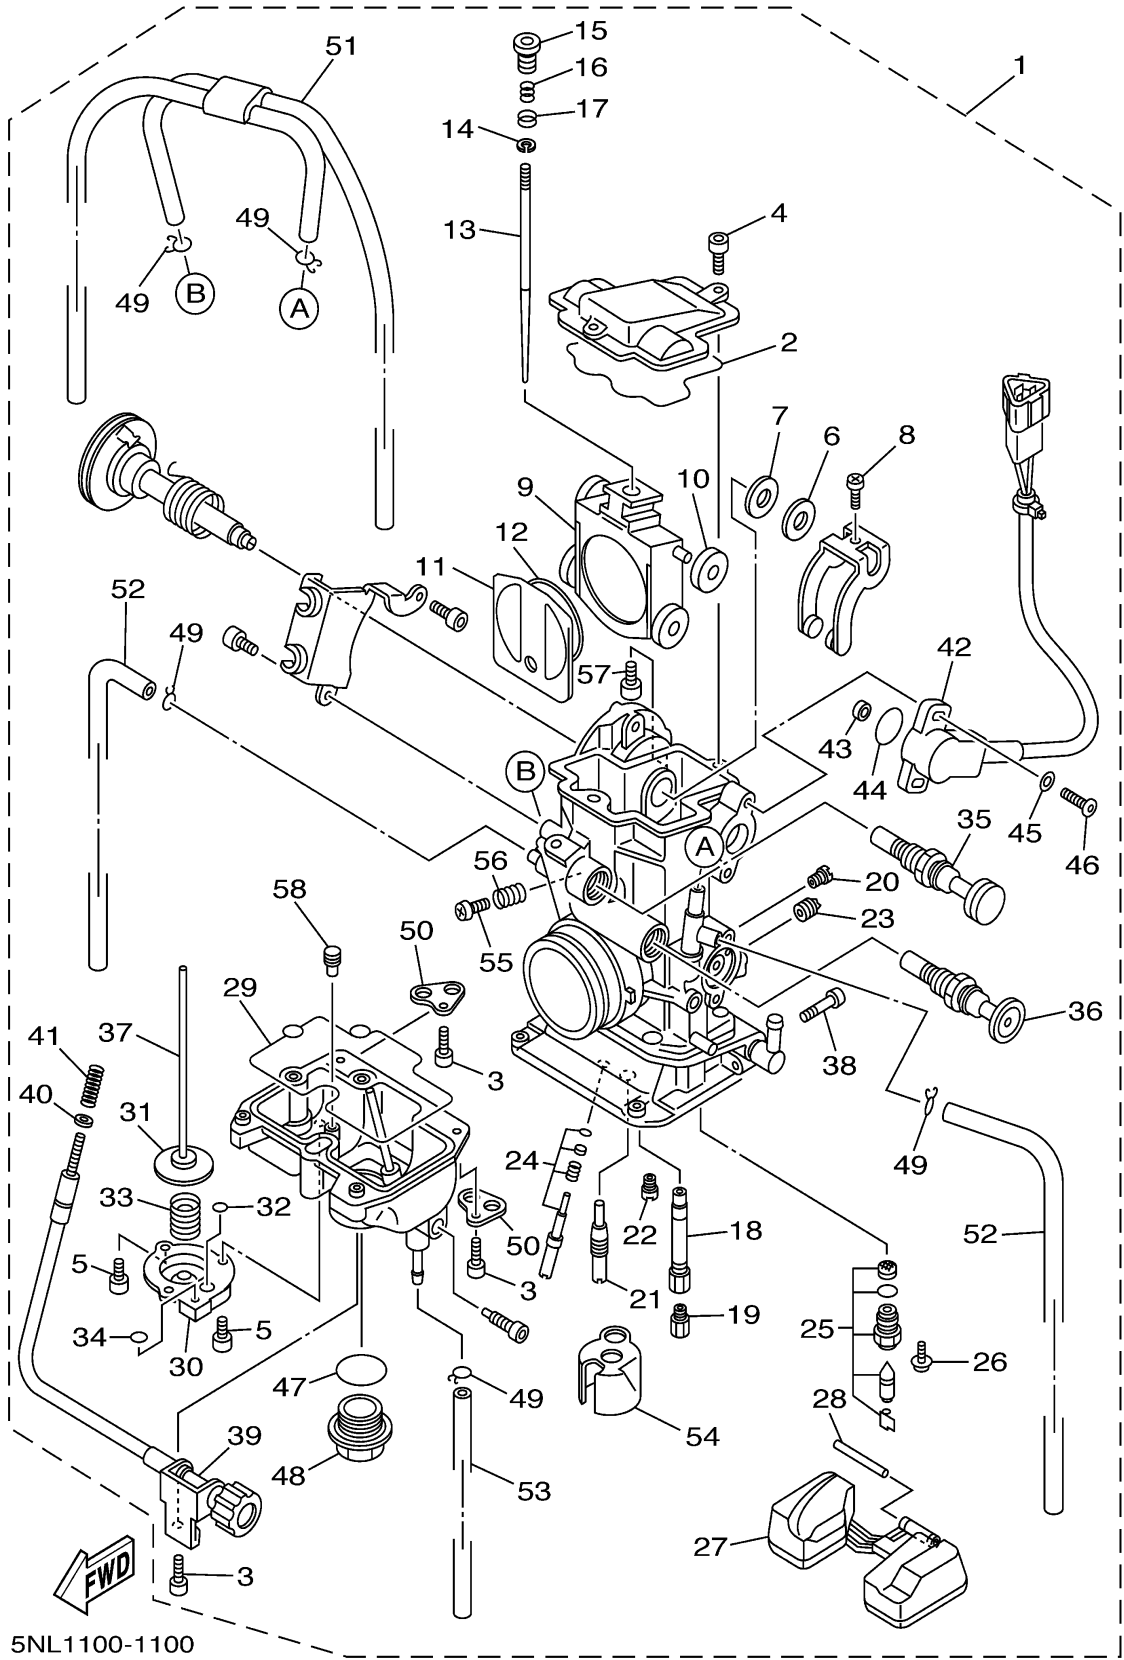 

| Ref. No. | Part Number     | Description                | Qty | Remarks   |
|----------|-----------------|----------------------------|-----|-----------|
| 55       | 5JG-14565-00-00 | . SCREW .....              | 1   | (5NL1)    |
| 56       | 5JG-14531-00-00 | . SPRING, ADJUST SCREW ... | 1   | (5NL1)    |
| 57       | 5NL-14591-00-00 | . SCREW .....              | 1   | (5NL1)    |
| 58       | 4JT-1494F-17-00 | . JET (75) .....           | 1   | AP(5NL1)  |
|          | 4JT-1494F-21-00 | . JET (85) .....           | 1   | AP(5NL1)  |
|          | 4JT-1494F-25-00 | . JET (95) .....           | 1   | AP(5NL1)  |
|          | 4JT-1494F-28-00 | . JET (105) .....          | 1   | STD(5NL1) |
|          | 4JT-1494F-30-00 | . JET (115) .....          | 1   | AP(5NL1)  |
|          | 4JT-1494F-32-00 | . JET (125) .....          | 1   | AP(5NL1)  |
|          | 4JT-1494F-34-00 | . JET (135) .....          | 1   | AP(5NL1)  |

 5NL1100-1100

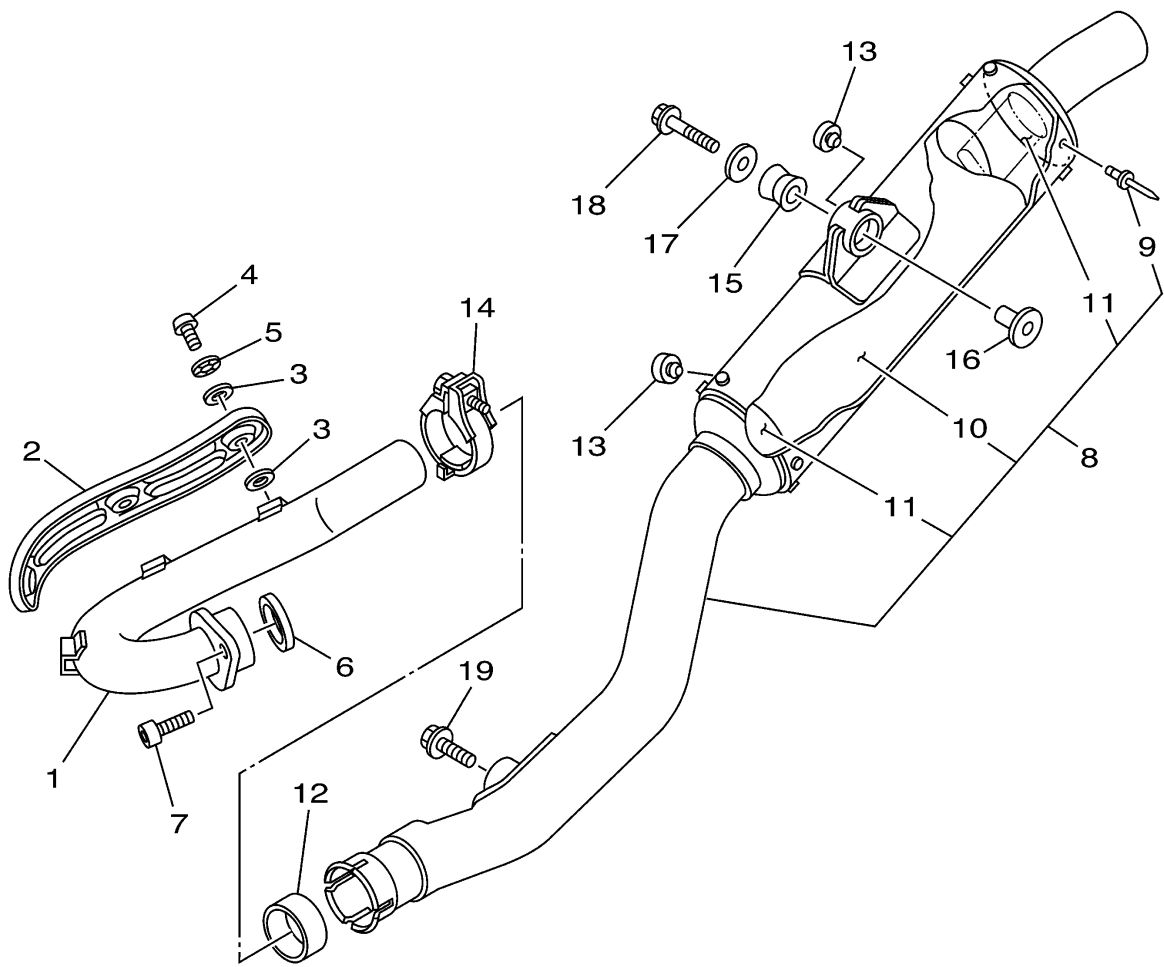


# EXHAUST

| Ref. No. | Part Number     | Description                     | Qty | Remarks |
|----------|-----------------|---------------------------------|-----|---------|
| 1        | 5NL-14611-00-00 | PIPE, EXHAUST 1 .....           | 1   | (5NL1)  |
| 2        | 5NL-14628-00-00 | PROTECTOR, EXHAUST PIPE .       | 1   | (5NL1)  |
| 3        | 4BD-14766-00-00 | WASHER, PROTECTOR .....         | 6   | (5NL1)  |
| 4        | 98980-06008-00  | SCREW, BIND .....               | 3   | (5NL1)  |
| 5        | 90206-06090-00  | WASHER, WAVE .....              | 3   | (5NL1)  |
| 6        | 5NL-14613-00-00 | GASKET, EXHAUST PIPE ....       | 1   | (5NL1)  |
| 7        | 91317-08020-00  | BOLT, HEXAGON SOCKET HEAD ..... | 1   | (5NL1)  |
| 8        | 5NL-14753-00-00 | SILENCER, EXHAUST .....         | 1   | (5NL1)  |
| 9        | 90267-48121-00  | RIVET, BLIND .....              | 16  | (5NL1)  |
| 10       | 5NL-1469A-00-00 | . FIBER .....                   | 1   | (5NL1)  |
| 11       | 5BE-1469E-00-00 | . FIBER .....                   | 2   | (5NL1)  |
| 12       | 3VD-14755-00-00 | GASKET, SILENCER .....          | 1   | (5NL1)  |
| 13       | 22W-24181-00-00 | DAMPER, LOCATING 1 .....        | 2   | (5NL1)  |
| 14       | 5NL-14788-00-00 | BAND, SILENCER .....            | 1   | (5NL1)  |
| 15       | 5BE-14747-00-00 | DAMPER, MUFFLER .....           | 1   | (5NL1)  |
| 16       | 90387-0814J-00  | COLLAR .....                    | 1   | (5NL1)  |
| 17       | 90201-081R9-00  | WASHER, PLATE .....             | 1   | (5NL1)  |
| 18       | 95817-08030-00  | BOLT, FLANGE .....              | 1   | (5NL1)  |
| 19       | 95817-08016-00  | BOLT, FLANGE .....              | 1   | (5NL1)  |



 
5NL1110-1110

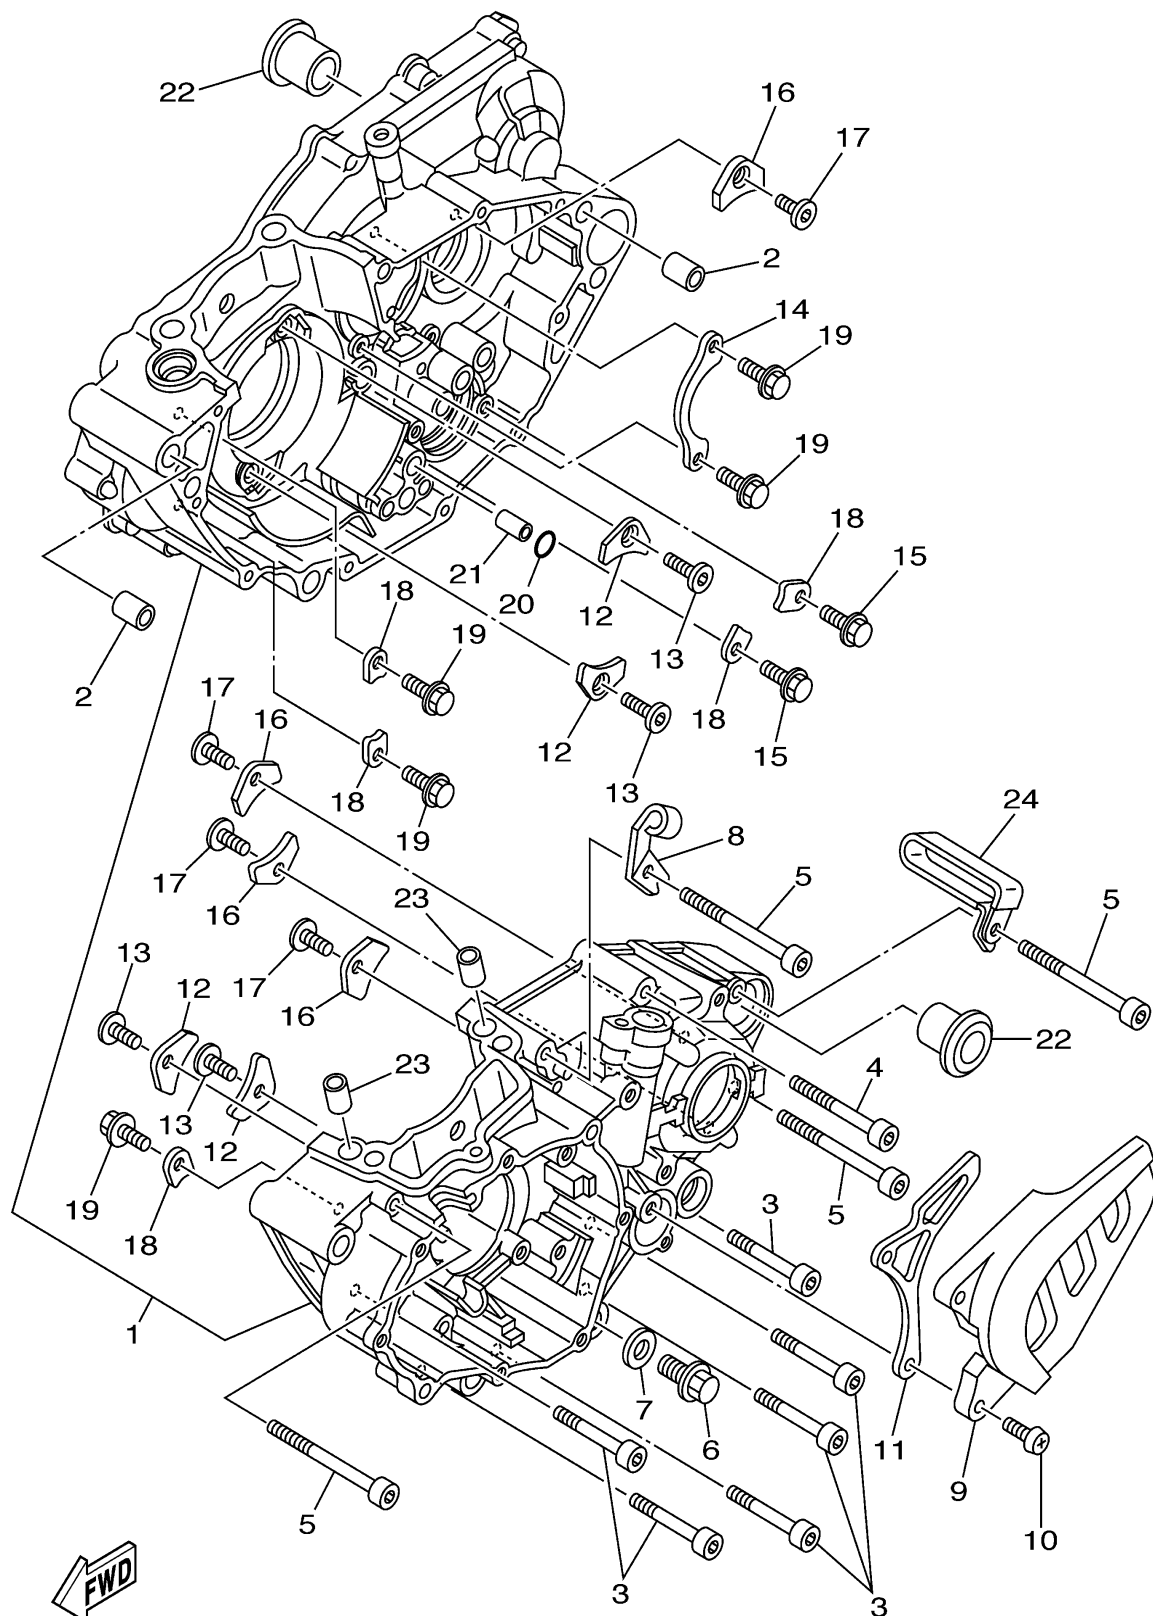

5NL1100-1120


# CRANKCASE
 
| Ref. No. | Part Number     | Description               | Qty | Remarks |
|----------|-----------------|---------------------------|-----|---------|
| 1        | 5NL-15150-00-00 | CRANKCASE ASSY .....      | 1   | (5NL1)  |
| 2        | 93612-16254-00  | PIN, DOWEL .....          | 2   | (5NL1)  |
| 3        | 91317-06045-00  | BOLT .....                | 6   | (5NL1)  |
| 4        | 91317-06055-00  | BOLT .....                | 1   | (5NL1)  |
| 5        | 91317-06070-00  | BOLT .....                | 4   | (5NL1)  |
| 6        | 95027-10016-00  | BOLT, FLANGE .....        | 1   | (5NL1)  |
| 7        | 90430-10188-00  | GASKET .....              | 1   | (5NL1)  |
| 8        | 5NL-15441-01-00 | HOLDER, CLUTCH CABLE ...  | 1   | (5NL1)  |
| 9        | 5BE-15421-00-00 | COVER, CRANKCASE 2 .....  | 1   | (5NL1)  |
| 10       | 98507-06025-00  | SCREW, PAN HEAD .....     | 2   | (5NL1)  |
| 11       | 5NL-17466-00-00 | GUIDE, CHAIN .....        | 1   | (5NL1)  |
| 12       | 5BE-15383-01-00 | PLATE, BEARING COVER .... | 4   | (5NL1)  |
| 13       | 90149-06126-00  | SCREW .....               | 4   | (5NL1)  |
| 14       | 5NL-15388-00-00 | PLATE, BEARING COVER .... | 1   | (5NL1)  |
| 15       | 90105-06553-00  | BOLT, WASHER BASED .....  | 2   | (5NL1)  |
| 16       | 4JT-15381-01-00 | PLATE, BEARING COVER .... | 4   | (5NL1)  |
| 17       | 90149-06326-00  | SCREW .....               | 4   | (5NL1)  |
| 18       | 5DH-18562-00-00 | PLATE, STOPPER 2 .....    | 5   | (5NL1)  |
| 19       | 90105-06553-00  | BOLT, WASHER BASED .....  | 5   | (5NL1)  |
| 20       | 93210-10197-00  | O-RING .....              | 1   | (5NL1)  |
| 21       | 99530-10114-00  | PIN, DOWEL .....          | 1   | (5NL1)  |
| 22       | 90387-1712Y-00  | COLLAR .....              | 2   | (5NL1)  |
| 23       | 99530-10116-00  | PIN, DOWEL .....          | 2   | (5NL1)  |
| 24       | 90465-10013-00  | CLAMP .....               | 1   | (5NL1)  |

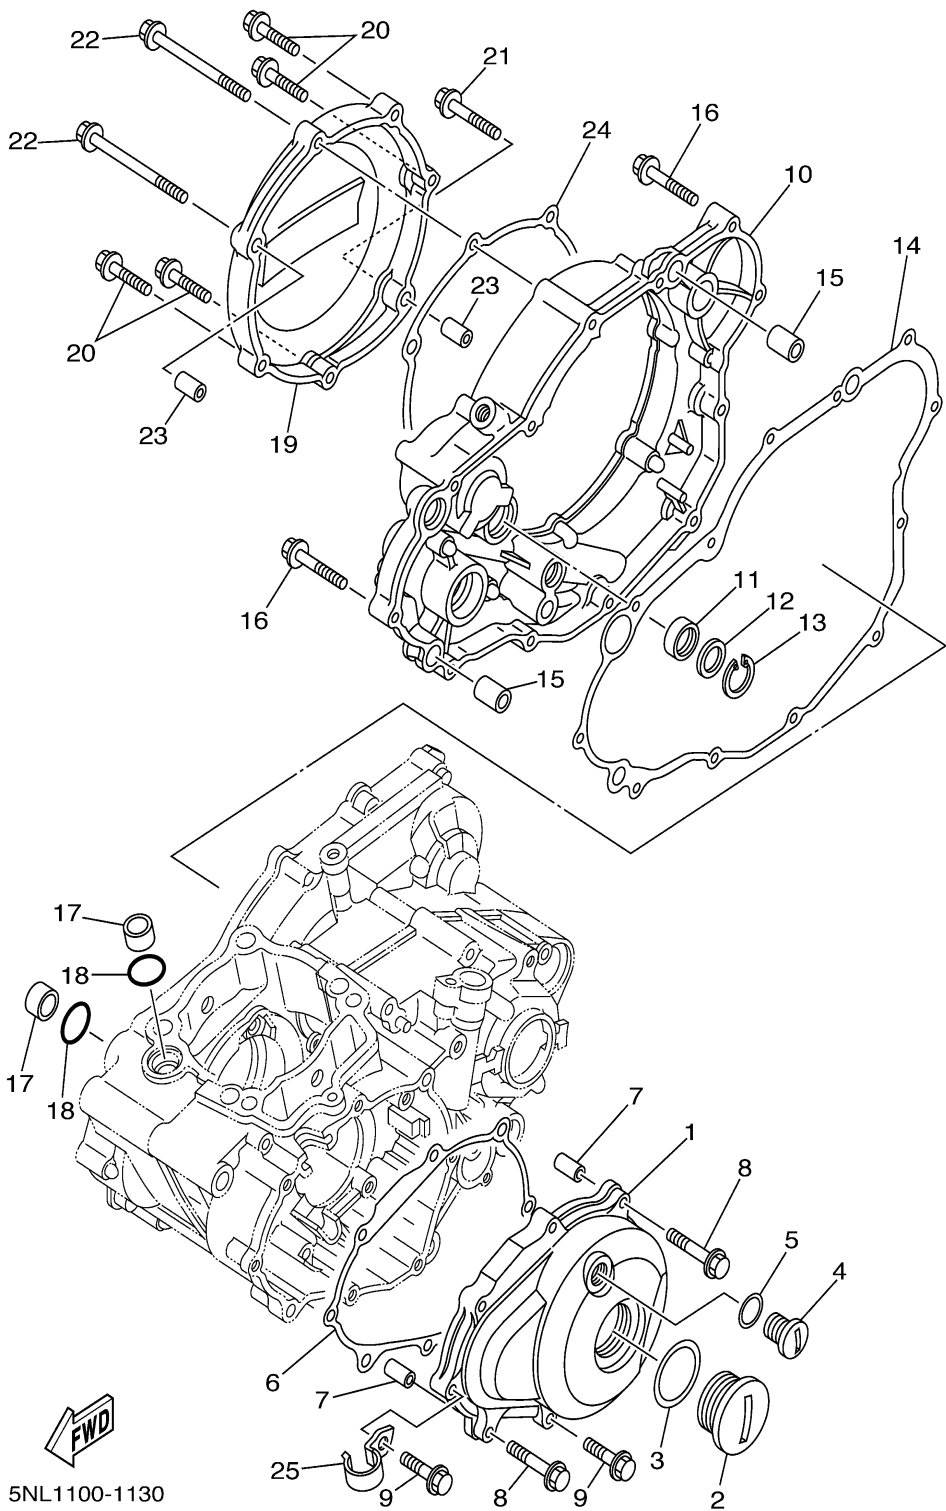

# CRANKCASE COVER 1

 
| Ref. No. | Part Number     | Description                         | Qty | Remarks |
|----------|-----------------|-------------------------------------|-----|---------|
| 1        | 5NL-15411-00-00 | COVER, CRANKCASE 1 . . . . .        | 1   | (5NL1)  |
| 2        | 90340-32123-00  | PLUG, STRAIGHT SCREW . . . .        | 1   | (5NL1)  |
| 3        | 93210-32172-00  | O-RING . . . . .                    | 1   | (5NL1)  |
| 4        | 90340-14128-00  | PLUG, STRAIGHT SCREW . . . .        | 1   | (5NL1)  |
| 5        | 93210-14369-00  | O-RING . . . . .                    | 1   | (5NL1)  |
| 6        | 5NL-15451-00-00 | GASKET, CRANKCASE COVER 1 . . . . . | 1   | (5NL1)  |
| 7        | 99530-08016-00  | PIN, DOWEL . . . . .                | 2   | (5NL1)  |
| 8        | 95027-06035-00  | BOLT, FLANGE . . . . .              | 2   | (5NL1)  |
| 9        | 95027-06025-00  | BOLT, FLANGE . . . . .              | 6   | (5NL1)  |
| 10       | 5NL-15431-00-00 | COVER, CRANKCASE 3 . . . . .        | 1   | (5NL1)  |
| 11       | 93101-14164-00  | OIL SEAL . . . . .                  | 1   | (5NL1)  |
| 12       | 90201-15701-00  | WASHER, PLATE (1.0T) . . . . .      | 1   | (5NL1)  |
| 13       | 99009-22500-00  | CIRCLIP . . . . .                   | 1   | (5NL1)  |
| 14       | 5NL-15462-00-00 | GASKET, CRANKCASE COVER 3 . . . . . | 1   | (5NL1)  |
| 15       | 91812-16001-00  | PIN, DOWEL . . . . .                | 2   | (5NL1)  |
| 16       | 95027-06035-00  | BOLT, FLANGE . . . . .              | 8   | (5NL1)  |
| 17       | 5NL-12564-00-00 | PIPE, WATER . . . . .               | 2   | (5NL1)  |
| 18       | 93210-16716-00  | O-RING . . . . .                    | 2   | (5NL1)  |
| 19       | 5NL-15415-00-00 | COVER 1 . . . . .                   | 1   | (5NL1)  |
| 20       | 95027-06025-00  | BOLT, FLANGE . . . . .              | 4   | (5NL1)  |
| 21       | 95027-06035-00  | BOLT, FLANGE . . . . .              | 1   | (5NL1)  |
| 22       | 90105-065A1-00  | BOLT, WASHER BASED . . . . .        | 2   | (5NL1)  |
| 23       | 99530-08016-00  | PIN, DOWEL . . . . .                | 2   | (5NL1)  |
| 24       | 5NL-15453-00-00 | GASKET 1 . . . . .                  | 1   | (5NL1)  |
| 25       | 90465-08029-00  | CLAMP . . . . .                     | 1   | (5NL1)  |

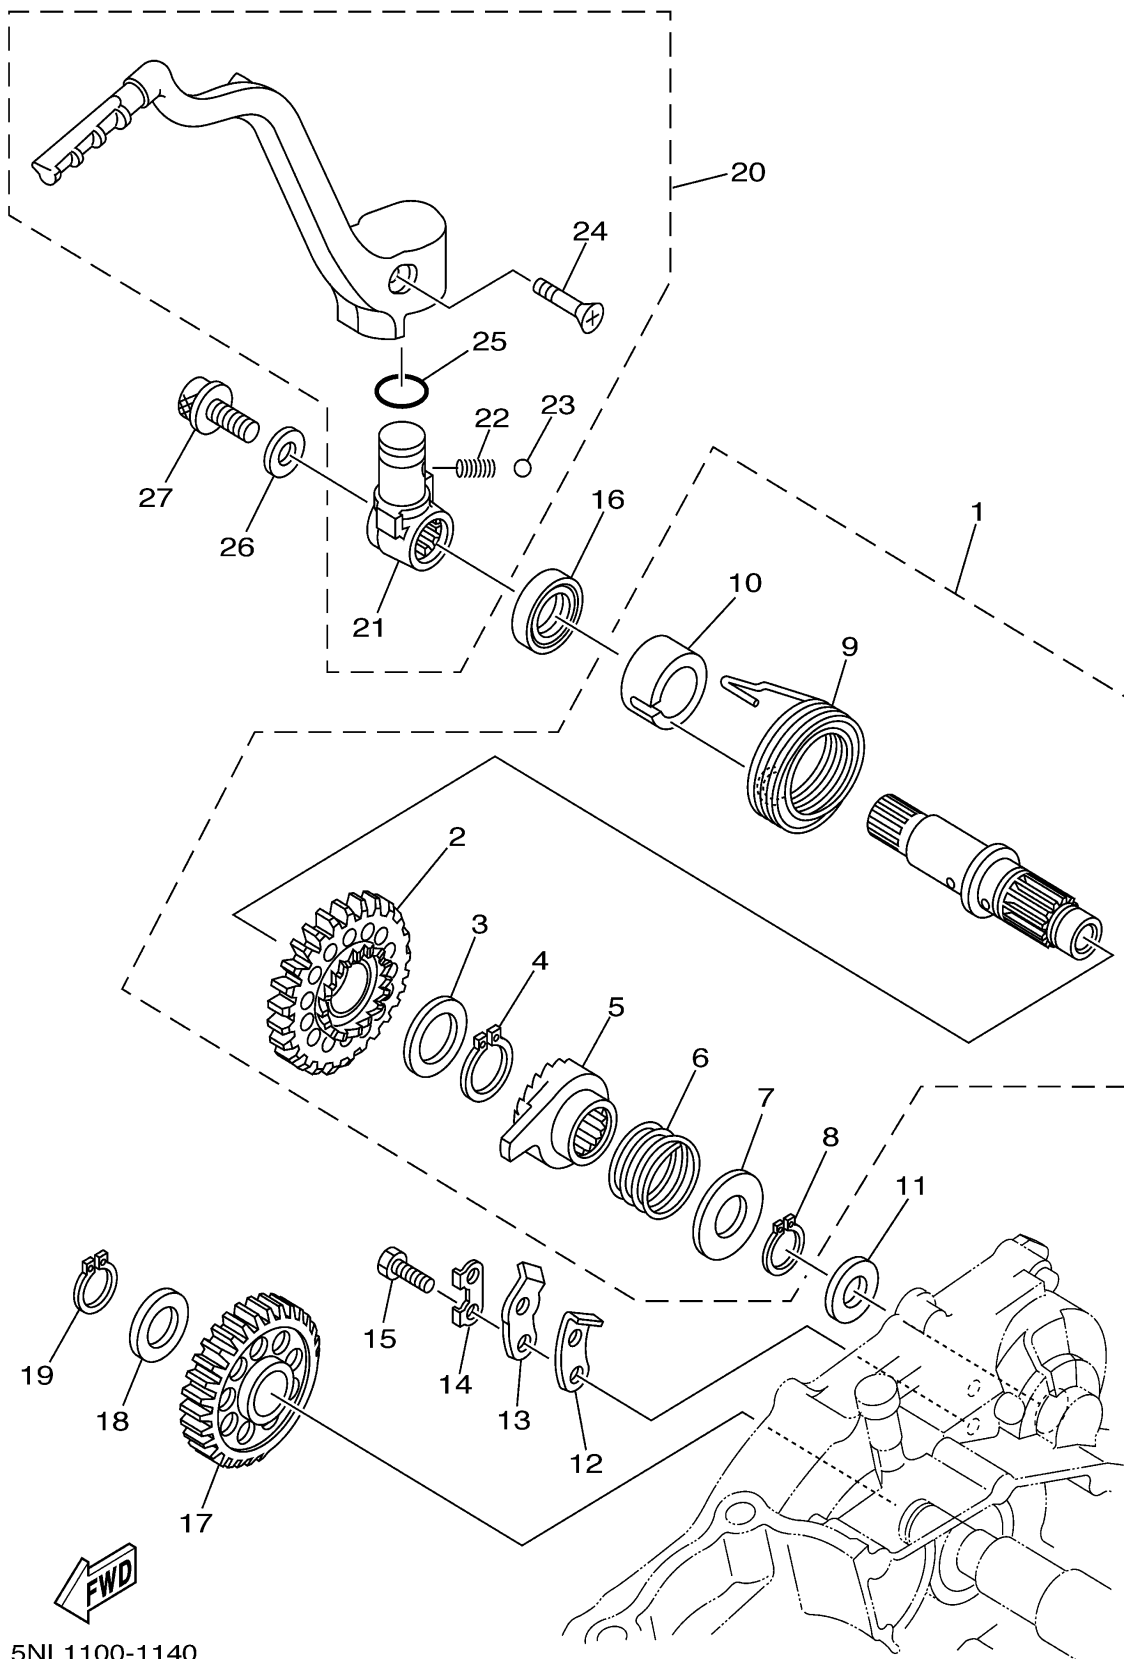

5NL1100-1140

## STARTER
 
| Ref. No. | Part Number     | Description            | Qty | Remarks |
|----------|-----------------|------------------------|-----|---------|
| 1        | 5NL-15601-00-00 | KICK SHAFT ASSY        | 1   | (5NL1)  |
| 2        | 5NL-15641-00-00 | . GEAR, KICK           | 1   | (5NL1)  |
| 3        | 90201-20685-00  | . WASHER, PLATE (0.5T) | 1   | (5NL1)  |
| 4        | 93410-20038-00  | . CIRCLIP              | 1   | (5NL1)  |
| 5        | 4GY-15671-00-00 | . WHEEL, RATCHET       | 1   | (5NL1)  |
| 6        | 90501-16107-00  | . SPRING, COMPRESSION  | 1   | (5NL1)  |
| 7        | 90201-167P7-00  | . WASHER, PLATE        | 1   | (5NL1)  |
| 8        | 99009-16400-00  | . CIRCLIP              | 1   | (5NL1)  |
| 9        | 90508-30743-00  | . SPRING, TORSION      | 1   | (5NL1)  |
| 10       | 5NL-15664-00-00 | . GUIDE, SPRING        | 1   | (5NL1)  |
| 11       | 90201-162H4-00  | WASHER, PLATE          | 1   | (5NL1)  |
| 12       | 2NX-15668-00-00 | STOPPER                | 1   | (5NL1)  |
| 13       | 214-15674-00-00 | GUIDE, RATCHET WHEEL   | 1   | (5NL1)  |
| 14       | 214-15686-00-00 | WASHER, LOCK           | 1   | (5NL1)  |
| 15       | 90101-06001-00  | BOLT                   | 2   | (5NL1)  |
| 16       | 93102-18278-00  | OIL SEAL               | 1   | (5NL1)  |
| 17       | 5NL-15651-00-00 | GEAR, KICK IDLE        | 1   | (5NL1)  |
| 18       | 90201-177G4-00  | WASHER, PLATE          | 1   | (5NL1)  |
| 19       | 99009-17400-00  | CIRCLIP                | 1   | (5NL1)  |
| 20       | 5NL-15620-00-00 | KICK CRANK ASSY        | 1   | (5NL1)  |
| 21       | 5NL-15621-00-00 | . BOSS, KICK CRANK     | 1   | (5NL1)  |
| 22       | 90501-12081-00  | . SPRING, COMPRESSION  | 1   | (5NL1)  |
| 23       | 93507-32009-00  | . BALL                 | 1   | (5NL1)  |
| 24       | 90152-06010-00  | . SCREW, COUNTERSUNK   | 1   | (5NL1)  |
| 25       | 93210-17570-00  | . O-RING               | 1   | (5NL1)  |
| 26       | 90201-08326-00  | WASHER, PLATE          | 1   | (5NL1)  |
| 27       | 90109-082G0-00  | BOLT                   | 1   | (5NL1)  |

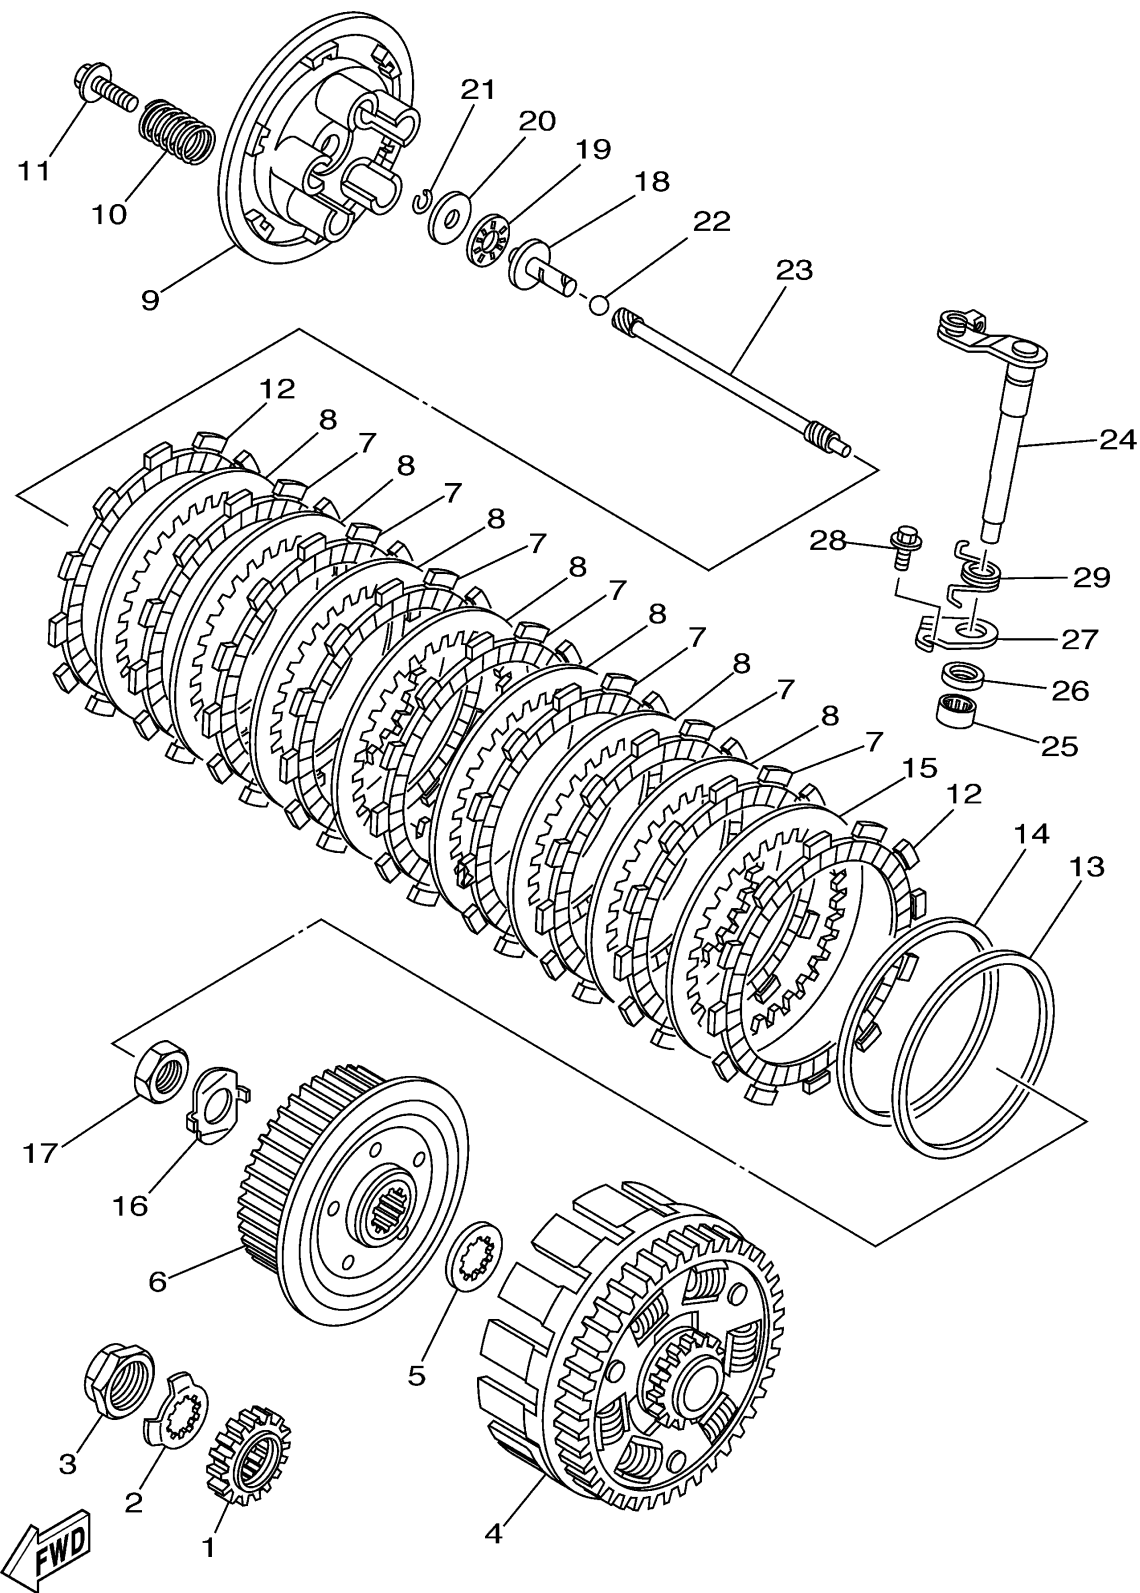


5NL1100-1150

# CLUTCH
 
| Ref. No. | Part Number     | Description                          | Qty | Remarks |
|----------|-----------------|--------------------------------------|-----|---------|
| 1        | 5NL-16111-00-00 | GEAR, PRIMARY DRIVE . . . . .        | 1   | (5NL1)  |
| 2        | 90215-20003-00  | WASHER, LOCK . . . . .               | 1   | (5NL1)  |
| 3        | 90179-18001-00  | NUT . . . . .                        | 1   | (5NL1)  |
| 4        | 5NL-16150-00-00 | PRIMARY DRIVEN GEAR<br>COMP. . . . . | 1   | (5NL1)  |
| 5        | 5NL-16154-00-00 | PLATE, THRUST 1 . . . . .            | 1   | (5NL1)  |
| 6        | 5NL-16371-00-00 | BOSS, CLUTCH . . . . .               | 1   | (5NL1)  |
| 7        | 5DH-16321-00-00 | PLATE, FRICTION . . . . .            | 7   | (5NL1)  |
| 8        | 5NL-16325-00-00 | PLATE, CLUTCH 2 . . . . .            | 7   | (5NL1)  |
| 9        | 5HD-16351-00-00 | PLATE, PRESSURE 1 . . . . .          | 1   | (5NL1)  |
| 10       | 90501-224J9-00  | SPRING, COMPRESSION . . . . .        | 5   | (5NL1)  |
| 11       | 90159-06092-00  | SCREW, WITH WASHER . . . . .         | 5   | (5NL1)  |
| 12       | 3XJ-16321-00-00 | PLATE, FRICTION . . . . .            | 2   | (5NL1)  |
| 13       | 3XV-16384-10-00 | PLATE, SEAT . . . . .                | 1   | (5NL1)  |
| 14       | 5NL-16383-00-00 | SPRING, CLUTCH BOSS . . . . .        | 1   | (5NL1)  |
| 15       | 5NL-16325-10-00 | PLATE, CLUTCH 2 . . . . .            | 1   | (5NL1)  |
| 16       | 90215-16289-00  | WASHER, LOCK . . . . .               | 1   | (5NL1)  |
| 17       | 90170-16326-00  | NUT . . . . .                        | 1   | (5NL1)  |
| 18       | 5NL-16356-00-00 | ROD, PUSH 1 . . . . .                | 1   | (5NL1)  |
| 19       | 93340-21008-00  | BEARING . . . . .                    | 1   | (5NL1)  |
| 20       | 90201-080H1-00  | WASHER, PLATE . . . . .              | 1   | (5NL1)  |
| 21       | 93440-07182-00  | CIRCLIP . . . . .                    | 1   | (5NL1)  |
| 22       | 93511-32027-00  | BALL . . . . .                       | 1   | (5NL1)  |
| 23       | 5NL-16357-00-00 | ROD, PUSH 2 . . . . .                | 1   | (5NL1)  |
| 24       | 5JG-16381-00-00 | PUSH LEVER COMP. . . . .             | 1   | (5NL1)  |
| 25       | 93315-11206-00  | BEARING . . . . .                    | 1   | (5NL1)  |
| 26       | 93102-12224-00  | OIL SEAL . . . . .                   | 1   | (5NL1)  |
| 27       | 4JT-16384-00-00 | PLATE, SEAT . . . . .                | 1   | (5NL1)  |
| 28       | 95027-06010-00  | BOLT, FLANGE . . . . .               | 1   | (5NL1)  |


CONTINUED ON NEXT FRAME ►

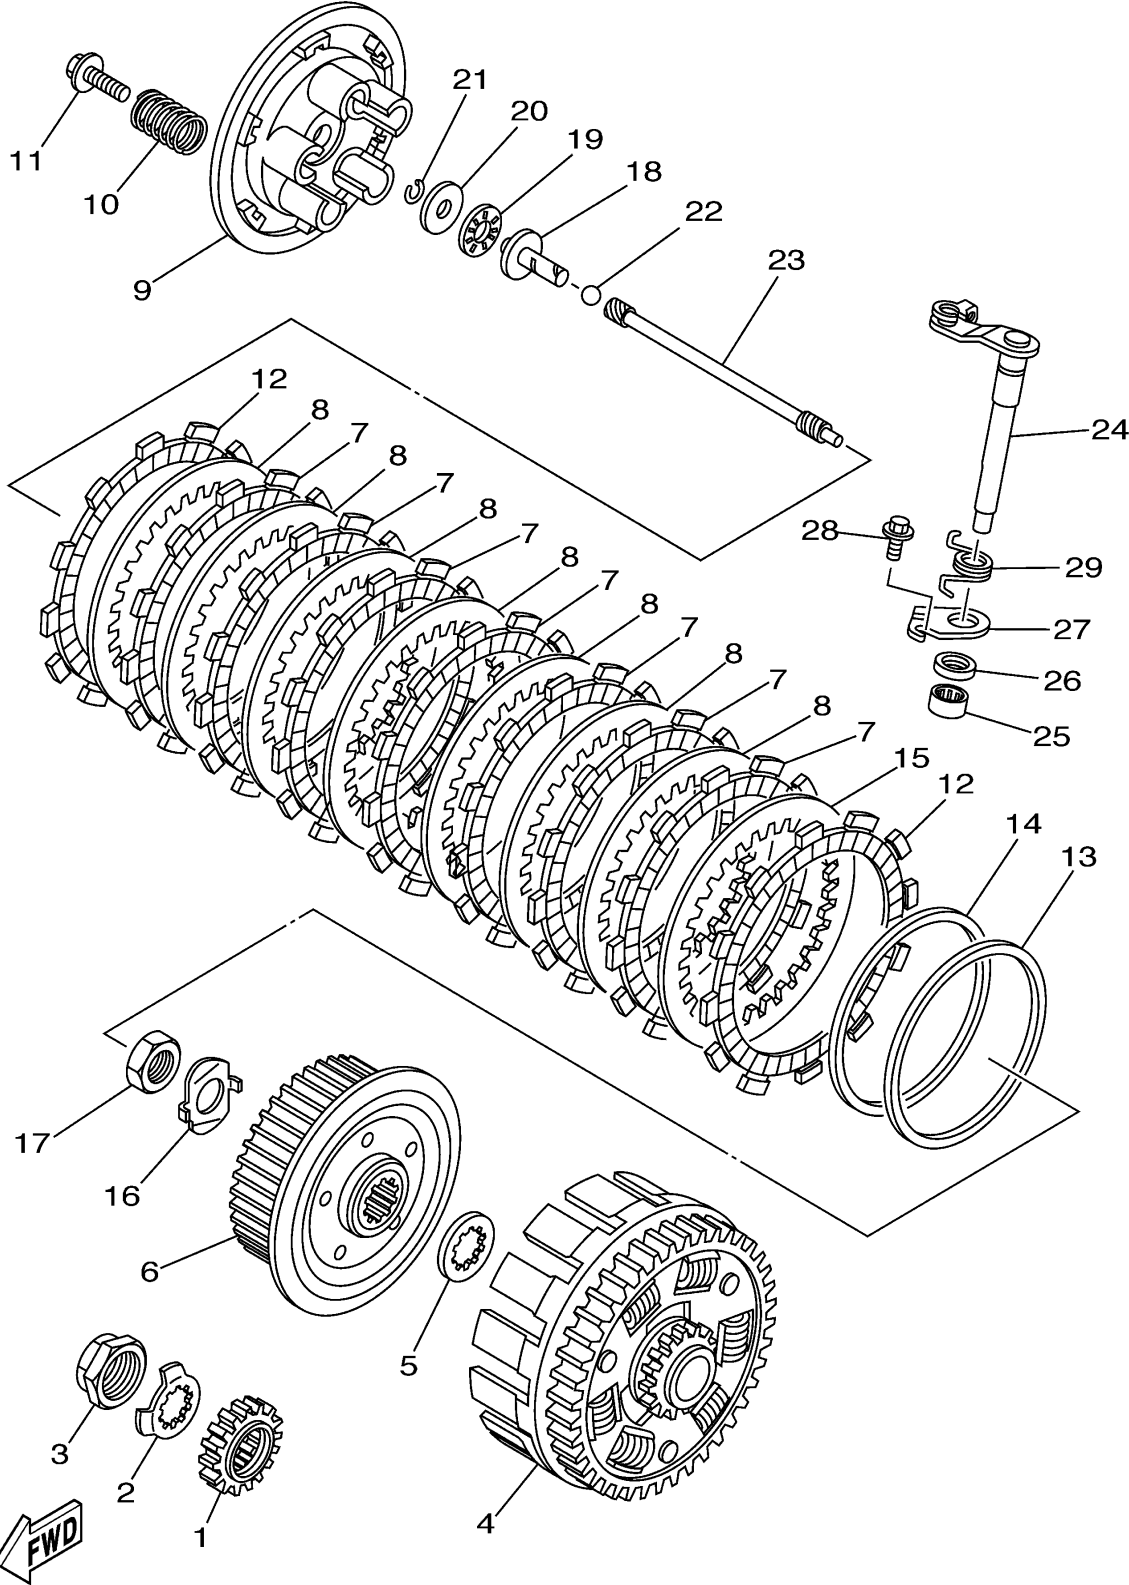

5NL1100-1150

# CLUTCH
 
| Ref. No. | Part Number    | Description           | Qty | Remarks |
|----------|----------------|-----------------------|-----|---------|
| 29       | 90508-142B5-00 | SPRING, TORSION ..... | 1   | (5NL1)  |

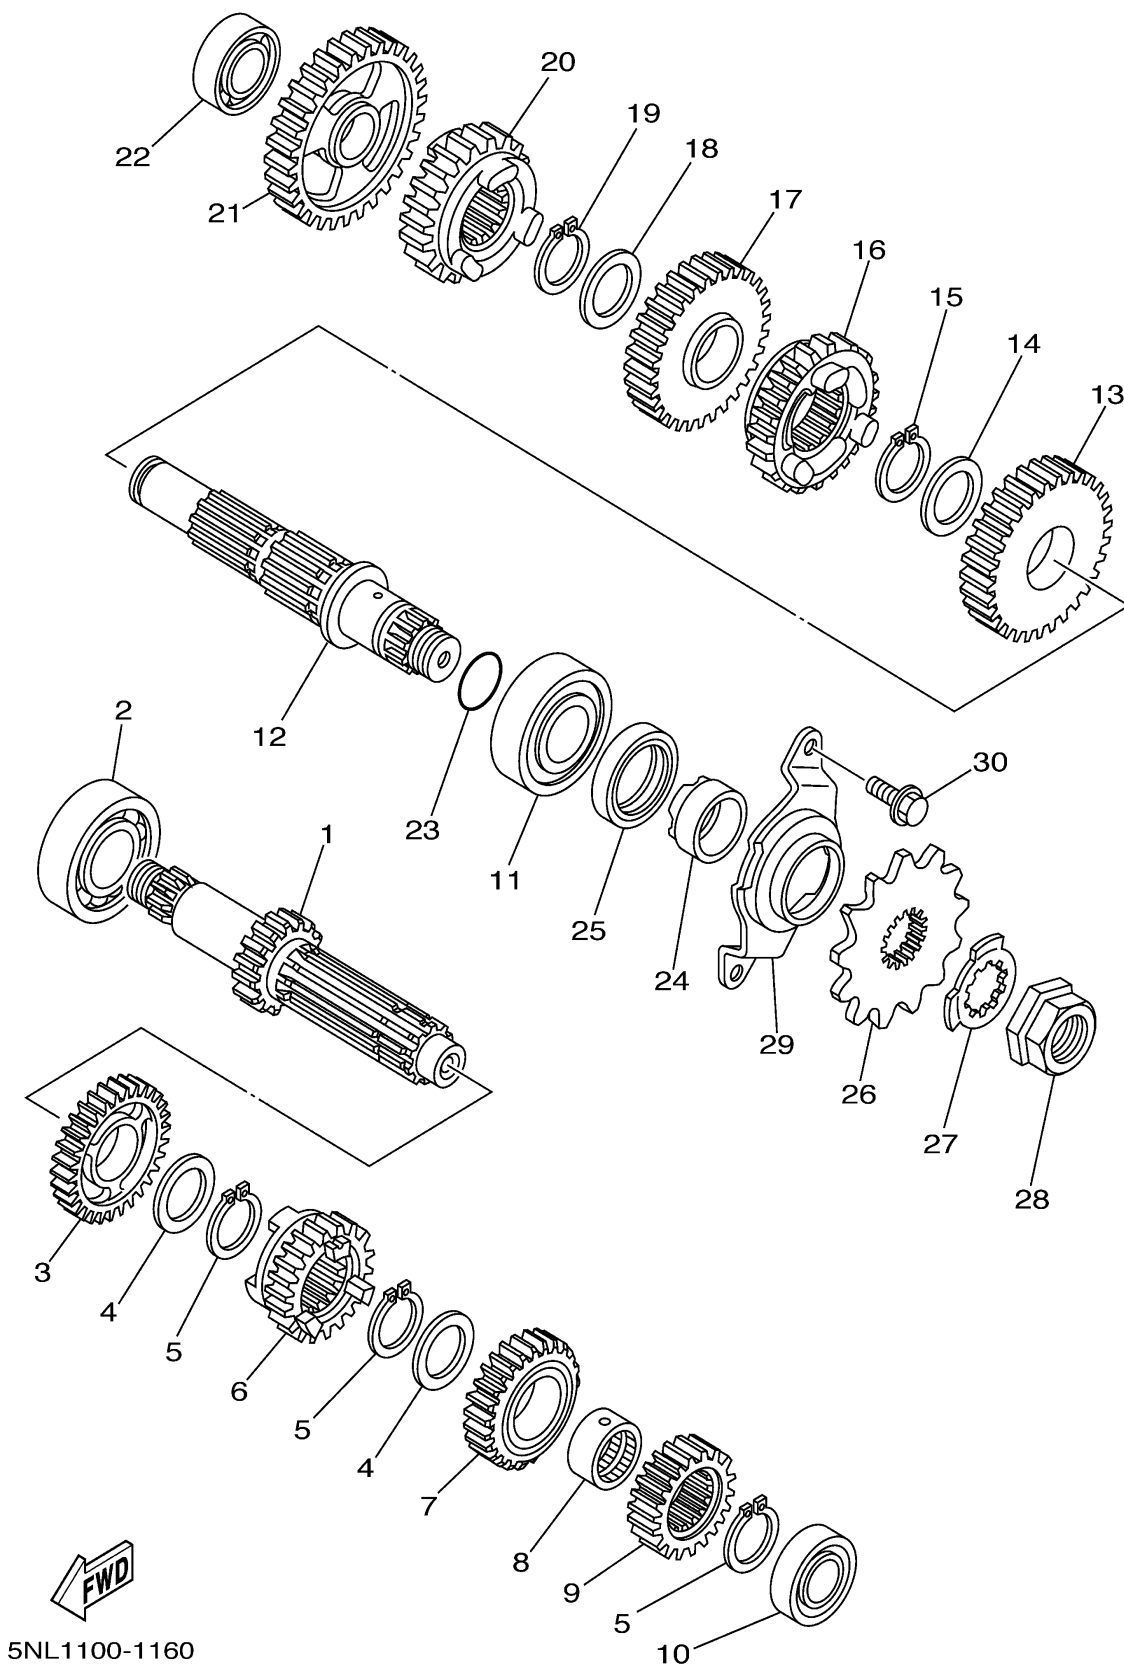


# TRANSMISSION

| Ref. No. | Part Number     | Description            | Qty | Remarks |
|----------|-----------------|------------------------|-----|---------|
| 1        | 5NL-17411-00-00 | AXLE, MAIN (14T)       | 1   | (5NL1)  |
| 2        | 93306-20447-00  | BEARING                | 1   | (5NL1)  |
| 3        | 5NL-17151-00-00 | GEAR, 5TH PINION (24T) | 1   | (5NL1)  |
| 4        | 90209-20008-00  | WASHER                 | 2   | (5NL1)  |
| 5        | 93410-22039-00  | CIRCLIP                | 3   | (5NL1)  |
| 6        | 5NL-17131-00-00 | GEAR, 3RD PINION (20T) | 1   | (5NL1)  |
| 7        | 5NL-17141-00-00 | GEAR, 4TH PINION (22T) | 1   | (5NL1)  |
| 8        | 90387-20006-00  | COLLAR                 | 1   | (5NL1)  |
| 9        | 5NL-17121-00-00 | GEAR, 2ND PINION (16T) | 1   | (5NL1)  |
| 10       | 93306-00320-00  | BEARING                | 1   | (5NL1)  |
| 11       | 93306-27208-00  | BEARING                | 1   | (5NL1)  |
| 12       | 5NL-17421-00-00 | AXLE, DRIVE            | 1   | (5NL1)  |
| 13       | 5NL-17221-00-00 | GEAR, 2ND WHEEL (28T)  | 1   | (5NL1)  |
| 14       | 90209-23012-00  | WASHER                 | 1   | (5NL1)  |
| 15       | 93410-26067-00  | CIRCLIP                | 1   | (5NL1)  |
| 16       | 5NL-17241-00-00 | GEAR, 4TH WHEEL (27T)  | 1   | (5NL1)  |
| 17       | 5NL-17231-00-00 | GEAR, 3RD WHEEL (29T)  | 1   | (5NL1)  |
| 18       | 90209-20008-00  | WASHER                 | 1   | (5NL1)  |
| 19       | 93410-22039-00  | CIRCLIP                | 1   | (5NL1)  |
| 20       | 5NL-17251-00-00 | GEAR, 5TH WHEEL (25T)  | 1   | (5NL1)  |
| 21       | 5NL-17211-00-00 | GEAR, 1ST WHEEL (30T)  | 1   | (5NL1)  |
| 22       | 93306-00317-00  | BEARING                | 1   | (5NL1)  |
| 23       | 93210-196A4-00  | O-RING                 | 1   | (5NL1)  |
| 24       | 90387-22001-00  | COLLAR                 | 1   | (5NL1)  |
| 25       | 93102-28008-00  | OIL SEAL               | 1   | (5NL1)  |
| 26       | 9383B-13218-00  | SPROCKET, DRIVE (13T)  | 1   | (5NL1)  |
| 27       | 90215-20003-00  | WASHER, LOCK           | 1   | (5NL1)  |
| 28       | 90179-18001-00  | NUT                    | 1   | (5NL1)  |
| 29       | 5NL-17471-00-00 | PLATE, COVER           | 1   | (5NL1)  |

CONTINUED ON NEXT FRAME ➤

 
5NL1100-1160

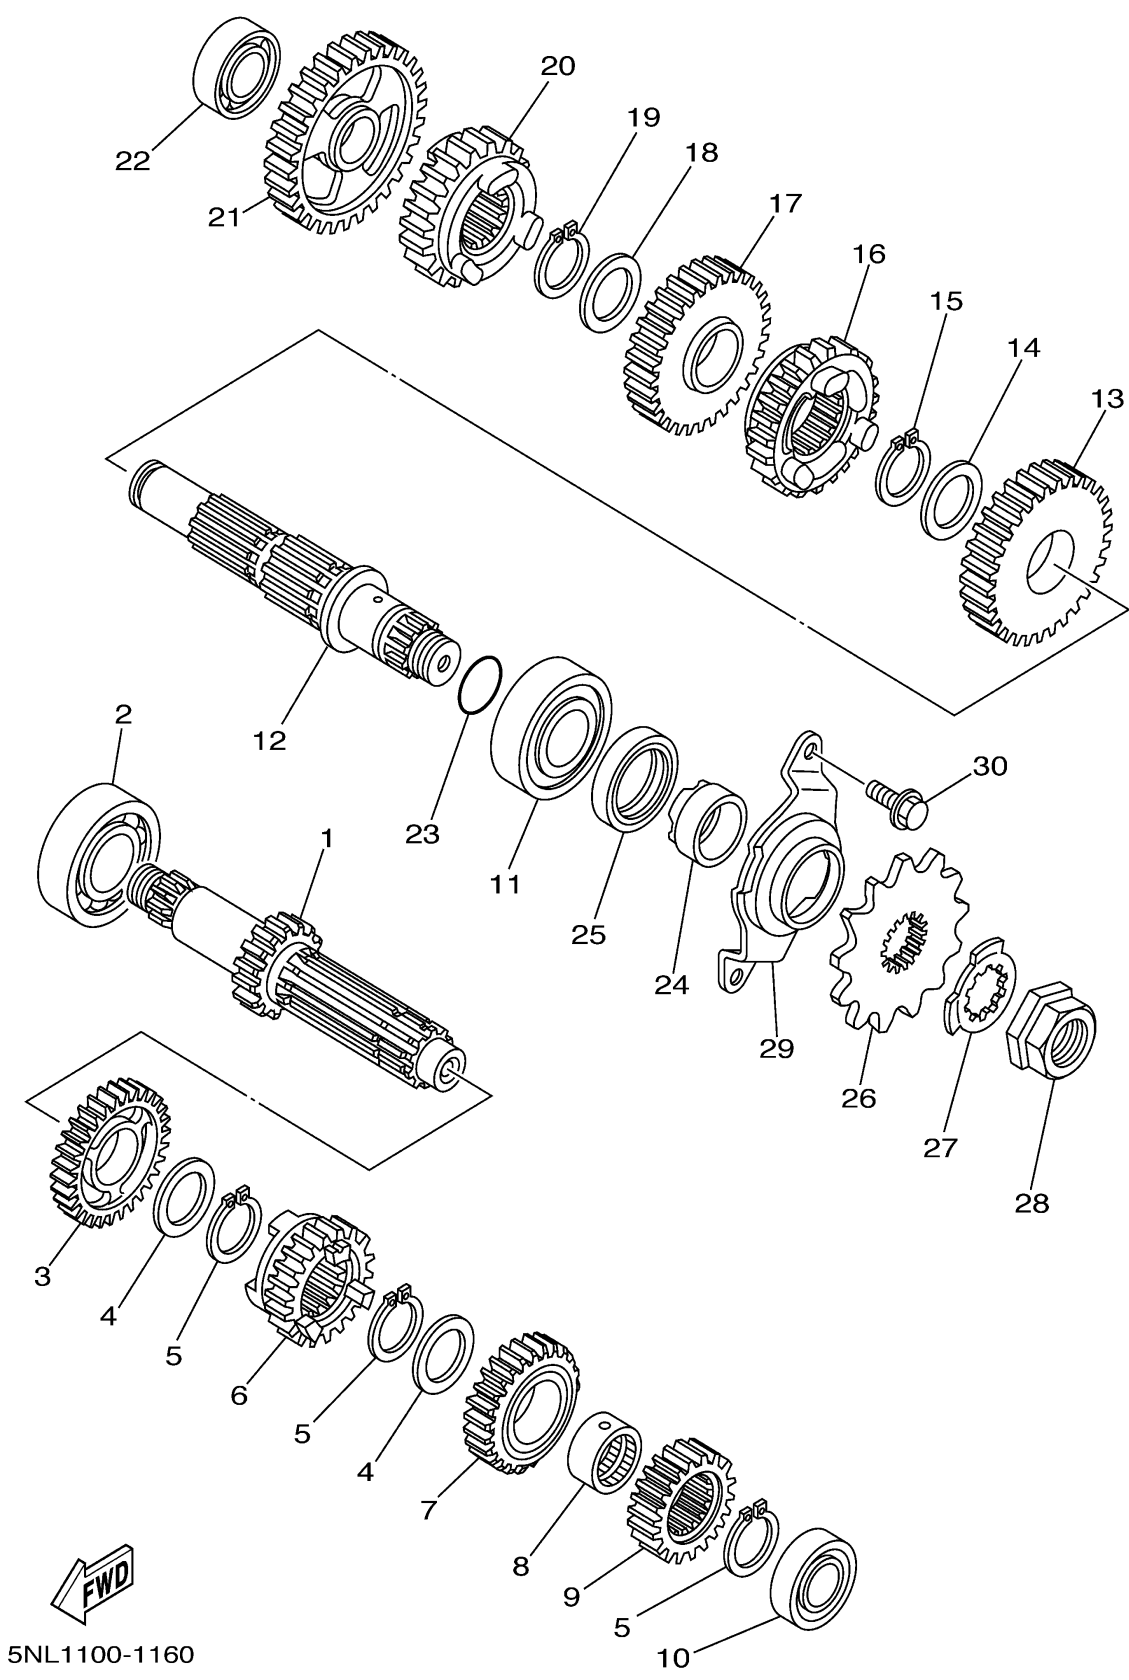

# TRANSMISSION

| Ref. No. | Part Number    | Description        | Qty     | Remarks |
|----------|----------------|--------------------|---------|---------|
| 30       | 90105-06553-00 | BOLT, WASHER BASED | ..... 2 | (5NL1)  |

 
5NL1100-1160

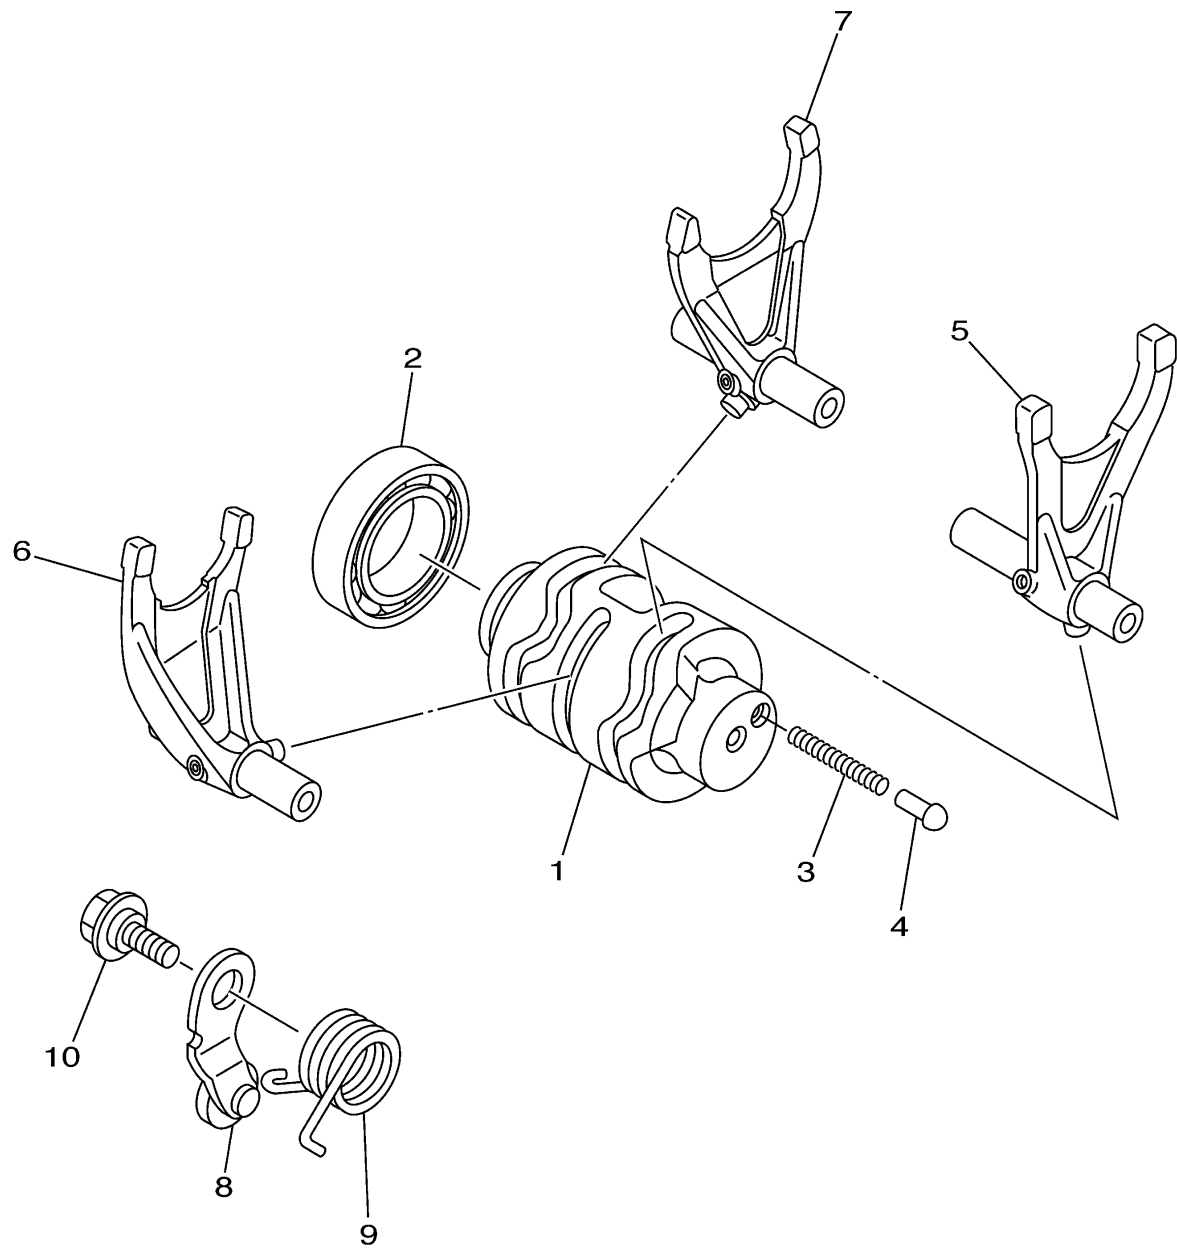

# SHIFT CAM. FORK
 
| Ref. No. | Part Number     | Description               | Qty | Remarks |
|----------|-----------------|---------------------------|-----|---------|
| 1        | 5NL-18541-00-00 | CAM, SHIFT .....          | 1   | (5NL1)  |
| 2        | 93306-90501-00  | BEARING .....             | 1   | (5NL1)  |
| 3        | 90501-06022-00  | SPRING, COMPRESSION ..... | 1   | (5NL1)  |
| 4        | 4BA-18542-00-00 | POINT, NEUTRAL .....      | 1   | (5NL1)  |
| 5        | 5NL-18501-00-00 | FORK, SHIFT 1 .....       | 1   | (5NL1)  |
| 6        | 5NL-18502-00-00 | FORK, SHIFT 2 .....       | 1   | (5NL1)  |
| 7        | 5NL-18503-00-00 | FORK, SHIFT 3 .....       | 1   | (5NL1)  |
| 8        | 3XK-18140-00-00 | STOPPER LEVER ASSY .....  | 1   | (5NL1)  |
| 9        | 90508-26561-00  | SPRING, TORSION .....     | 1   | (5NL1)  |
| 10       | 90109-063F8-00  | BOLT .....                | 1   | (5NL1)  |




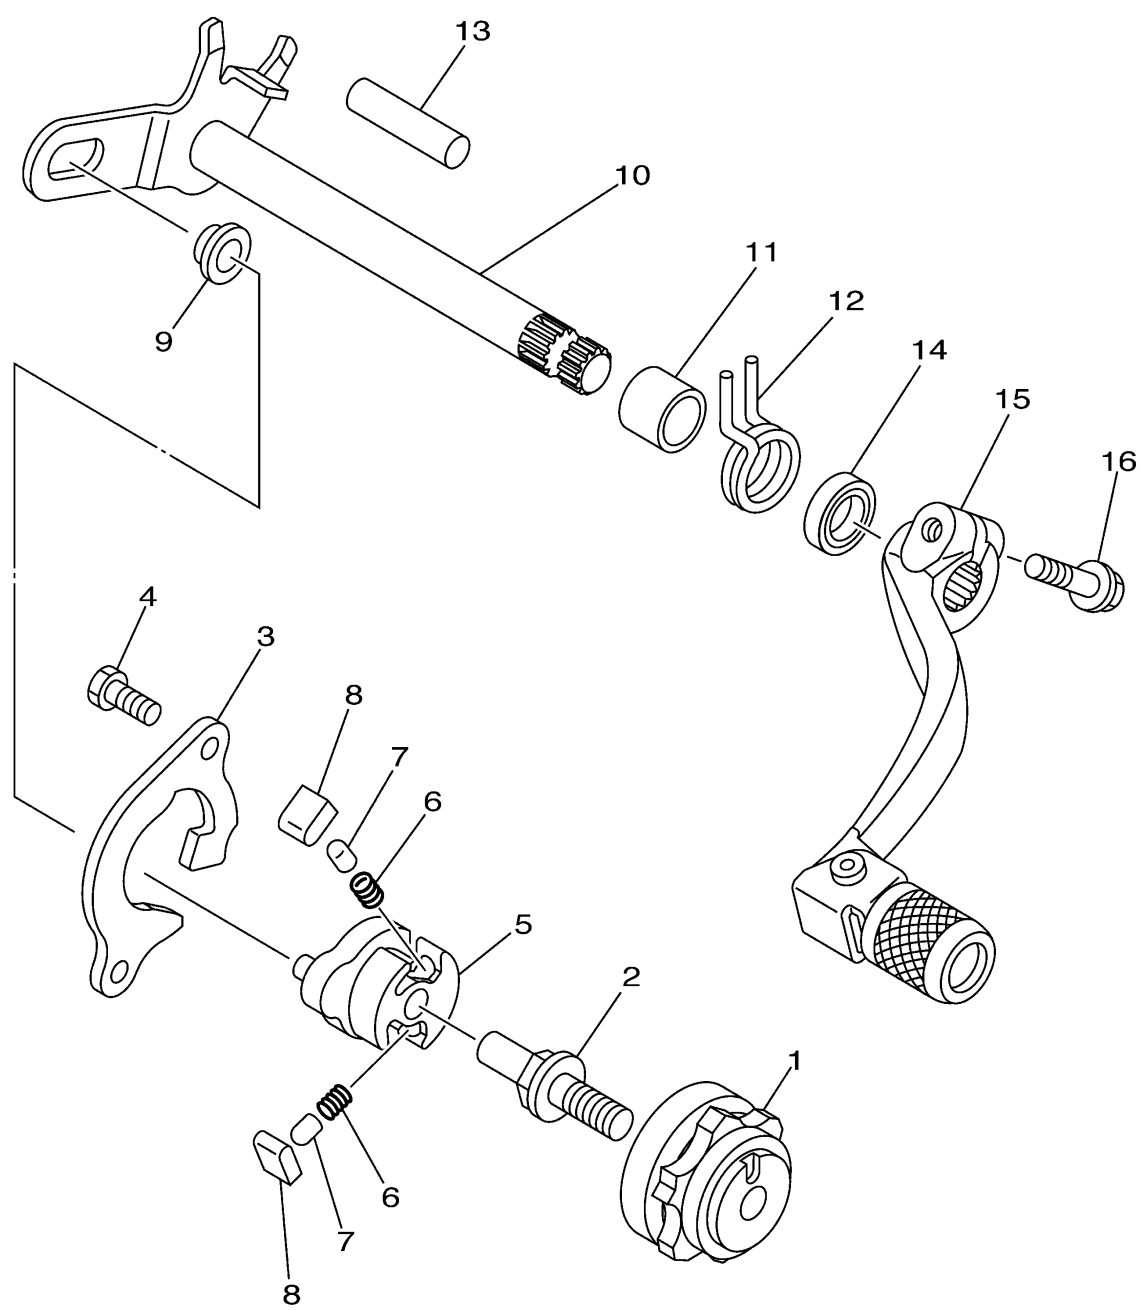

5NL1100-1180

# SHIFT SHAFT
 
| Ref. No. | Part Number     | Description               | Qty | Remarks |
|----------|-----------------|---------------------------|-----|---------|
| 1        | 4EW-18185-00-00 | SEGMENT .....             | 1   | (5NL1)  |
| 2        | 3XJ-18173-00-00 | PIN, SHIFT .....          | 1   | (5NL1)  |
| 3        | 5BE-18172-00-00 | GUIDE, SHIFT .....        | 1   | (5NL1)  |
| 4        | 90101-06664-00  | BOLT .....                | 2   | (5NL1)  |
| 5        | 5LP-18122-00-00 | LEVER, SHIFT 2 .....      | 1   | (5NL1)  |
| 6        | 90501-052G5-00  | SPRING, COMPRESSION ..... | 2   | (5NL1)  |
| 7        | 3XJ-18184-00-00 | PIN, PAWL .....           | 2   | (5NL1)  |
| 8        | 3XJ-18182-00-00 | PAWL, SHIFTER .....       | 2   | (5NL1)  |
| 9        | 3XJ-18178-00-00 | ROLLER, SHIFT LEVER ..... | 1   | (5NL1)  |
| 10       | 5NL-18101-00-00 | SHIFT SHAFT ASSY .....    | 1   | (5NL1)  |
| 11       | 90387-124F4-00  | COLLAR .....              | 1   | (5NL1)  |
| 12       | 90508-291A8-00  | SPRING, TORSION .....     | 1   | (5NL1)  |
| 13       | 93608-33002-00  | PIN, DOWEL .....          | 1   | (5NL1)  |
| 14       | 93102-12224-00  | OIL SEAL .....            | 1   | (5NL1)  |
| 15       | 5NL-18110-00-00 | SHIFT PEDAL ASSY .....    | 1   | (5NL1)  |
| 16       | 95027-06020-00  | BOLT, FLANGE .....        | 1   | (5NL1)  |

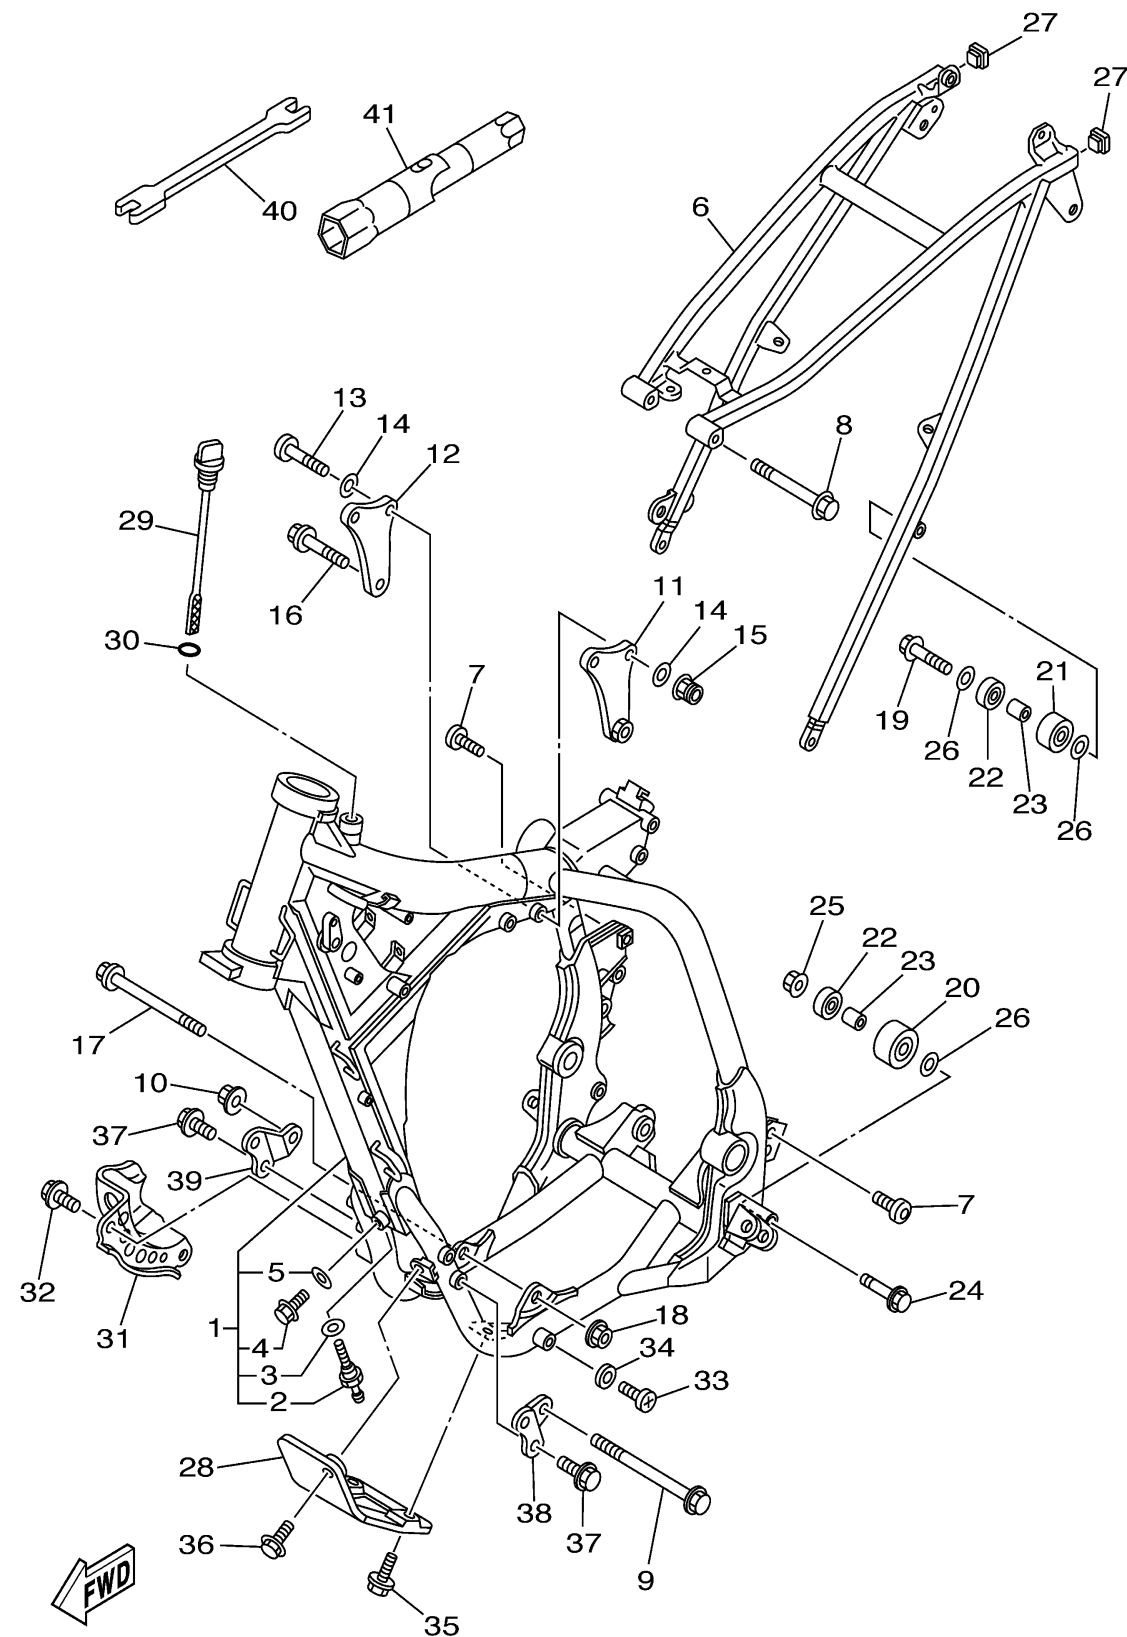


5NL1100-1190

# FRAME
 
| Ref. No. | Part Number     | Description                     | Qty | Remarks     |
|----------|-----------------|---------------------------------|-----|-------------|
| 1        | 5NL-21101-00-P0 | FRONT FRAME COMP. ....          | 1   | DPBMC(5NL1) |
| 2        | 5BE-21756-00-00 | . NET, FILTER .....             | 1   | (5NL1)      |
| 3        | 90430-18130-00  | . GASKET .....                  | 1   | (5NL1)      |
| 4        | 95827-08012-00  | . BOLT, FLANGE .....            | 1   | (5NL1)      |
| 5        | 90430-08119-00  | . GASKET .....                  | 1   | (5NL1)      |
| 6        | 5JG-21190-50-P0 | REAR FRAME COMP. ....           | 1   | DPBMC(5NL1) |
| 7        | 90110-08096-00  | BOLT, HEXAGON SOCKET HEAD ..... | 2   | (5NL1)      |
| 8        | 90105-08099-00  | BOLT, WASHER BASED .....        | 1   | (5NL1)      |
| 9        | 95817-10130-00  | BOLT, FLANGE .....              | 1   | (5NL1)      |
| 10       | 95607-10200-00  | NUT, SELF-LOCKING .....         | 1   | (5NL1)      |
| 11       | 5NL-21425-00-00 | BRACKET, REAR UPPER 1 ...       | 1   | (5NL1)      |
| 12       | 5NL-21425-10-00 | BRACKET, REAR UPPER 1 ...       | 1   | (5NL1)      |
| 13       | 92017-08055-00  | BOLT, BUTTON HEAD .....         | 2   | (5NL1)      |
| 14       | 90201-086P8-00  | WASHER, PLATE .....             | 4   | (5NL1)      |
| 15       | 90185-08169-00  | NUT, SELF-LOCKING .....         | 2   | (5NL1)      |
| 16       | 95817-10050-00  | BOLT, FLANGE .....              | 1   | (5NL1)      |
| 17       | 90105-10733-00  | BOLT, WASHER BASED .....        | 1   | (5NL1)      |
| 18       | 95607-10200-00  | NUT, SELF-LOCKING .....         | 1   | (5NL1)      |
| 19       | 95027-08040-00  | BOLT, FLANGE .....              | 1   | (5NL1)      |
| 20       | 3JD-22178-10-00 | TENSIONER .....                 | 1   | (5NL1)      |
| 21       | 4EW-22178-00-00 | TENSIONER .....                 | 1   | (5NL1)      |
| 22       | 93300-60804-00  | BEARING .....                   | 2   | (5NL1)      |
| 23       | 90387-086N4-00  | COLLAR .....                    | 2   | (5NL1)      |
| 24       | 95027-08065-00  | BOLT, FLANGE .....              | 1   | (5NL1)      |
| 25       | 95707-08500-00  | NUT, FLANGE .....               | 1   | (5NL1)      |
| 26       | 90201-086P8-00  | WASHER, PLATE .....             | 3   | (5NL1)      |
| 27       | 90338-16148-00  | PLUG .....                      | 2   | (5NL1)      |
| 28       | 5NL-21471-00-00 | PROTECTOR, ENGINE .....         | 1   | (5NL1)      |


CONTINUED ON NEXT FRAME ➤

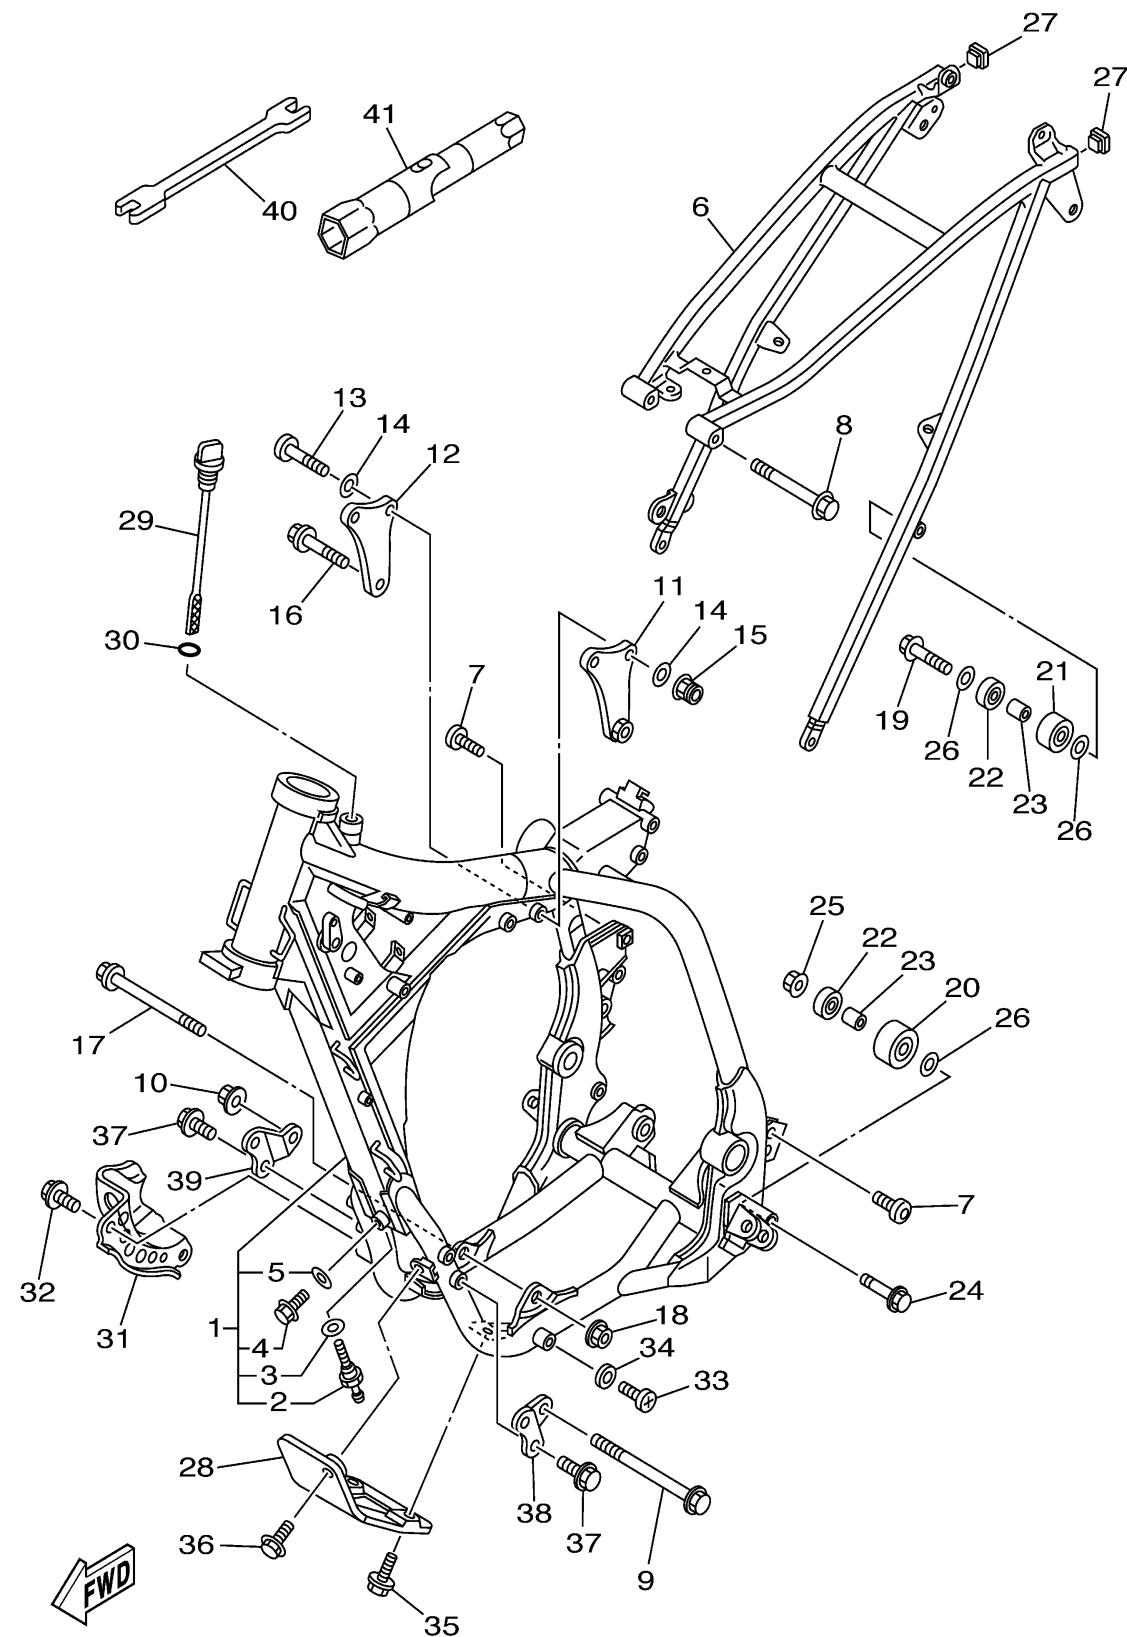

# FRAME

| Ref. No. | Part Number     | Description              | Qty | Remarks |
|----------|-----------------|--------------------------|-----|---------|
| 29       | 5NL-15362-00-00 | PLUG, OIL LEVEL .....    | 1   | (5NL1)  |
| 30       | 93210-19123-00  | O-RING .....             | 1   | (5NL1)  |
| 31       | 5NL-2147A-00-00 | GUARD, ENGINE 1 .....    | 1   | (5NL1)  |
| 32       | 95027-08012-00  | BOLT, FLANGE .....       | 2   | (5NL1)  |
| 33       | 90157-08028-00  | SCREW, PAN HEAD .....    | 1   | (5NL1)  |
| 34       | 90202-08204-00  | WASHER, PLATE .....      | 1   | (5NL1)  |
| 35       | 95027-06012-00  | BOLT, FLANGE .....       | 2   | (5NL1)  |
| 36       | 90119-06001-00  | BOLT, WITH WASHER .....  | 1   | (5NL1)  |
| 37       | 95817-08016-00  | BOLT, FLANGE .....       | 4   | (5NL1)  |
| 38       | 5NL-21417-00-00 | BRACKET, FRONT LOWER 1 . | 1   | (5NL1)  |
| 39       | 5NL-21417-10-00 | BRACKET, FRONT LOWER 1 . | 1   | (5NL1)  |
| 40       | 5ET-28166-00-00 | WRENCH, HEXAGON .....    | 1   | (5NL1)  |
| 41       | 5BE-2814F-00-00 | BOX, SPARK PLUG .....    | 1   | (5NL1)  |

 
5NL1100-1190

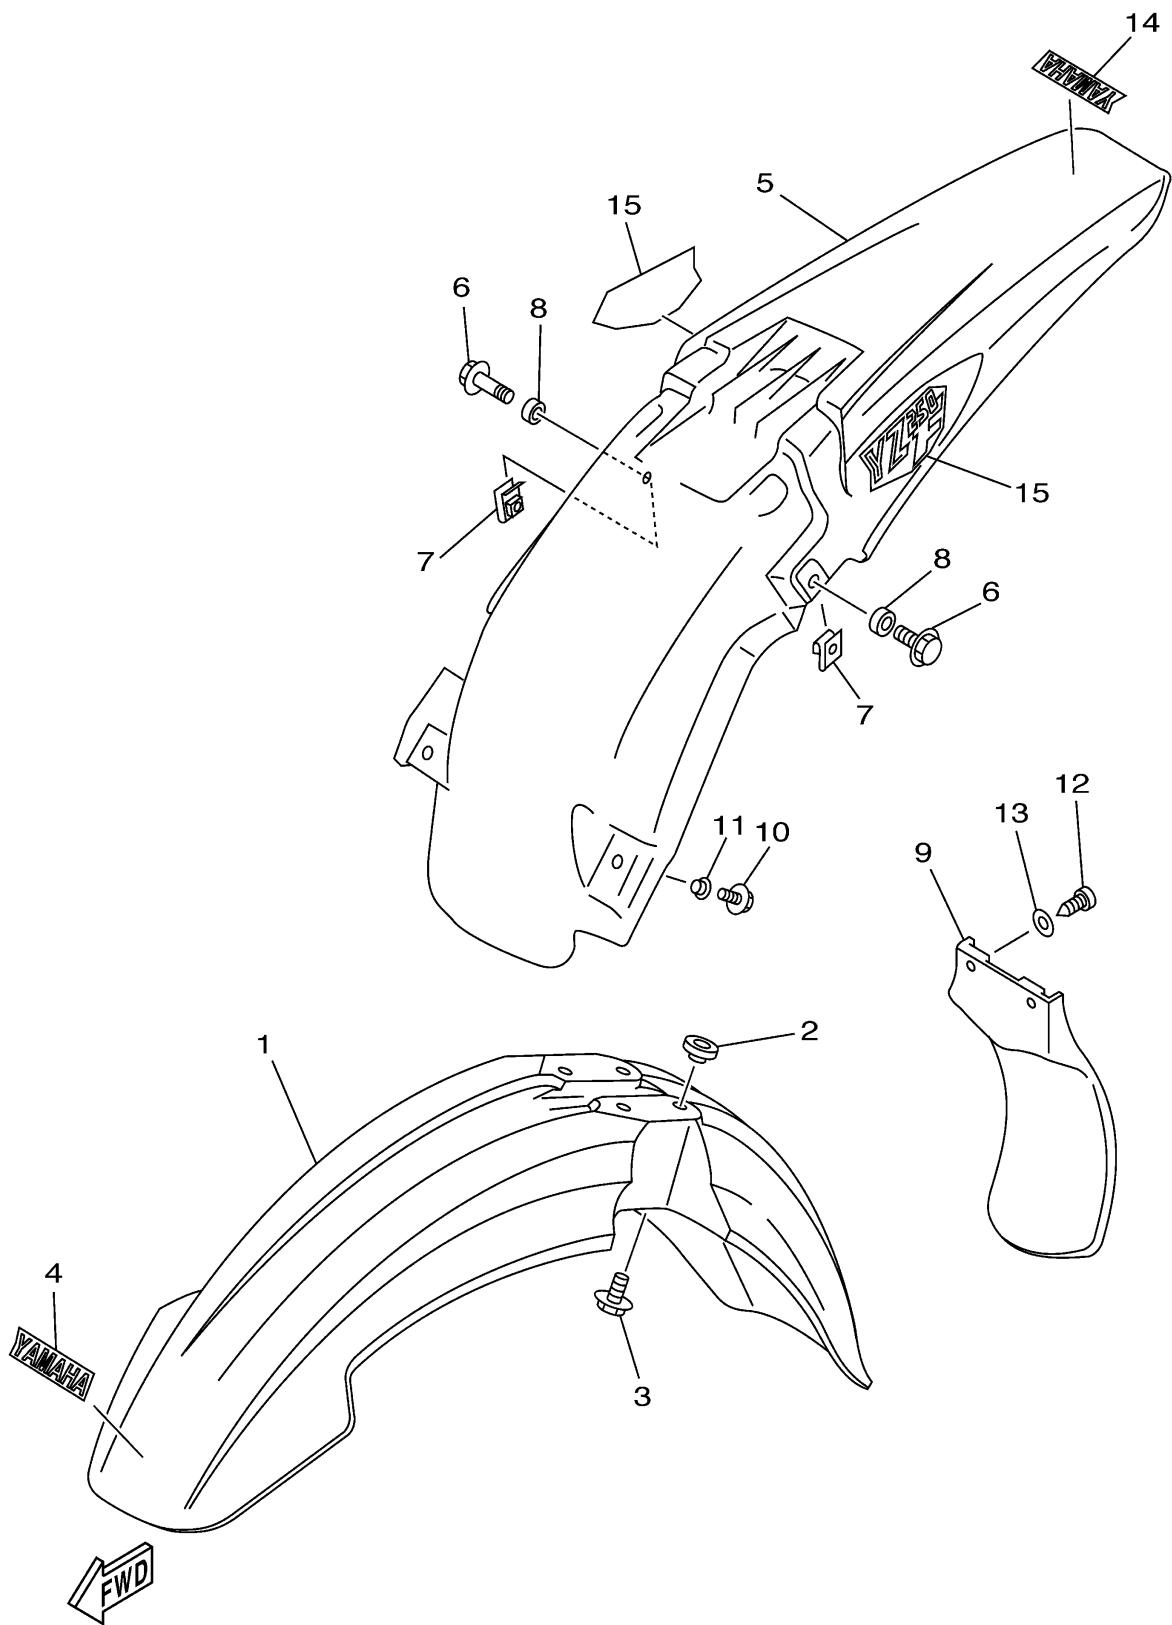

5NL1100-1200


# FENDER
 
| Ref. No. | Part Number     | Description              | Qty | Remarks |
|----------|-----------------|--------------------------|-----|---------|
| 1        | 5HD-21511-00-00 | FENDER, FRONT .....      | 1   | (5NL1)  |
| 2        | 3JD-21748-00-00 | COLLAR .....             | 4   | (5NL1)  |
| 3        | 90119-06096-00  | BOLT, WITH WASHER .....  | 4   | (5NL1)  |
| 4        | 4ES-2153E-01-00 | EMBLEM, YAMAHA .....     | 1   | (5NL1)  |
| 5        | 5BE-21611-10-00 | FENDER, REAR .....       | 1   | (5NL1)  |
| 6        | 90105-06553-00  | BOLT, WASHER BASED ..... | 2   | (5NL1)  |
| 7        | 90183-06023-00  | NUT, SPRING .....        | 2   | (5NL1)  |
| 8        | 90387-0701A-00  | COLLAR .....             | 2   | (5NL1)  |
| 9        | 5BE-21642-00-00 | GUARD, FLAP .....        | 1   | (5NL1)  |
| 10       | 90105-06690-00  | BOLT, WASHER BASED ..... | 2   | (5NL1)  |
| 11       | 90387-06009-00  | COLLAR .....             | 2   | (5NL1)  |
| 12       | 97707-60016-00  | SCREW, TAPPING .....     | 2   | (5NL1)  |
| 13       | 90201-06557-00  | WASHER, PLATE .....      | 2   | (5NL1)  |
| 14       | 4ES-2153E-01-00 | EMBLEM, YAMAHA .....     | 1   | (5NL1)  |
| 15       | 5NL-2163G-00-00 | EMBLEM 1 .....           | 2   | (5NL1)  |

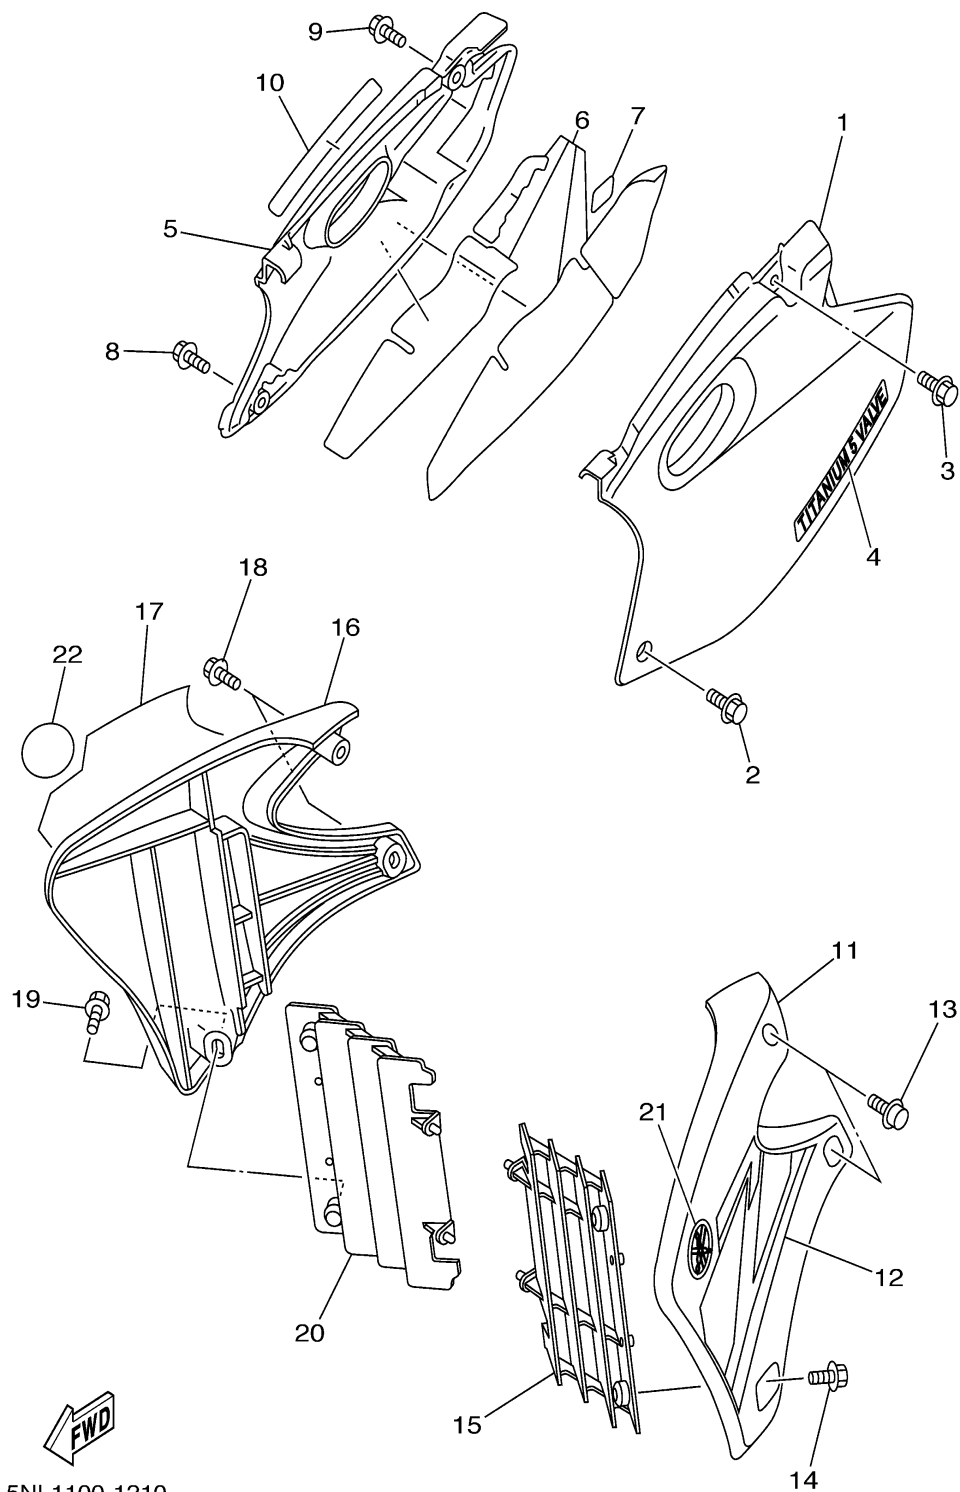

# SIDE COVER
 
| Ref. No. | Part Number     | Description               | Qty | Remarks |
|----------|-----------------|---------------------------|-----|---------|
| 1        | 5BE-21711-00-00 | COVER, SIDE 1 .....       | 1   | (5NL1)  |
| 2        | 95827-06016-00  | BOLT, FLANGE .....        | 1   | (5NL1)  |
| 3        | 90119-08238-00  | BOLT, WITH WASHER .....   | 1   | (5NL1)  |
| 4        | 5JG-21781-50-00 | EMBLEM 1 .....            | 1   | (5NL1)  |
| 5        | 5BE-21721-00-00 | COVER, SIDE 2 .....       | 1   | (5NL1)  |
| 6        | 5BE-2174A-00-00 | INSULATOR, SIDE COVER ... | 1   | (5NL1)  |
| 7        | 3FY-21575-01-00 | SEAL 1 .....              | 1   | (5NL1)  |
| 8        | 95827-06016-00  | BOLT, FLANGE .....        | 1   | (5NL1)  |
| 9        | 90119-08238-00  | BOLT, WITH WASHER .....   | 1   | (5NL1)  |
| 10       | 5JG-21781-50-00 | EMBLEM 1 .....            | 1   | (5NL1)  |
| 11       | 5NL-21731-00-00 | COVER, SIDE 3 .....       | 1   | (5NL1)  |
| 12       | 5JG-2173E-50-00 | GRAPHIC 1 .....           | 1   | (5NL1)  |
| 13       | 90159-06182-00  | SCREW, WITH WASHER .....  | 2   | (5NL1)  |
| 14       | 90159-06078-00  | SCREW, WITH WASHER .....  | 1   | (5NL1)  |
| 15       | 5NL-2172A-00-00 | PANEL 1 .....             | 1   | (5NL1)  |
| 16       | 5NL-21741-00-00 | COVER, SIDE 4 .....       | 1   | (5NL1)  |
| 17       | 5JG-2173F-50-00 | GRAPHIC 2 .....           | 1   | (5NL1)  |
| 18       | 90159-06182-00  | SCREW, WITH WASHER .....  | 2   | (5NL1)  |
| 19       | 90159-06078-00  | SCREW, WITH WASHER .....  | 1   | (5NL1)  |
| 20       | 5NL-2172A-00-00 | PANEL 1 .....             | 1   | (5NL1)  |
| 21       | 5MV-2175C-00-00 | TUNING FORK MARK .....    | 1   | (5NL1)  |
| 22       | 5MV-2175C-00-00 | TUNING FORK MARK .....    | 1   | (5NL1)  |

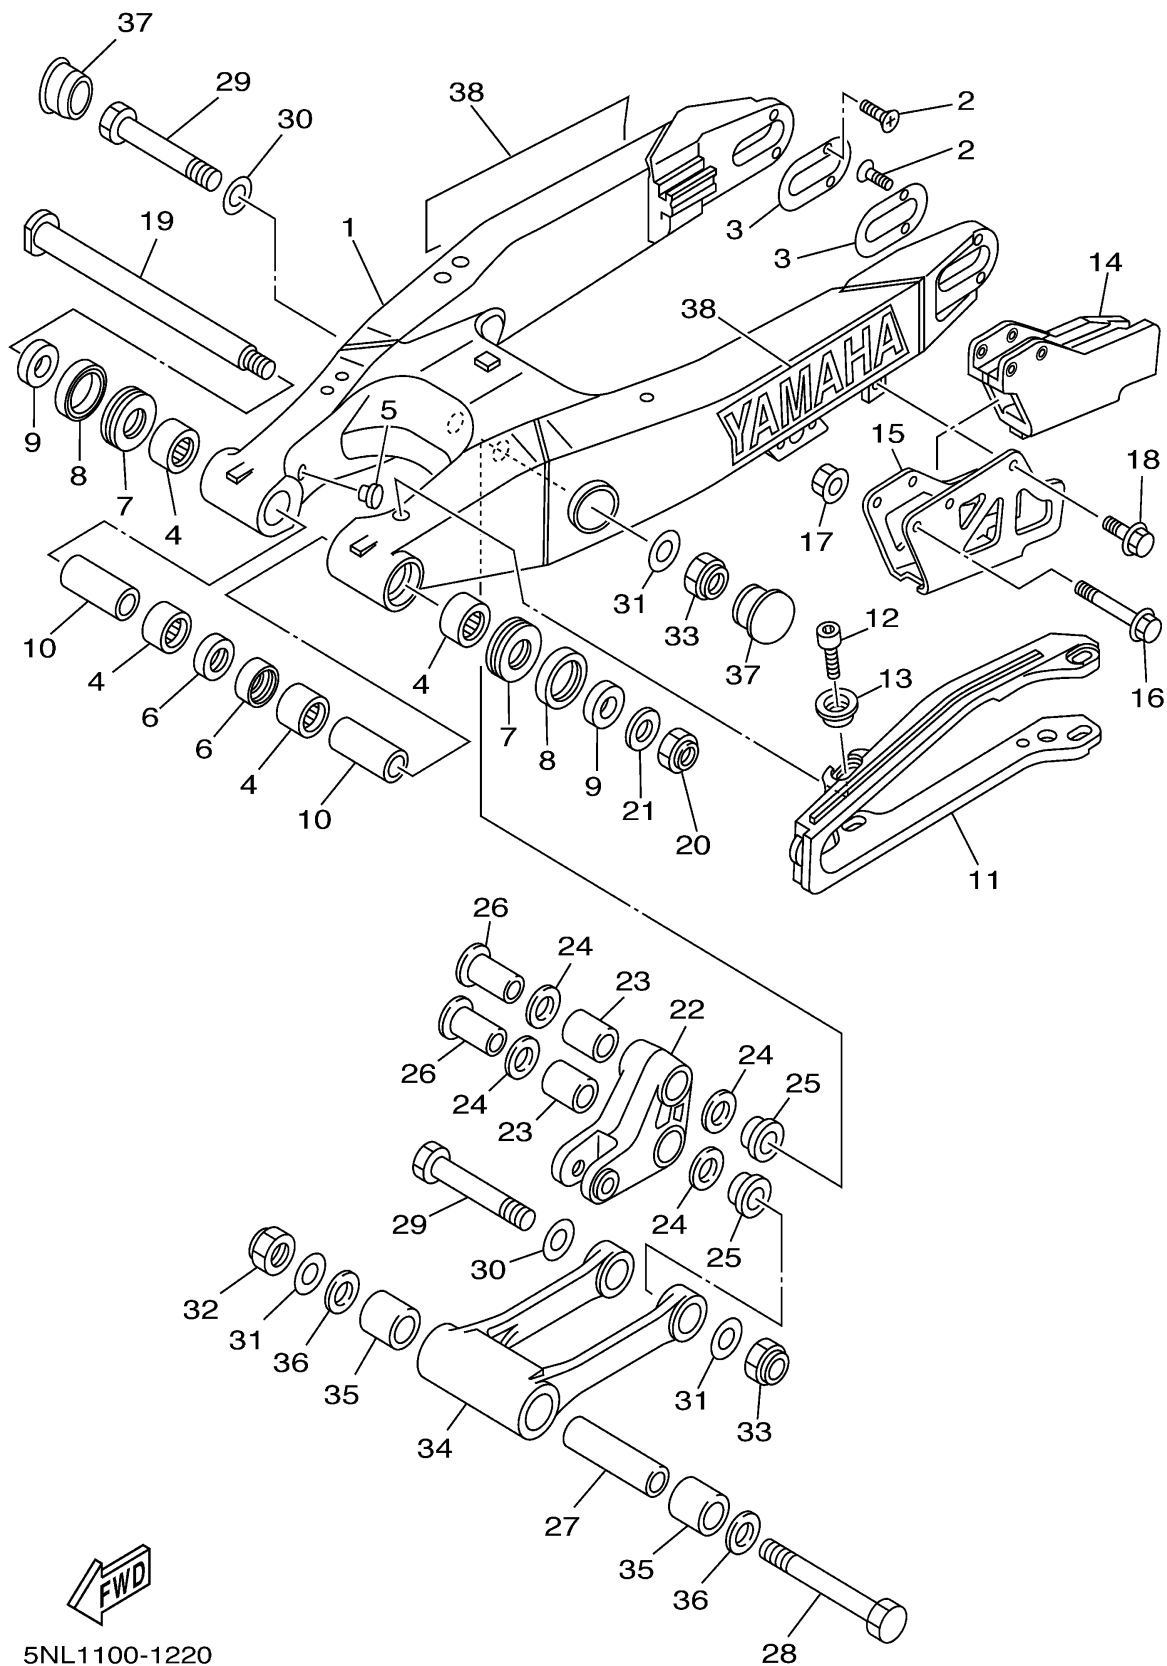


# REAR ARM

| Ref. No. | Part Number     | Description                 | Qty | Remarks |
|----------|-----------------|-----------------------------|-----|---------|
| 1        | 5MV-22110-00-00 | REAR ARM COMP. ....         | 1   | (5NL1)  |
| 2        | 90151-04048-00  | SCREW, COUNTERSUNK ....     | 4   | (5NL1)  |
| 3        | 5ET-22355-00-00 | PATCH .....                 | 2   | (5NL1)  |
| 4        | 93317-22262-00  | BEARING .....               | 4   | (5NL1)  |
| 5        | 90338-16148-00  | PLUG .....                  | 2   | (5NL1)  |
| 6        | 93106-22019-00  | OIL SEAL (DC 22-28-8) ..... | 2   | (5NL1)  |
| 7        | 93342-22217-00  | BEARING .....               | 2   | (5NL1)  |
| 8        | 93109-28043-00  | OIL SEAL .....              | 2   | (5NL1)  |
| 9        | 90387-1714R-00  | COLLAR .....                | 2   | (5NL1)  |
| 10       | 90387-1714S-00  | COLLAR .....                | 2   | (5NL1)  |
| 11       | 5MV-22151-00-00 | SEAL, GUARD .....           | 1   | (5NL1)  |
| 12       | 91317-05008-00  | BOLT .....                  | 4   | (5NL1)  |
| 13       | 5JG-22156-00-00 | WASHER, PLATE .....         | 4   | (5NL1)  |
| 14       | 4XM-22199-00-00 | SUPPORT, CHAIN .....        | 1   | (5NL1)  |
| 15       | 4XM-22128-00-00 | COVER, THRUST 1 .....       | 1   | (5NL1)  |
| 16       | 95027-06050-00  | BOLT, FLANGE .....          | 2   | (5NL1)  |
| 17       | 90179-06568-00  | NUT .....                   | 2   | (5NL1)  |
| 18       | 95027-06010-00  | BOLT, FLANGE .....          | 1   | (5NL1)  |
| 19       | 5DH-22141-00-00 | SHAFT, PIVOT .....          | 1   | (5NL1)  |
| 20       | 90185-16127-00  | NUT, SELF-LOCKING .....     | 1   | (5NL1)  |
| 21       | 90201-164H4-00  | WASHER, PLATE .....         | 1   | (5NL1)  |
| 22       | 5ET-2217A-00-00 | ARM, RELAY .....            | 1   | (5NL1)  |
| 23       | 93315-32056-00  | BEARING .....               | 2   | (5NL1)  |
| 24       | 93109-20076-00  | OIL SEAL .....              | 4   | (5NL1)  |
| 25       | 90387-16005-00  | COLLAR .....                | 2   | (5NL1)  |
| 26       | 90387-16007-00  | COLLAR .....                | 2   | (5NL1)  |
| 27       | 90387-167Y9-00  | COLLAR .....                | 1   | (5NL1)  |
| 28       | 90109-147F2-00  | BOLT .....                  | 1   | (5NL1)  |
| 29       | 90109-142F4-00  | BOLT .....                  | 2   | (5NL1)  |

CONTINUED ON NEXT FRAME ➤



 
5NL1100-1220

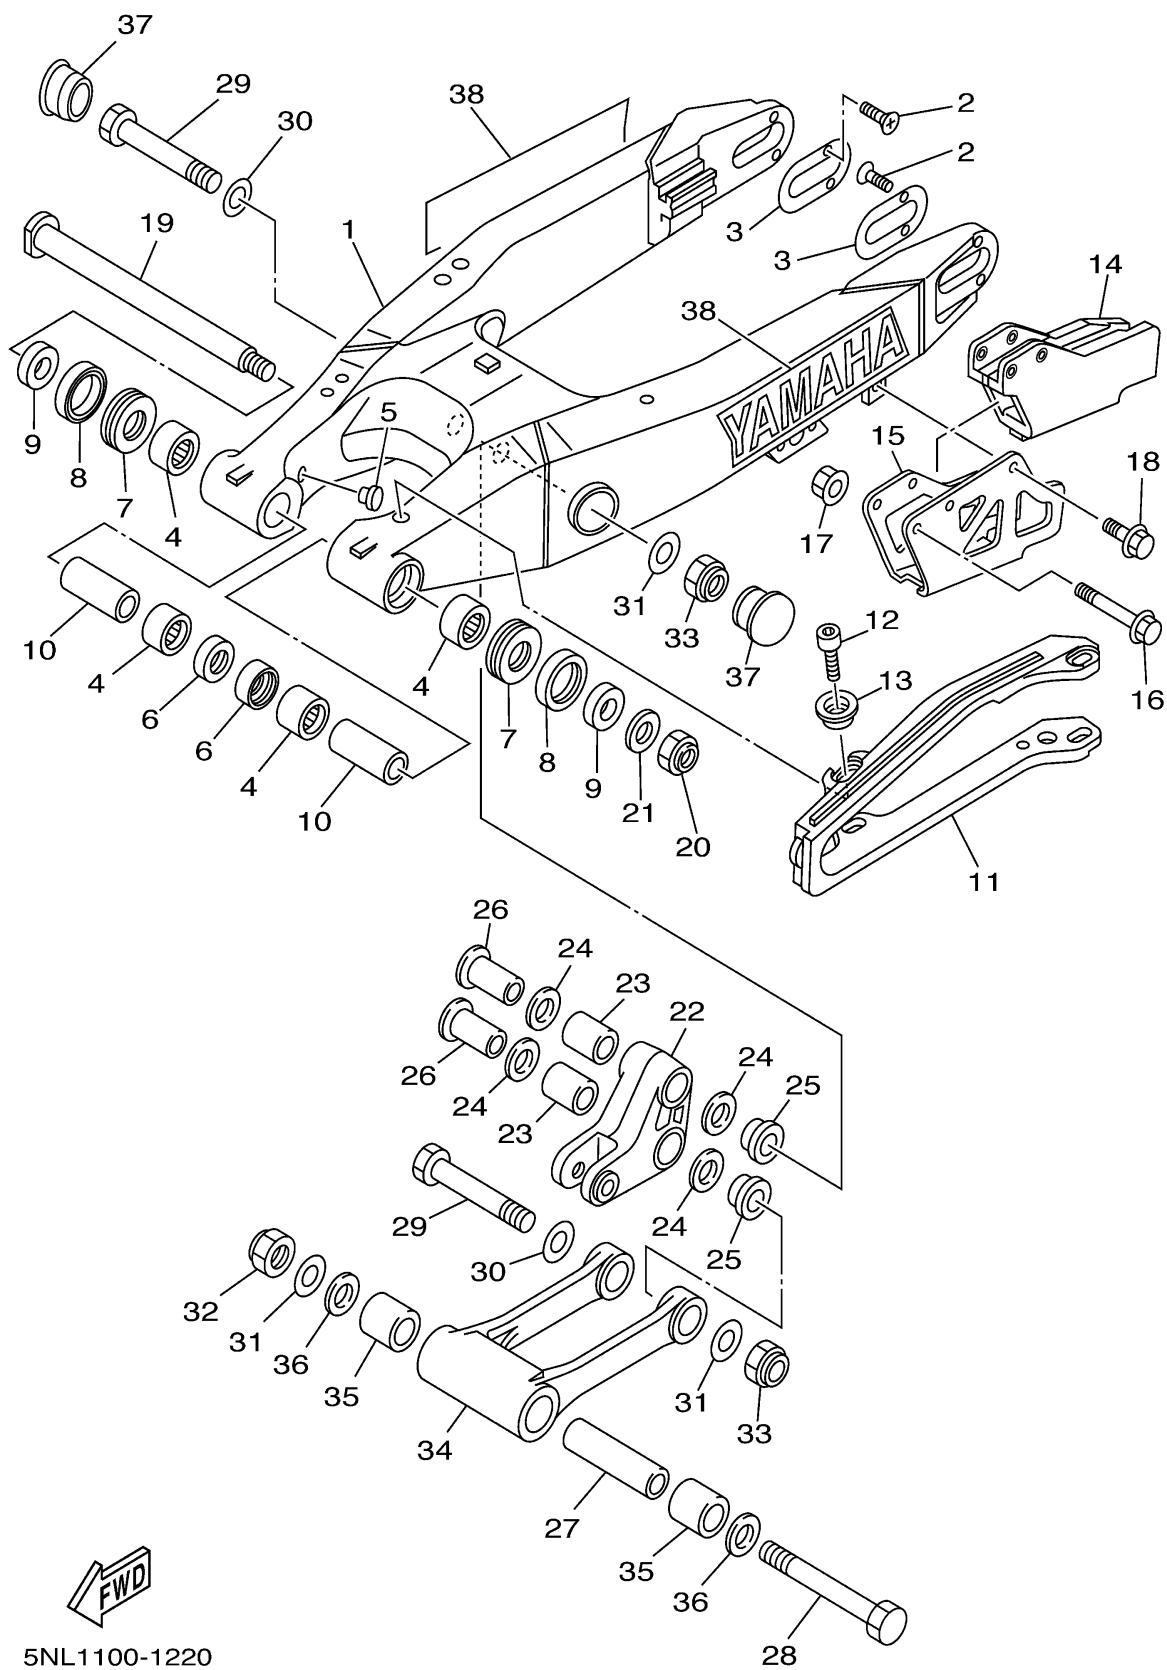

## REAR ARM

| Ref. No. | Part Number     | Description             | Qty | Remarks |
|----------|-----------------|-------------------------|-----|---------|
| 30       | 90201-164H4-00  | WASHER, PLATE .....     | 2   | (5NL1)  |
| 31       | 90201-14740-00  | WASHER, PLATE .....     | 3   | (5NL1)  |
| 32       | 90185-14112-00  | NUT, SELF-LOCKING ..... | 1   | (5NL1)  |
| 33       | 95617-14100-00  | NUT, U .....            | 2   | (5NL1)  |
| 34       | 5DH-2217F-01-00 | ROD, CONNECTING 1 ..... | 1   | (5NL1)  |
| 35       | 93315-32056-00  | BEARING .....           | 2   | (5NL1)  |
| 36       | 93109-20076-00  | OIL SEAL .....          | 2   | (5NL1)  |
| 37       | 5HD-2135F-00-00 | COVER .....             | 2   | (5NL1)  |
| 38       | 99244-00200-00  | EMBLEM, YAMAHA .....    | 2   | (5NL1)  |

 
# REAR SUSPENSION

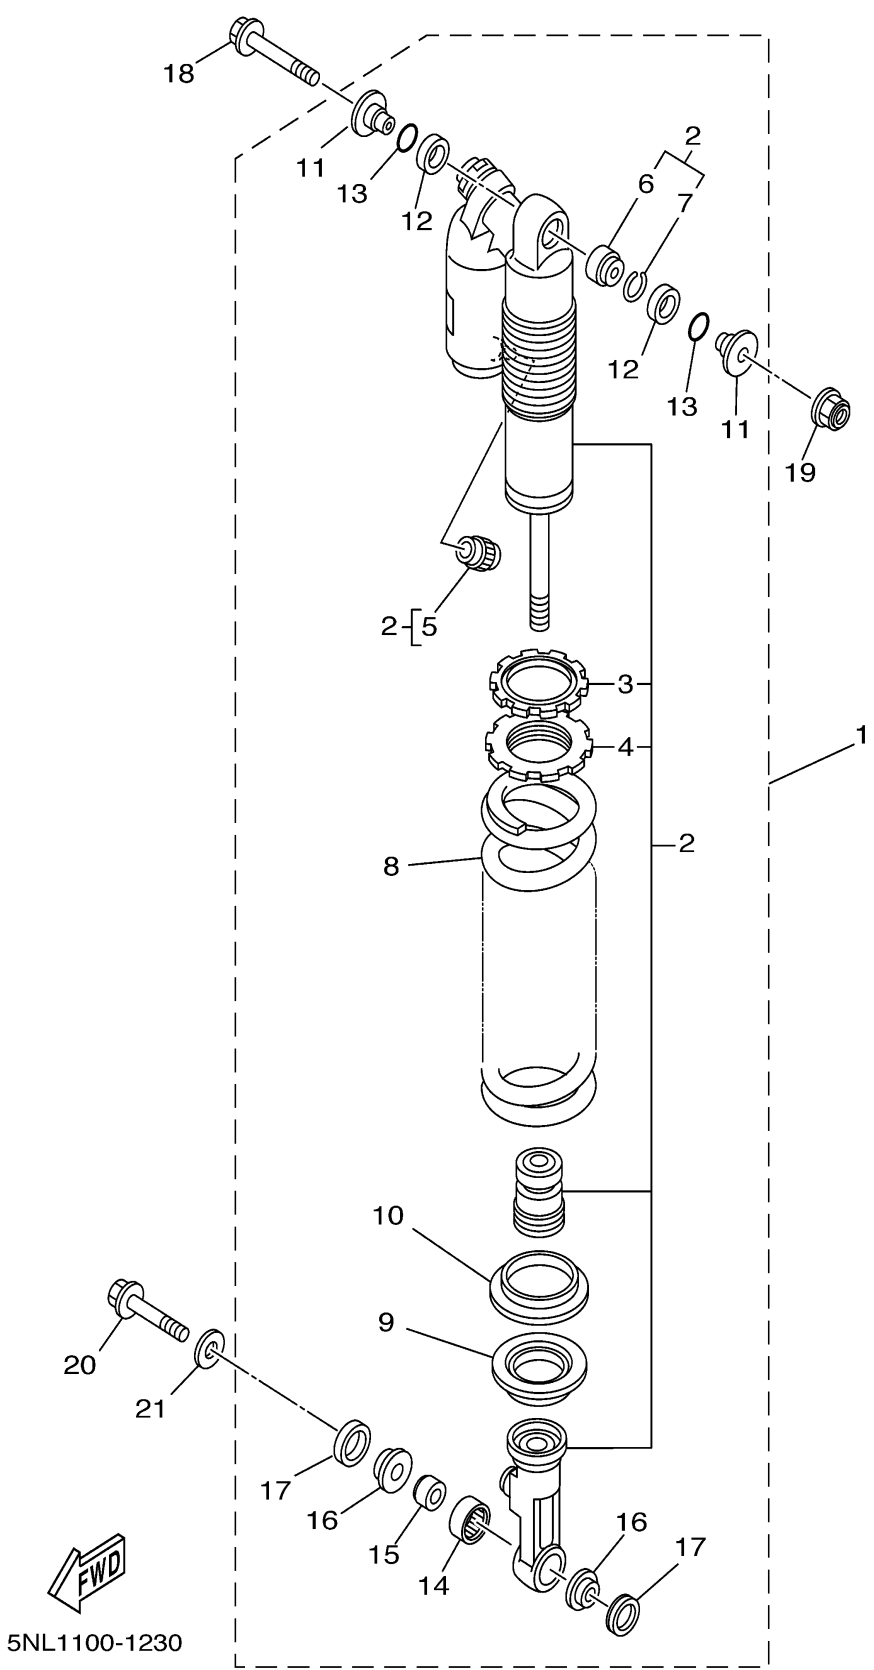


| Ref. No. | Part Number     | Description                         | Qty | Remarks |
|----------|-----------------|-------------------------------------|-----|---------|
| 1        | 5NL-22210-00-00 | SHOCK ABSORBER ASSY, REAR .....     | 1   | (5NL1)  |
| 2        | 5NL-22201-00-00 | . DAMPER SUB ASSY .....             | 1   | (5NL1)  |
| 3        | 3SP-22234-00-00 | .. GUIDE, SPRING 3 .....            | 1   | (5NL1)  |
| 4        | 3SP-22213-00-00 | .. SEAT, SPRING UPPER ....          | 1   | (5NL1)  |
| 5        | 509-23184-L0-00 | .. CAP, AIR VALVE .....             | 1   | (5NL1)  |
| 6        | 4JX-22226-00-00 | .. BUSH, SHOCK ABSORBER LOWER ..... | 1   | (5NL1)  |
| 7        | 5DH-23183-00-00 | .. CIRCLIP .....                    | 1   | (5NL1)  |
| 8        | 5DH-22212-20-00 | . SPRING (K=4.8) .....              | 1   | (5NL1)  |
| 9        | 5DH-22214-00-00 | . GUIDE, SPRING 1 .....             | 1   | (5NL1)  |
| 10       | 5MV-22224-00-00 | . GUIDE, SPRING 2 .....             | 1   | (5NL1)  |
| 11       | 5DH-22253-00-00 | . COLLAR, DISTANCE .....            | 2   | (5NL1)  |
| 12       | 3JE-22475-00-00 | . SEAL, DUST .....                  | 2   | (5NL1)  |
| 13       | 4EW-22474-00-00 | . SEAL, RING .....                  | 2   | (5NL1)  |
| 14       | 5MV-22176-00-00 | . BEARING .....                     | 1   | (5NL1)  |
| 15       | 5MV-22184-00-00 | . BUSH .....                        | 1   | (5NL1)  |
| 16       | 5MV-22253-00-00 | . COLLAR, DISTANCE .....            | 2   | (5NL1)  |
| 17       | 5MV-22475-00-00 | . SEAL, DUST .....                  | 2   | (5NL1)  |
| 18       | 90105-10323-00  | BOLT, WASHER BASED .....            | 1   | (5NL1)  |
| 19       | 95607-10200-00  | NUT, SELF-LOCKING .....             | 1   | (5NL1)  |
| 20       | 90105-105A2-00  | BOLT, WASHER BASED .....            | 1   | (5NL1)  |
| 21       | 90201-112U6-00  | WASHER, PLATE .....                 | 1   | (5NL1)  |

STEERING

| Ref. No. | Part Number     | Description              | Qty | Remarks |
|----------|-----------------|--------------------------|-----|---------|
| 1        | 93332-00081-00  | BEARING .....            | 1   | (5NL1)  |
| 2        | 93332-00068-00  | BEARING .....            | 1   | (5NL1)  |
| 3        | 4EW-23416-00-00 | COVER, BALL RACE 2 ..... | 1   | (5NL1)  |
| 4        | 90179-28650-00  | NUT .....                | 1   | (5NL1)  |
| 5        | 5NL-23435-00-00 | CROWN, HANDLE .....      | 1   | (5NL1)  |
| 6        | 90170-24373-00  | NUT .....                | 1   | (5NL1)  |
| 7        | 90201-247L2-00  | WASHER, PLATE .....      | 1   | (5NL1)  |
| 8        | 3SP-23441-00-00 | HOLDER, HANDLE UPPER ... | 2   | (5NL1)  |
| 9        | 95027-08035-00  | BOLT, FLANGE .....       | 4   | (5NL1)  |
| 10       | 95027-08040-00  | BOLT, FLANGE .....       | 4   | (5NL1)  |
| 11       | 5HD-23485-10-00 | PLATE, NUMBER .....      | 1   | (5NL1)  |
| 12       | 90119-06225-00  | BOLT, WITH WASHER .....  | 1   | (5NL1)  |
| 13       | 90201-286K9-00  | WASHER, PLATE .....      | 2   | (5NL1)  |
| 14       | 4DA-23389-00-00 | GUIDE, CABLE .....       | 1   | (5NL1)  |
| 15       | 90119-05071-00  | BOLT, WITH WASHER .....  | 1   | (5NL1)  |
| 16       | 5HD-2339E-00-00 | GRAPHIC 1 .....          | 1   | (5NL1)  |

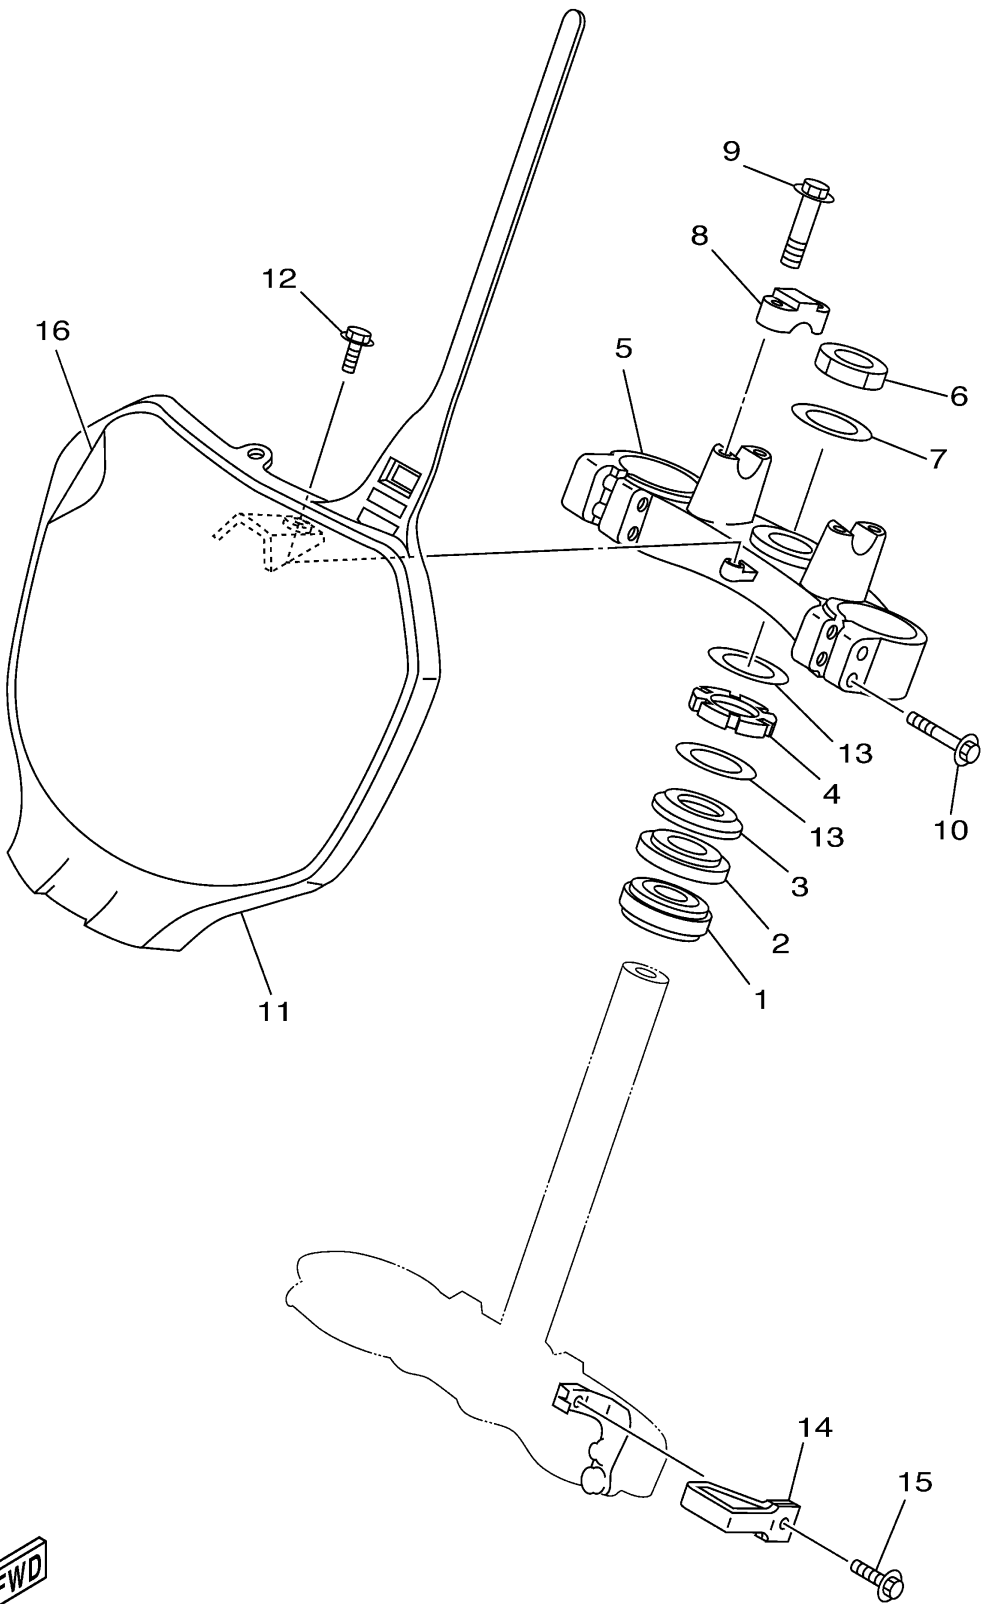 


5NL1100-1240

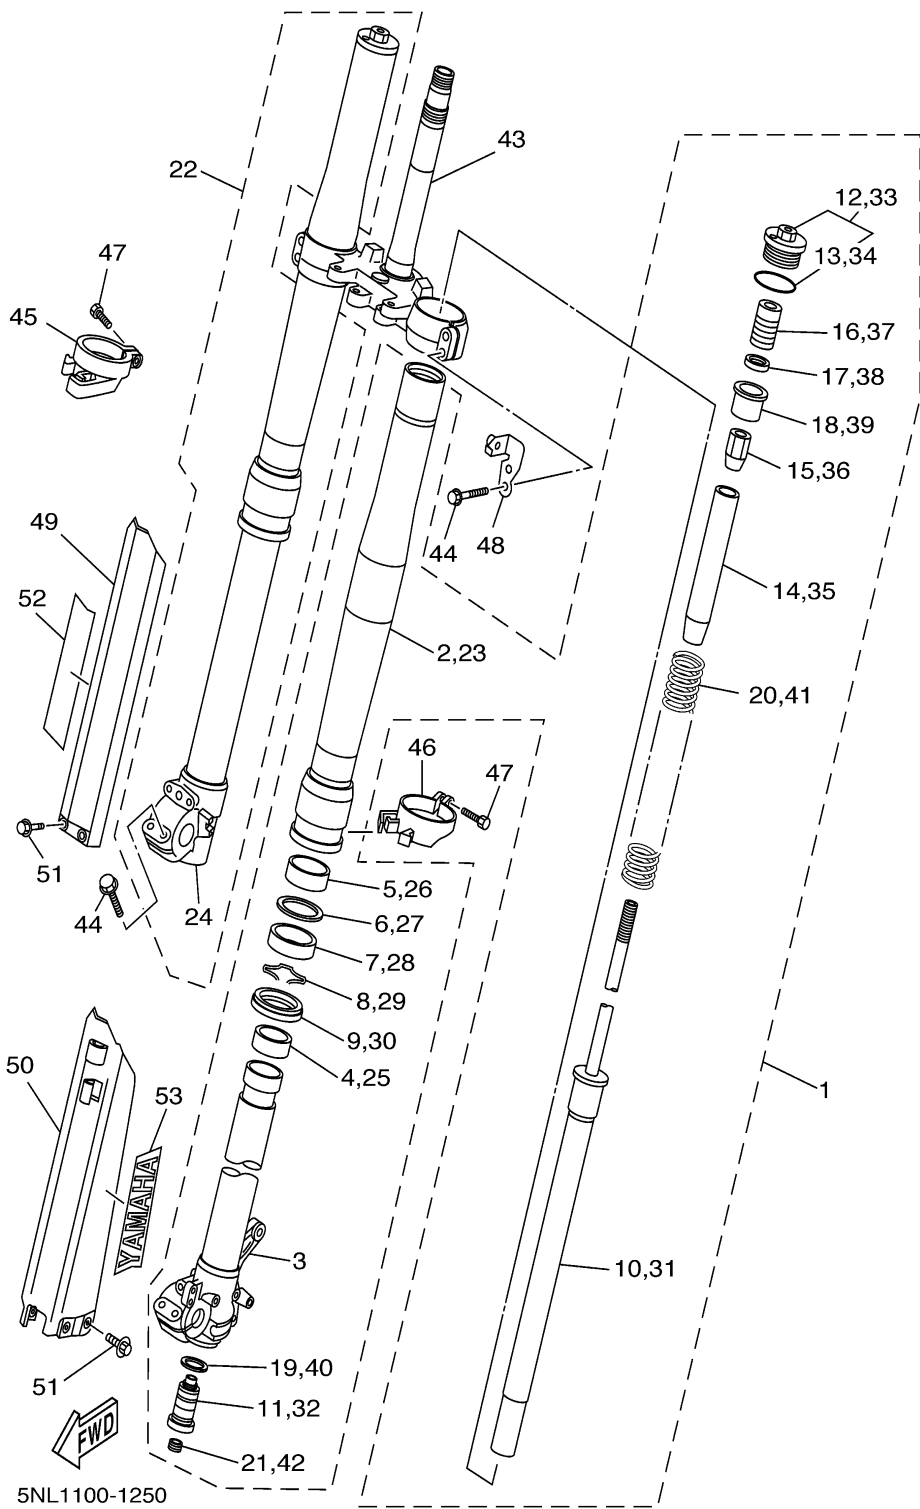 

# FRONT FORK


| Ref. No. | Part Number     | Description                             | Qty | Remarks |
|----------|-----------------|-----------------------------------------|-----|---------|
| 1        | 5NL-23102-00-00 | FRONT FORK ASSY (L.H) . . . .           | 1   | (5NL1)  |
| 2        | 5HD-23136-L0-00 | . TUBE, OUTER (RIGHT) . . . . .         | 1   | (5NL1)  |
| 3        | 5DH-23120-L0-00 | . INNER TUBE COMP 2 . . . . .           | 1   | (5NL1)  |
| 4        | 5ET-23171-L0-00 | . PISTON, FRONT FORK . . . . .          | 1   | (5NL1)  |
| 5        | 5ET-23125-L0-00 | . METAL, SLIDE 1 . . . . .              | 1   | (5NL1)  |
| 6        | 4SS-23146-L0-00 | . WASHER, OIL SEAL . . . . .            | 1   | (5NL1)  |
| 7        | 5ET-23145-L0-00 | . OIL SEAL . . . . .                    | 1   | (5NL1)  |
| 8        | 4SS-23153-L0-00 | . RING, SNAP . . . . .                  | 1   | (5NL1)  |
| 9        | 5HD-23144-L0-00 | . SEAL, DUST . . . . .                  | 1   | (5NL1)  |
| 10       | 5MV-23170-L0-00 | . CYLINDER COMP., FRONT FORK . . . . .  | 1   | (5NL1)  |
| 11       | 5NL-2316A-00-00 | . VALVE COMP. . . . .                   | 1   | (5NL1)  |
| 12       | 5MV-23111-L0-00 | . BOLT, CAP . . . . .                   | 1   | (5NL1)  |
| 13       | 93210-42263-00  | . . O-RING . . . . .                    | 1   | (5NL1)  |
| 14       | 5DH-23142-L0-00 | . SEAT, SPRING UPPER . . . . .          | 1   | (5NL1)  |
| 15       | 5HD-23393-L0-00 | . NUT, SPECIAL . . . . .                | 1   | (5NL1)  |
| 16       | 5MV-23195-L0-00 | . RUBBER . . . . .                      | 1   | (5NL1)  |
| 17       | 5DH-23149-L0-00 | . WASHER, SPRING UPPER . . . . .        | 1   | (5NL1)  |
| 18       | 5DH-23118-L0-00 | . SPACER . . . . .                      | 1   | (5NL1)  |
| 19       | 4SS-23158-L0-00 | . GASKET . . . . .                      | 1   | (5NL1)  |
| 20       | 5NL-23141-00-00 | . SPRING, FRONT FORK (K=0.44) . . . . . | 1   | (5NL1)  |
| 21       | 3JD-2312G-L0-00 | . PLUG . . . . .                        | 1   | (5NL1)  |
| 22       | 5NL-23103-00-00 | FRONT FORK ASSY (R.H) . . . .           | 1   | (5NL1)  |
| 23       | 5HD-23136-L0-00 | . TUBE, OUTER (RIGHT) . . . . .         | 1   | (5NL1)  |
| 24       | 5BF-23110-L0-00 | . INNER TUBE COMP 1 . . . . .           | 1   | (5NL1)  |
| 25       | 5ET-23171-L0-00 | . PISTON, FRONT FORK . . . . .          | 1   | (5NL1)  |
| 26       | 5ET-23125-L0-00 | . METAL, SLIDE 1 . . . . .              | 1   | (5NL1)  |
| 27       | 4SS-23146-L0-00 | . WASHER, OIL SEAL . . . . .            | 1   | (5NL1)  |

 CONTINUED ON NEXT FRAME ►

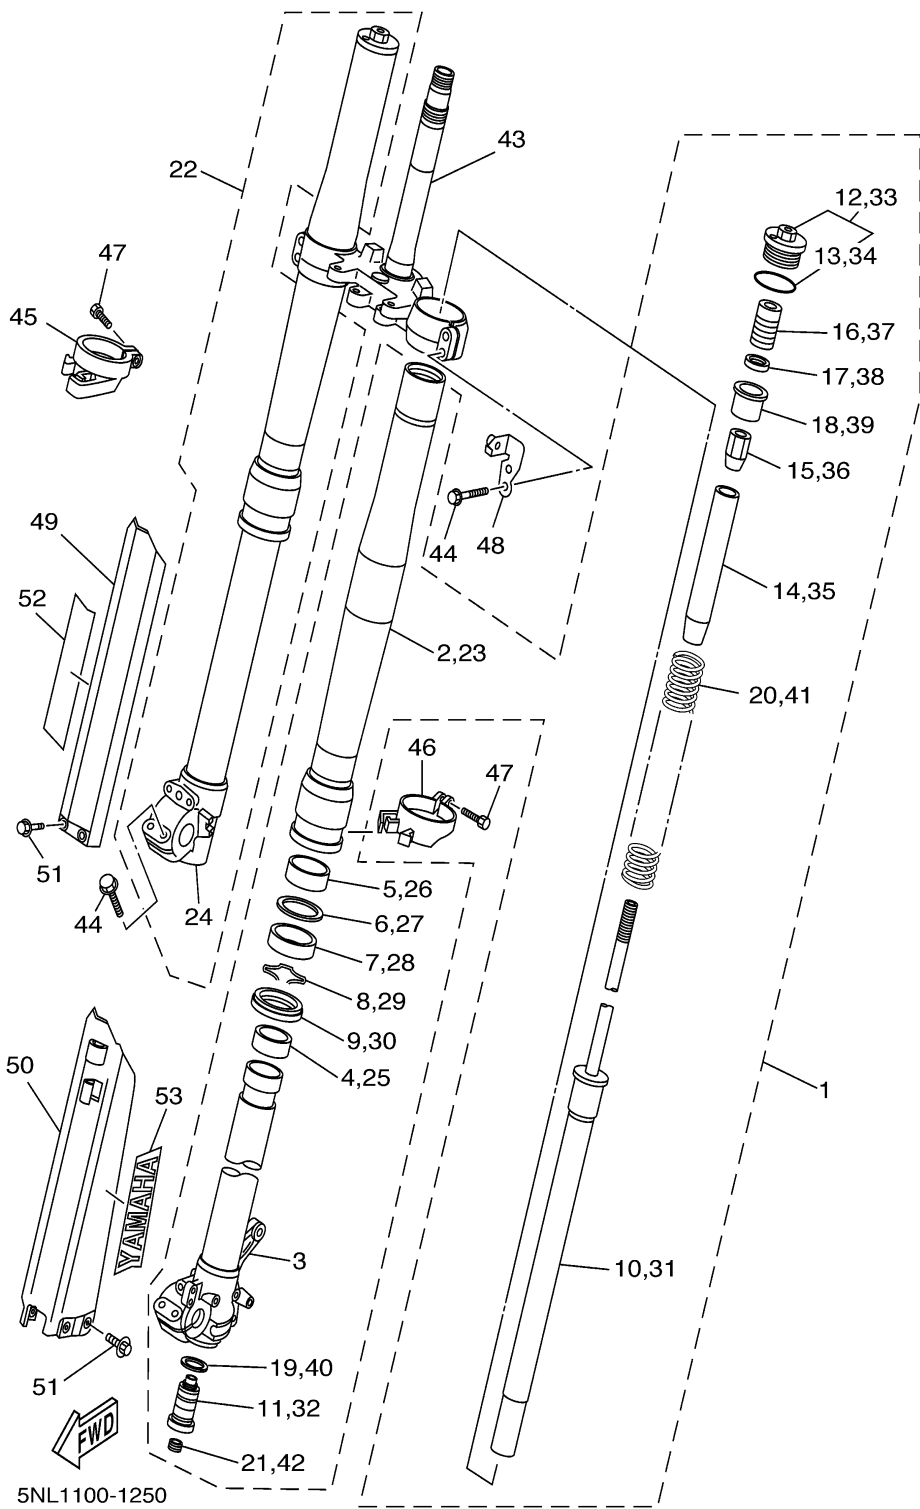

# FRONT FORK

 
| Ref. No. | Part Number     | Description                         | Qty | Remarks |
|----------|-----------------|-------------------------------------|-----|---------|
| 28       | 5ET-23145-L0-00 | . OIL SEAL .....                    | 1   | (5NL1)  |
| 29       | 4SS-23153-L0-00 | . RING, SNAP .....                  | 1   | (5NL1)  |
| 30       | 5HD-23144-L0-00 | . SEAL, DUST .....                  | 1   | (5NL1)  |
| 31       | 5MV-23170-L0-00 | . CYLINDER COMP., FRONT FORK .....  | 1   | (5NL1)  |
| 32       | 5NL-2316A-00-00 | . VALVE COMP. ....                  | 1   | (5NL1)  |
| 33       | 5MV-23111-L0-00 | . BOLT, CAP .....                   | 1   | (5NL1)  |
| 34       | 93210-42263-00  | . . O-RING .....                    | 1   | (5NL1)  |
| 35       | 5DH-23142-L0-00 | . SEAT, SPRING UPPER .....          | 1   | (5NL1)  |
| 36       | 5HD-23393-L0-00 | . NUT, SPECIAL .....                | 1   | (5NL1)  |
| 37       | 5MV-23195-L0-00 | . RUBBER .....                      | 1   | (5NL1)  |
| 38       | 5DH-23149-L0-00 | . WASHER, SPRING UPPER ..           | 1   | (5NL1)  |
| 39       | 5DH-23118-L0-00 | . SPACER .....                      | 1   | (5NL1)  |
| 40       | 4SS-23158-L0-00 | . GASKET .....                      | 1   | (5NL1)  |
| 41       | 5NL-23141-00-00 | . SPRING, FRONT FORK (K=0.44) ..... | 1   | (5NL1)  |
| 42       | 3JD-2312G-L0-00 | . PLUG .....                        | 1   | (5NL1)  |
| 43       | 5NL-23340-00-00 | UNDER BRACKET COMP. ....            | 1   | (5NL1)  |
| 44       | 5MV-23346-L0-00 | BOLT 1 .....                        | 8   | (5NL1)  |
| 45       | 4SS-2314G-L0-00 | PROTECTOR GUIDE COMP., 2            | 1   | (5NL1)  |
| 46       | 5DH-2314F-L0-00 | PROTECTOR GUIDE COMP., 1            | 1   | (5NL1)  |
| 47       | 4SS-23346-L0-00 | BOLT 1 .....                        | 2   | (5NL1)  |
| 48       | 5DH-2314J-00-00 | PROTECTOR COMP., 2 .....            | 1   | (5NL1)  |
| 49       | 5DH-2314H-00-00 | PROTECTOR COMP., 1 .....            | 1   | (5NL1)  |
| 50       | 3SP-23356-L0-00 | BOLT 2 .....                        | 6   | (5NL1)  |
| 51       | 5HC-2331E-00-00 | GUIDE, CABLE .....                  | 1   | (5NL1)  |
| 52       | 4XL-2153A-10-00 | EMBLEM, YAMAHA .....                | 1   | (5NL1)  |
| 53       | 4XL-2153A-10-00 | EMBLEM, YAMAHA .....                | 1   | (5NL1)  |

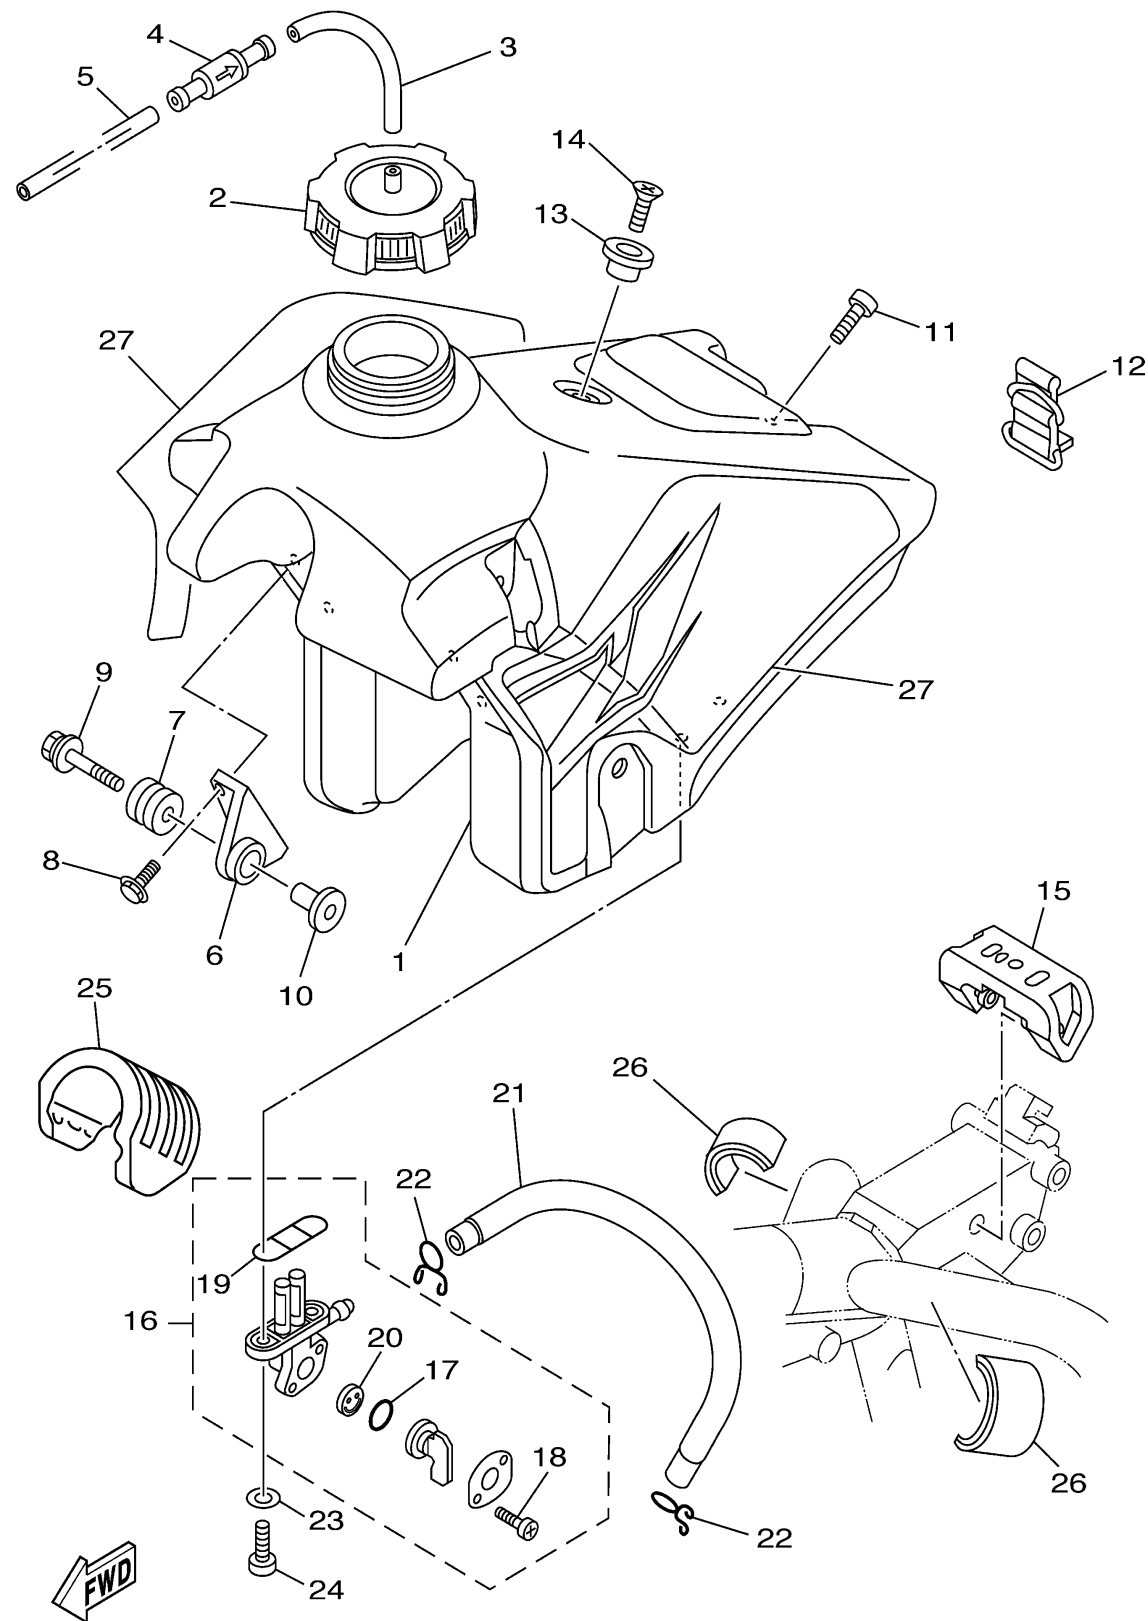

# FUEL TANK

| Ref. No. | Part Number     | Description               | Qty | Remarks |
|----------|-----------------|---------------------------|-----|---------|
| 1        | 5JG-24110-50-00 | FUEL TANK COMP. ....      | 1   | (5NL1)  |
| 2        | 5MV-24610-00-00 | CAP ASSY ....             | 1   | (5NL1)  |
| 3        | 90445-09220-00  | HOSE ....                 | 1   | (5NL1)  |
| 4        | 3XJ-24380-00-00 | PIPE JOINT ASSY ....      | 1   | (5NL1)  |
| 5        | 90445-09104-00  | HOSE ....                 | 1   | (5NL1)  |
| 6        | 24X-24144-00-00 | HOLDER, DAMPER ....       | 2   | (5NL1)  |
| 7        | 90480-18549-00  | GROMMET ....              | 2   | (5NL1)  |
| 8        | 95027-06016-00  | BOLT, FLANGE ....         | 4   | (5NL1)  |
| 9        | 90119-06214-00  | BOLT, WITH WASHER ....    | 2   | (5NL1)  |
| 10       | 3JD-24186-00-00 | WASHER, SPECIAL ....      | 2   | (5NL1)  |
| 11       | 98907-06020-00  | SCREW, BIND ....          | 1   | (5NL1)  |
| 12       | 3SP-24173-00-00 | BAND, TANK FITTING 1 .... | 1   | (5NL1)  |
| 13       | 4EW-2412F-00-00 | BRACKET, SEAT ....        | 1   | (5NL1)  |
| 14       | 98707-06025-00  | SCREW, FLAT HEAD ....     | 1   | (5NL1)  |
| 15       | 4SS-24181-00-00 | DAMPER, LOCATING 1 ....   | 1   | (5NL1)  |
| 16       | 4DP-24500-00-00 | FUEL COCK ASSY 1 ....     | 1   | (5NL1)  |
| 17       | 3AJ-24534-00-00 | . SEAL, COCK ....         | 1   | (5NL1)  |
| 18       | 97801-03008-00  | . SCREW, PAN HEAD ....    | 2   | (5NL1)  |
| 19       | 4X8-24512-00-00 | . O-RING ....             | 1   | (5NL1)  |
| 20       | 3AJ-24523-00-00 | . VALVE PACKING ....      | 1   | (5NL1)  |
| 21       | 90445-11002-00  | HOSE (L195) ....          | 1   | (5NL1)  |
| 22       | 90467-10008-00  | CLIP ....                 | 2   | (5NL1)  |
| 23       | 90202-05193-00  | WASHER, PLATE ....        | 2   | (5NL1)  |
| 24       | 90149-06011-00  | SCREW ....                | 2   | (5NL1)  |
| 25       | 5BE-24182-00-00 | DAMPER, LOCATING 2 ....   | 1   | (5NL1)  |
| 26       | 3V6-22358-00-00 | SEAL 1 ....               | 2   | (5NL1)  |
| 27       | 5JG-24240-50-00 | GRAPHIC SET ....          | 1   | (5NL1)  |

 5NL1100-1260

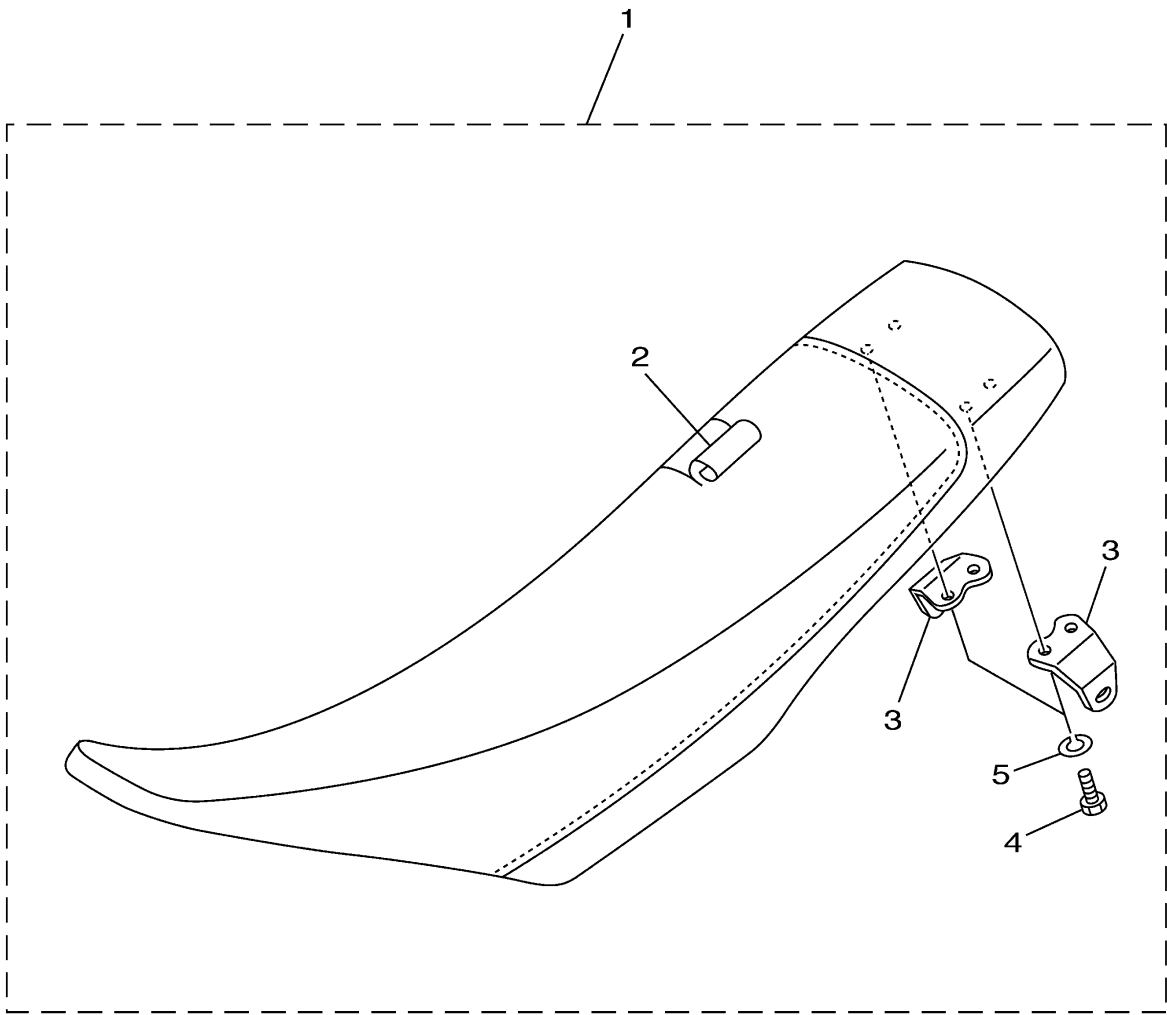


# SEAT

| Ref. No. | Part Number     | Description            | Qty | Remarks |
|----------|-----------------|------------------------|-----|---------|
| 1        | 5JG-24710-50-00 | SINGLE SEAT ASSY ..... | 1   | (5NL1)  |
| 2        | 5JG-24731-50-00 | . COVER, SEAT .....    | 1   | (5NL1)  |
| 3        | 5BE-24728-00-00 | . BRACKET, SEAT .....  | 2   | (5NL1)  |
| 4        | 97007-06012-00  | . BOLT .....           | 4   | (5NL1)  |
| 5        | 92907-06100-00  | . WASHER, SPRING ..... | 4   | (5NL1)  |



 
5NL1100-1270

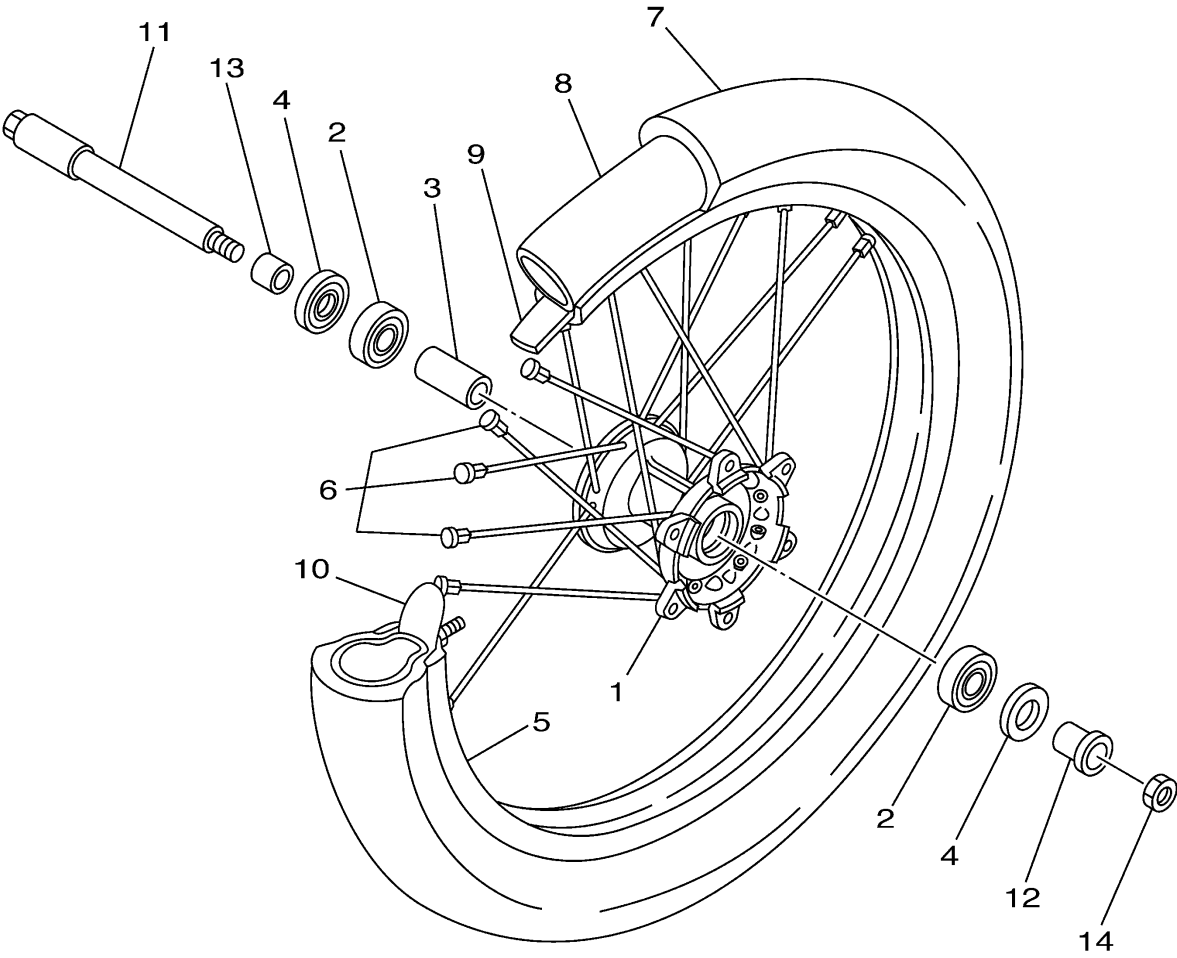

# FRONT WHEEL

 
| Ref. No. | Part Number     | Description                   | Qty | Remarks      |
|----------|-----------------|-------------------------------|-----|--------------|
| 1        | 4SS-25111-01-00 | HUB, FRONT .....              | 1   | (5NL1)       |
| 2        | 93306-90403-00  | BEARING .....                 | 2   | (5NL1)       |
| 3        | 5DH-25117-00-00 | SPACER, BEARING .....         | 1   | (5NL1)       |
| 4        | 93102-26468-00  | OIL SEAL .....                | 2   | (5NL1)       |
| 5        | 94416-21002-00  | RIM (1.60-21) .....           | 1   | (5NL1)       |
| 6        | 4DA-25104-00-00 | SPOKE SET, FRONT .....        | 1   | (5NL1)       |
| 7        | 94108-21008-00  | TIRE (80/100-21 51M D739F) .. | 1   | DUNLOP(5NL1) |
| 8        | 94227-21101-00  | TUBE (80/100-21 TR4 BTL) ...  | 1   | DUNLOP(5NL1) |
| 9        | 94309-21161-00  | BAND, RIM (70-80/100-21) .... | 1   | DUNLOP(5NL1) |
| 10       | 2J5-25394-01-00 | SPACER, BEAD .....            | 1   | (5NL1)       |
| 11       | 5BE-25181-00-00 | AXLE, WHEEL .....             | 1   | (5NL1)       |
| 12       | 5DH-25183-00-00 | COLLAR, WHEEL .....           | 1   | (5NL1)       |
| 13       | 5BE-25186-00-00 | COLLAR, WHEEL .....           | 1   | (5NL1)       |
| 14       | 90179-16672-00  | NUT .....                     | 1   | (5NL1)       |



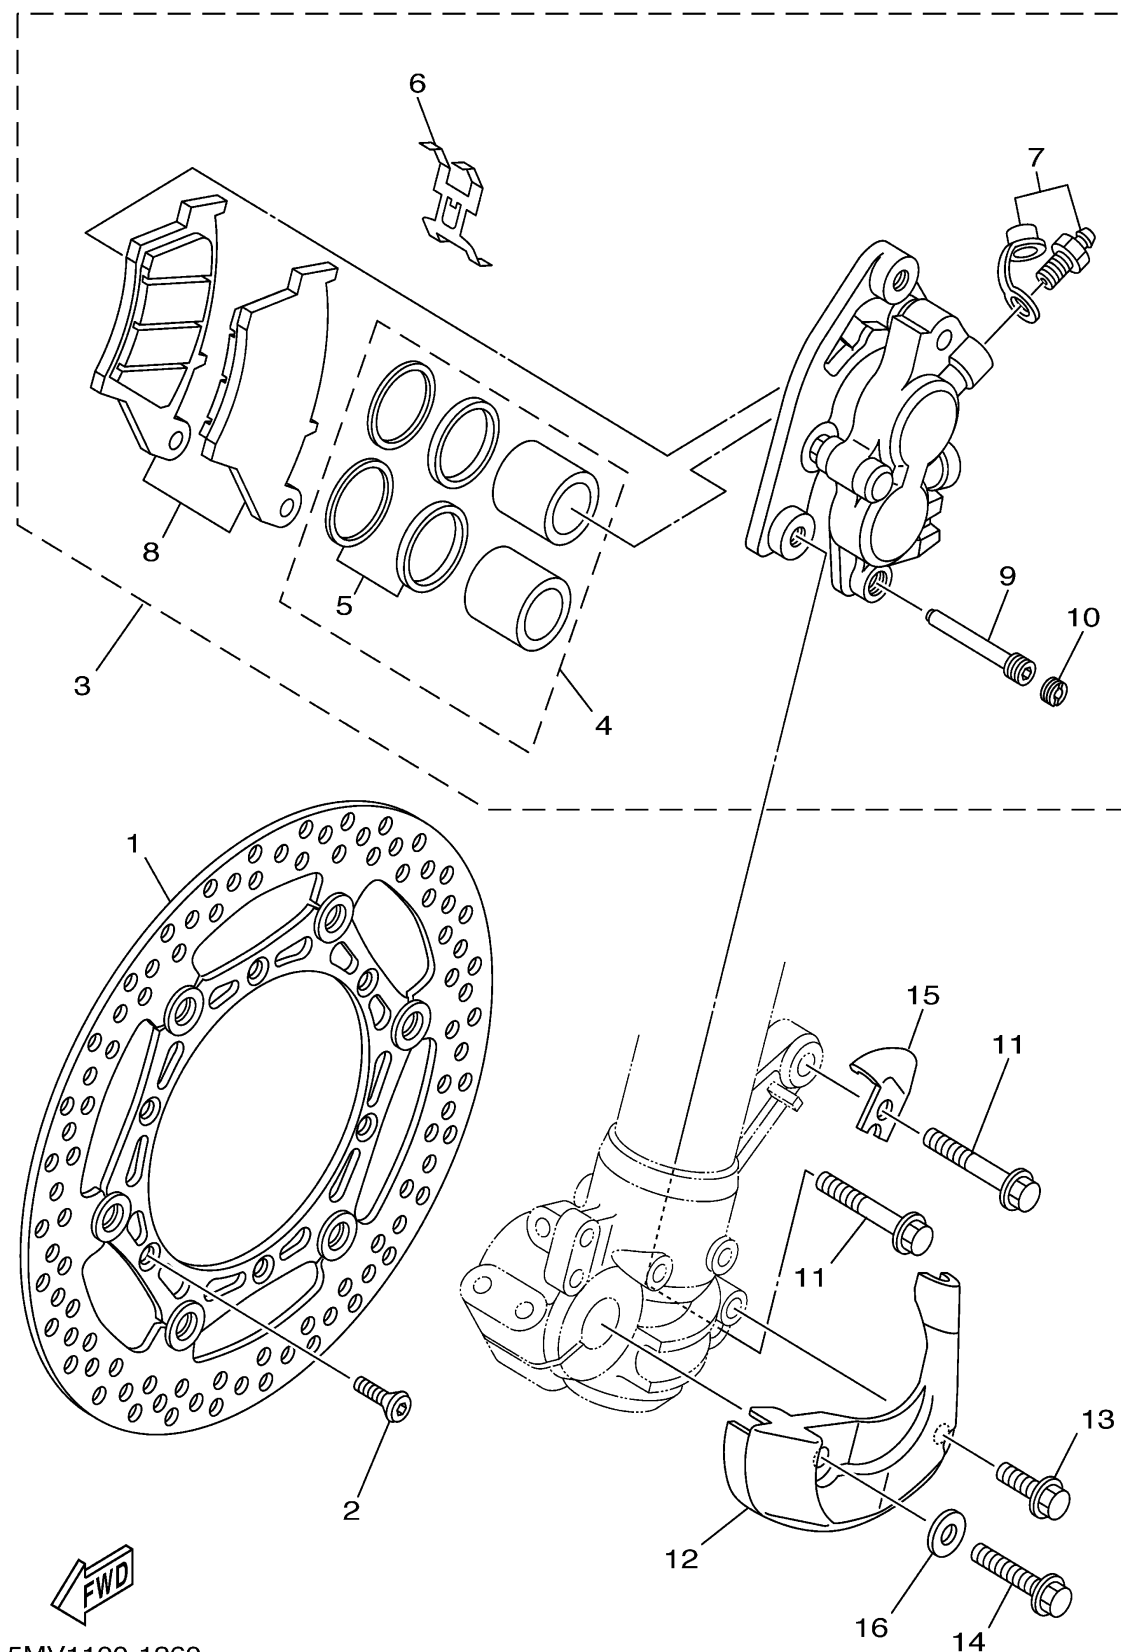

# FRONT BRAKE CALIPER
 
| Ref. No. | Part Number     | Description            | Qty | Remarks |
|----------|-----------------|------------------------|-----|---------|
| 1        | 5MV-2581T-00-00 | DISC BRAKE ASSY        | 1   | (5NL1)  |
| 2        | 90149-06327-00  | SCREW                  | 6   | (5NL1)  |
| 3        | 5MV-2580T-10-00 | CALIPER ASSY (LEFT)    | 1   | (5NL1)  |
| 4        | 4EW-W0057-00-00 | . PISTON ASSY, CALIPER | 1   | (5NL1)  |
| 5        | 3JD-W0047-00-00 | . . CALIPER SEAL KIT   | 1   | (5NL1)  |
| 6        | 5DH-25919-00-00 | . SUPPORT, PAD         | 1   | (5NL1)  |
| 7        | 1UY-W0048-50-00 | . BLEED SCREW KIT      | 1   | (5NL1)  |
| 8        | 5MV-W0045-00-00 | . BRAKE PAD KIT        | 1   | (5NL1)  |
| 9        | 5DH-25933-00-00 | . PIN, PAD             | 1   | (5NL1)  |
| 10       | 5DH-25916-00-00 | . PLUG                 | 1   | (5NL1)  |
| 11       | 90105-08659-00  | BOLT, WASHER BASED     | 2   | (5NL1)  |
| 12       | 5DH-2314E-00-00 | COVER, HOSE            | 1   | (5NL1)  |
| 13       | 95827-06012-00  | BOLT, FLANGE           | 1   | (5NL1)  |
| 14       | 95027-08020-00  | BOLT, FLANGE           | 1   | (5NL1)  |
| 15       | 5DH-25875-00-00 | HOLDER, BRAKE HOSE 1   | 1   | (5NL1)  |
| 16       | 92907-08200-00  | WASHER                 | 1   | (5NL1)  |

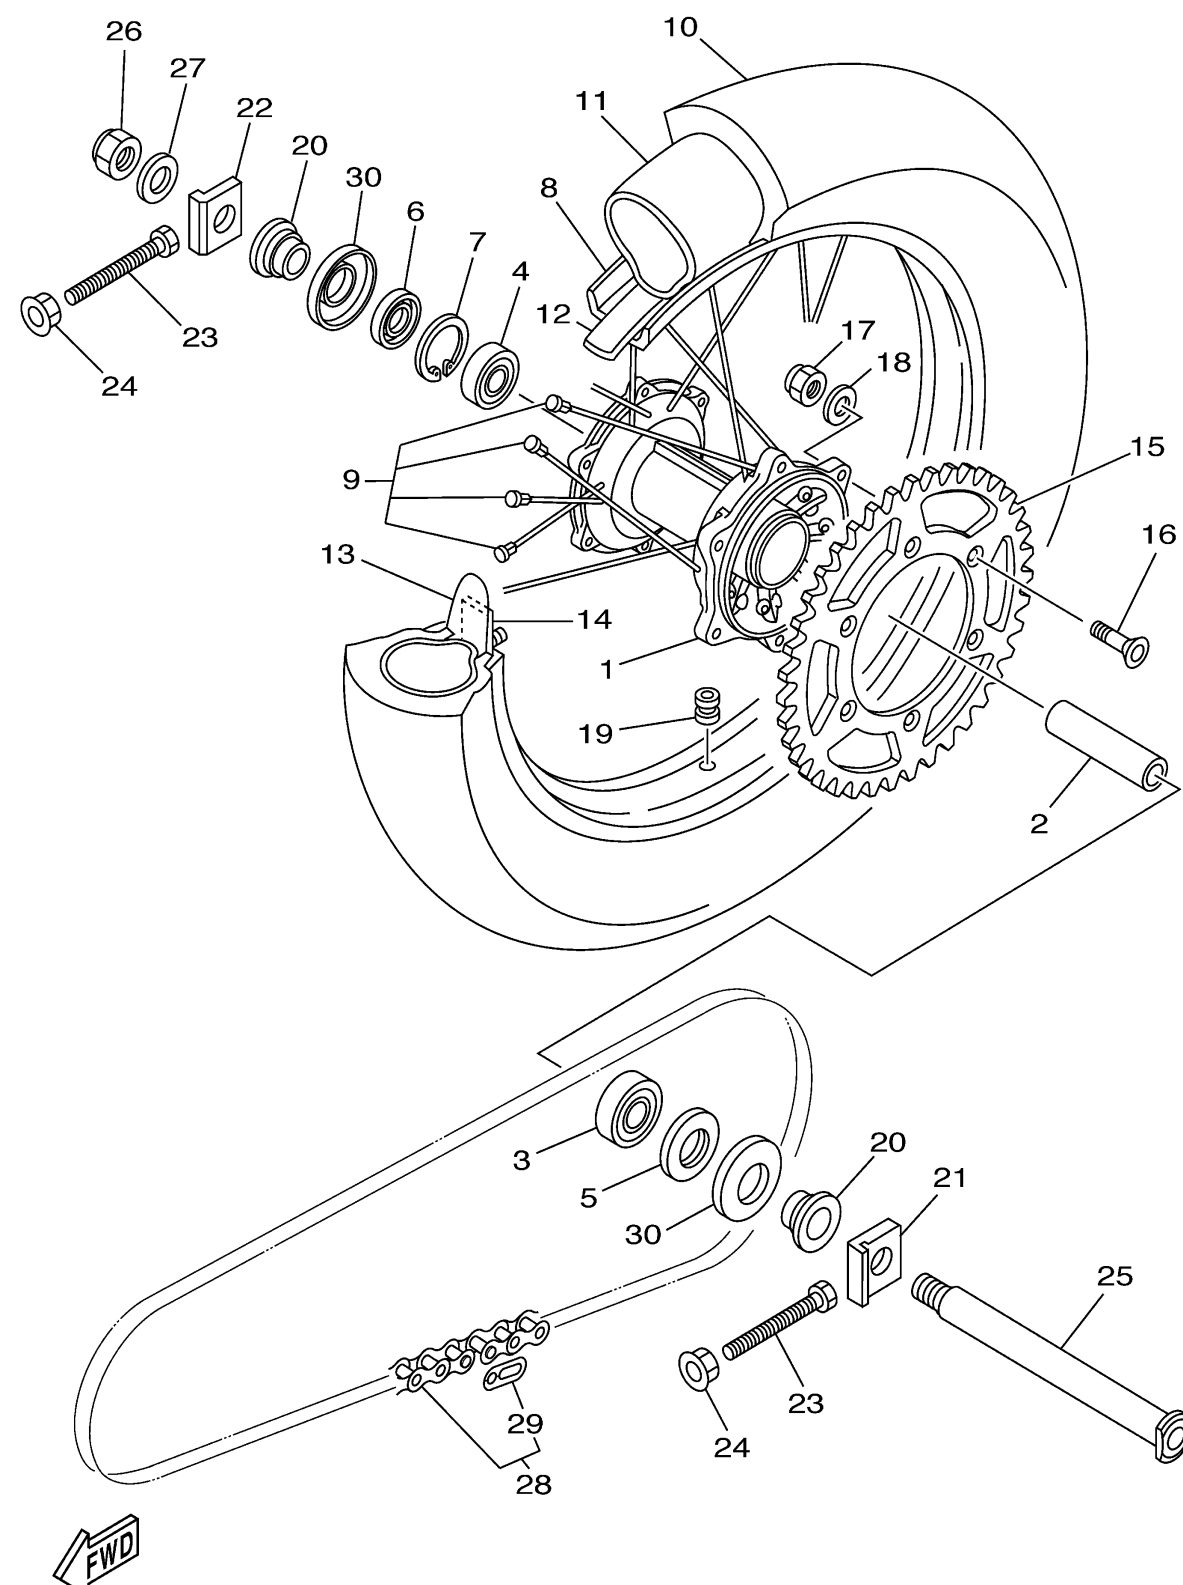


5NL1100-1300

# REAR WHEEL
 
| Ref. No. | Part Number     | Description                   | Qty | Remarks      |
|----------|-----------------|-------------------------------|-----|--------------|
| 1        | 5ET-25311-00-00 | HUB, REAR .....               | 1   | (5NL1)       |
| 2        | 5ET-25317-00-00 | SPACER, BEARING .....         | 1   | (5NL1)       |
| 3        | 93306-27205-00  | BEARING .....                 | 1   | (5NL1)       |
| 4        | 93306-07202-00  | BEARING .....                 | 1   | (5NL1)       |
| 5        | 93106-30044-00  | OIL SEAL .....                | 1   | (5NL1)       |
| 6        | 93106-30045-00  | OIL SEAL .....                | 1   | (5NL1)       |
| 7        | 99009-45500-00  | CIRCLIP .....                 | 1   | (5NL1)       |
| 8        | 94418-19002-00  | RIM (1.85-19) .....           | 1   | (5NL1)       |
| 9        | 5HD-25304-00-00 | SPOKE SET, REAR .....         | 1   | (5NL1)       |
| 10       | 94110-1916A-00  | TIRE (100/90-19 D739) .....   | 1   | DUNLOP(5NL1) |
| 11       | 94210-19224-00  | TUBE (100/90-19 TR4 BTL) ...  | 1   | DUNLOP(5NL1) |
| 12       | 94321-19135-00  | BAND, RIM (90-100/90-19) .... | 1   | DUNLOP(5NL1) |
| 13       | 4XM-25394-00-00 | SPACER, BEAD .....            | 1   | (5NL1)       |
| 14       | 4XM-25364-00-00 | DAMPER .....                  | 1   | (5NL1)       |
| 15       | 5ET-25447-00-00 | SPROCKET, DRIVEN (47T) ...    | 1   | AP(5NL1)     |
|          | 5ET-25448-00-00 | SPROCKET, DRIVEN (48T) ...    | 1   | STD(5NL1)    |
|          | 5ET-25449-00-00 | SPROCKET, DRIVEN (49T) ...    | 1   | AP(5NL1)     |
|          | 5ET-25450-00-00 | SPROCKET, DRIVEN (50T) ...    | 1   | AP(5NL1)     |
|          | 5ET-25451-00-00 | SPROCKET, DRIVEN (51T) ...    | 1   | AP(5NL1)     |
|          | 5ET-25452-00-00 | SPROCKET, DRIVEN (52T) ...    | 1   | AP(5NL1)     |
| 16       | 90109-081G1-00  | BOLT .....                    | 6   | (5NL1)       |
| 17       | 90185-08169-00  | NUT, SELF-LOCKING .....       | 6   | (5NL1)       |
| 18       | 90201-08326-00  | WASHER, PLATE .....           | 6   | (5NL1)       |
| 19       | 90480-08608-00  | GROMMET .....                 | 1   | (5NL1)       |
| 20       | 5ET-25383-00-00 | COLLAR, WHEEL .....           | 2   | (5NL1)       |
| 21       | 5ET-25388-00-00 | PULLER, CHAIN 1 .....         | 1   | (5NL1)       |
| 22       | 5ET-25389-00-00 | PULLER, CHAIN 2 .....         | 1   | (5NL1)       |
| 23       | 90101-08777-00  | BOLT .....                    | 2   | (5NL1)       |
| 24       | 90179-08299-00  | NUT .....                     | 2   | (5NL1)       |

CONTINUED ON NEXT FRAME ➤

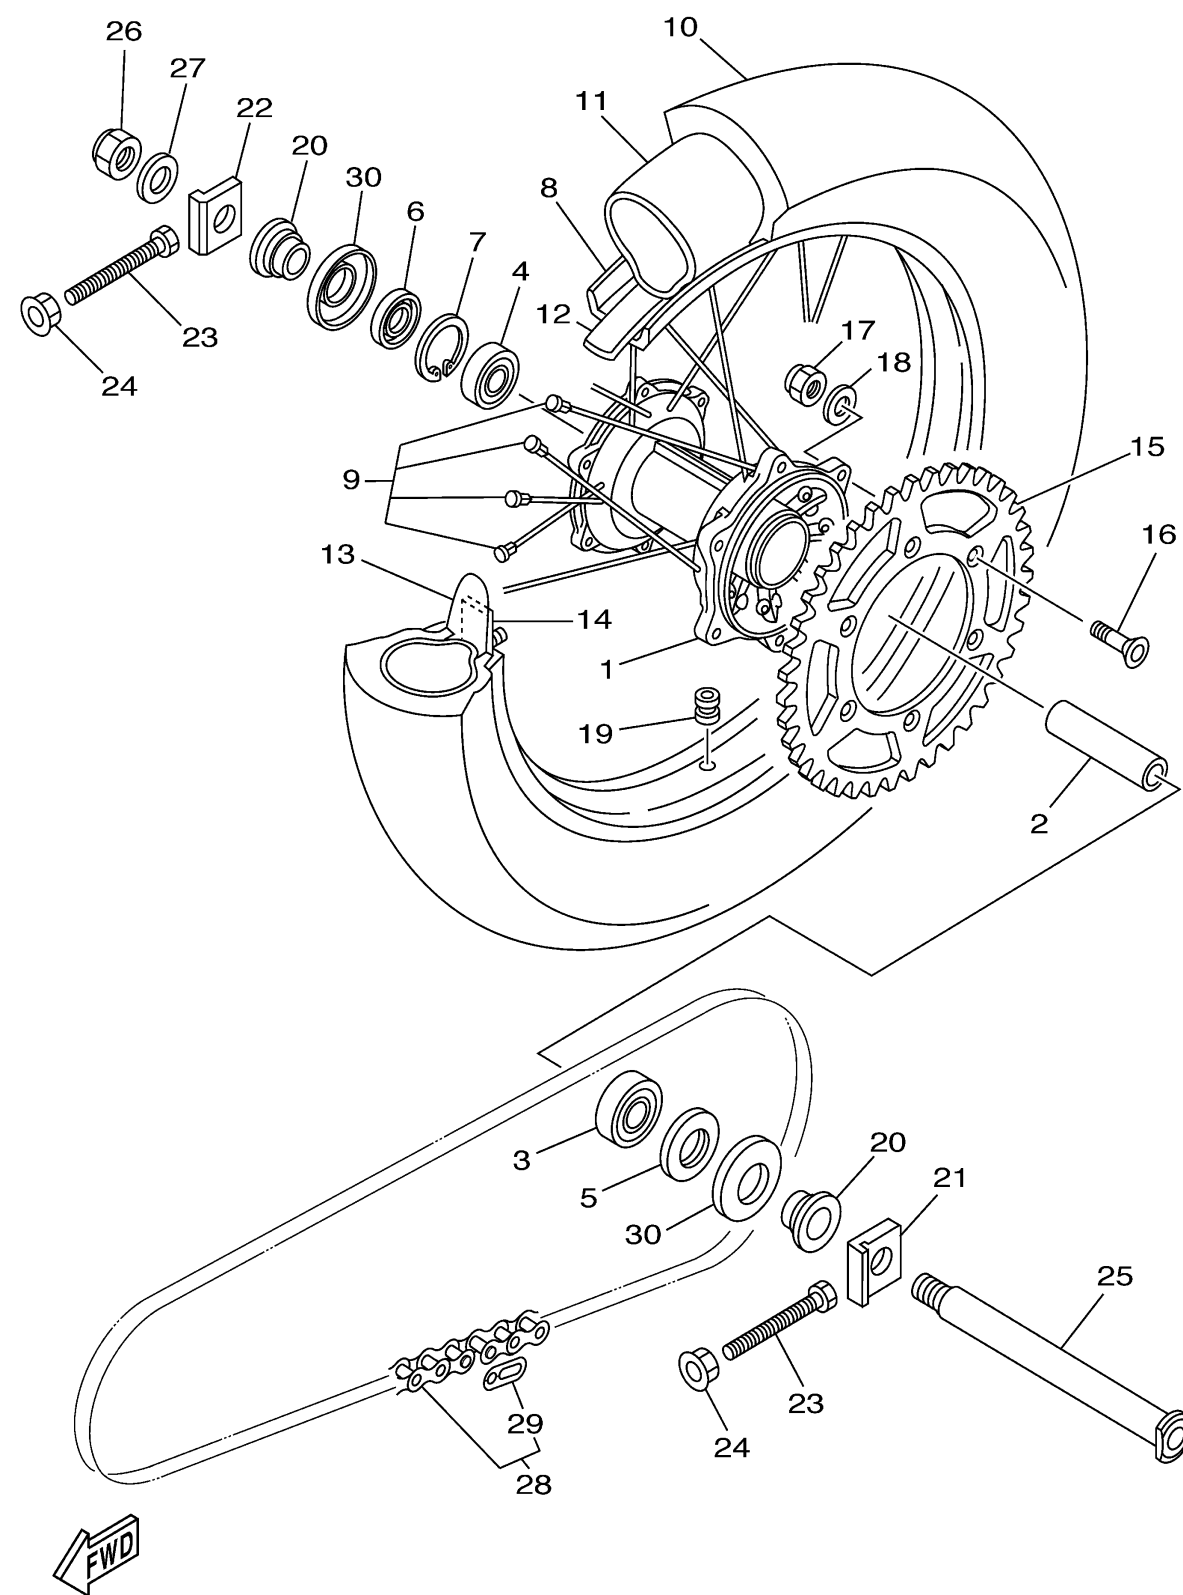


# REAR WHEEL

| Ref. No. | Part Number     | Description             | Qty | Remarks |
|----------|-----------------|-------------------------|-----|---------|
| 25       | 5ET-25381-00-00 | AXLE, WHEEL .....       | 1   | (5NL1)  |
| 26       | 90185-20168-00  | NUT, SELF-LOCKING ..... | 1   | (5NL1)  |
| 27       | 90201-203U1-00  | WASHER, PLATE .....     | 1   | (5NL1)  |
| 28       | 9Y581-92111-00  | CHAIN .....             | 1   | (5NL1)  |
| 29       | 94681-68001-00  | . JOINT, CHAIN .....    | 1   | (5NL1)  |
| 30       | 5ET-25367-00-00 | COVER, HUB DUST .....   | 2   | (5NL1)  |


5NL1100-1300
 
# REAR BRAKE CALIPER

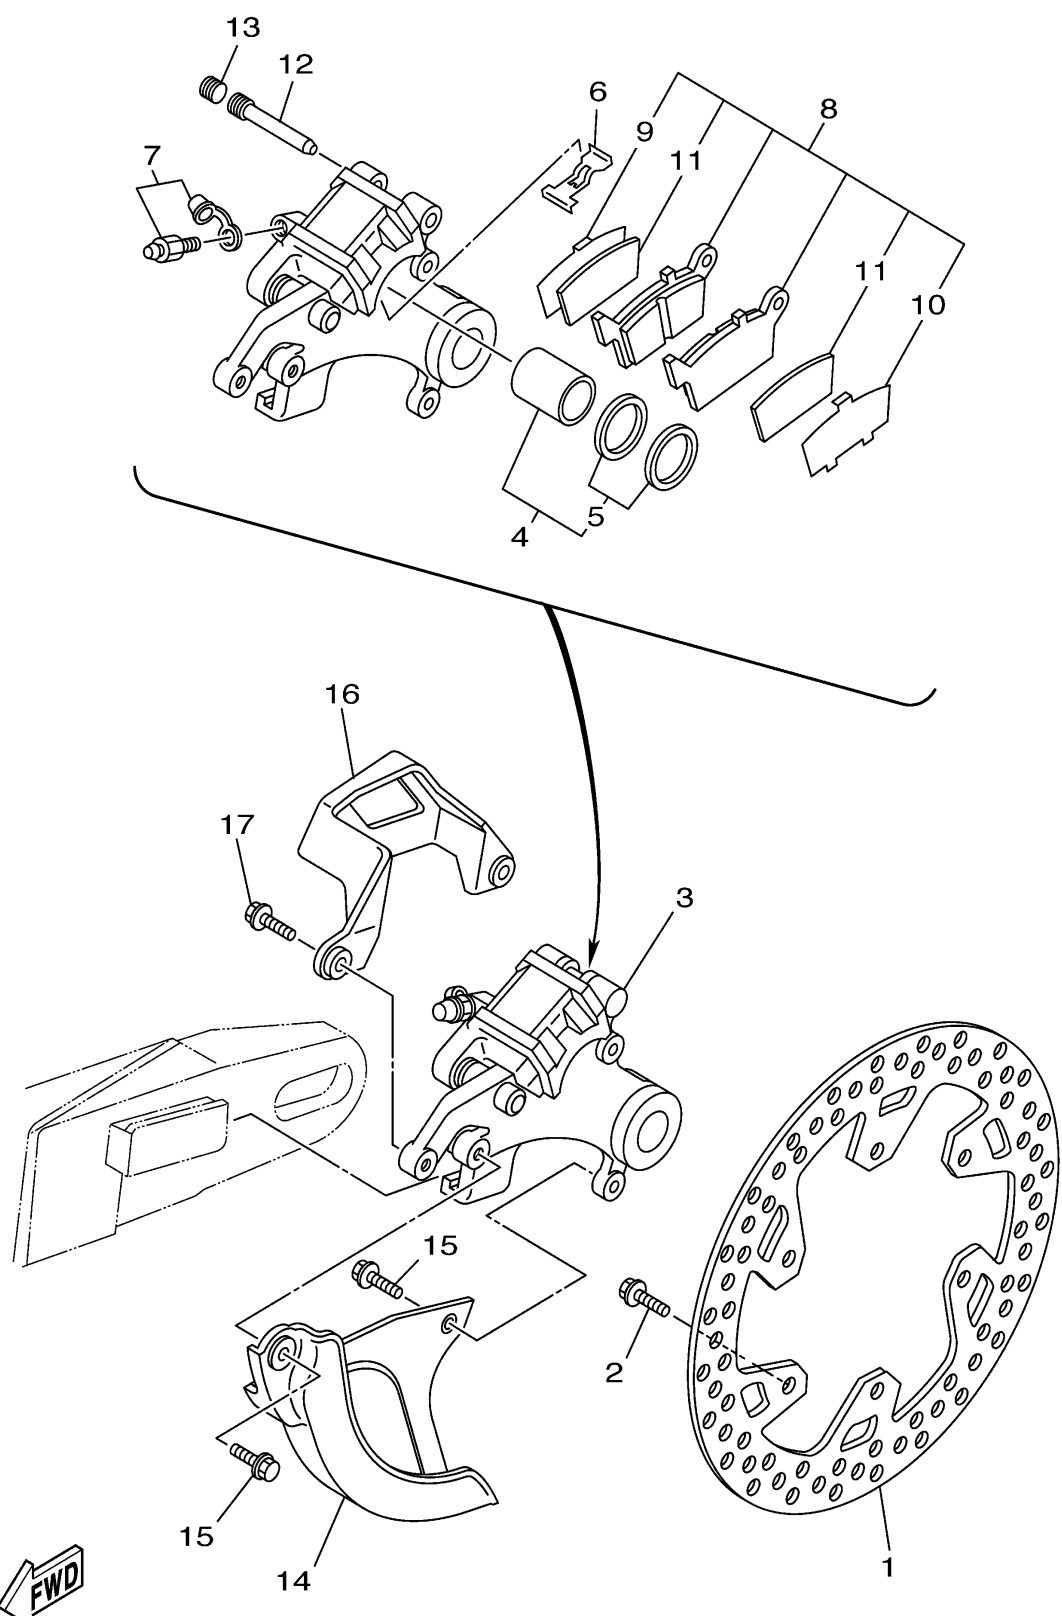

| Ref. No. | Part Number     | Description            | Qty | Remarks |
|----------|-----------------|------------------------|-----|---------|
| 1        | 5DH-2582W-00-00 | DISC, REAR BRAKE 2     | 1   | (5NL1)  |
| 2        | 90109-065G4-00  | BOLT                   | 6   | (5NL1)  |
| 3        | 5GR-2580W-00-00 | CALIPER ASSY, REAR 2   | 1   | (5NL1)  |
| 4        | 5ET-W0057-50-00 | . PISTON ASSY, CALIPER | 1   | (5NL1)  |
| 5        | 5ET-W0047-50-00 | . . CALIPER SEAL KIT   | 1   | (5NL1)  |
| 6        | 5DH-25919-50-00 | . SUPPORT, PAD         | 1   | (5NL1)  |
| 7        | 1UY-W0048-50-00 | . BLEED SCREW KIT      | 1   | (5NL1)  |
| 8        | 5GR-W0046-00-00 | . BRAKE PAD KIT 2      | 1   | (5NL1)  |
| 9        | 5DH-25828-50-00 | . . SHIM, CALIPER      | 1   | (5NL1)  |
| 10       | 5DH-25827-50-00 | . . SHIM, CALIPER      | 1   | (5NL1)  |
| 11       | 5GR-22898-50-00 | . . INSULATOR, HEAT    | 2   | (5NL1)  |
| 12       | 8CR-25924-00-00 | . PIN, PAD             | 1   | (5NL1)  |
| 13       | 5DH-25916-00-00 | . PLUG                 | 1   | (5NL1)  |
| 14       | 5DH-25718-01-00 | PROTECTOR, DISK BRAKE  | 1   | (5NL1)  |
| 15       | 95027-06012-00  | BOLT, FLANGE           | 2   | (5NL1)  |
| 16       | 4GY-27491-00-00 | PROTECTOR              | 1   | (5NL1)  |
| 17       | 95027-06016-00  | BOLT, FLANGE           | 2   | (5NL1)  |

 
5NL1100-1310

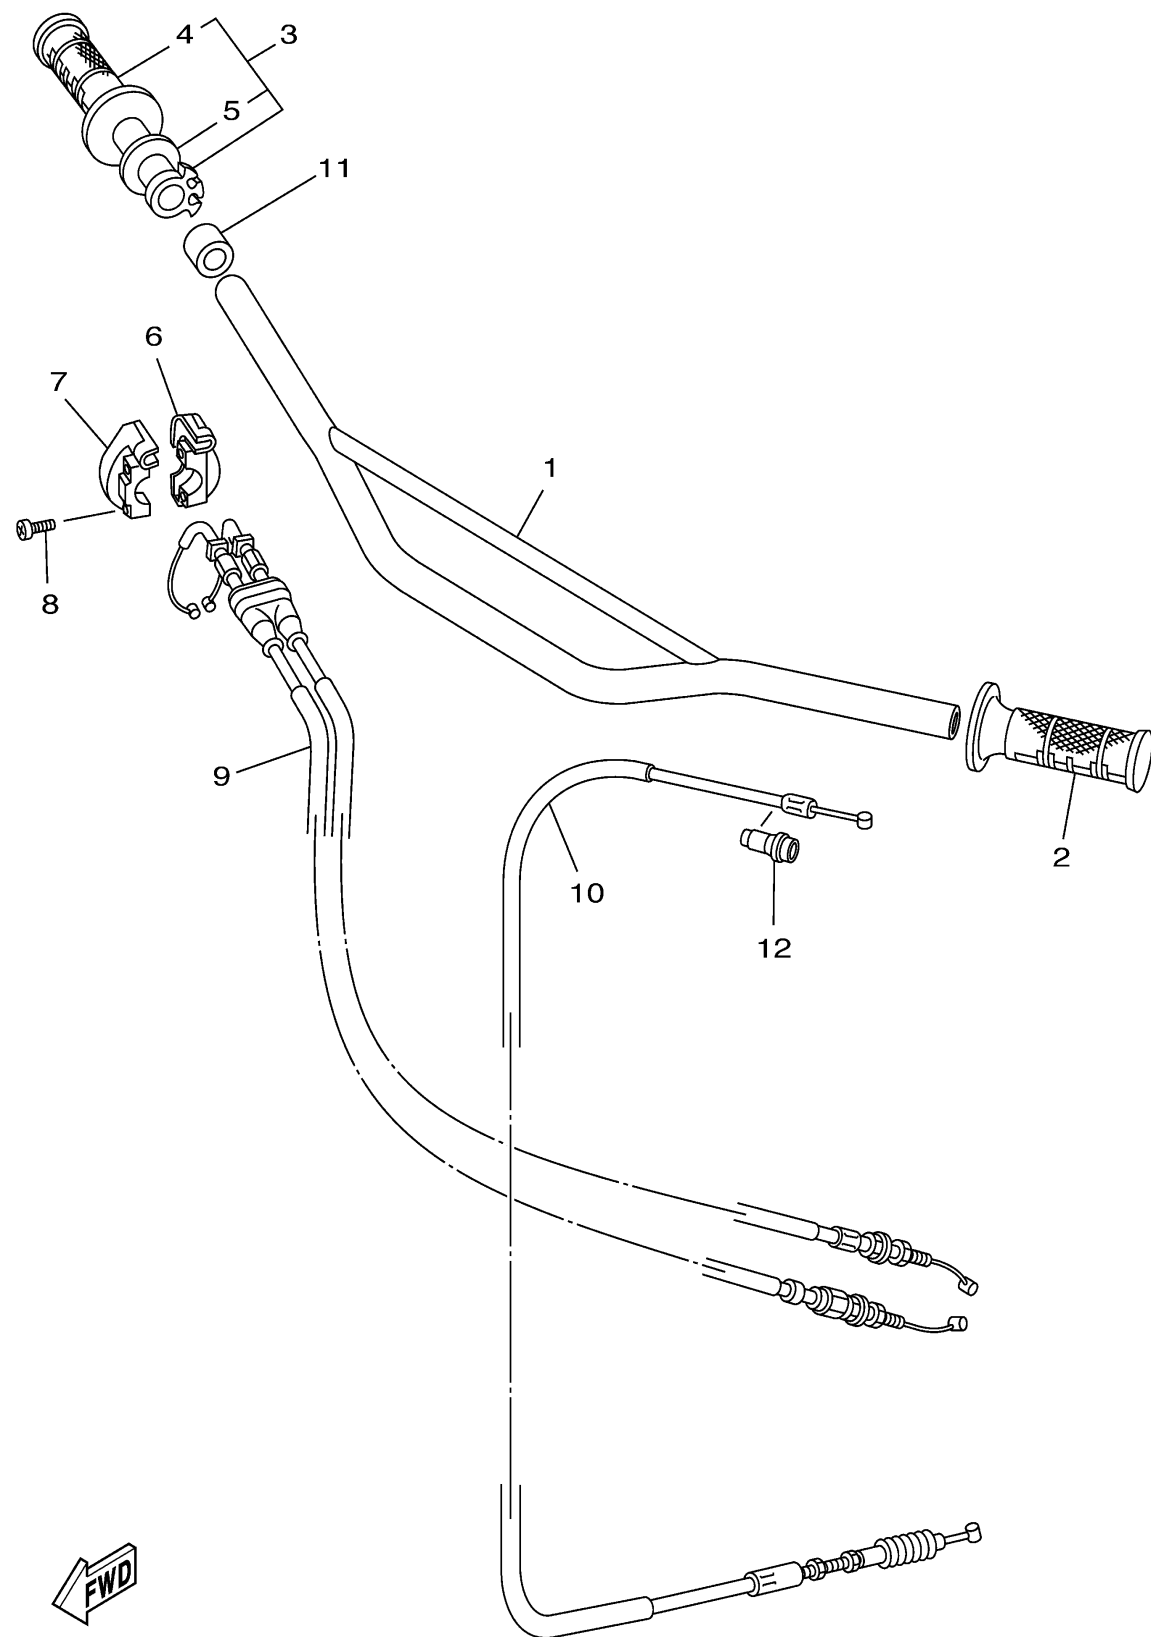

5NL1100-1320

# STEERING HANDLE. CABLE
 
| Ref. No. | Part Number     | Description              | Qty | Remarks |
|----------|-----------------|--------------------------|-----|---------|
| 1        | 4XM-26111-00-00 | HANDLEBAR .....          | 1   | (5NL1)  |
| 2        | 4GY-26241-00-00 | GRIP (LEFT) .....        | 1   | (5NL1)  |
| 3        | 5BE-26240-00-00 | GRIP ASSY .....          | 1   | (5NL1)  |
| 4        | 4GY-26242-00-00 | . GRIP (RIGHT) .....     | 1   | (5NL1)  |
| 5        | 3Y1-26249-00-00 | . RING, LEAF .....       | 1   | (5NL1)  |
| 6        | 5BE-26281-00-00 | CAP, GRIP UPPER .....    | 1   | (5NL1)  |
| 7        | 5BE-26282-00-00 | CAP, GRIP LOWER .....    | 1   | (5NL1)  |
| 8        | 98507-05020-00  | SCREW, PAN HEAD .....    | 2   | (5NL1)  |
| 9        | 5JG-26302-50-00 | THROTTLE CABLE ASSY .... | 1   | (5NL1)  |
| 10       | 5JG-26335-00-00 | CABLE, CLUTCH .....      | 1   | (5NL1)  |
| 11       | 90387-225N2-00  | COLLAR .....             | 1   | (5NL1)  |
| 12       | 5HD-26342-00-00 | BOOT, CABLE .....        | 1   | (5NL1)  |

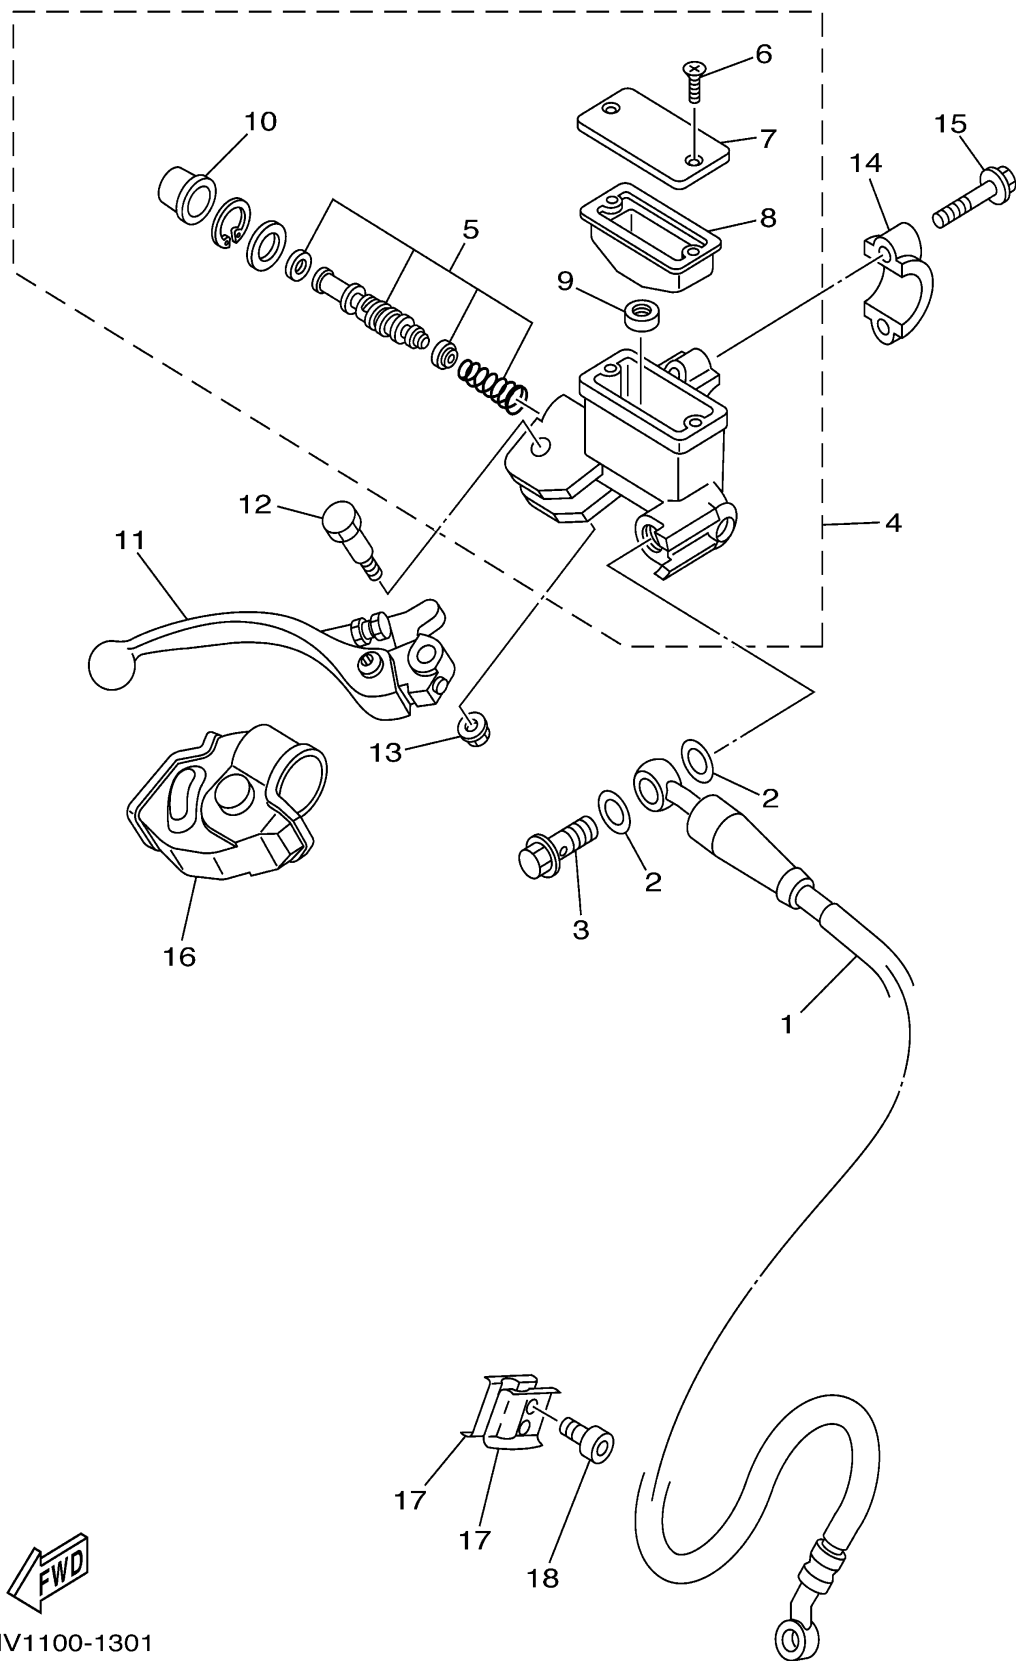


# FRONT MASTER CYLINDER

| Ref. No. | Part Number     | Description                     | Qty | Remarks |
|----------|-----------------|---------------------------------|-----|---------|
| 1        | 5ET-25872-00-00 | HOSE, BRAKE 1 .....             | 1   | (5NL1)  |
| 2        | 90201-10118-00  | WASHER, PLATE .....             | 4   | (5NL1)  |
| 3        | 90401-10172-00  | BOLT, UNION .....               | 2   | (5NL1)  |
| 4        | 5MV-W2587-00-00 | MASTER CYLINDER SUB ASSY        | 1   | (5NL1)  |
| 5        | 5MV-W0041-00-00 | . CYLINDER KIT, MASTER ....     | 1   | (5NL1)  |
| 6        | 98706-04012-00  | . SCREW, FLAT HEAD .....        | 2   | (5NL1)  |
| 7        | 5MV-25852-00-00 | . CAP, RESERVOIR .....          | 1   | (5NL1)  |
| 8        | 56A-25854-00-00 | . DIAPHRAGM, RESERVOIR ..       | 1   | (5NL1)  |
| 9        | 8CR-25715-00-00 | . SEPARATOR ASSY .....          | 1   | (5NL1)  |
| 10       | 5G2-25868-00-00 | . BOOT, MASTER CYLINDER ..      | 1   | (5NL1)  |
| 11       | 5MV-83922-00-00 | LEVER 2 .....                   | 1   | (5NL1)  |
| 12       | 5MV-2589F-00-00 | BOLT, LEVER .....               | 1   | (5NL1)  |
| 13       | 95701-06500-00  | NUT, FLANGE .....               | 1   | (5NL1)  |
| 14       | 5MV-25867-00-00 | BRACKET, MASTER CYLINDER        | 1   | (5NL1)  |
| 15       | 5MV-25833-00-00 | BOLT, FITTING .....             | 2   | (5NL1)  |
| 16       | 90465-16258-00  | CLAMP .....                     | 2   | (5NL1)  |
| 17       | 91317-06014-00  | BOLT, HEXAGON SOCKET HEAD ..... | 2   | (5NL1)  |
| 18       | 5MV-26372-00-00 | COVER, HANDLE LEVER 1 ...       | 1   | (5NL1)  |




5MV1100-1301
 
# STAND. FOOTREST

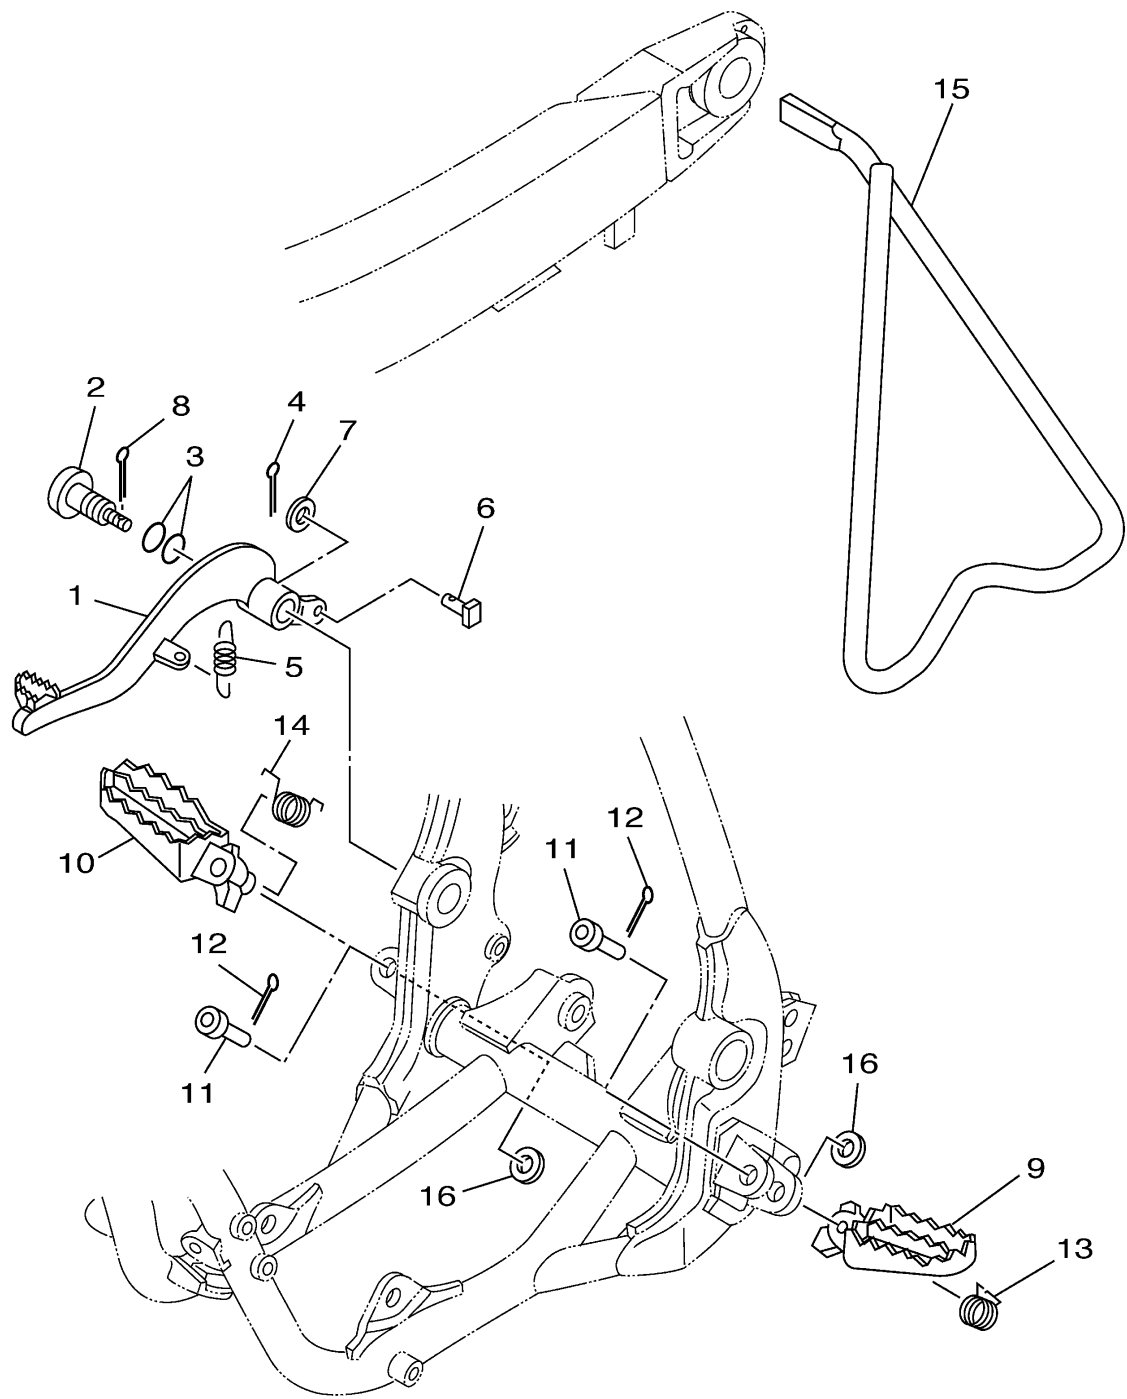

| Ref. No. | Part Number     | Description           | Qty | Remarks |
|----------|-----------------|-----------------------|-----|---------|
| 1        | 4XM-27200-00-00 | PEDAL, BRAKE .....    | 1   | (5NL1)  |
| 2        | 5JG-27217-00-00 | BOLT .....            | 1   | (5NL1)  |
| 3        | 93210-11073-00  | O-RING .....          | 2   | (5NL1)  |
| 4        | 91401-20012-00  | PIN, COTTER .....     | 1   | (5NL1)  |
| 5        | 90506-16500-00  | SPRING, TENSION ..... | 1   | (5NL1)  |
| 6        | 90240-08120-00  | PIN, CLEVIS .....     | 1   | (5NL1)  |
| 7        | 90201-08089-00  | WASHER, PLATE .....   | 1   | (5NL1)  |
| 8        | 90468-16191-00  | CLIP .....            | 1   | (5NL1)  |
| 9        | 5ET-27411-00-00 | FOOTREST 1 .....      | 1   | (5NL1)  |
| 10       | 5ET-27421-00-00 | FOOTREST 2 .....      | 1   | (5NL1)  |
| 11       | 90240-10142-00  | PIN, CLEVIS .....     | 2   | (5NL1)  |
| 12       | 91401-25015-00  | PIN, COTTER .....     | 2   | (5NL1)  |
| 13       | 90508-282B8-00  | SPRING, TORSION ..... | 1   | (5NL1)  |
| 14       | 90508-282B9-00  | SPRING, TORSION ..... | 1   | (5NL1)  |
| 15       | 5ET-27311-00-00 | STAND, SIDE .....     | 1   | (5NL1)  |
| 16       | 90201-10119-00  | WASHER, PLATE .....   | 2   | (5NL1)  |



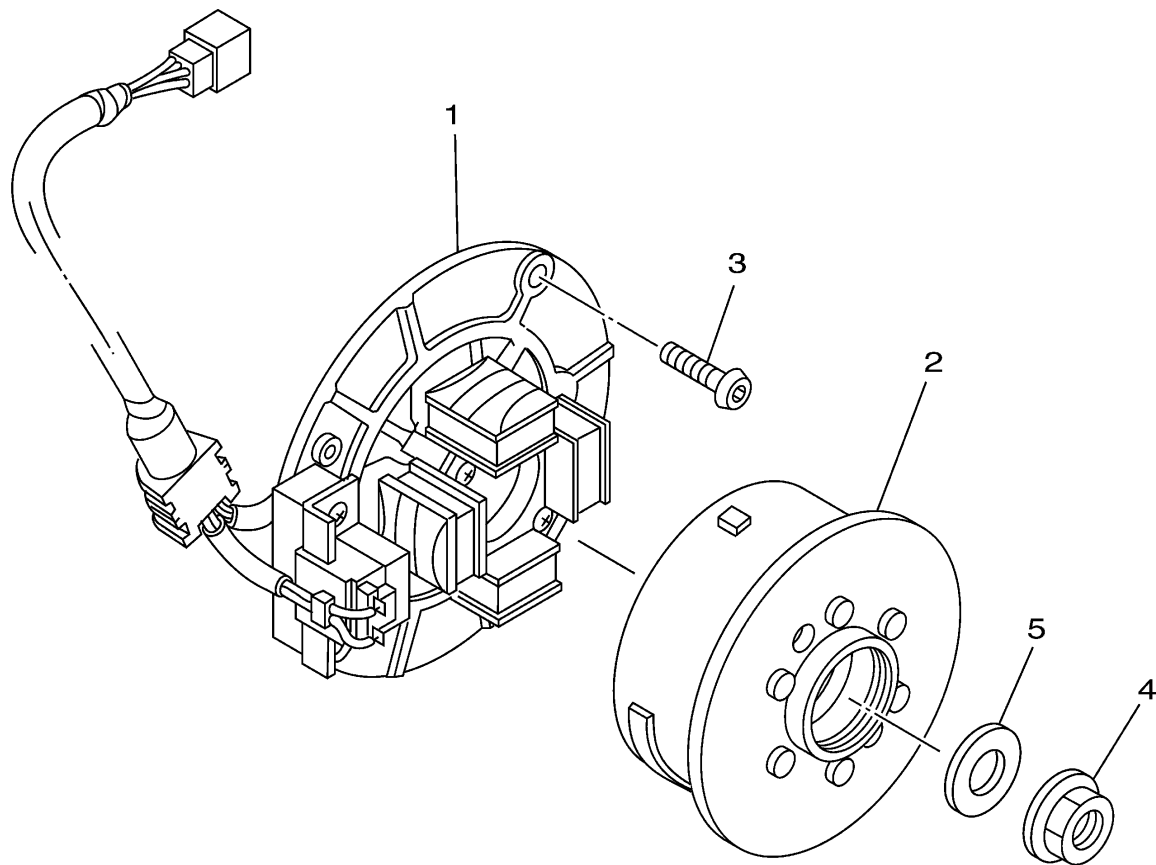 


# GENERATOR

| Ref. No. | Part Number     | Description         | Qty | Remarks |
|----------|-----------------|---------------------|-----|---------|
| 1        | 5BE-85560-10-00 | BASE ASSY .....     | 1   | (5NL1)  |
| 2        | 5JG-85550-11-00 | ROTOR ASSY .....    | 1   | (5NL1)  |
| 3        | 90149-06324-00  | SCREW .....         | 3   | (5NL1)  |
| 4        | 90179-10247-00  | NUT .....           | 1   | (5NL1)  |
| 5        | 90201-101J1-00  | WASHER, PLATE ..... | 1   | (5NL1)  |



 5NL1100-1360

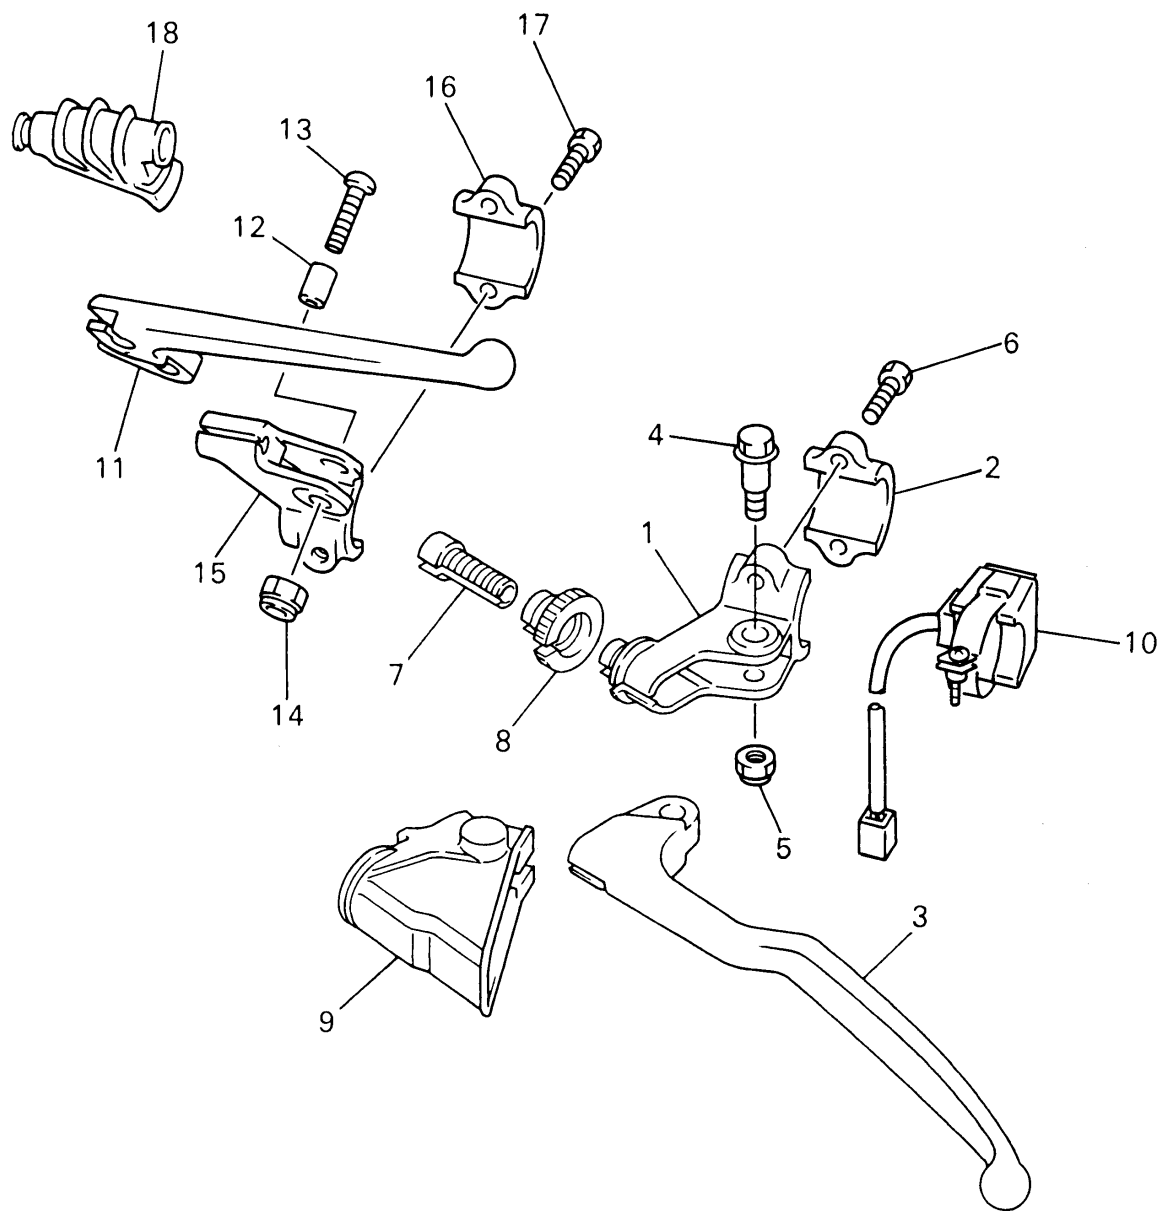


# HANDLE SWITCH. LEVER

| Ref. No. | Part Number     | Description                      | Qty | Remarks |
|----------|-----------------|----------------------------------|-----|---------|
| 1        | 5HD-82911-00-00 | HOLDER, LEVER 1 .....            | 1   | (5NL1)  |
| 2        | 38V-82913-00-00 | HOLDER, LEVER LOWER 1 ...        | 1   | (5NL1)  |
| 3        | 5MV-83912-00-00 | LEVER 1 .....                    | 1   | (5NL1)  |
| 4        | 90109-06027-00  | BOLT .....                       | 1   | (5NL1)  |
| 5        | 95607-06100-00  | NUT, U .....                     | 1   | (5NL1)  |
| 6        | 97007-05016-00  | BOLT .....                       | 2   | (5NL1)  |
| 7        | 5HD-26337-00-00 | BOLT, ADJUSTING .....            | 1   | (5NL1)  |
| 8        | 5HD-83951-00-00 | BOLT, CABLE ADJUSTING ...        | 1   | (5NL1)  |
| 9        | 5HD-26372-00-00 | COVER, HANDLE LEVER 1 ...        | 1   | (5NL1)  |
| 10       | 23X-83976-00-00 | SWITCH, HANDLE 1 .....           | 1   | (5NL1)  |
| 11       | 583-83981-00-00 | LEVER, DECOMPRESSION ...         | 1   | (5NL1)  |
| 12       | 5BE-83913-00-00 | COLLAR, LEVER 1 .....            | 1   | (5NL1)  |
| 13       | 98907-05020-00  | SCREW, BIND .....                | 1   | (5NL1)  |
| 14       | 95607-05100-00  | NUT, U .....                     | 1   | (5NL1)  |
| 15       | 5BE-82912-00-00 | HOLDER, LEVER UPPER 1 ...        | 1   | (5NL1)  |
| 16       | 38V-82913-00-00 | HOLDER, LEVER LOWER 1 ...        | 1   | (5NL1)  |
| 17       | 97007-05016-00  | BOLT .....                       | 2   | (5NL1)  |
| 18       | 583-26352-00-00 | COVER, DECOMPRESSION CABLE ..... | 1   | (5NL1)  |



 
5JG1100-0370

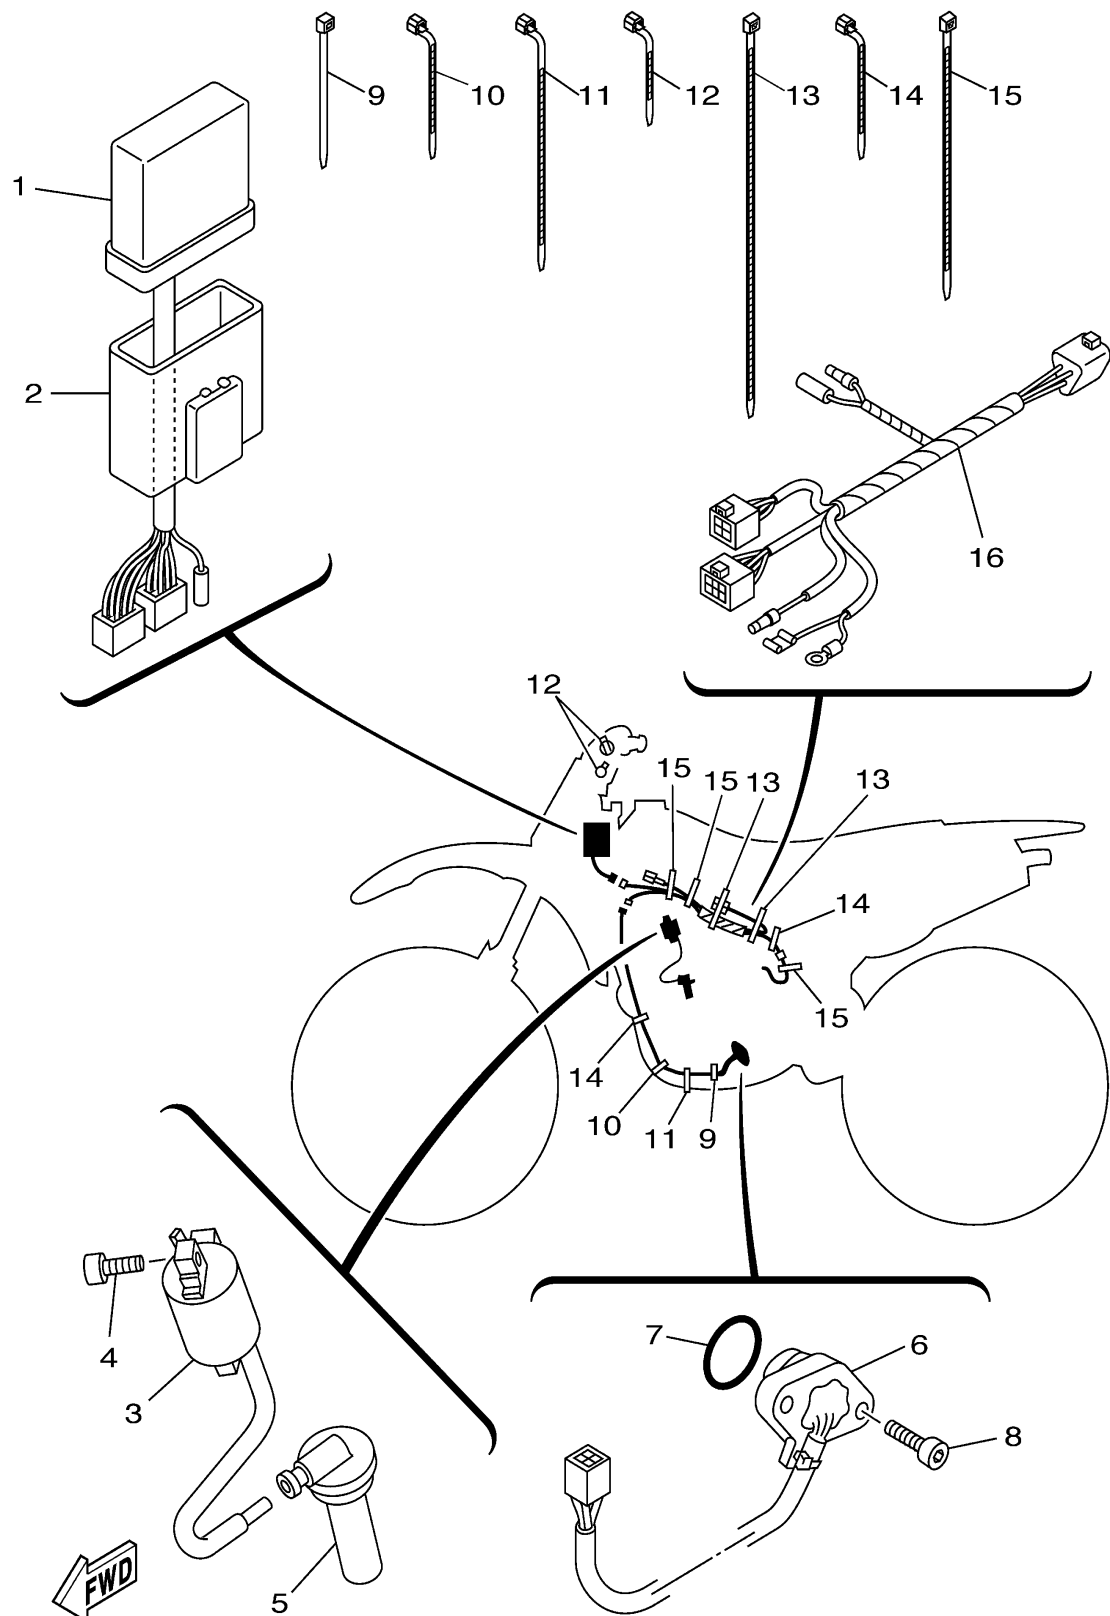

5NL1100-1380

# ELECTRICAL 1
 
| Ref. No. | Part Number     | Description              | Qty | Remarks |
|----------|-----------------|--------------------------|-----|---------|
| 1        | 5NL-85540-00-00 | C.D.I. UNIT ASSY .....   | 1   | (5NL1)  |
| 2        | 5NL-85546-00-00 | BAND .....               | 1   | (5NL1)  |
| 3        | 4SR-82310-00-00 | IGNITION COIL ASSY ..... | 1   | (5NL1)  |
| 4        | 91317-06016-00  | BOLT .....               | 2   | (5NL1)  |
| 5        | 5BE-82370-00-00 | PLUG CAP ASSY .....      | 1   | (5NL1)  |
| 6        | 5BE-82540-01-00 | NEUTRAL SWITCH ASSY .... | 1   | (5NL1)  |
| 7        | 93210-21276-00  | O-RING .....             | 1   | (5NL1)  |
| 8        | 90154-05073-00  | SCREW, BINDING .....     | 2   | (5NL1)  |
| 9        | 90464-16061-00  | CLAMP .....              | 1   | (5NL1)  |
| 10       | 90464-13073-00  | CLAMP .....              | 1   | (5NL1)  |
| 11       | 90460-15126-00  | CLAMP, HOSE .....        | 1   | (5NL1)  |
| 12       | 90464-13077-00  | CLAMP .....              | 2   | (5NL1)  |
| 13       | 90464-15152-00  | CLAMP .....              | 2   | (5NL1)  |
| 14       | 90464-13073-00  | CLAMP .....              | 3   | (5NL1)  |
| 15       | 90465-13275-00  | CLAMP .....              | 2   | (5NL1)  |
| 16       | 5NL-82509-00-00 | WIRE, SUB LEAD .....     | 1   | (5NL1)  |

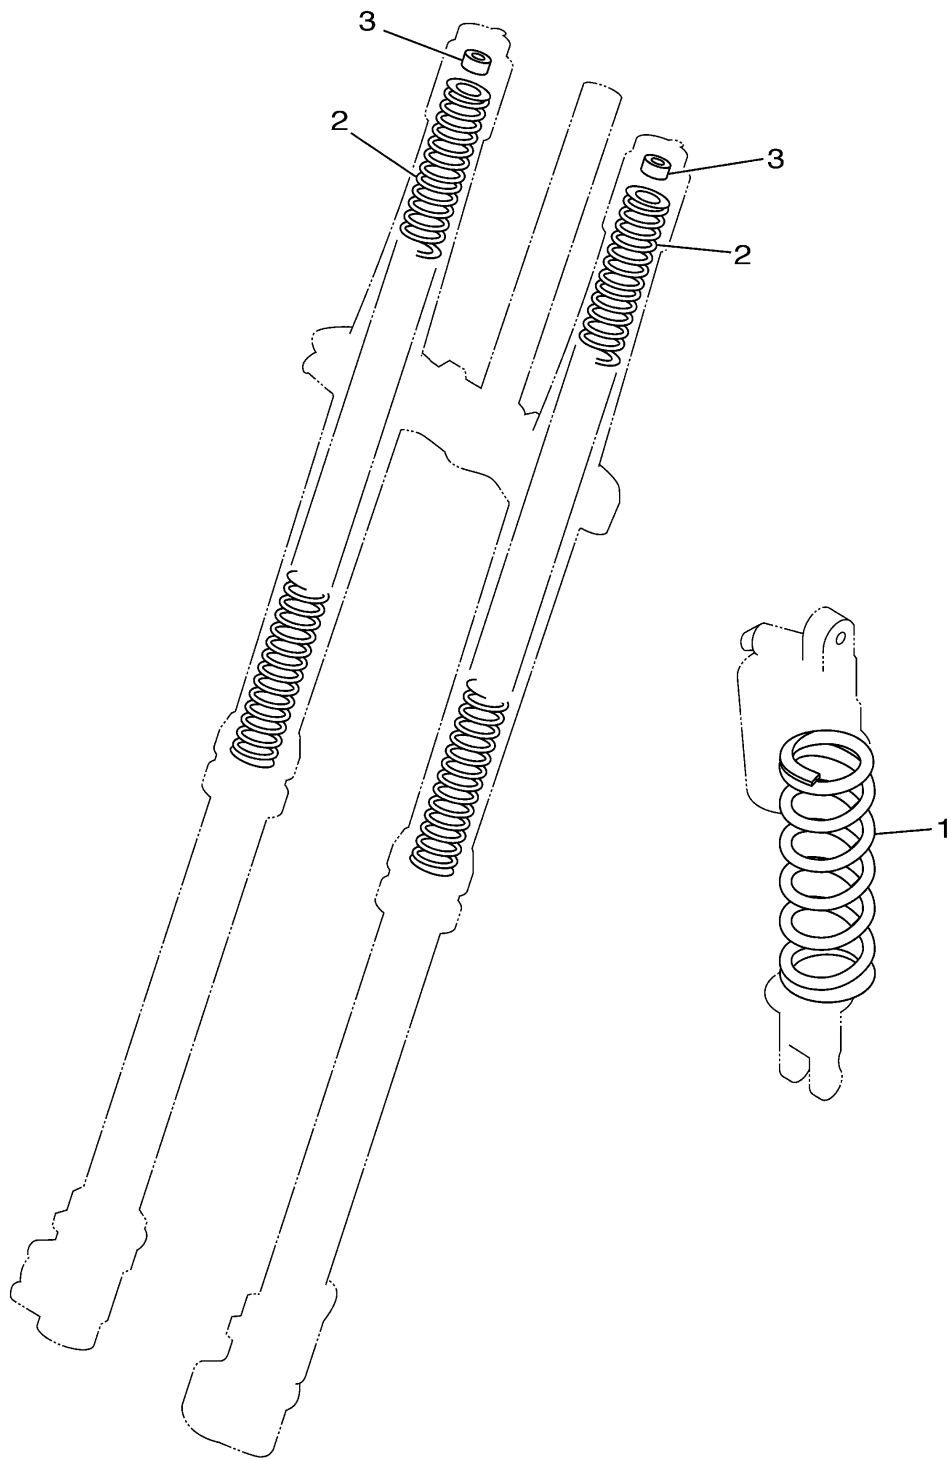

# ALTERNATE (CHASSIS)

| Ref. No. | Part Number     | Description                 | Qty | Remarks     |
|----------|-----------------|-----------------------------|-----|-------------|
| 1        | 5DH-22212-10-00 | SPRING (K=4.6) .....        | 1   | AP(5NL1)    |
|          | 5DH-22212-20-00 | SPRING (K=4.8) .....        | 1   | AP(5NL1)    |
|          | 5DH-22212-30-00 | SPRING (K=5.0) .....        | 1   | AP(5NL1)    |
|          | 5DH-22212-40-00 | SPRING (K=5.2) .....        | 1   | AP(5NL1)    |
|          | 5DH-22212-50-00 | SPRING (K=5.4) .....        | 1   | AP(5NL1)    |
|          | 5DH-22212-60-00 | SPRING (K=5.6) .....        | 1   | AP(5NL1)    |
|          | 5DH-22212-70-00 | SPRING (K=4.4) .....        | 1   | AP(5NL1)    |
|          | 5ET-22212-00-00 | SPRING (K=APPROX.4.8) ....  | 1   | AP(5NL1)    |
|          | 5ET-22212-10-00 | SPRING (K=APPROX.5.0) ....  | 1   | AP(5NL1)    |
|          | 5ET-22212-20-00 | SPRING (K=APPROX.4.6) ....  | 1   | AP(5NL1)    |
|          | 5ET-22212-30-00 | SPRING (K=APPROX.5.2) ....  | 1   | AP(5NL1)    |
|          | 5ET-22212-40-00 | SPRING (K=APPROX.5.4) ....  | 1   | AP(5NL1)    |
|          | 5ET-22212-50-00 | SPRING (K=APPROX.5.6) ....  | 1   | AP(5NL1)    |
|          | 4SS-23141-10-00 | SPRING, FRONT FORK (K=0.38) | 2   | AP(5NL1)    |
|          | 4SS-23141-20-00 | SPRING, FRONT FORK (K=0.39) | 2   | AP(5NL1)    |
|          | 4SS-23141-30-00 | SPRING, FRONT FORK (K=0.40) | 2   | AP(5NL1)    |
|          | 4SS-23141-40-00 | SPRING, FRONT FORK (K=0.41) | 2   | AP(5NL1)    |
|          | 4SS-23141-50-00 | SPRING, FRONT FORK (K=0.42) | 2   | AP(5NL1)    |
|          | 4SS-23141-60-00 | SPRING, FRONT FORK (K=0.43) | 2   | AP(5NL1)    |
|          | 4SS-23141-70-00 | SPRING, FRONT FORK (K=0.44) | 2   | AP(5NL1)    |
| 2        | 5BE-23141-00-00 | SPRING, FRONT FORK (K=0.46) | 2   | AP(5NL1)    |
|          | 5BE-23141-L0-00 | SPRING, FRONT FORK (K=0.45) | 2   | AP(5NL1)    |
|          | 5ET-23141-00-00 | SPRING (K=APPROX.0.41) .... | 2   | AP(5NL1)    |
|          | 5ET-23141-10-00 | SPRING (K=APPROX.0.43) .... | 2   | AP(5NL1)    |
|          | 5ET-23141-20-00 | SPRING (K=APPROX.0.40) .... | 2   | AP(5NL1)    |
|          | 5ET-23141-30-00 | SPRING (K=APPROX.0.42) .... | 2   | AP(5NL1)    |
|          | 5ET-23141-40-00 | SPRING (K=APPROX.0.44) .... | 2   | AP(5NL1)    |
|          | 5GR-23141-00-00 | SPRING, FRONT FORK (K=0.47) | 2   | AP(5NL1)    |
| 3        | 4SS-23364-L0-00 | COLLAR 2 .....              | 2   | UN AP(5NL1) |



5NL1100-1390