



THE WORLD LEADER IN
TRIPLE SPARK
TECHNOLOGY



pulsar
NS200
FI

**CATÁLOGO
DE PARTES**

Mobil Super
4T Ultra

pulsar
POTENCIA SIN PRECEDENTES

www.auteco.com.co

Línea gratuita nacional: 018000 520090




auteco

IRC *LLANTAS* *TECNOLOGÍA JAPONESA*



**Los Expertos en motos
las usan y recomiendan:**

 **BAJAJ**
Distinctly Ahead

 **auteco**
www.auteco.com.co

APLICACIONES DE LAS LLANTAS IRC EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CÓDIGO CATALOGO	CÓDIGO SAP
PULSAR 200 NS, PULSAR AS 200, PULSAR RS 200	DELANTERA	100/80-17	IRC	NR73	PISTERA	41070-1017-NR73/18	10020077
		100/80-17		RX01	PISTERA	100/80-17-RX01-TL	10003160
		110/70-17		RX01	PISTERA	41070-1117-RX01/18	10020095
	TRASERA	130/70-17	IRC	RX01	PISTERA	41070-1317-RX01/18	10020115
PULSAR 220	DELANTERA	90/90X17	IRC	NF45	PISTERA TUBE LESS	41070-9017-NF45/18	10020217
				NF52TL	PISTERA TUBE LESS	90/90-17-NF52-TL	10029297
				NF42	PISTERA TUBE LESS	41070-9017-NF42/18	10020214
				NF46	PISTERA TUBE LESS	41070-9017-NF46/18	10020220
	TRASERA	110/70-17	IRC	RX01	PISTERA TUBE LESS	41070-1117-RX01/18	10020095
		130/70-17		RX01	PISTERA TUBE LESS	41070-1317-RX01/18	10020115
AVENGER 220	DELANTERA	120/80X17	IRC	NR57TL	PISTERA TUBE LESS	120/80-17-NR57-TL	10007401
	TRASERA	90/90X17		NF45	PISTERA	41070-9017-NF45/18	10020217
PULSAR 200, PULSAR 180 UG	DELANTERA	130/90X15	IRC	NR66	SPORT	130/90-15-NR66-TT	10008722
		2.75X17		NF53	PISTERA	41070-2717-NR53/18	10020143
		90/80X17		NR73	PISTERA	90/80-17-NR73-TT	10029270
		90/90X17		NF53	PISTERA	41070-9017-NF53/18	10020223
		100/80-17		NR73	PISTERA	41070-1017-NR73/18	10020077
		110/70-17		RX01	PISTERA	41070-1117-RX01/18	10020095
	TRASERA	130/70-17	IRC	RX01	PISTERA	41070-1317-RX01/18	10020115

APLICACIONES DE LAS LLANTAS IRC EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CÓDIGO CATALOGO	CÓDIGO SAP
PULSAR 135 PULSAR SPEED	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18	10020143
		90/80-17		NR73TT	PISTERA	90/80-17-NR73-TT	10029270
	TRASERA	110/80-17	IRC	NR53	PISTERA	41070-1117-NR53/18	10020089
		100/80X17		NR64 NR73	PISTERA PISTERA	41070-1117-NR64/18 41070-1017-NR73/18	10020092 10020077
PULSAR 150	DELANTERA	90/90-17	IRC	NF53	PISTERA TUBE LESS	90/90-17-NF53-TL	10029301
	TRASERA	110/80-17		NR48TL	PISTERA TUBE LESS	110/80-17-NR48-TL	10003355
PULSAR NS 150, PULSAR AS 150	DELANTERA	90/80-17	IRC	NR77UZ	PISTERA	90/80-17-NR77UZ-TL	10029272
	TRASERA	110/80-17		NR48TL	PISTERA	110/80-17-NR48-TL	10003355
PULSAR 180 (CLASSIC, DTS-i)	DELANTERA	2.75X18	IRC	NR21	SPORT	41070-2718-NR21/18	10020146
				NR53	PISTERA	41070-2718-NR53/18	10020149
	TRASERA	3.00X18	IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18	10020171
				NR53	PISTERA	41070-3018-NR53/18	10020174
DISCOVER 125 ST DISCOVER 125 DISCOVER 100 DISCOVER 135 KS/ES DISCOVER DTSI PULSAR 180 DTS-i TEC,BLACK, PULSAR II	DELANTERA	2.75X17	IRC	NR53	PISTERA	41070-2717-NR53/18	10020143
		90/80-17		NR73TT	PISTERA	90/80-17-NR73-TT	10029270
	TRASERA	3.00X17	IRC	GP1	TRIAL ROMBO	41070-3017-GP1/18	10020163
				NR1	SPORT	41070-3017-NR1/18	10020166
		100/80-17		NR73	PISTERA	41070-1017-NR73/18	10020077
		80/90-17		NR78YL	PISTERA	80/90-17-NR78Y-TT	10027758

APLICACIONES DE LAS LLANTAS IRC EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CÓDIGO CATALOGO	CÓDIGO SAP
DISCOVER 100M, DISCOVER 110	DELANTERA	90/80-17	IRC	NR73TT	PISTERA	90/80-17-NR73-TT	10029270
	TRASERA	100/80X17		NR73	PISTERA	100/80-17-NR73-TT	10020077
DISCOVER 150ST-F	DELANTERA	100/80-17	IRC	NR73S	PISTERA	100/80-17-NR73S-TL	10003158
	TRASERA	80/90-17		NR73	PISTERA	80/90-17-NR73S-TL	10027755
PLATINO 125 5S, PLATINO 125, PLATINO CT, PLATINO 100 SPORT, PLATINO 110, XCD 125	DELANTERA	90/80-17	IRC	NR73TT	PISTERA	90/80-17-NR73-TT	10029270
		2.75X17		NR53	PISTERA	41070-2717-NR53/18	10020143
				GP1	TRIAL ROMBO	41070-2717-GP1/18	10020137
	TRASERA	100/80-17	IRC	NR73	PISTERA	41070-1017-NR73/18	10020077
		3.00X17		GP1	TRIAL ROMBO	41070-3017-GP1/18	10020163
				NR1	SPORT	41070-3017-NR1/18	10020166
BOXER CON RIN 17" BOXER BM 150, BOXER CT 100, BOXER BM 100	DELANTERA	90/80-17	IRC	NR73TT	PISTERA	41070-9017-NR73TT/18	10029270
		90/90-17		NR53	PISTERA	41070-2717-NR53/18	10020143
		2.75X17		NR53	PISTERA	41070-2717-NR53/18	10020143
				GP1	TRIAL ROMBO	41070-2717-GP1/18	10020137
	TRASERA	100/80-17	IRC	NR73	PISTERA	41070-1017-NR73/18	10020077
		3.00X17		GP1	TRIAL ROMBO	41070-3017-GP1/18	10020163
				NR1	SPORT	41070-3017-NR1/18	10020166
		BOXER BM 100 CLASSIC ES		DELANTERA	2.75X17	IRC	NR53
TRASERA	3.00X17		NR1	SPORT	41070-3017-NR1/18		10020166
BOXER CON RIN 18" 4T, UG, K-TEC	DELANTERA	2.50X18	IRC	NR53	PISTERA	41070-2518-NR53/18	10020134
	TRASERA	3.00X18		GP1	TRIAL ROMBO	41070-3018-GP1/18	10020171
				NR53	PISTERA	41070-3018-NR53/18	10020174

APLICACIONES DE LAS LLANTAS IRC EN LOS MODELOS BAJAJ

MODELO	APLICACIÓN	MEDIDA	MARCA	GRABADO	TIPO DE GRABADO	CÓDIGO CATALOGO	CÓDIGO SAP
BOXER CON RIN 18" (S1D) CALIBER 115 WIND 125	DELANTERA	2.75X18	IRC	NR21	SPORT	41070-2718-NR21/18	10020146
				NR53	PISTERA	41070-2718-NR53/18	10020149
	TRASERA	3.00X18	IRC	GP1	TRIAL ROMBO	41070-3018-GP1/18	10020171
				NR53	PISTERA	41070-3018-NR53/18	10020174
AVANTI	DELANTERA	2.50X17	IRC	TR1	TRIAL ROMBO	41070-2517-TR1/18	10020132
	TRASERA	2.75X17	IRC	NR2	SPORT	41070-2717-NR2/18	10020140
				NR53	PISTERA	41070-2717-NR53/18	10020143
				GP1	TRIAL ROMBO	41070-2717-GP1/18	10020137
PLUS, CLASSIC, LEGEND	DELANTERA	3.50X10	IRC	MB-27	SPORT	41070-3510-27/18	10020183
	TRASERA						

Advierta lo que le dicen las llantas mientras conduce:

- Si su respuesta a la dirección es lenta o si en las curvas y en el frenado la respuesta es pesada, es muy probable que sus llantas estén desinfladas.
- Vibración o tambaleo durante la conducción, puede significar que la presión en las llantas es mayor a la recomendada, o que ha ocurrido un daño en la llanta y la falla es inminente.
- La llanta puede vibrar a ciertas velocidades debido al desbalanceo, en este caso su desgaste será muy acelerado.

**RECUERDE SIEMPRE REVISAR LA PRESIÓN DE AIRE EN SUS LLANTAS
ANTES DE COMENZAR A RODAR**

PREFACIO

Es nuestro placer presentarles a ustedes el Catálogo de Partes.

Este Catálogo ha sido especialmente diseñado para ayudarle en la selección de las partes correctas con el fin de mantener el vehículo en las mejores condiciones.

Los repuestos originales están sujetos a un exigente estándar de control de calidad, por lo tanto es necesario que usted sólo use repuestos originales.

En nuestro constante esfuerzo para mejorar la eficiencia y desempeño de su vehículo, las especificaciones, diagramas y número de partes pueden cambiar sin previo aviso. Consecuentemente las descripciones de los repuestos en este Catálogo pueden no ser las finales y definitivas.

Las alteraciones y modificaciones que ocurren en la impresión de este Catálogo, serán informadas a nuestra red, a través de circulares de Servicio o en nuestra página web: www.auteco.com.co accediendo al link repuestos. Es requisito que usted actualice su Catálogo y haga las correcciones necesarias, una vez reciba dichas circulares. Lo anterior le asegurará un rápido y adecuado despacho de sus partes, pues las órdenes están siendo diligenciadas con las referencias más actualizadas.

En caso de necesitar asistencia técnica, comunicarse con el Distribuidor Autorizado o llamar al Departamento de Servicios Auteco.



DIRECTORIO TELEFÓNICO - UN REPUESTOS Y ACCESORIOS

ÁREA COMERCIAL Y ASESORES DE VENTAS

NOMBRE	CARGO	ZONA	CELULAR	CORREO ELECTRÓNICO
Alvaro Enrique Carreño	ASESOR COMERCIAL	Magdalena Medio	314 701 17 85	acarreno@auteco.com.co
Andres Julian Giraldo	ASESOR COMERCIAL	Risaralda y Armenia	301 375 43 57	ajgiraldo@auteco.com.co
Bernardo De Jesus Muriel	ASESOR COMERCIAL	Cucuta	312 257 61 75	bmuriel@auteco.com.co
Carlos Humberto Tobon	ASESOR COMERCIAL	Área Metropolitana Norte	310 447 36 11	ctobon@auteco.com.co
Carlos Javier Uribe Duran	ASESOR COMERCIAL	Cucuta	321 799 19 28	cjuribe@auteco.com.co
Carlos Mario Salazar	ASESOR COMERCIAL	Sucre	310 414 88 45	csalazar@auteco.com.co
Elecer Zamora Vasquez	ASESOR COMERCIAL	Cali y Cauca	313 584 47 13	ezamora@auteco.com.co
Elkin Humberto Gallego	ASESOR COMERCIAL	Sur de Area Metropolitana de Medellín y Amazonas	310 436 25 98	egallego@auteco.com.co
Esmeralda Forero Acosta	ASESOR COMERCIAL	Zona Centro Bogota	313 585 22 07	eforero@auteco.com.co
Gonzalo Adolfo Saldarriaga	ASESOR COMERCIAL	Medellín	310 406 88 74	gsaldarriaga@auteco.com.co
Gustavo Adolfo Cantillo	ASESOR COMERCIAL	Atlántico	300 447 41 57	gcantillo@auteco.com.co
Hector Emilio Moncayo	ASESOR COMERCIAL	Nariño y Putumayo	321 799 79 48	hmoncayo@auteco.com.co
Hernan Alonso Pedraza	ASESOR COMERCIAL	Pueblos de Cundinamarca	311 899 77 28	hpedraza@auteco.com.co
Ivano Alexy Villota Arteaga	ASESOR COMERCIAL	Sur de Huila y Caqueta	313 767 78 43	ivillota@auteco.com.co
Jaime Alfonso Villalba	ASESOR COMERCIAL	Bolivar	313 584 72 62	jvillalba@auteco.com.co
John Jairo Lopez	ASESOR COMERCIAL	Antioquia Norte	310 444 22 15	jlopez@auteco.com.co
Julio Mario Moterroza	ASESOR COMERCIAL	Magdalena	313 585 60 28	jmonterroza@auteco.com.co
Karen Lorena Candanoza	ASESOR COMERCIAL	Zona Sur Bogota	313 585 35 61	kcandanoza@auteco.com.co
Marlon Santiago Blandon	ASESOR COMERCIAL	Cordoba y Bajo Cauca	310 373 90 19	msblandon@auteco.com.co
Miguel Angel Guerrero	ASESOR COMERCIAL	Norte del Valle y Buenaventura	314 772 07 98	mguerro@auteco.com.co
Miguel Arturo Osorio Ruiz	ASESOR COMERCIAL	Cesar y Guajira	321 799 78 87	mosorio@auteco.com.co
Miller Fabian Acosta	ASESOR COMERCIAL	Zona Norte Bogota	313 585 98 37	macosta@auteco.com.co
Milton Cesar Olaya Carvajal	ASESOR COMERCIAL	Neiva y Norte Huila	310 436 27 42	molaya@auteco.com.co
Nestor Raul Adarve	ASESOR COMERCIAL	Antioquia Sur y Choco	310 436 26 89	nadarve@auteco.com.co
Rubén Dario Campo Cárdena	ASESOR COMERCIAL	Caldas y Norte de Risaralda	321 799 79 06	rcampo@auteco.com.co
Uberney Ortiz Velez	ASESOR COMERCIAL	Casanare, Vichada, Boyaca	313 672 73 37	uortiz@auteco.com.co
Willinton Franco Tobon	ASESOR COMERCIAL	Tolima	312 257 67 91	wfranco@auteco.com.co
William De Jesus Gutierrez	ASESOR COMERCIAL	Meta	310 407 40 72	wgutierrez@auteco.com.co
Wilson Sabogal	ASESOR COMERCIAL	Bucaramanga y Area Metropolitana	300 542 85 48	wsabogal@auteco.com.co
Herica Linares Riaño	ASESOR COMERCIAL BAJAJ	Bogota	301 247 71 10	hlinares@auteco.com.co
Jorge Mario Gil	ASESOR COMERCIAL BAJAJ	Medellin	313 672 73 53	kgil@auteco.com.co
Jorge Mario Maya Velez	ASESOR COMERCIAL BAJAJ	Medellin	312 258 93 84	jmaya@auteco.com.co
Meryce Alejandra Cortazar P.	ASESOR COMERCIAL BAJAJ	Cali	320 732 97 60	mcortazar@auteco.com.co
Pilar Katherine Garcia Tique	ASESOR COMERCIAL BAJAJ	Bogota	300 541 93 34	pgarcia@auteco.com.co
Raul De Jesus Foronda	ASESOR COMERCIAL BAJAJ	Santa Marta	312 850 45 74	rforonda@auteco.com.co
Richard Andres Muñoz	ASESOR COMERCIAL BAJAJ	Popayan	321 799 79 26	rmunoz@auteco.com.co
Yeesander Guzman Garcia	ASESOR COMERCIAL BAJAJ	Barranquilla	300 542 64 59	yguzman@auteco.com.co
Daniel Becerra Martinez	ASESOR COMERCIAL BOUTIQUE	Cali	300 542 43 98	dbecerra@auteco.com.co
German Alfredo Vivas	ASESOR COMERCIAL BOUTIQUE	Bogota	321 799 79 30	gvivas@auteco.com.co
Franz Caballero Castro	DESARROLLADOR UN RPTOS Y ACCS	BARRANQUILLA	301 375 25 32	fcaballero@auteco.com.co
Gustavo Adolfo Corrales	DESARROLLADOR UN RPTOS Y ACCS	CALI	300 634 67 59	gcorrales@auteco.com.co
Jhon Jahiver Salamanca	DESARROLLADOR UN RPTOS Y ACCS	BOGOTA	300 542 87 56	jsalamanca@auteco.com.co
Oscar Alejandro Posada Villa	DESARROLLADOR UN RPTOS Y ACCS	ANTIOQUIA	314 811 04 09	aposada@auteco.com.co
Gilberto Eduardo Ocampo	GERENTE REGIONAL ZONA SUR	GERENTE REGIONAL ZONA SUR	311 382 85 14	eocampo@auteco.com.co
Jhon Alexander Estrada Bello	GERENTE REGIONAL ZONA NORTE	GERENTE REGIONAL ZONA NORTE	311 737 37 48	jestrada@auteco.com.co
Jose Giovanni Suarez Martinez	GERENTE REGIONAL ZONA CENTRO	GERENTE REGIONAL ZONA CENTRO	320 766 49 45	jsuarez@auteco.com.co
Juan Guillermo Ospina	GERENTE COMERCIAL BAJAJ		313 767 78 36	jgospina@auteco.com.co
Laura Ocampo	COORDINADORA ALTA GAMA		320 682 09 64	locampo@auteco.com.co

SERVICIO AL CLIENTE

LINEA UNICA DE SERVICIO AL CLIENTE CANAL (4) 444 81 90

UN DE REPUESTOS y ACCESORIOS • FAX OFICINAS: 373 03 75

ATENCIÓN EN:	NOMBRE	E-MAIL	TELÉFONO	FAX
SERVICIO A CONCESIONARIO Y MAYORISTAS	JHONATAN ZAPATA	servicioadistribuidoresymayoristas@auteco.com.co	(4) 444 81 90 OPCION (2)	
SERVICIO PAGO ANTICIPADO	DORIS CARMONA	serviciopagoanticipadorptos@auteco.com.co		(4) 373 83 94
COORDINADOR SERVICIO POSTVENTA	LUIS G. RODRIGUEZ	lrodriguez@auteco.com.co		
GARANTÍAS	ALEJANDRO FERNÁNDEZ	garantias2@auteco.com.co		
DEVOLUCIONES - RECLAMOS	WILMAR BEDOYA	devolucionesyreclamos@auteco.com.co		
MOTO FUERA DE RUTA	JONI HOLGUIN	motofueraderuta@auteco.com.co		
LÍNEA DE ATENCIÓN AL CLIENTE				
POSCONSUMO BATERIAS	YUDY DUQUE	yduque@auteco.com.co	3004243097	
CARTERA		cartera@auteco.com.co		(4) 277 5117
				(4) 306 81 54
VENTA MOTOS		pedidosmotos@auteco.com.co		(4) 372 62 95

AUTOTECNICA COLOMBIANA S.A.S (AUTECO S.A.S) SEDE PRINCIPAL Cra. 42 N° 45-77 Itagüí Ant. - PBX: (4)306 81 81
Atención a clientes finales: LINEA GRATUITA NACIONAL - 01 8000 52 00 90

ÍNDICE

FIGURA Nº	DESCRIPCIÓN	PÁG. Nº	FIGURA Nº	DESCRIPCIÓN	PÁG. Nº
1	TAPA CULATA	1	31	LLANTAS / RINES	35
2	CULATA	2	32	RUEDA DELANTERA	36
3	VÁLVULAS	3	33	BOMBA FRENO DELANTERO	37
4	EJE DE LEVAS / TENSOR CADENILLA	4	34	CALIPER DELANTERO	38
5	CILINDRO / PISTÓN	5	35	SISTEMA ANTIBLOQUEO DE FRENOS	39
6	CIGÜEÑAL	6	36	RUEDA TRASERA	40
7	TRANSMISIÓN	7 - 8	37	BOMBA FRENO TRASERO	41
8	SELECTOR DE CAMBIOS	9	38	PEDAL FRENO	42
9	EJE DE CAMBIOS	10	39	MANUBRIO	43 - 44
10	CARCASA DERECHA	11 - 12	40	SUSPENSIÓN DELANTERA	45 - 46
11	CARCASA IZQUIERDA	13	41	CUBIERTAS RADIADOR	47
12	BOMBA DE AGUA / BALANCEADOR	14	42	TANQUE DE GASOLINA	48
13	BOMBA DE ACEITE	15	43	BOMBA GASOLINA	49
14	RADIADOR	16 - 17	44	COMPLEMENTOS CUBIERTAS TANQUE GASOLINA	50
15	CUBIERTA CLUTCH	18	45	COMPLEMENTOS CUBIERTA SILLÍN / TAPA LATERAL	51
16	CUBIERTA VOLANTE	19	46	VELOCÍMETRO	52
17	CLUTCH	20	47	CABLES	53
18	SISTEMA INYECCIÓN	21	48	GUARDACADENA	54
19	FILTRO DE AIRE	22	49	CUBIERTA MOTOR	55
20	CANISTER	23	50	FAROLA / CARENAJE	56 - 57
21	SILENCIADOR	24	51	STOP	58
22	MOTOR DE ARRANQUE / PLATO DE BOBINAS	25	52	DIRECCIONALES	59
23	REGULADOR / BOBINAS	26	53	EQUIPO ELÉCTRICO PARTE Nº 1	60
24	SILLÍN	27	54	EQUIPO ELÉCTRICO PARTE Nº 2	61
25	SOPORTES DE MOTOR	28	55	HERRAMIENTAS / ACCESORIOS	62
26	CHASIS	29	56	CUBIERTAS	63
27	BRAZO OSCILANTE / AMORTIGUADOR	30	57	CALCOMANÍAS	64
28	REPOSAPIES	31 - 32		LISTA DE KITS	65
29	GUARDABARRO DELANTERO	33		ÍNDICE DE REFERENCIAS	66 - 71
30	GATO CENTRAL / GATO LATERAL	34			

ÍNDICE DE GRÁFICOS

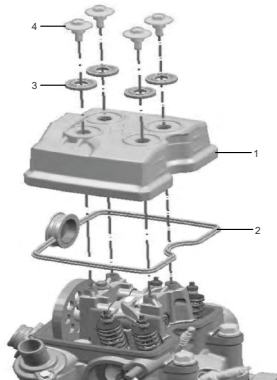


FIGURA N° 1: TAPA CULATA

PÁG. N°.
1

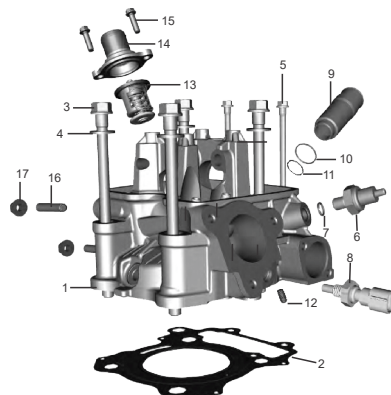


FIGURA N° 2: CULATA

PÁG. N°.
2

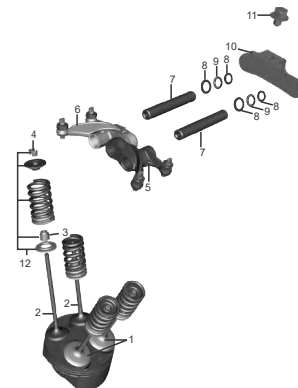


FIGURA N° 3: VÁLVULAS

PÁG. N°.
3

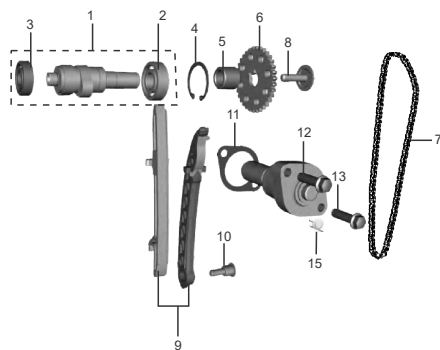


FIGURA N° 4: EJE DE LEVAS /
TENSOR CADENILLA

PÁG. N°.
4

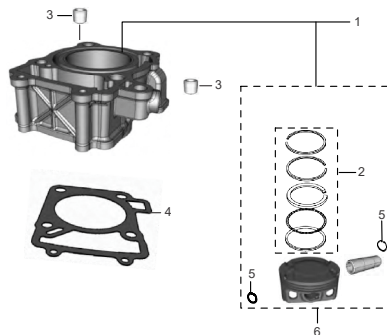


FIGURA N° 5: CILINDRO / PISTÓN

PÁG. N°.
5

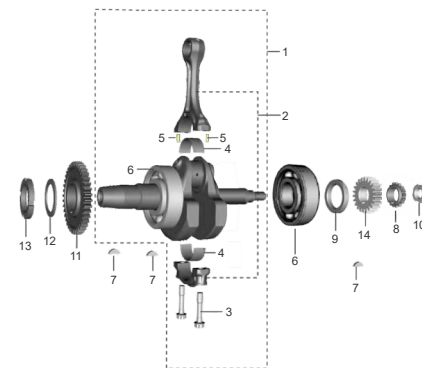


FIGURA N° 6: CIGÜEÑAL

PÁG. N°.
6

ÍNDICE DE GRÁFICOS

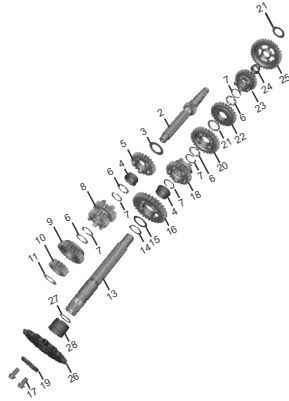


FIGURA N° 7: TRANSMISIÓN

PÁG. N°.
7 - 8

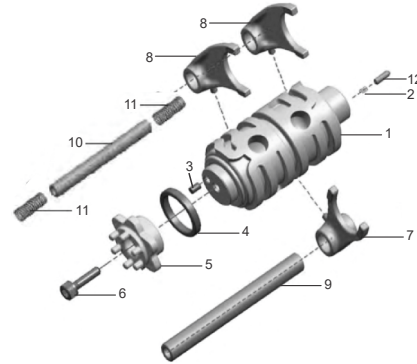


FIGURA N° 8: SELECTOR DE CAMBIOS

PÁG. N°.
9

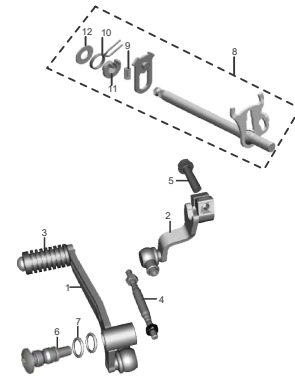


FIGURA N° 9: EJE DE CAMBIOS

PÁG. N°.
10

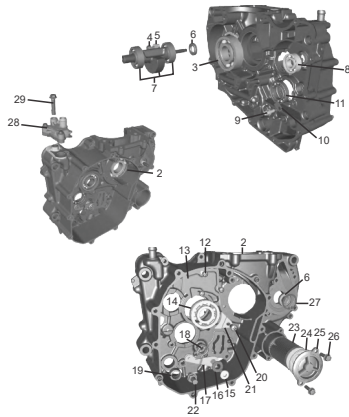


FIGURA N° 10: CARCASA DERECHA

PÁG. N°.
11 - 12


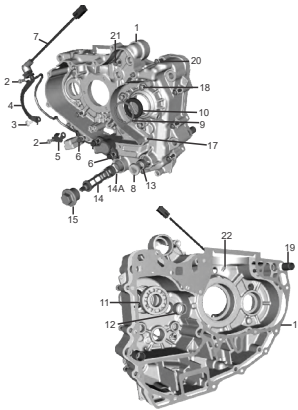


FIGURA N° 11: CARCASA IZQUIERDA

PÁG. N°.
13

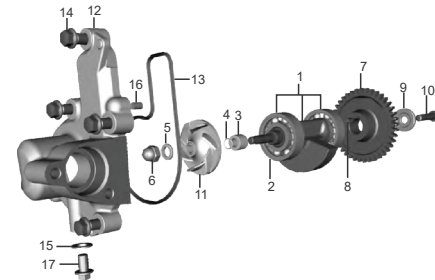

**FIGURA N° 12: BOMBA DE AGUA /
BALANCEADOR**

PÁG. N°.
14

ÍNDICE DE GRÁFICOS

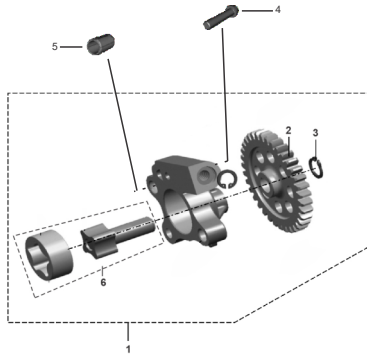


FIGURA N° 13: BOMBA DE ACEITE

PÁG. N°.
15

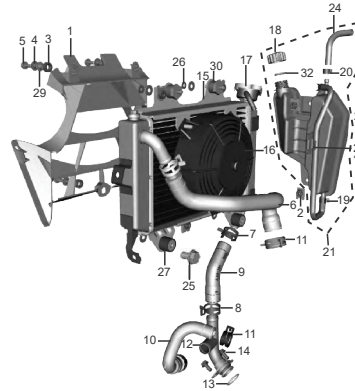


FIGURA N° 14: RADIADOR

PÁG. N°.
16 - 17

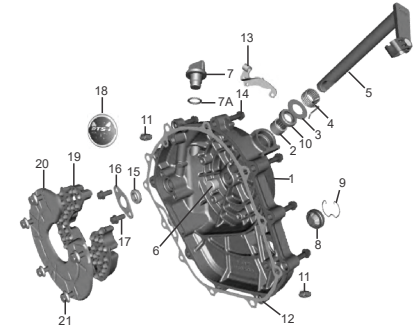


FIGURA N° 15: CUBIERTA CLUTCH

PÁG. N°.
18

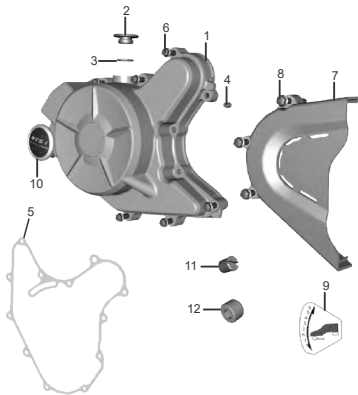


FIGURA N° 16: CUBIERTA VOLANTE

PÁG. N°.
19

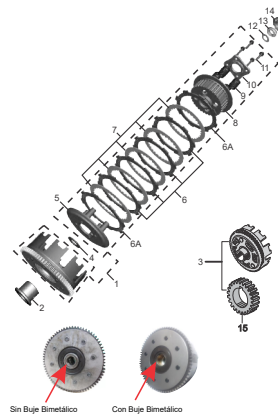


FIGURA N° 17: CLUTCH

PÁG. N°.
20

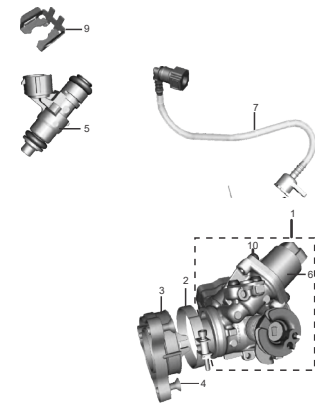


FIGURA N° 18: SISTEMA INYECCIÓN

PÁG. N°.
21

ÍNDICE DE GRÁFICOS

FIGURA Nº 19: FILTRO DE AIRE	PÁG. Nº. 22	FIGURA Nº 20: CANISTER	PÁG. Nº. 23	FIGURA Nº 21: SILENCIADOR	PÁG. Nº. 24
FIGURA Nº 22: MOTOR DE ARRANQUE / PLATO DE BOBINAS	PÁG. Nº. 25	FIGURA Nº 23: REGULADOR / BOBINAS	PÁG. Nº. 26	FIGURA Nº 24: SILLÍN	PÁG. Nº. 27

ÍNDICE DE GRÁFICOS

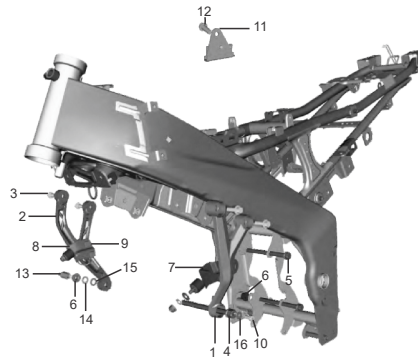


FIGURA N° 25: SOPORTES DE MOTOR

PÁG. N°.
28


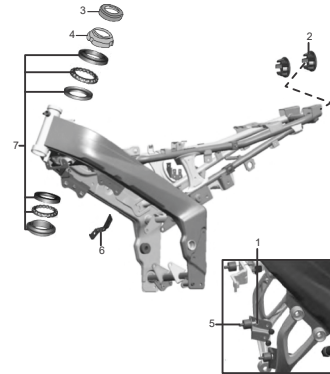


FIGURA N° 26: CHASIS

PÁG. N°.
29

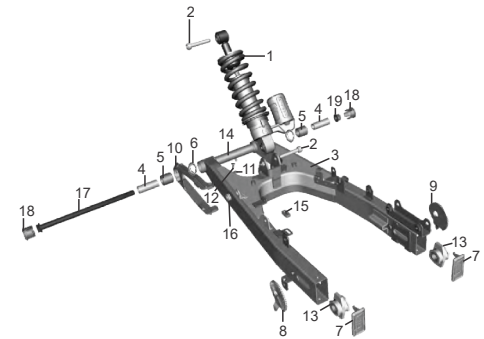

**FIGURA N° 27: BRAZO OSCILANTE /
AMORTIGUADOR**

PÁG. N°.
30

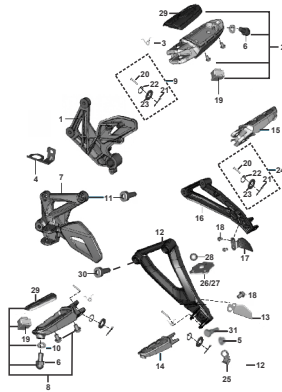


FIGURA N° 28: REPOSAPIES

PÁG. N°.
31 - 32


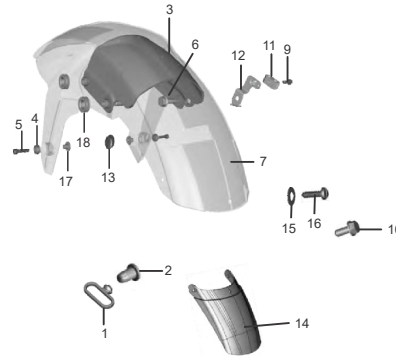


FIGURA N° 29: GUARDABARRO DELANTERO




PÁG. N°.
33

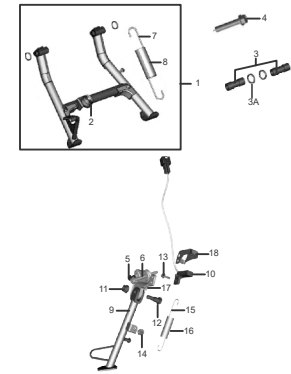

**FIGURA N° 30: GATO CENTRAL /
GATO LATERAL**

PÁG. N°.
34

ÍNDICE DE GRÁFICOS

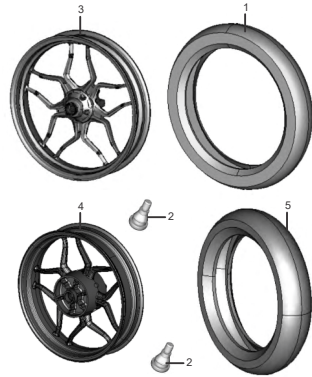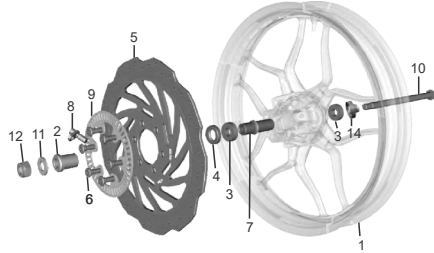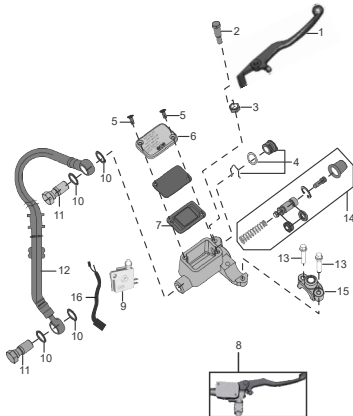					
FIGURA N° 31: LLANTAS / RINES	PÁG. N°. 35	FIGURA N° 32: RUEDA DELANTERA	PÁG. N°. 36	FIGURA N° 33: BOMBA FRENO DELANTERO	PÁG. N°. 37

ÍNDICE DE GRÁFICOS

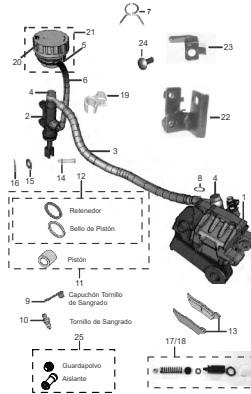


FIGURA N° 37: BOMBA FRENO TRASERO

PÁG. N°.
41

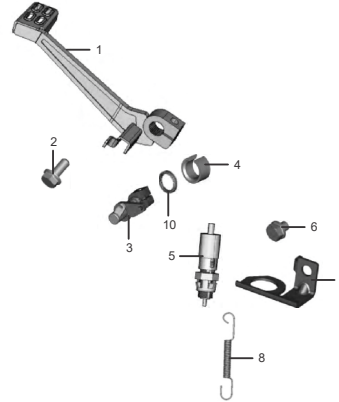


FIGURA N° 38: PEDAL FRENO

PÁG. N°.
42

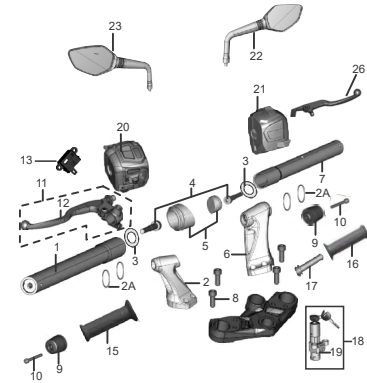


FIGURA N° 39: MANUBRIO

PÁG. N°.
43 - 44

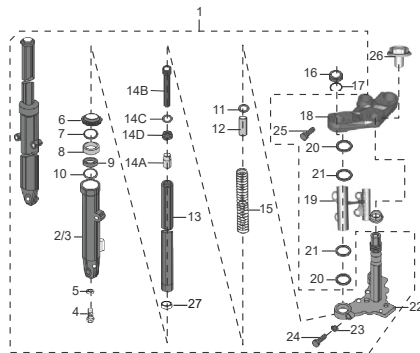


FIGURA N° 40: SUSPENSIÓN DELANTERA

PÁG. N°.
45 - 46

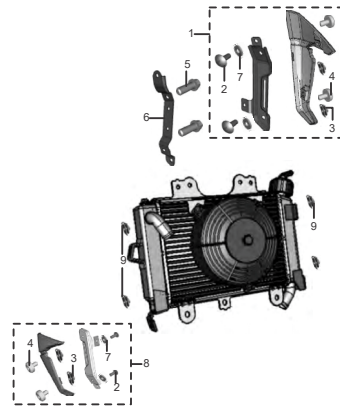


FIGURA N° 41: CUBIERTAS RADIADOR

PÁG. N°.
47

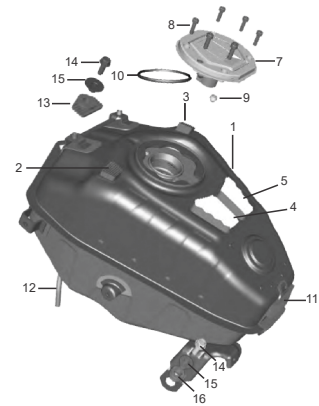


FIGURA N° 42: TANQUE DE GASOLINA

PÁG. N°.
48

ÍNDICE DE GRÁFICOS

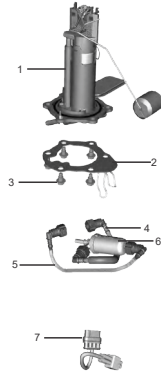


FIGURA N° 43: BOMBA GASOLINA

PÁG. N°.
49

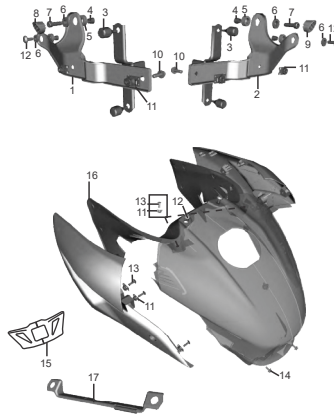


FIGURA N° 44: COMPLEMENTOS CUBIERTAS TANQUE GASOLINA

PÁG. N°.
50

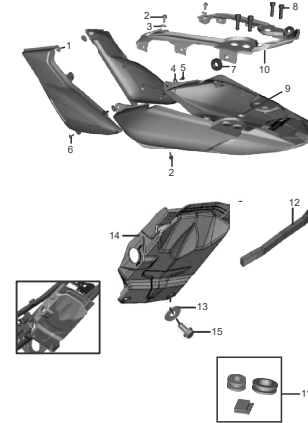


FIGURA N° 45: COMPLEMENTOS CUBIERTA SILLÍN / TAPA LATERAL

PÁG. N°.
51

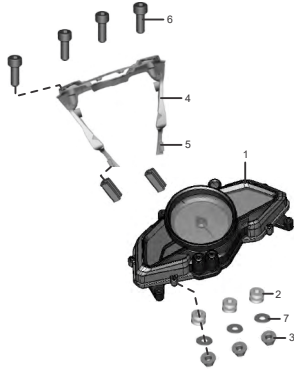


FIGURA N° 46: VELOCÍMETRO

PÁG. N°.
52



FIGURA N° 47: CABLES

PÁG. N°.
53

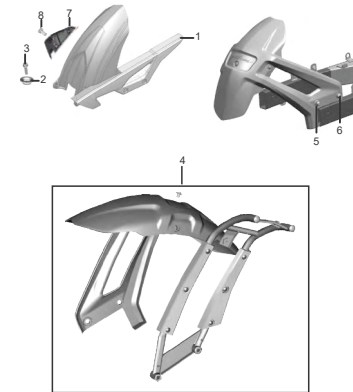


FIGURA N° 48: GUARDACADENA

PÁG. N°.
54

ÍNDICE DE GRÁFICOS

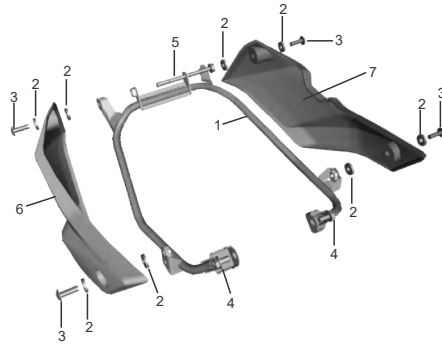


FIGURA N° 49: CUBIERTA MOTOR

**PÁG. N°.
55**

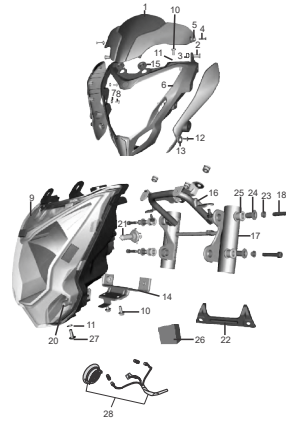


FIGURA N° 50: FAROLA / CARENAJE

**PÁG. N°.
56 - 57**

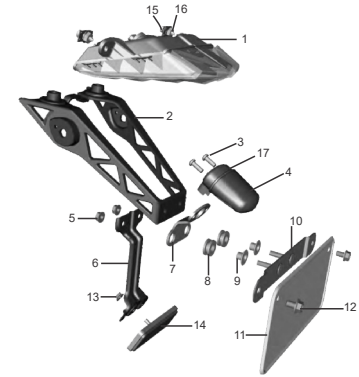


FIGURA N° 51: STOP

**PÁG. N°.
58**


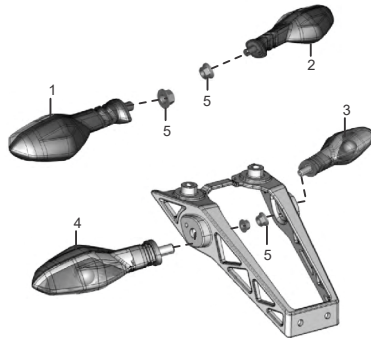



FIGURA N° 52: DIRECCIONALES

**PÁG. N°.
59**

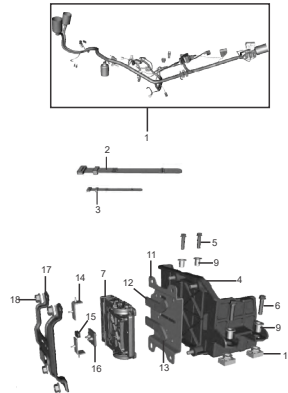

**FIGURA N° 53: EQUIPO ELÉCTRICO
PARTE N° 1**




**PÁG. N°.
60**

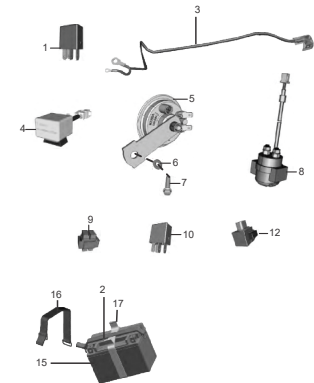

**FIGURA N° 54: EQUIPO ELÉCTRICO
PARTE N° 2**

**PÁG. N°.
61**

ÍNDICE DE GRÁFICOS

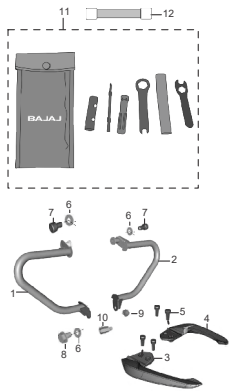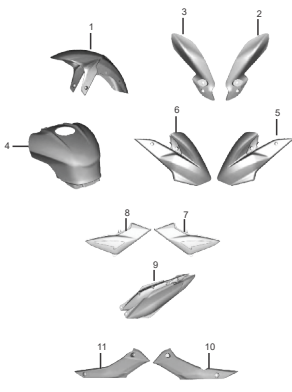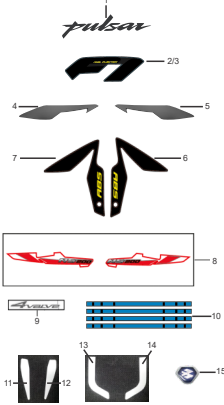					
FIGURA N° 55: HERRAMIENTAS / ACCESORIOS	PÁG. N°. 62	FIGURA N° 56: CUBIERTAS	PÁG. N°. 63	FIGURA N° 57: CALCOMANÍAS	PÁG. N°. 64

[illegible]

This diagram shows an exploded view of a mechanical assembly. The main component is a central block (1) with several vertical ports. A large circular gasket (2) is positioned below the main block. Various bolts, nuts, and pins are shown around the assembly, labeled with numbers 3 through 17. A complex assembly of components, including a cylindrical part (14) and a pin (15), is shown at the top. A long vertical pin (5) is shown to the right of the main block. A cylindrical component (9) and two O-rings (10, 11) are also shown. A small pin (7) is located near the bottom right of the main block. A small pin (12) is shown below the main block. A small pin (16) and a small pin (17) are shown to the left of the main block. A small pin (6) is shown to the right of the main block. A small pin (8) is shown below the main block. A small pin (13) is shown above the main block. A small pin (4) is shown to the left of the main block. A small pin (3) is shown to the left of the main block. A small pin (1) is shown to the left of the main block. A small pin (2) is shown to the left of the main block. A small pin (5) is shown to the right of the main block. A small pin (6) is shown to the right of the main block. A small pin (7) is shown to the right of the main block. A small pin (8) is shown to the right of the main block. A small pin (9) is shown to the right of the main block. A small pin (10) is shown to the right of the main block. A small pin (11) is shown to the right of the main block. A small pin (12) is shown to the right of the main block. A small pin (13) is shown to the right of the main block. A small pin (14) is shown to the right of the main block. A small pin (15) is shown to the right of the main block. A small pin (16) is shown to the right of the main block. A small pin (17) is shown to the right of the main block.

pulsar
NS 200
FI

[illegible]

pulsar
NS 200
FI

This diagram illustrates the exploded view of a mechanical assembly, with components numbered 1 through 15. The components are as follows:

- 1**: A central shaft or axle.
- 2**: A flange or end plate on the right side of the shaft.
- 3**: A small circular component, possibly a seal or washer, on the left side of the shaft.
- 4**: A small ring or O-ring.
- 5**: A small cylindrical component.
- 6**: A gear or sprocket.
- 7**: A long, flexible chain.
- 8**: A small pin or bolt.
- 9**: A long, thin plate or bracket.
- 10**: A small screw or bolt.
- 11**: A bracket or support arm.
- 12**: A main housing or frame component.
- 13**: A pin or bolt.
- 14**: A small washer or spacer.
- 15**: A small screw or bolt.

The assembly is shown in an exploded view, with components 1, 2, and 3 grouped together in a dashed box. The chain (7) is shown as a separate component, and the main housing (12) is shown with various mounting points for the other components.

pulsar
NS 200
FI

This diagram illustrates the assembly of a cylinder head. The main components are labeled as follows:

- 1**: The main cylinder head casting, shown in an exploded view with a gasket (4) and a pin (3).
- 2**: A set of four piston rings, shown in a dashed box.
- 3**: A small cylindrical pin or bolt, shown in two locations.
- 4**: A gasket, shown in an exploded view.
- 5**: Two small circular components, likely O-rings or seals, shown in an exploded view.
- 6**: A small cylindrical component, likely a pin or bolt, shown in an exploded view.

pulsar
NS200
PI

pulsar
NS 200
FI

[illegible]

FIGURA N° 7: TRANSMISIÓN (1/2)

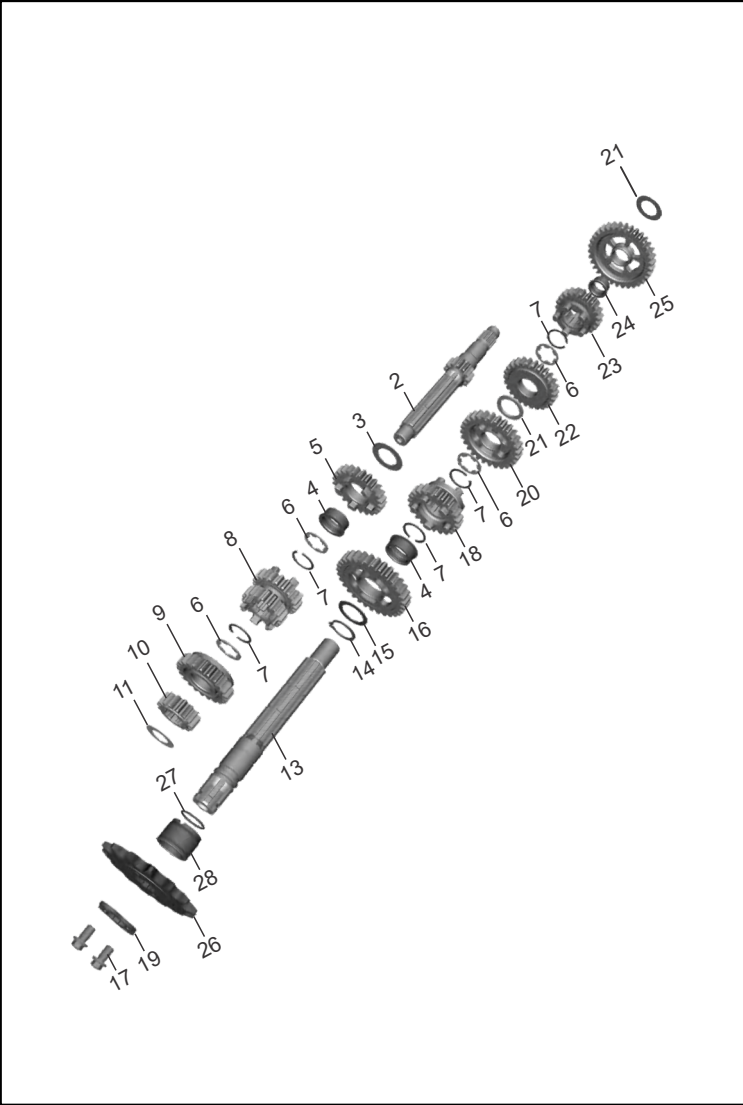


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JG551028	Eje Clutch Completo	1	No Ilustrado
2	JG551027	Eje Clutch	1	
3	39215811	Arandela	1	
4	JG551013	Buje Caja	2	
5	JG551213	Piñón de 6A. (24T)	1	
6	JG551020	Arandela	4	
7	BF551037	Pin de Seguridad	4	
8	JG551214	Piñón Múltiple de 3A & 4A (18/21T)	1	
9	JG551220	Piñón de 5A. (22T)	1	
10	JG551227	Piñón de 2A. (15T)	1	
11	JG551022	Arandela	1	
12	JG551026	Eje Piñón Salida Completo	1	No Ilustrado
13	JG551025	Eje Piñón Salida	1	
14	DH101235	Pin de Seguridad	1	
15	39215911	Arandela	1	
16	JG551228	Piñón de 2A. (31T)	1	
17	LAE00017	Tornillo 6x1x10	2	
18	JG551222	Piñón de 5A. (23T)	1	
19	DJ101312	Arandela Piñón Salida	1	
20	JG551223	Piñón de 3A. (28T)	1	
21	JG551021	Arandela	2	
22	JG551215	Piñón de 4A. (26T)	1	
23	JG551224	Piñón de 6A. (22T)	1	
24	JG551000	Buje Caja	1	
25	JG551225	Piñón de 1A. (34T)	1	

An exploded view diagram of a mechanical assembly, likely a hydraulic cylinder or actuator. The components are numbered 1 through 12. The central component is a large, cylindrical body (1) with multiple ports. To its left is a long, threaded rod (10) with a nut (11) and a cap (12). Below the rod is a small, cylindrical component (6) with a flange (5). To the right of the central body is a long, threaded rod (9) with a nut (7) and a cap (8). A small, cylindrical component (3) is shown near the central body, and a small, cylindrical component (4) is shown near the rod (9). A small, cylindrical component (2) is shown near the cap (12). Dashed lines indicate the assembly path for each component.

pulsar
NS 200
PI

This diagram shows an exploded view of a rear suspension assembly. The components are numbered as follows:

- 1**: Lower control arm
- 2**: Upper control arm
- 3**: Coil spring
- 4**: Shock absorber
- 5**: Upper control arm bolt
- 6**: Lower control arm ball joint
- 7**: Lower control arm bushings
- 8**: Rear axle assembly
- 9**: Axle pin
- 10**: Axle pin bushings
- 11**: Axle pin nut
- 12**: Axle pin washer

pulsar
NS 200
FI

FIGURA N° 10: CARCASA DERECHA (1/2)

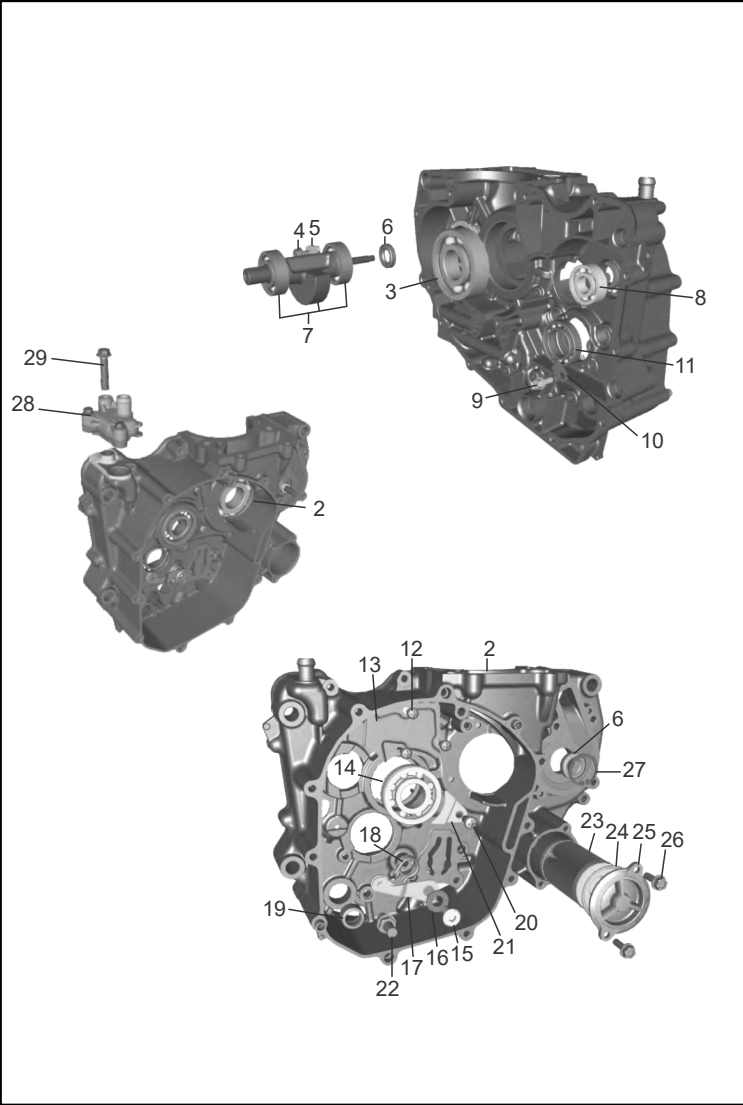


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JL501078	Motor Completo	1	No Ilustrado
2	36DT0078	Carcasa Derecha	1	
3	39193120	Rodamiento Bolas 28x68x18	1	
4	LAD00077	Tornillo 6x16	1	
5	JG541046	Platina Tope	1	
6	JL601010	Reten	1	
7	JL531205	Balanceador	1	
8	39260220	Rodamiento Bolas 6202	1	
9	AA101437	Tornillo 6x12	1	
10	JG541059	Platina Tope	1	
11	39260120	Rodamiento Bolas 61905	1	
12	LBB00006	Tornillo 5x0.8x10	3	
13	JU541005	Platina Carcasa	1	
14	59200028	Rodamiento Bolas 6204	1	
15	JG561204	Tornillo	1	
16	JG561205	Arandela	1	
17	JG561009	Leva	1	
18	JG561226	Resorte	1	
19	39256220	Rodamiento Aguja 13x19x12	1	
20	39074601	Tornillo 6 mm.	1	
21	JG541045	Platina Tope	1	
22	DP101191	Tornillo 8x1.25x15.5	1	
23	JG571014	Filtro Aceite	1	
24	JG571016	Anillo Retenedor	1	
25	JL571001	Tapa Filtro Aceite	1	

This exploded view diagram illustrates the assembly of a mechanical component, likely a pump or motor housing. The main housing is shown in the center, with various internal and external parts labeled with numbers 1 through 29. The components include:

- 1**: A small circular component, possibly a seal or gasket, located near the top center.
- 2**: A large, complex housing or casing, shown in two orientations (top and bottom views).
- 3**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 4**: A small, cylindrical component, possibly a pin or a small shaft, located near the top left.
- 5**: A small, cylindrical component, possibly a pin or a small shaft, located near the top left.
- 6**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 7**: A small, cylindrical component, possibly a pin or a small shaft, located near the top left.
- 8**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 9**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 10**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 11**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 12**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 13**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 14**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 15**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 16**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 17**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 18**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 19**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 20**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 21**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 22**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 23**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 24**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 25**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 26**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 27**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 28**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.
- 29**: A small, cylindrical component, possibly a pin or a small shaft, located near the top right.

pulsar
NS 200
FI

FIGURA N° 11: CARCASA IZQUIERDA

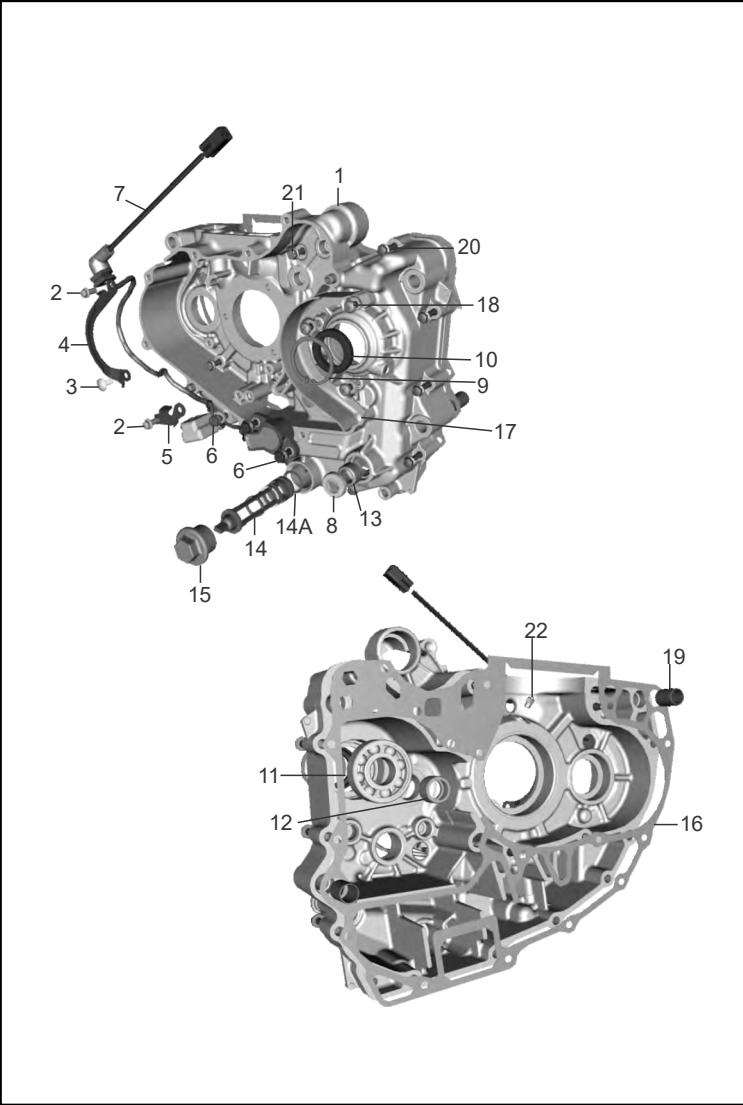


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	36DT0080	Carcasa Izquierda	1	
2	LAE00014	Tornillo 5x10	2	
3	DH101381	Tornillo 5x10	1	
4	JG541063	Platina Swiche Neutra Superior	1	
5	JG541044	Platina Swiche Neutra Inferior	1	
6	39177304	Tornillo 5x16	4	
7	JL351802	Swiche Neutra	1	
8	39104319	Reten	1	
9	KEBA3715	Pin de Seguridad	1	
10	DG101456	Retén	1	
11	59200006	Rodamiento Bolas	1	
12	JG541015	Rodamiento Agujas HK1514	1	
13	39256220	Rodamiento Agujas 13x19x12	1	
14	JY571030	Cedazo Filtro Aceite	1	
14A	LJA00004	Anillo Retenedor	1	
15	JA541048	Tapón Carcasa	1	
16	JG541041	Empaque Carcasa	1	
17	JG541058	Protector Cadena	1	
18	KBBG0612	Tornillo	3	
19	39218106	Pin Guía 14x20	4	
20	KADQ0640	Tornillo	10	
21	LAD00081	Tornillo 6x1x60	4	
22	JG541074	Inyector Aceite	1	

This diagram shows an exploded view of a mechanical assembly. The components are numbered 1 through 17. The assembly includes a main housing (1), a large gear (7), a smaller gear (8), a pinion (9), and a shaft (10). A bracket (1) is shown holding the main housing (1) and the large gear (7). A pin (4) and a nut (3) are shown near the main housing. A spring (15) and a pin (17) are shown near the bottom of the main housing. A bracket (13) is shown holding a pin (16) and a nut (5). A pin (6) is shown near the bottom of the main housing. A pin (11) is shown near the bottom of the main housing. A pin (12) and a nut (14) are shown near the top of the main housing.

pulsar
NS 200
FI

An exploded view diagram of a mechanical assembly. The components are numbered 1 through 6. Part 1 is a large, complex metal housing or bracket. Part 2 is a gear wheel. Part 3 is a small ring or washer. Part 4 is a long bolt. Part 5 is a short bolt. Part 6 is a cylindrical component with a flange. The diagram shows the relative positions of these parts as they would be assembled. A dashed line indicates the assembly path for parts 2, 3, and 4 into part 1. Another dashed line indicates the assembly path for part 6 into part 1. A third dashed line indicates the assembly path for part 5 into part 1.

pulsar
NS200
PI

FIGURA N° 14: RADIADOR (1/2)

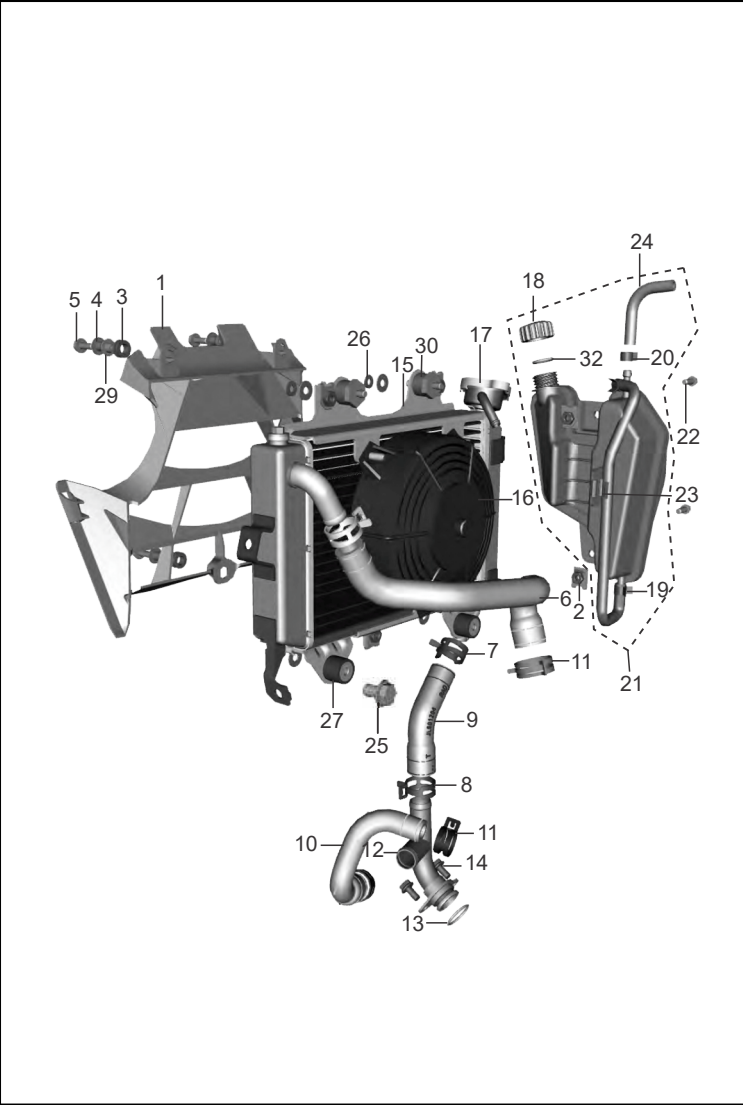


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JL601210	Cubierta Radiador	1	
2	DJ181065	Tuerca 6 mm.	5	
3	JL181256	Antivibrante	3	
4	JL601231	Buje	3	
5	KADA0616	Tornillo 6x16	3	
6	JL601000	Manguera (Termostato-Radiador)	1	
7	JG601234	Abrazadera	2	
8	JG601209	Abrazadera	2	
9	JL601220	Manguera (Radiador-Tubo T)	1	
10	JL601219	Manguera (Tubo T-Bomba)	1	
11	JL601212	Abrazadera	1	
12	JL601228	Tubo T	1	
13	LJA00005	Anillo Retenedor	1	
14	LAE00041	Tornillo 6x1x14	2	
15	JL601234	Radiador (Solo)	1	
16	JY601235	Ventilador Radiador	1	
17	JG601235	Tapa Radiador	1	
18	JG601211	Tapa Tanque Liquido Refrigerante	1	
19	JL601215	Abrazadera	2	
20	JG171029	Abrazadera 11.5x8.4	3	
21	JL601235	Tanque Liquido Refrigerante	1	
22	KADF0616	Tornillo 6x16	2	
23	JL601227	Manguera Tanque Liquido Refrigerante	1	
24	JL601214	Manguera Tanque Liquido Refrigerante	1	
25	LAD00040	Tornillo 6x6	3	

This exploded view diagram illustrates the assembly of a 2-stroke engine. The components are numbered as follows:

- 1**: Main engine block/cylinder assembly.
- 2**: Small O-ring or seal.
- 3**: Small screw or pin.
- 4**: Small screw or pin.
- 5**: Small screw or pin.
- 6**: Small O-ring or seal.
- 7**: Small O-ring or seal.
- 8**: Clutch lever/pedal.
- 9**: Clutch cable.
- 10**: Clutch housing/bell housing.
- 11**: Clutch spring.
- 12**: Clutch pin.
- 13**: Clutch shoe.
- 14**: Clutch pin.
- 15**: Small screw or pin.
- 16**: Piston/crank assembly.
- 17**: Piston pin.
- 18**: Piston pin.
- 19**: Piston pin.
- 20**: Piston pin.
- 21**: Piston pin.
- 22**: Piston pin.
- 23**: Piston pin.
- 24**: Piston pin.
- 25**: Small screw or pin.
- 26**: Small screw or pin.
- 27**: Small screw or pin.
- 28**: Small screw or pin.
- 29**: Small screw or pin.
- 30**: Small screw or pin.
- 31**: Small screw or pin.
- 32**: Small screw or pin.

pulsar
NS 200
FI

FIGURA N° 15: CUBIERTA CLUTCH

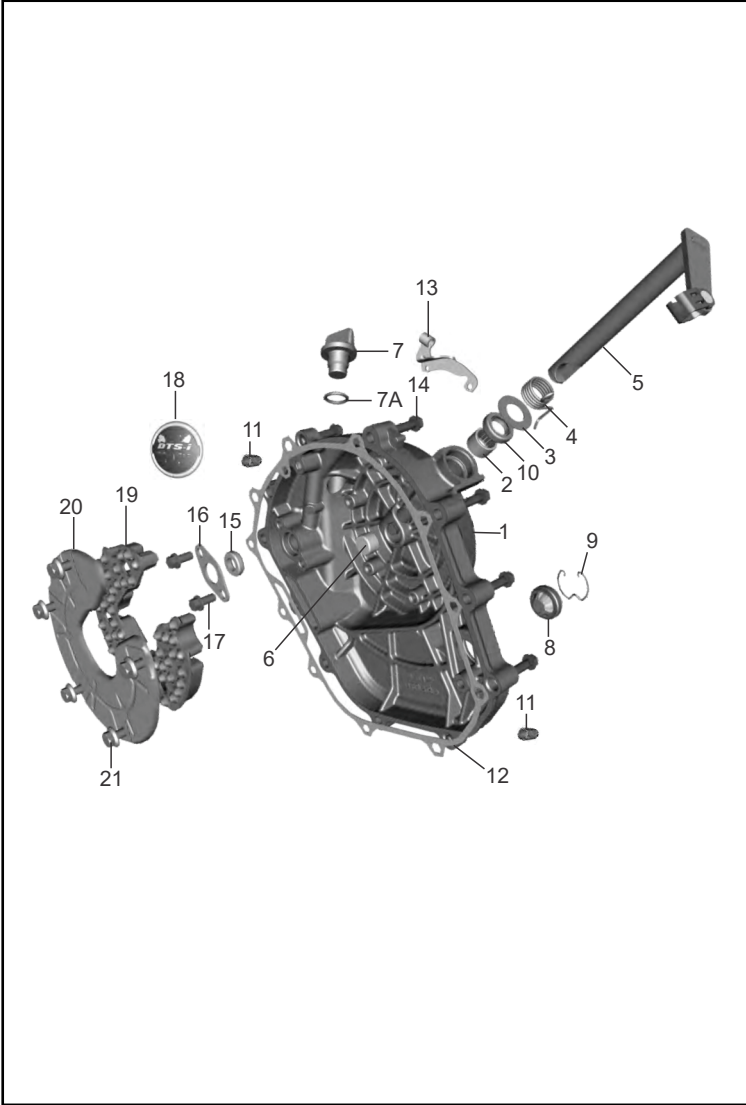


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	52JL0892	Cubierta Clutch	1	
2	39199020	Rodamiento Agujas	1	
3	LDB00020	Arandela 12.5x24x0.8	1	
4	JG551017	Resorte Eje Interno Clutch	1	
5	JG551015	Eje Interno Clutch	1	
6	JU551401	Empujador Clutch	1	
7	JG541230	Tapón Aceite	1	
7A	39153721	Anillo Retenedor	1	
8	JL541227	Visor Nivel Aceite	1	
9	DS101215	Pin de Seguridad	1	
10	39104119	Reten Eje Interno Clutch	1	
11	39099906	Pin Guía	2	
12	JL541207	Empaque Cubierta Clutch	1	
13	DT541018	Soporte Cable Clutch	1	
14	KADQ0630	Tornillo	11	
15	39104619	Reten	1	
16	JG541231	Arandela	1	
17	AA101437	Tornillo 6x12	2	
18	JL541222	Calcomanía Cubierta Clutch	1	
19	JL541230	Antivibrante Cubierta Clutch	1	
20	JL541231	Platina Cubierta Clutch	1	
21	DH101388	Tornillo 5x10	5	

This exploded view diagram illustrates the assembly of a mechanical component. The main housing (1) features a circular fan-like structure on the left and a mounting bracket on the right. A pressure gauge (10) is shown attached to the left side. The mounting bracket (7) is designed to be secured to a surface using two screws (8). A gasket (5) is positioned to seal the bottom of the housing. Two additional components, 11 and 12, are shown as separate parts. A warning icon (9) indicates a specific orientation or caution for part 9, showing a curved arrow and a small diagram of the part.

pulsar
NS 200
PI

Exploded view diagram of a mechanical assembly. The main assembly consists of a central spring (6) with a gear (5) at one end and a lever arm (8) at the other. Various bolts (9, 10, 11, 12, 13, 14) and a nut (15) are shown. Two circular components (3 and 4) are shown separately. Below the main diagram, two circular components are shown side-by-side, labeled "Sin Buje Bimetálico" and "Con Buje Bimetálico".

pulsar
NS 200
EL

This diagram shows the exploded view of a hydraulic pump assembly. The components are numbered as follows:

- 1**: Main pump housing
- 2**: Flange
- 3**: Flange gasket
- 4**: Flange bolt
- 5**: Drive shaft
- 6**: Drive shaft seal
- 7**: Hydraulic hose
- 8**: Hose end fitting
- 9**: Hose end fitting
- 10**: Drive shaft seal

pulsar
NS 200
FI

This exploded view diagram illustrates the assembly of a vacuum cleaner's motor unit and dust container. The components are numbered as follows:

- 1**: Motor unit housing (top section).
- 2**: Flexible, ribbed suction tube.
- 3**: Motor unit housing (bottom section).
- 4**: Two white, rectangular filter panels.
- 5**: Black, rectangular filter housing.
- 7**: A sub-assembly including a curved elbow pipe (**15**) and a circular base plate (**8**).
- 9**: A small screw or pin used for assembly.
- 11**: A curved elbow pipe.
- 12**: A small screw or pin.
- 13**: A screw used to secure the motor unit housing.
- 14**: A screw used to secure the motor unit housing.
- 16**: A sub-assembly including a curved elbow pipe (**11**) and a small circular component (**12**).

pulsar
NS 200
EL

pulsar
NS 200
FI

This diagram illustrates the assembly of a manual sprayer pump. The main components are labeled as follows:

- 1**: Main pump body
- 2**: Spray lance
- 3**: Spray lance connector
- 4**: Spray lance tip
- 5**: Foam sprayer nozzle
- 6**: Trigger gun
- 7**: Trigger gun connector
- 8**: Trigger gun handle
- 9**: Foam sprayer nozzle cap
- 10**: Trigger gun tip
- 11**: Trigger gun tip connector
- 12**: Trigger gun tip
- 13**: Trigger gun tip cap

pulsar
NS 200
PI

This exploded view diagram illustrates the assembly of a mechanical unit. The components are numbered as follows:

- 1**: Motor unit
- 2**: Small gear
- 3**: Intermediate gear
- 4**: Large gear with mounting holes
- 5**: Pin/bush
- 6**: Ring gear
- 7**: Pin/bush
- 8**: Pin/bush
- 9**: Pin/bush
- 10**: Pin/bush
- 11**: Pin/bush
- 12**: Main housing/casing
- 13**: Lever arm assembly
- 14**: Pin/bush
- 15**: Small pin/bush
- 16**: Pin/bush
- 17**: Small ring gear

pulsar
NS 200
FI

FIGURA N° 23: REGULADOR / BOBINAS

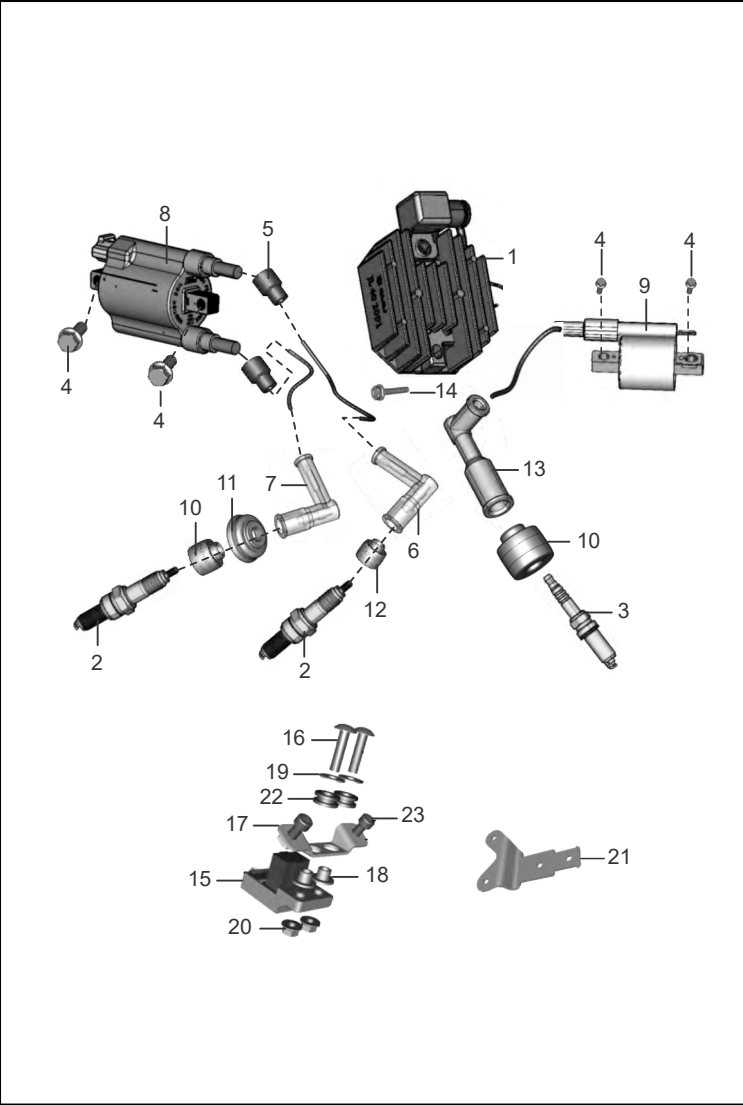


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JL402003	Regulador	1	
2	DK111028	Bujía RG6HCC	2	
3	JL351218	Bujía Bosch Central	1	
4	39194404	Tornillo	4	
5	DD111012	Antivibrante Capuchón Bujía	2	
6	JD351207	Capuchón Bujía	1	
7	AN111015	Capuchón Bujía	1	
8	JL351252	Bobina de Alta Izquierda	1	
9	JL351250	Bobina de Alta Derecha	1	
10	DH111013	Antivibrante Capuchón Bujía	2	
11	DH111016	Antivibrante Capuchón Bujía	1	
12	DD111011	Antivibrante Capuchón Bujía	1	
13	DK111011	Capuchón Bujía	1	
14	KADA0630	Tornillo 6x30	2	
15	JY403604	Sensor	1	
16	KBUC0625	Tornillo 6x1x25	2	
17	JF113842	Soporte Sensor	1	
18	DT113806	Buje	2	
19	39023911	Arandela	2	
20	39197215	Tuerca 5 mm.	2	
21	JL113836	Soporte C.D.I.	1	
22	JL181256	Antivibrante	2	
23	KACA0612	Tornillo 6x12	2	

pulsar
NS 200
FI

This diagram shows an exploded view of a motorcycle engine and chassis assembly. The components are numbered as follows:

- 1: Engine block
- 2: Upper engine bracket
- 3: Upper engine bracket pin
- 4: Lower engine bracket
- 5: Lower engine bracket pin
- 6: Lower engine bracket pin
- 7: Lower engine bracket pin
- 8: Lower engine bracket pin
- 9: Lower engine bracket pin
- 10: Lower engine bracket pin
- 11: Lower engine bracket pin
- 12: Lower engine bracket pin
- 13: Lower engine bracket pin
- 14: Lower engine bracket pin
- 15: Lower engine bracket pin
- 16: Lower engine bracket pin

pulsar
NS 200
PI

This diagram illustrates the assembly of a motorcycle swingarm. The main assembly is shown in a perspective view. Numbered callouts identify the following components:

- 1:** A small black plastic component, likely a pivot pin or bush, located at the top of the swingarm.
- 2:** Two black plastic components, likely pivot pins or bush, located at the rear of the swingarm.
- 3:** A black O-ring or seal.
- 4:** A black O-ring or seal.
- 5:** A black plastic component, likely a pivot pin or bush, located at the bottom of the swingarm.
- 6:** A small black plastic component, likely a pivot pin or bush, located at the bottom of the swingarm.
- 7:** A series of four black O-rings or seals, stacked vertically on the left side of the swingarm.

pulsar
NS 200
FI

FIGURA N° 27: BRAZO OSCILANTE / AMORTIGUADOR

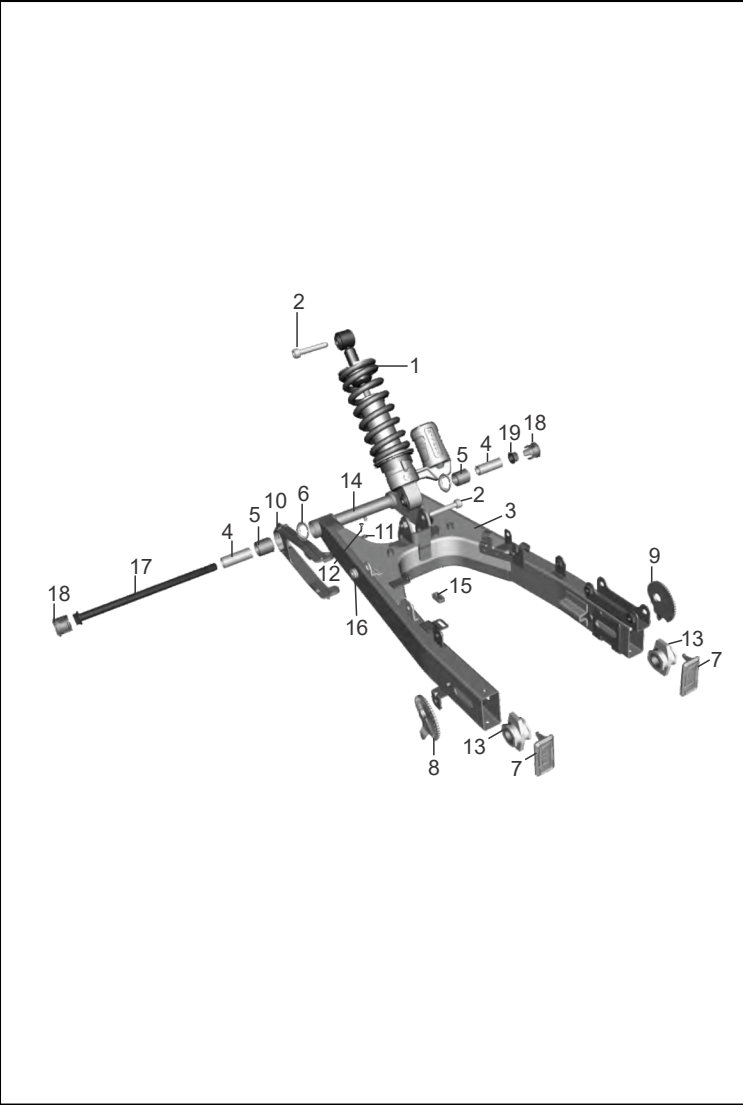


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JL122006	Amortiguador Trasero Mononitrox	1	
2	LAC00019	Tornillo 10x1.25x55	2	
3	JL122013	Brazo Oscilante	1	
4	DG171016	Buje	2	
5	DG171018	Rodamiento Agujas	2	
6	DG171019	Reten Brazo Oscilante	4	
7	JL122002	Platina Tensor Cadena	2	
8	JL122001	Tensor Cadena Izquierdo	1	
9	JL122009	Tensor Cadena Derecho	1	
10	JL122003	Protector Cadena	1	
11	39045411	Arandela	2	
12	39055302	Tornillo	2	
13	JL122004	Buje Tensor Cadena	2	
14	JL122008	Buje Brazo Oscilante	1	
15	JL181224	Antivibrante	1	
16	JL181225	Antivibrante	1	
17	JL122026	Pasador Brazo Oscilante	1	
18	DT113848	Tapón Brazo Oscilante	2	
19	39105315	Tuerca 14 mm.	1	

FIGURA N° 28: REPOSAPIES (1/2)

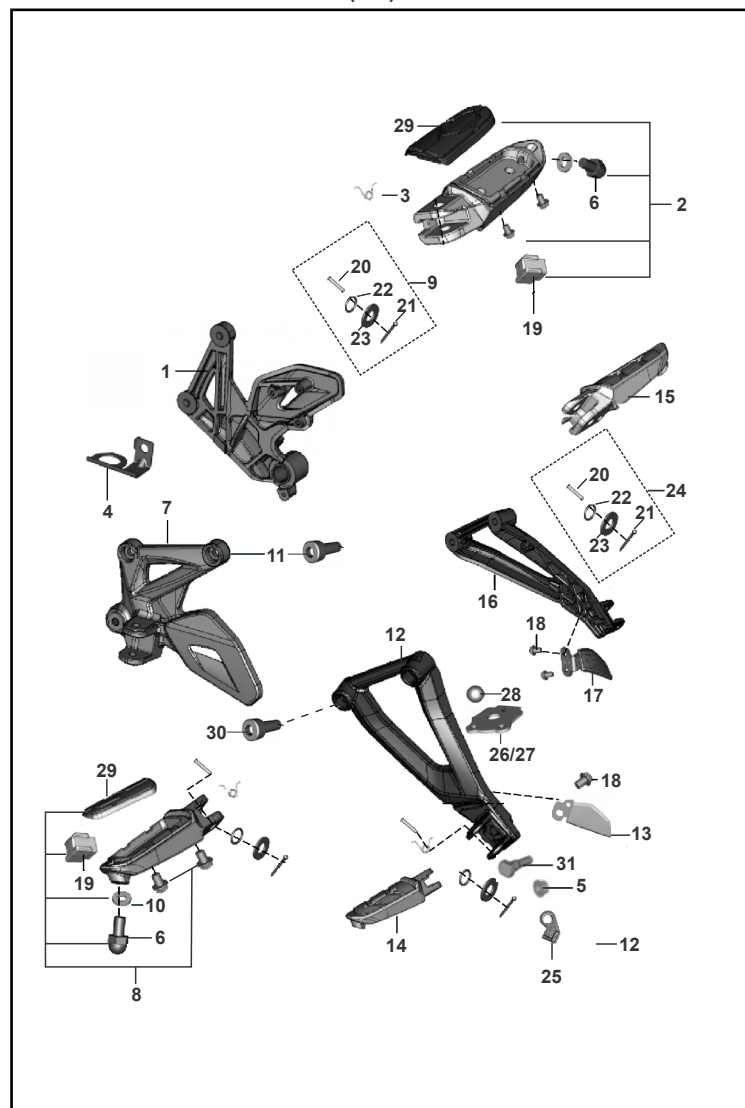


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JL113060	Soporte Reposapie Conductor Der.	1	
2	52JL1035	Reposapie Conductor Derecho	1	
3	JL113012	Resorte	1	
4	JL113033	Platina Soporte Swiche Stop	1	
5	39105515	Tuerca 10 mm.	1	
6	DG161144	Tornillo Reposapie Conductor	2	
7	56JL3X1Y	Soporte Reposapie Conductor Izq.	1	
8	52JL1024	Reposapie Conductor Izquierdo	1	
9	36JL0041	Kit Pines Reposapie Conductor	2	Ref. Pág. N° 65
10	LDA00013	Arandela	2	
11	LAC00045	Tornillo 8x1.25x20	4	
12	56JL4J1Y	Soporte Reposapie Pasajero Izq.	1	
13	56JL4L1Y	Protector Reposapie Pasajero Izq.	1	
14	56JF181Y	Reposapie Pasajero Izquierdo	1	
15	56JF191Y	Reposapie Pasajero Derecho	1	
16	56JL4K1Y	Soporte Reposapie Pasajero Der.	4	
17	56JL4M1Y	Protector Reposapie Pasajero Der.	1	
18	KAET0610	Tornillo	3	
19	JZ113061	Antivibrante Reposapie Conductor	2	
20	JD113019	Pin Pasador	2	
21	39078408	Pin	4	
22	30141031	Anillo Retenedor	4	
23	39104011	Arandela	4	
24	36JL0015	Kit Pines Reposapie Pasajero	2	Ref. Pág. N° 65
25	JL113036	Antivibrante Reposapie Pasajero	2	

This exploded view diagram illustrates the assembly of a mechanical component, likely a bracket or arm. The parts are numbered 1 through 31. The diagram shows the following components and their assembly relationships:

- Part 1:** A large, complex bracket or arm.
- Part 2:** A sub-assembly consisting of parts 29, 3, 6, and 19.
- Part 3:** A small pin or screw.
- Part 4:** A small bracket or flange.
- Part 5:** A small pin or screw.
- Part 6:** A small bush or spacer.
- Part 7:** A bracket or arm.
- Part 8:** A sub-assembly consisting of parts 19, 10, and 6.
- Part 9:** A sub-assembly consisting of parts 20, 22, 21, and 23.
- Part 10:** A small bush or spacer.
- Part 11:** A small pin or screw.
- Part 12:** A sub-assembly consisting of parts 18, 13, 31, 5, and 25.
- Part 13:** A bracket or arm.
- Part 14:** A bracket or arm.
- Part 15:** A bracket or arm.
- Part 16:** A bracket or arm.
- Part 17:** A small bracket or flange.
- Part 18:** A small pin or screw.
- Part 19:** A small bracket or flange.
- Part 20:** A small pin or screw.
- Part 21:** A small pin or screw.
- Part 22:** A small pin or screw.
- Part 23:** A small pin or screw.
- Part 24:** A sub-assembly consisting of parts 20, 22, 21, and 23.
- Part 25:** A small pin or screw.
- Part 26/27:** A small bracket or flange.
- Part 28:** A small pin or screw.
- Part 29:** A small bracket or flange.
- Part 30:** A small pin or screw.
- Part 31:** A small pin or screw.

The diagram uses dashed lines to indicate the assembly path and alignment of the parts. A rectangular box highlights the sub-assembly consisting of parts 19, 10, and 6, which is labeled as part 8. Another rectangular box highlights the sub-assembly consisting of parts 20, 22, 21, and 23, which is labeled as part 9. A third rectangular box highlights the sub-assembly consisting of parts 20, 22, 21, and 23, which is labeled as part 24. A fourth rectangular box highlights the sub-assembly consisting of parts 18, 13, 31, 5, and 25, which is labeled as part 12.

pulsar
NS 200
FI

This diagram illustrates the exploded view of a motorcycle helmet assembly. The main components are labeled as follows:

- 1**: A metal D-ring connector.
- 2**: A small metal pin or bolt.
- 3**: The main outer shell of the helmet.
- 4**: A small metal pin or bolt.
- 5**: A small metal pin or bolt.
- 6**: A small metal pin or bolt.
- 7**: The main inner liner of the helmet.
- 8**: A small metal pin or bolt.
- 9**: A small metal pin or bolt.
- 10**: A small metal pin or bolt.
- 11**: A small metal pin or bolt.
- 12**: A small metal pin or bolt.
- 13**: A small metal pin or bolt.
- 14**: A curved metal piece, likely a chin strap attachment.
- 15**: A small metal pin or bolt.
- 16**: A small metal pin or bolt.
- 17**: A small metal pin or bolt.
- 18**: A small metal pin or bolt.

pulsar
NS 200
PI

FIGURA N° 30: GATO CENTRAL / GATO LATERAL

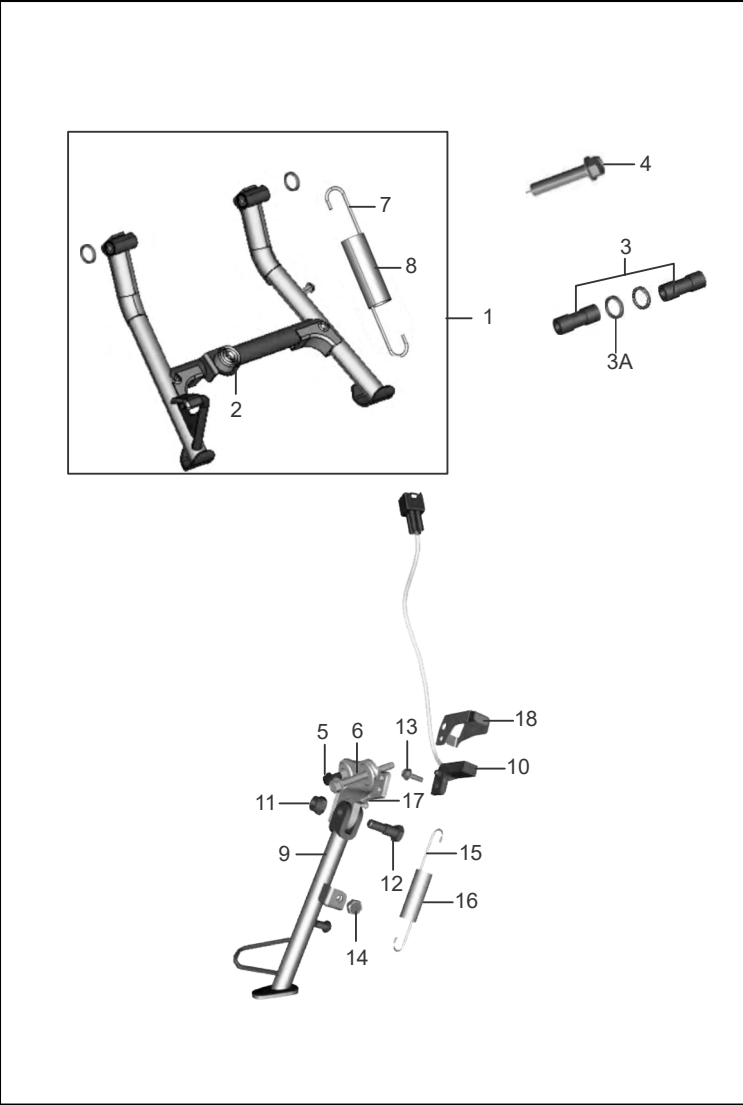


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	36JL0025	Gato Central	1	Opcional
	020243/00		1	Opcional (Integracion Nal)
2	DG161124	Antivibrante Gato Central	1	
3	JL113210	Buje	2	
3A	39101321	Anillo Retenedor	4	
4	LAD00135	Tornillo 8x1.25x70	1	
5	KADF0812	Tornillo 8x12	1	
6	LAD00134	Tornillo 8x1.25x60	1	
7	JL113207	Resorte Gato Central	1	
8	JL113212	Protector Resorte Gato Central	1	
9	JL113201	Gato Lateral	1	
10	JF401405	Swiche Gato Lateral	1	
11	39042215	Tuerca 10 mm.	1	
12	DF161102	Tornillo	1	
13	KADB0516	Tornillo 5x16	1	
14	JZ403601	Imán Swiche Gato Lateral	1	
15	JL113209	Resorte Gato Lateral	1	
16	DH161146	Protector Resorte Gato Lateral	1	
17	52JL0072	Soporte Gato Lateral	1	
18	JL113818	Protector Swiche Gato Lateral	1	

This diagram illustrates the assembly of a wheel. It shows five numbered components: 1. A tire, 2. A valve stem, 3. A wheel rim, 4. A wheel hub, and 5. Another wheel rim. The components are arranged in an exploded view to show their relative positions and how they fit together.

pulsar
NS200
PI

This exploded view diagram illustrates the assembly of a motorcycle wheel. The components are numbered as follows:

- 1**: The main wheel rim and spokes assembly.
- 2**: A small cylindrical bush or spacer.
- 3**: A larger cylindrical component, likely a hub or axle sleeve.
- 4**: A small ring or O-ring.
- 5**: A large, dark, multi-spoke disc, possibly a brake disc or a decorative fender.
- 6**: A small pin or clip.
- 7**: A long, thin axle or shaft.
- 8**: A small pin or clip.
- 9**: A circular plate or disc with a central hole.
- 10**: A long, thin axle or shaft.
- 11**: A small cylindrical bush or spacer.
- 12**: A small cylindrical component, likely a nut or washer.
- 13**: A small pin or clip.
- 14**: A small pin or clip.

pulsar
NS 200
FI

This exploded view diagram illustrates the components of a rear door latch assembly. The parts are numbered as follows:

- 1:** Latch arm
- 2:** Pin
- 3:** Pin
- 4:** Pin
- 5:** Pin
- 6:** Latch body
- 7:** Latch body
- 8:** Latch body
- 9:** Latch body
- 10:** Pin
- 11:** Pin
- 12:** Latch arm
- 13:** Pin
- 14:** Latch body
- 15:** Latch body
- 16:** Latch arm

The diagram shows the assembly sequence, with dashed lines indicating the alignment of the parts. A small inset shows the final assembled state of the latch.

pulsar
NS 200
PI

Diagram illustrating the assembly components for a piston and connecting rod, numbered 1 through 8:

- 1: Piston and connecting rod assembly (shown in a separate inset).
- 2: Bolt.
- 3: Nut.
- 4: Bolt.
- 5: Connecting rod.
- 6: Retenedor (Retainer).
- 7: Pistón (Piston).
- 8: Capuchón Tornillo de Sangrado (Bleed Screw Cap).

Additional components shown in the assembly area:

- Sello de Pistón (Piston Seal).
- Capuchón Tornillo de Sangrado (Bleed Screw Cap).
- Guardapolvo (Dust Guard).
- Aislante (Insulator).

pulsar
NS 200
FI

This diagram shows an exploded view of a hydraulic system. The components are numbered as follows:

- 1**: Main hydraulic cylinder or pump unit.
- 2**: A long, flexible hydraulic hose.
- 3**: A shorter flexible hydraulic hose.
- 4**: A bracket or mounting plate.
- 5**: A small bolt or screw.
- 6**: A small O-ring or seal.
- 7**: A small fitting or connector.
- 8**: A small fitting or connector.
- 9**: A bracket or mounting plate.
- 10**: A small fitting or connector.
- 11**: A small fitting or connector.
- 12**: A small fitting or connector.

pulsar
NS200
PI

FIGURA N° 36: RUEDA TRASERA

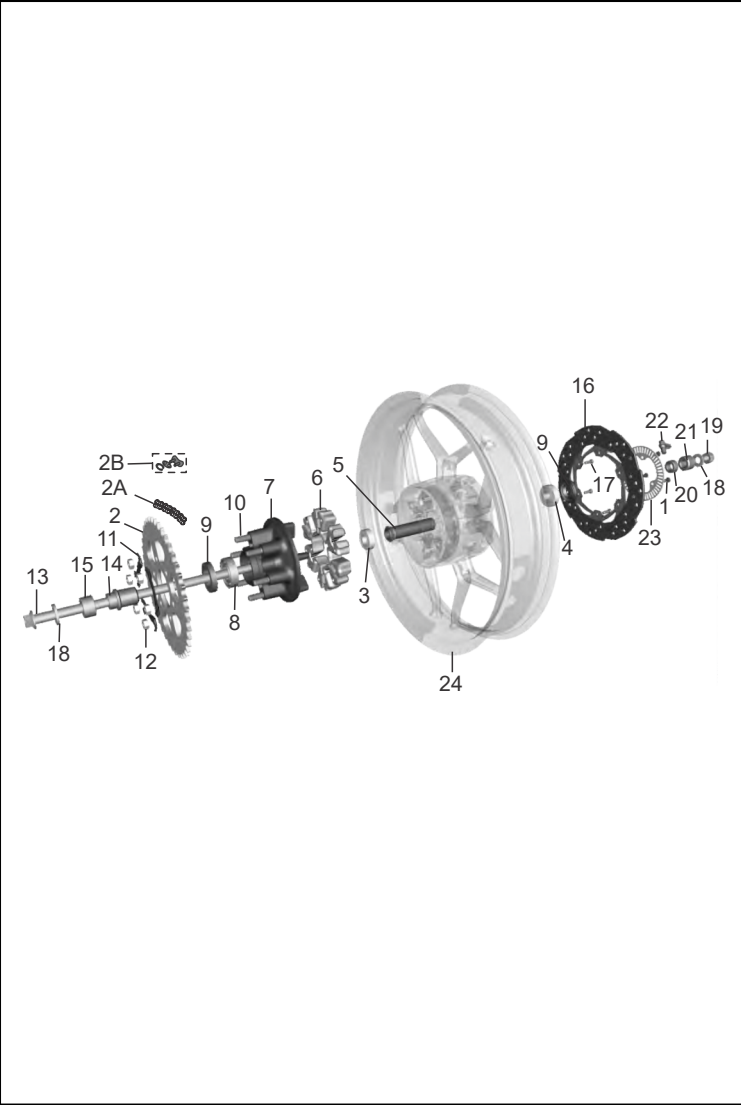


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	39074601	Tornillo Sensor Velocidad	3	
2	JL141001	Sprocket 40T	1	
2A	JL141000	Cadena 520x108L (Con O'ring)	1	
2B	DK151036	Empate Cadena	1	
3	KPBC6302	Rodamiento Bolas	1	
4	KPBC6202	Rodamiento Bolas	1	
5	JL131216	Buje Rueda Trasera	1	
6	JL131232	Caucho Porta Sprocket	1	
7	JL131225	Porta Sprocket	1	
8	DK151013	Rodamiento Bolas 47x25x12	1	
9	30151082	Reten Eje Rueda Trasera	2	
10	LAA00019	Tornillo 8x1.25x50	6	
11	JL131226	Arandela Sprocket	3	
12	LCA00009	Tuerca 8 mm.	6	
13	JL131203	Eje Rueda Trasera	1	
14	DK151015	Buje Porta Sprocket	1	
15	JL131211	Buje	1	
16	JL131218	Disco Freno Trasero	1	
17	39203804	Tornillo Disco Freno Trasero	6	
18	LDB00029	Arandela	2	
19	LCJ00002	Tuerca Eje Rueda Trasera	1	
20	DK151081	Buje Eje Rueda Trasera	1	
21	DK151082	Buje	1	
22	DT402404	Sensor Velocidad ABS	1	
23	JU131802	Sensor Disco Freno Trasero	1	
24	JL131209	Rin Trasero 3.50x17	1	

FIGURA N° 37: BOMBA FRENO TRASERO

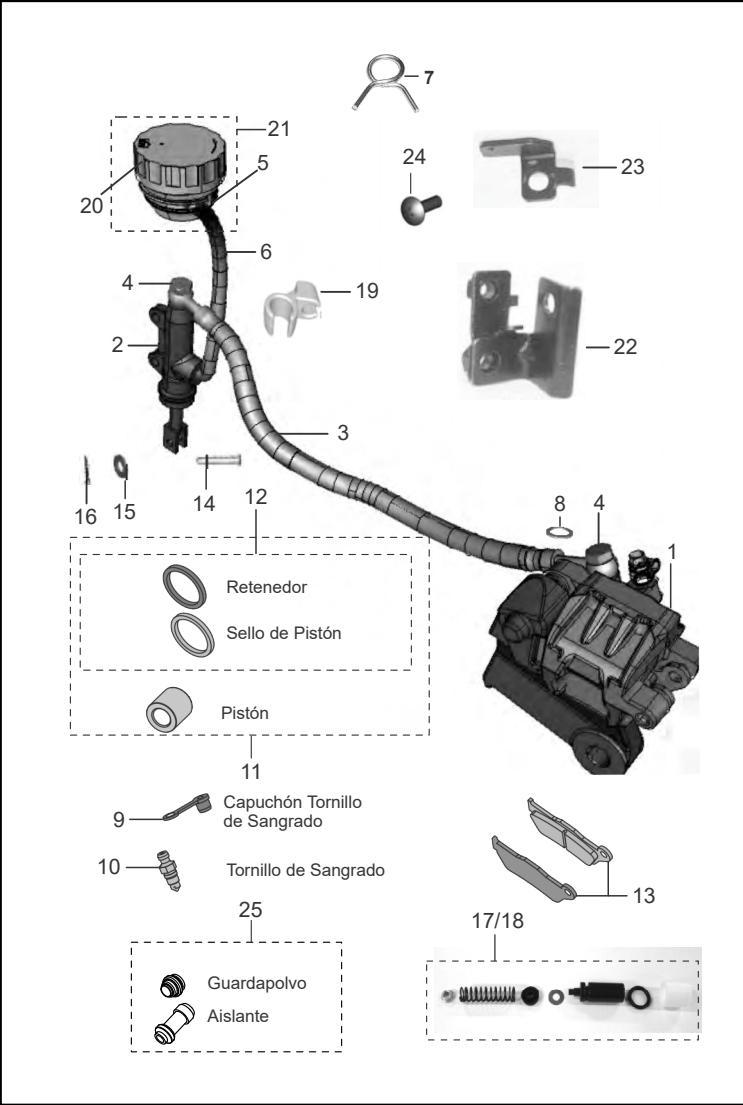


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	DT131826	Caliper Trasero	1	
2	DT131866	Bomba Freno Trasero	1	
3	JL131803	Manguera Freno Trasero	1	
4	DK151069	Tornillo Manguera Freno	2	
5	JG131821	Tanque Liquido Frenos	1	
6	JL131220	Manguera Tanque Liquido Frenos	1	
7	DK151063	Abrazadera	1	
8	DE191010	Arandela de Sellado	4	
9	DE151047	Capuchón Tornillo de Sangrado	1	
10	DE151046	Tornillo de Sangrado	1	
11	DK151088	Kit Pistón Bomba Freno	1	
12	DK151089	Kit Retenes Caliper	1	
13	DK151085	Pastas Freno Trasero	1	
14	30191038	Pin Pasador	1	
15	39019811	Arandela	1	
16	39080808	Pin de Seguridad	1	
17	DK151073	Kit Empaquetadura Bomba Freno	1	Incluye Pistón
18	DK151074	Kit Empaquetadura Bomba Freno	1	No Incluye Pistón
19	JL131877	Abrazadera Manguera Tanque	1	
20	DK151045	Tapa Tanque Líquido Frenos	1	
21	36JG0083	Tanque Líquido Frenos Completo	1	
22	JL131841	Platina Soporte Tanque Líquido de Frenos	1	
23	JL131878	Platina Tapa Tanque Líquido de Frenos	1	
24	KBBA0512	Tornillo 5x12	1	
25	DK151090	Kit Guardapolvos Caliper	1	

FIGURA N° 39: MANUBRIO (1/2)

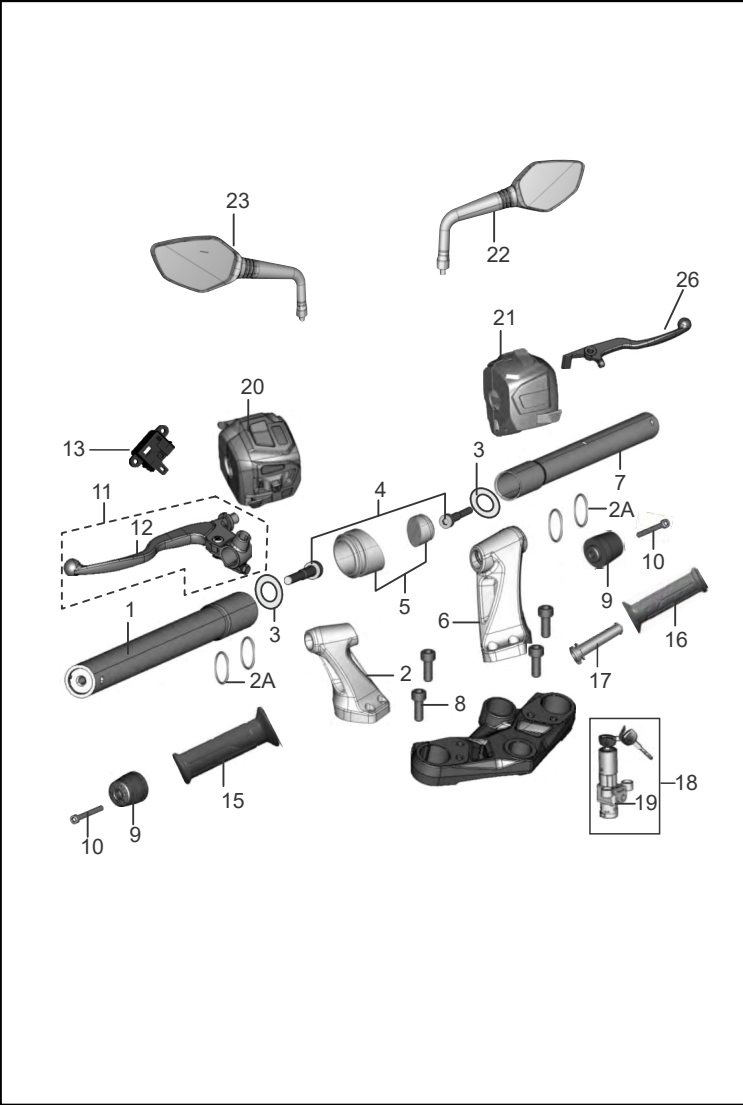


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JL151021	Tubo Manubrio Izquierdo	1	
2	56JL315X	Soporte Tubo Manubrio Izquierdo	1	
2A	JL151038	Anillo Retenedor	4	
3	39118011	Arandela	2	
4	LAC00020	Tornillo 8x1.25x55	2	
5	JL151028	Tapón Soporte Tubo Manubrio	2	
6	56JL325X	Soporte Tubo Manubrio Derecho	1	
7	JL151034	Tubo Manubrio Derecho	1	
8	DG181008	Tornillo	4	
9	JL151035	Buje Manubrio	2	
10	39242704	Tornillo 6 mm.	2	
11	JL161016	Soporte y Leva Clutch	1	
12	JG161008	Leva Clutch	1	
13	JG401416	Swiche Clutch	1	
14	DS191052	Guardapolvo Leva Clutch	1	No Ilustrado
15	JL161003	Caucho Manillar Izquierdo	1	
16	JL161008	Caucho Manillar Derecho	1	
17	JG151022	Tubo Int. Manillar Acelerador	1	
18	JL232605	Swiche Encendido Completo (3 en 1)	1	
19	JL401403	Swiche Encendido (Solo)	1	
20	JL401400	Comando Luces Izquierdo	1	
21	JL401405	Comando Luces Derecho	1	
22	JL231601	Espejo Retrovisor Derecho	1	
23	JL231600	Espejo Retrovisor Izquierdo	1	
24	LBU00012	Tornillo Swiche Clutch	2	No Ilustrado

FIGURA N° 40: SUSPENSIÓN DELANTERA (1/2)

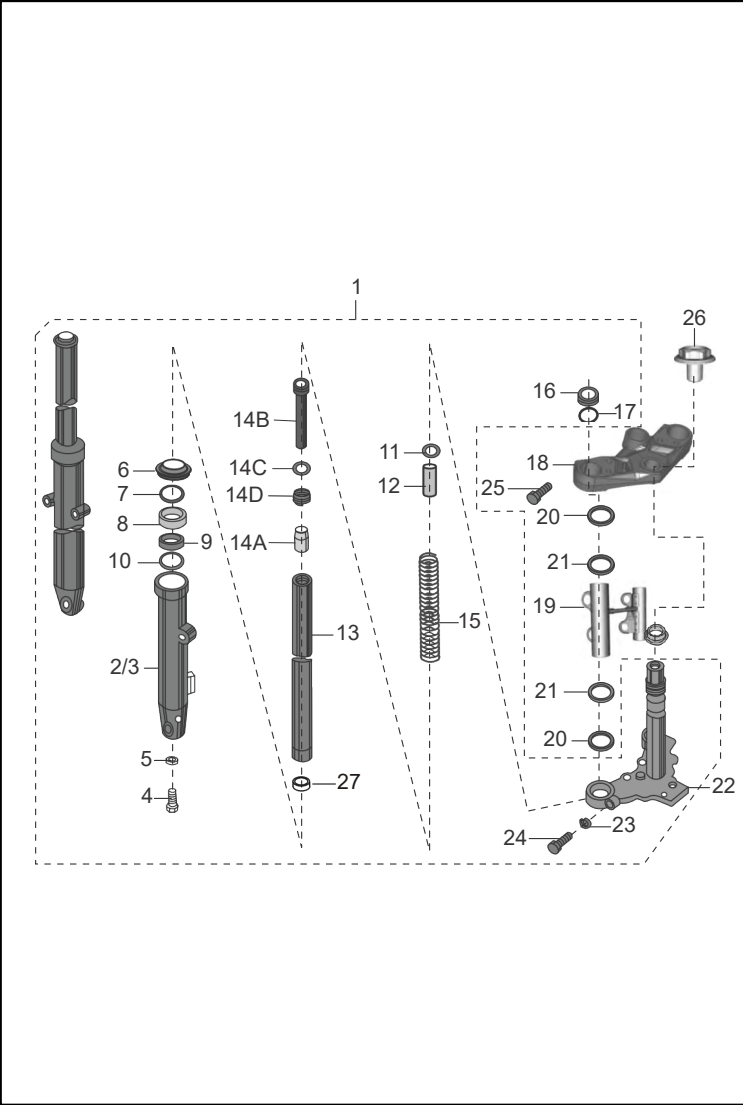


FIG. No.	PORTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JL121005	Suspensión Delantera	1	
2	DT121052	Camisa Tubo Telescópico Izq.	1	
3	DT121053	Camisa Tubo Telescópico Der.	1	
4	DK181006	Tornillo 10x1.5x35	2	
5	DK181007	Arandela de Sellado	2	
6	DK181021	Guardapolvo	2	
7	DK181018	Arandela	2	
8	DK181019	Reten Tubo Telescópico	2	
9	DK181017	Buje Guía	2	
10	DK181020	Pin de Seguridad	2	
11	DK181015	Arandela	2	
12	JL151012	Buje	2	
13	JL121008	Tubo Telescópico	2	
14A	DK181009	Buje Cilindro Tubo Telescópico	2	
14B	DK181010	Cilindro Tubo Telescópico	2	
14C	DK181012	Pin Cilindro Tubo Telescópico	2	
14D	DK181013	Resorte	2	
15	JL121001	Resorte Suspensión	2	
16	DK181022	Tornillo Tubo Telescópico	2	
17	DK181023	Anillo Retenedor	2	
18	56JL335X	Cabeza Espiga	1	
19	JL181235	Soporte Farola	1	
20	JC181023	Antivibrante Soporte Farola	4	
21	JC181022	Arandela Soporte Farola	4	
22	JL151037	Espiga Central	1	

pulsar
NS 200
PI

pulsar
NS 200
PI

This exploded view diagram illustrates the assembly of a motorcycle engine. The main components are labeled as follows:

- 1**: Main engine block/cylinder assembly.
- 2**: Side cover or air filter housing.
- 3**: Spark plug.
- 4**: Air filter element.
- 5**: Air filter housing cover.
- 6**: Oil drain plug.
- 7**: Oil filter.
- 8**: Oil filter mounting plate.
- 9**: Oil filter mounting nut.
- 10**: Oil filter seal ring.
- 11**: Oil drain plug.
- 12**: Oil drain plug.
- 13**: Oil drain plug.
- 14**: Oil drain plug.
- 15**: Oil drain plug.
- 16**: Oil drain plug.

pulsar
NS 200
FI

1 — Main pump unit with a float valve and discharge pipe.

2 — Gasket or mounting plate with four screws (3) and two electrical wires.

3 — Screws for mounting the gasket.

4 — Solenoid valve with a handle.

5 — Flexible hose connecting the solenoid valve to the pump.

6 — Solenoid valve body.

7 — Electrical connector with a cable.

pulsar
NS 200
PI

This exploded view diagram illustrates the assembly of a motorcycle front fairing. The main components shown are the fairing body (16), a side panel (15), and a mounting bracket (17). The fairing is secured to the bracket using a series of bolts (11, 12, 13, 14) and washers (10). A detailed inset shows the correct orientation and placement of a bolt (13) through a hole in the fairing (16) and a washer (11). The diagram uses numbered callouts (1-12) to identify specific parts and fasteners.

pulsar
NS 200
EL

This exploded view diagram illustrates the components of a motorcycle seat assembly. The parts are numbered as follows:

- 1**: Left seat cowl.
- 2**: Screws for the seat base.
- 3**: Screws for the seat base.
- 4**: Screws for the seat base.
- 5**: Screws for the seat base.
- 6**: Right seat cowl.
- 7**: Wheel.
- 8**: Screws for the seat base.
- 9**: Main seat base.
- 10**: Screws for the seat base.
- 11**: Two circular washers and a small rectangular plate.
- 12**: Long, thin rectangular plate.
- 13**: Washer.
- 14**: Main seat base (shown in a different orientation).
- 15**: Bolt.

pulsar
NS 200
FI

The image shows two black flexible hoses against a white background. Hose 1, at the top, has a large, cylindrical, ribbed connector on the left and a smaller, standard automotive hose end on the right. Hose 2, below it, has a small, black, multi-pin electrical connector on the left and a standard automotive hose end on the right. Both hoses are marked with the number '1' at their respective ends.

pulsar
NS200
PI

This diagram shows the exploded view of a motor cover assembly. The components are labeled as follows:

- 1**: The main motor cover housing.
- 2**: A small circular gasket or seal.
- 3**: A small screw or fastener.
- 4**: A bracket or support arm.
- 5**: A mounting plate or base.
- 6**: A mounting bracket or support.
- 7**: A small rectangular component, possibly a label or sensor.
- 8**: A small screw or fastener.

pulsar
NS 200
FI

This diagram illustrates the exploded view of a motorcycle rear subframe assembly. The components are identified by the following numbers:

- 1**: Main rear subframe rail.
- 2**: Various mounting pins and bolts.
- 3**: Small spacers or washers.
- 4**: Rear shock absorber mounting bracket.
- 5**: Rear shock absorber link.
- 6**: Left side rear fender.
- 7**: Right side rear fender.

pulsar
NS 200
PI

FIGURA N° 50: FAROLA / CARENAJE (1/2)

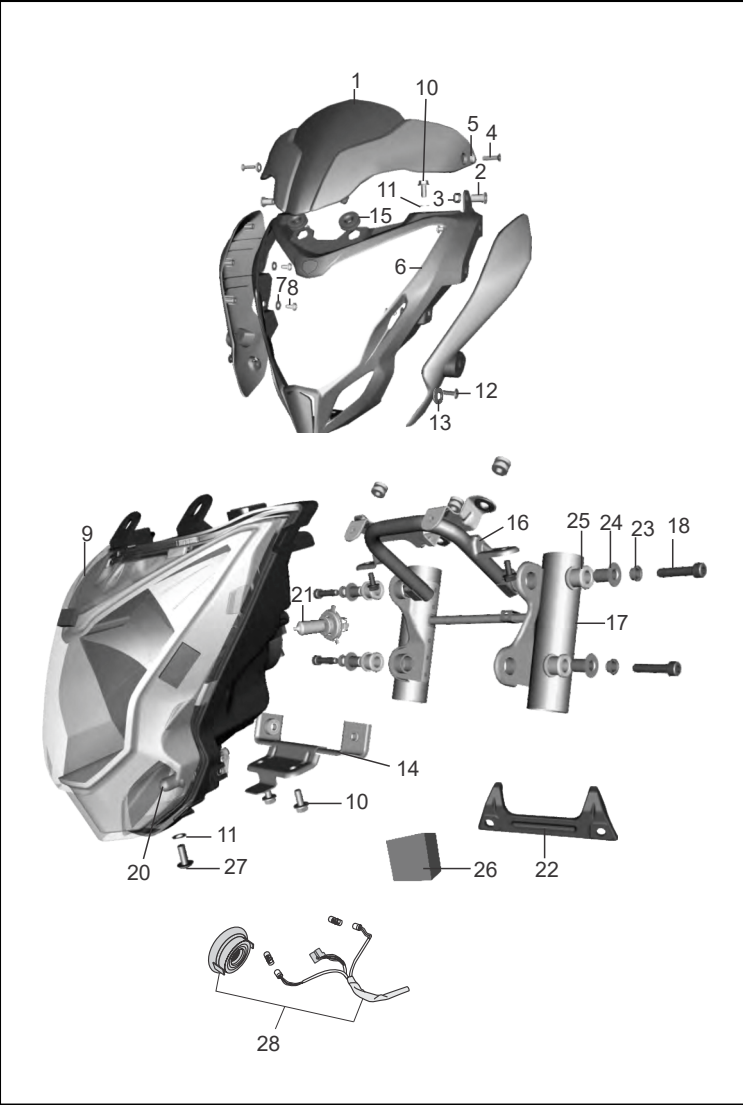


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JL181008	Visor Carenaje	1	
2	JG181236	Tuerca 5 mm.	2	
3	JG181235	Arandela Especial	2	
4	LBS00002	Tornillo 5x20	2	
5	JL181247	Antivibrante	2	
6	JL181203	Carenaje Farola	1	
7	KDBA0512	Arandela	6	
8	LBR00002	Tornillo 5 mm.	6	
9	JL401018	Farola	1	
10	KADE0614	Tornillo 6x14	2	
11	KDAA0611	Arandela	3	
12	KBUA0516	Tornillo	2	
13	39214124	Arandela Nylon 5.3x11.5x1.5	2	
14	JL181236	Soporte Inferior Farola	1	
15	JL181249	Antivibrante	2	
16	JL181237	Soporte Superior Farola	1	
17	JL181235	Soporte Farola	1	
18	KACH0835	Tornillo 8x1.25x35	4	
19	36JL0017	Kit Tornillos Visor Carenaje	1	No Ilustrado
20	DK201044	Bombillo Piloto 12V-5W	2	
21	PD401014	Bombillo Farola 12V-55/60W	1	
22	JL181283	Tapa Plástica Farola	1	
23	JL181257	Buje	4	
24	PA181293	Buje	4	
25	PA181292	Antivibrante	4	

This exploded view diagram illustrates the assembly of a motorcycle headlight. The components are numbered as follows:

- 1**: Upper headlight housing cover.
- 2**: Small pin or clip.
- 3**: Small pin or clip.
- 4**: Small pin or clip.
- 5**: Small pin or clip.
- 6**: Lower headlight housing cover.
- 7**: Small pin or clip.
- 8**: Small pin or clip.
- 9**: Main headlight housing assembly.
- 10**: Small pin or clip.
- 11**: Small pin or clip.
- 12**: Small pin or clip.
- 13**: Small pin or clip.
- 14**: Bracket or mounting plate.
- 15**: Small pin or clip.
- 16**: Bracket or mounting plate.
- 17**: Bracket or mounting plate.
- 18**: Small pin or clip.
- 19**: Small pin or clip.
- 20**: Small pin or clip.
- 21**: Small pin or clip.
- 22**: Bracket or mounting plate.
- 23**: Small pin or clip.
- 24**: Small pin or clip.
- 25**: Small pin or clip.
- 26**: Bracket or mounting plate.
- 27**: Small pin or clip.
- 28**: Electrical wiring harness.

pulsar
NS200
PI

This diagram illustrates the assembly of a mechanical component, likely a handle or lever, onto a main frame. The components are numbered as follows:

- 1**: A large, curved, aerodynamic handle or lever arm.
- 2**: A smaller, curved, aerodynamic handle or lever arm.
- 3**: A small, curved, aerodynamic handle or lever arm.
- 4**: A small, curved, aerodynamic handle or lever arm.
- 5**: A small, cylindrical pin or bolt used for fastening.

The diagram shows the main frame with a central pivot point. The handle arms (1, 2, 3, 4) are shown in their respective positions, with dashed lines indicating the assembly path. The pins (5) are shown being inserted into the handle arms and the main frame to secure them.

pulsar
NS200
PI

This exploded view diagram illustrates the assembly of a power tool battery. The components are numbered as follows:

- 1**: A small rectangular component, likely a fuse or safety switch, with two pins.
- 2**: The main battery pack, shown with a strap.
- 3**: A long, thin cable with a coiled end and a connector.
- 4**: A small rectangular component, possibly a connector or terminal block.
- 5**: A circular component with two terminals, likely a motor or generator.
- 6**: A small circular component, possibly a washer or spacer.
- 7**: A small cylindrical component, possibly a pin or screw.
- 8**: A complex mechanical assembly, possibly a motor or generator, with a long shaft.
- 9**: A small rectangular component, possibly a connector or terminal block.
- 10**: A small rectangular component, possibly a connector or terminal block.
- 11**: A small rectangular component, possibly a connector or terminal block.
- 12**: A small rectangular component, possibly a connector or terminal block.
- 13**: A small rectangular component, possibly a connector or terminal block.
- 14**: A small rectangular component, possibly a connector or terminal block.
- 15**: The main battery pack, shown with a strap.
- 16**: A strap or cable, possibly for securing the battery.
- 17**: A small rectangular component, possibly a connector or terminal block.

pulsar
NS 200
FI

Exploded view diagram of the BAJAJ rearview mirror assembly. The diagram shows the main mirror housing (1) and the mounting bracket (2) with various screws (3, 4, 5, 6, 7, 8, 9, 10) and a strap (11) with a buckle (12). The BAJAJ logo is visible on the mirror housing.

pulsar
NS 200
FI

This diagram illustrates the components of a motorcycle fairing kit, numbered 1 through 11. The parts are shown in an exploded view to indicate their relative positions and assembly order. Part 1 is the upper front fairing. Part 2 is the right side fairing. Part 3 is the left side fairing. Part 4 is the lower front fairing. Part 5 is the right side fairing. Part 6 is the left side fairing. Part 7 is the right side fairing. Part 8 is the left side fairing. Part 9 is the right side fairing. Part 10 is the left side fairing. Part 11 is the right side fairing.

pulsar
NS 200
FI

FIGURA N° 57: CALCOMANÍAS

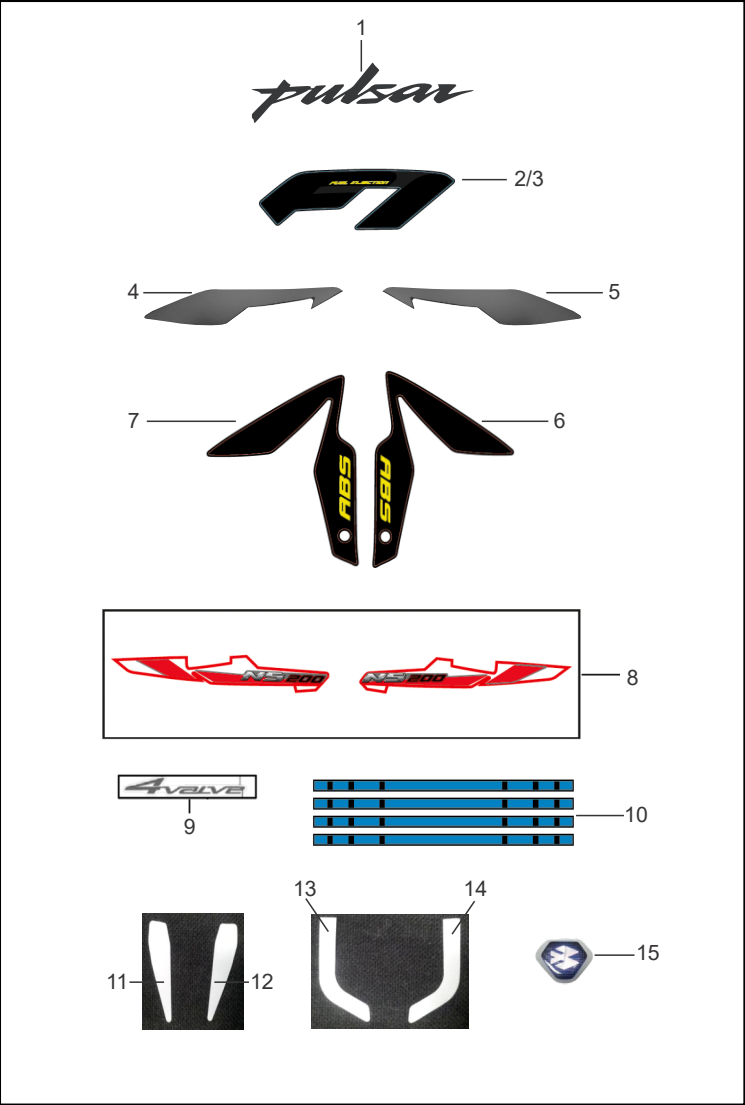


FIG. No.	PARTE No.	DESCRIPCIÓN	CANT. VEH.	OBSERVACIÓN
1	JL233316	Emblema " PULSAR" Tanque Gasolina	2	
2	20006889	Calcomanía Cubierta Tanque Lateral Der.	1	Moto Negro Nebulosa
	20006884		1	Moto Gris Plata
3	20006888	Calcomanía Cubierta Tanque Lateral Izq.	1	Moto Negro Nebulosa
	20006883		1	Moto Gris Plata
4	20006768	Calcomanía Carenaje Farola Der.	1	Moto Negro Nebulosa
	20006891		1	Moto Gris Plata
5	20006767	Calcomanía Carenaje Farola Izq.	1	Moto Negro Nebulosa
	20006890		1	Moto Gris Plata
6	20006886	Calcomanía Guardabarro Delantero Der.	1	Moto Negro Nebulosa
	20006881		1	Moto Gris Plata
7	20006885	Calcomanía Guardabarro Delantero Izq.	1	Moto Negro Nebulosa
	20006880		1	Moto Gris Plata
8	36JL0124	Kit Calcomanias Cubierta Sillín	1	
9	JL233005	Calcomanía "4 Valve"	2	
10	20006887	Calcomanía Rin Del. - Tras.	8	Moto Negro Nebulosa
	20006882		8	Moto Gris Plata
11	JL191009	Calcomanía Protector Cubierta Tanque Der.	1	
12	JL191008	Calcomanía Protector Cubierta Tanque Izq.	1	
13	20000673	Calcomanía Protector Sillín Derecha	1	
14	20000671	Calcomanía Protector Sillín Izquierda	1	
15	JL233002	Calcomanía Logo "BAJAJ"	1	

LISTA DE KITS

Ítem	Referencia	Descripción	Contenido del Kit		Cant.
			Referencia	Descripción	
1	36JL0011	Kit Resorte y Arandela Válvulas	39201719	Reten Válvula	1
			JF511215	Asiento Válvula	1
			JF511217	Resorte Válvula	1
			JF511214	Asiento Válvula	1
			DG101029	Cuña Válvula	2
2	36JL0013	Kit Antivibrantes Sillín	NA	Antivibrante Sillín	6
			DK211007	Antivibrante Sillín Delantero	1
3	36JL0015	Kit Pines Reposapie Pasajero	JD113019	Pin Pasador	1
			30141031	Anillo Retenedor	1
			39104011	Arandela	1
			39078408	Pin	1
			30101236	Balín	1
			NA	Resorte	1
4	36JL0041	Kit Pines Reposapie Conductor	NA	Pin Pasador	1
			30141031	Anillo Retenedor	1
			39104011	Arandela	1
			39078408	Pin	1

ÍNDICE NUMÉRICO DE REFERENCIAS

[illegible]

ÍNDICE NUMÉRICO DE REFERENCIAS

[illegible]

ÍNDICE NUMÉRICO DE REFERENCIAS

[illegible]

ÍNDICE NUMÉRICO DE REFERENCIAS

[illegible]

FICHA TÉCNICA PULSAR 200 NS FI

CARACTERÍSTICA	UNIDAD
Motor	4T, Monocilíndrico
Cilindrada	199.5 cc
Relación de Compresión	11:1
Potencia Máxima	24,13 HP @ 9750 RPM
Torque Máximo	18.6 NM @ 8000 RPM
Bujía	Central BOSCH YR5NE - Laterales CHAMPION-PRG6HCC
Arranque	Eléctrico
Transmisión	Mecánica 6 Velocidades
Sistema de Lubricación	Forzada
Sistema de Alimentación	Inyección Electrónica
Refrigeración	Líquida
FRENOS	
Freno Delantero	Disco (ABS)
Freno Trasero	Disco
SUSPENSIÓN	
Suspensión Delantera	Telescópica Hidráulica
Suspensión Trasera	Monoamortiguador Nitrox
CAPACIDAD DEL TANQUE	
Lleno	12 Litros (3.17 Gal.)
Combustible	Gasolina
LLANTAS	
Llanta Delantera	100/80 - 17
Llanta Trasera	130/70 - 17
Rines	Aspas de Aleación
SISTEMA ELÉCTRICO	
Sistema de Ignición	E.C.U
Bombillo Farola	12V 55/60 W
Luz de Stop	LED
Luces Direccionales	10W
Velocímetro	Análogo - Digital
Pito	12V
Batería	12V 8AH
DIMENSIONES	
Largo x Ancho x Alto	2015 mm x 803.5 mm x 1075 mm
Distancia Entre Ejes	1363 mm.
Altura al Piso	167 mm.
Peso en Seco	155 Kg.

pulsar
NS 200
FI





Línea Gratuita Nacional
01 8000 52 00 90
servicioalcliente@auteco.com.co
www.auteco.com.co



Mobil