



Manual Clutch and Automatic

T135SE
T135S

T135 SERVICE MANUAL

Sniper / Jupiter MX / Spark 135 / Exciter / 135LC

YamahaT135.COM

03212007

5YP-F8197-E0

Yamaha T135 Service Manual

YamahaT135.COM

Yamaha T135 Service Manual

YamahaT135.COM

EAS00000

**T135SE/T135S
SERVICE MANUAL**
©2005 by Yamaha Motor Co., Ltd.
First edition, April, 2005
All rights reserved.
Any reproduction or unauthorized use
without the written permission of
Yamaha Motor Co., Ltd.
is expressly prohibited.

YamahaT135.COM

Yamaha T135 Service Manual

EAS00002

NOTICE

This manual was produced by the Yamaha Motor Company, Ltd. primarily for use by Yamaha dealers and their qualified mechanics. It is not possible to include all the knowledge of a mechanic in one manual. Therefore, anyone who uses this book to perform maintenance and repairs on Yamaha vehicles should have a basic understanding of mechanics and the techniques to repair these types of vehicles. Repair and maintenance work attempted by anyone without this knowledge is likely to render the vehicle unsafe and unfit for use.

Yamaha Motor Company, Ltd. is continually striving to improve all of its models. Modifications and significant changes in specifications or procedures will be forwarded to all authorized Yamaha dealers and will appear in future editions of this manual where applicable.

NOTE:

Designs and specifications are subject to change without notice.

EAS00004

IMPORTANT MANUAL INFORMATION

Particularly important information is distinguished in this manual by the following.



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!

WARNING

Failure to follow WARNING instructions could result in severe injury or death to the vehicle operator, a bystander or a person checking or repairing the vehicle.

CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the vehicle.

NOTE:

A NOTE provides key information to make procedures easier or clearer.

HOW TO USE THIS MANUAL

CONSTRUCTION OF THIS MANUAL

This manual consists of chapters for the main categories of subjects. (See “Illustrated symbols”)

1st title ①: This is a chapter with its symbol on the upper right of each page.

2nd title ②: This title appears on the upper of each page on the left of the chapter symbol. (For the chapter “Periodic inspection and adjustment” the 3rd title appears.)

3rd title ③: This is a final title.

MANUAL FORMAT

All of the procedures in this manual are organized in a sequential, step - by - step format. The information has been compiled to provide the mechanic with a easy to read, handy reference that contains comprehensive explanations of all disassembly, repair, assembly, and inspections.


A set of particularly important procedure ④ is placed between a line of mark “▼” or “▲” with each procedure preceded by “●”.

IMPORTANT FEATURES

- Data and a special tool are framed in a box preceded by a relevant symbol ⑤.
- An encircled numeral ⑥ indicates a part name, and an encircled alphabetical letter date or an alignment mark ⑦, the others being indicated by an alphabetical letter in a box ⑧.
- A condition of a faulty component will precede an arrow symbol and the course of action required the symbol ⑨.





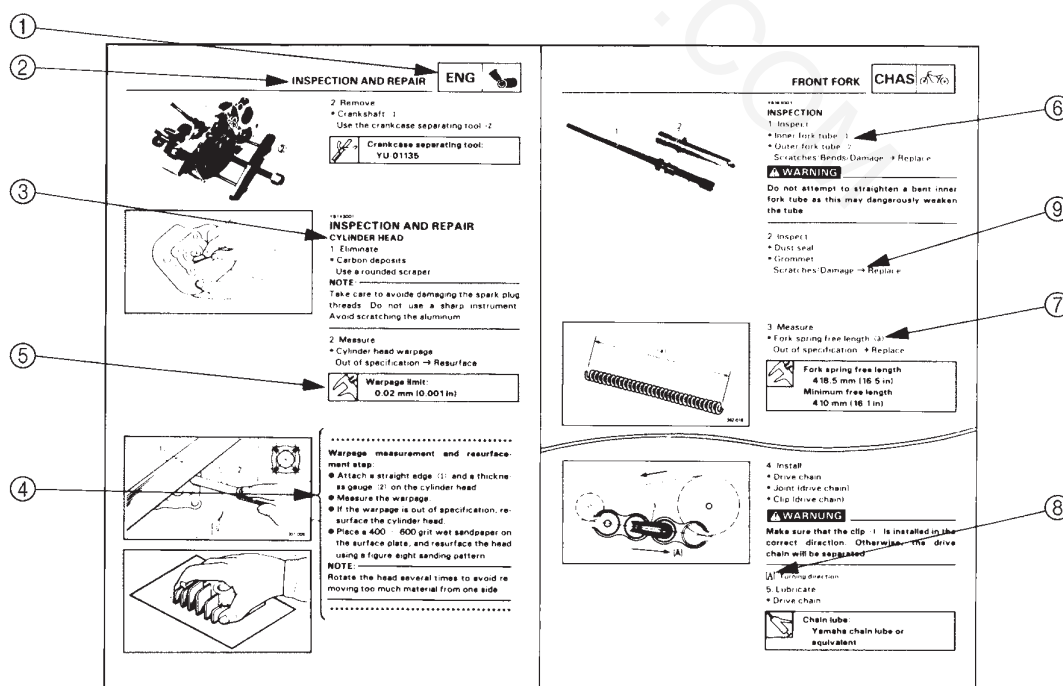



















EXPLODED DIAGRAM

Each chapter provides exploded diagrams before each disassembly section for ease in identifying correct disassembly and assembly procedures.



Yamaha T135 Service Manual

YamahaT135.COM

①	GEN INFO 		②	SPEC 	
③	CHK ADJ 		④	ENG 	
⑤	COOL 		⑥	CARB 	
⑦	CHAS 		⑧	ELEC 	
⑨	TRBL SHTG 		⑩		
⑪			⑫		
⑬			⑭		
⑮			⑯		
⑰			⑱		
⑲			⑳		
㉑			㉒		
㉓			㉔		
㉕			㉖	New	

SYMBOLS

The following symbols are not relevant to every vehicle.

Symbols ① to ⑨ indicate the subject of each chapter.

- ① General information
- ② Specifications
- ③ Periodic checks and adjustments
- ④ Engine
- ⑤ Cooling system
- ⑥ Carburetor
- ⑦ Chassis
- ⑧ Electrical system
- ⑨ Troubleshooting

Symbols ⑩ to ⑰ indicate the following.

- ⑩ Serviceable with engine mounted
- ⑪ Filling fluid
- ⑫ Lubricant
- ⑬ Special tool
- ⑭ Tightening torque
- ⑮ Wear limit, clearance
- ⑯ Engine speed
- ⑰ Electrical data

Symbols ⑱ to ㉓ in the exploded diagrams indicate the types of lubricants and lubrication points.

- ⑱ Engine oil
- ⑲ Gear oil
- ⑳ Molybdenum-disulfide oil
- ㉑ Wheel-bearing grease
- ㉒ Lithium-soap-based grease
- ㉓ Molybdenum-disulfide grease

Symbols ㉔ to ㉕ in the exploded diagrams indicate the following.










- ㉔ Apply locking agent (LOCTITE®)
- ㉕ Replace the part

Yamaha T135 Service Manual

YamahaT135.COM

EAS00011

TABLE OF CONTENTS

GENERAL INFORMATION		
	GEN INFO	1
SPECIFICATIONS		
	SPEC	2
PERIODIC CHECKS AND ADJUSTMENTS		
	CHK ADJ	3
ENGINE		
	ENG	4
COOLING SYSTEM		
	COOL	5
CARBURETOR		
	CARB	6
CHASSIS		
	CHAS	7
ELECTRICAL SYSTEM		
	ELEC	8
TROUBLESHOOTING		
	TRBL SHTG	9

Yamaha T135 Service Manual

YamahaT135.COM




CHAPTER 1

GENERAL INFORMATION

VEHICLE IDENTIFICATION	1-1
VEHICLE IDENTIFICATION NUMBER	1-1
ENGINE SERIAL NUMBER	1-1
 IMPORTANT INFORMATION	 1-2
PREPARATION FOR REMOVAL AND DISASSEMBLY	1-2
REPLACEMENT PARTS	1-2
GASKETS, OIL SEALS AND O-RINGS	1-2
LOCK WASHERS/PLATES AND COTTER PINS	1-3
BEARINGS AND OIL SEALS	1-3
CIRCLIPS	1-3
 CHECKING THE CONNECTIONS	 1-4
 SPECIAL TOOLS	 1-5



YamahaT135.COM

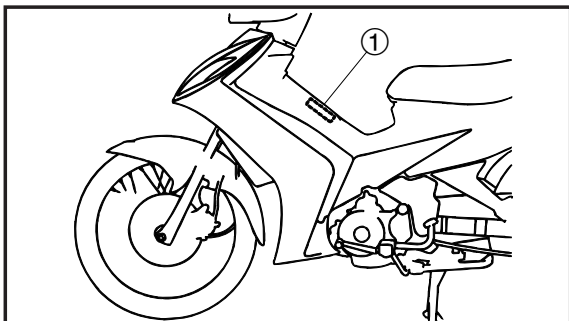


EAS00014

GENERAL INFORMATION VEHICLE IDENTIFICATION

EAS00017

VEHICLE IDENTIFICATION NUMBER

The number ① is stamped into the center of the frame.

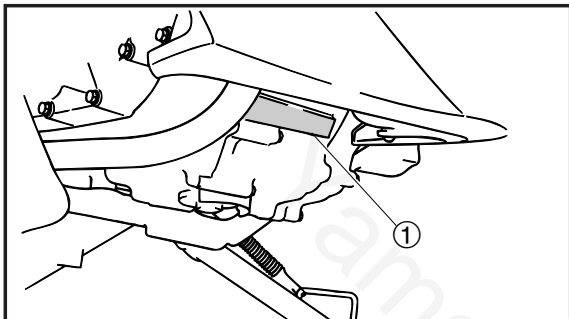


ENGINE SERIAL NUMBER

The engine serial number ① is stamped into the crankcase.

NOTE:


Designs and specifications are subject to change without notice.

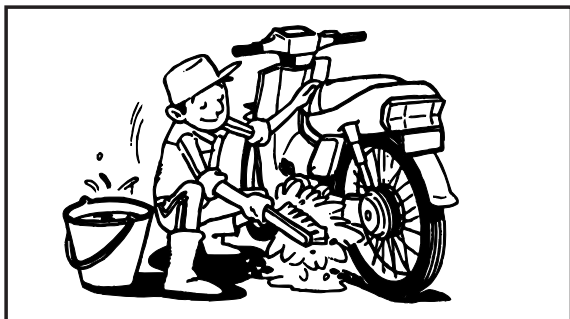

EAS00020

IMPORTANT INFORMATION PREPARATION FOR REMOVAL AND DISASSEMBLY

1. Before removal and disassembly, remove all dirt, mud, dust and foreign material.
2. Use only the proper tools and cleaning equipment.
Refer to the "SPECIAL TOOLS".
3. When disassembling, always keep mated parts together. This includes gears, cylinders, pistons and other parts that have been "mated" through normal wear. Mated parts must always be reused or replaced as an assembly.
4. During disassembly, clean all of the parts and place them in trays in the order of disassembly. This will speed up assembly and allow for the correct installation of all parts.
5. Keep all parts away from any source of fire.

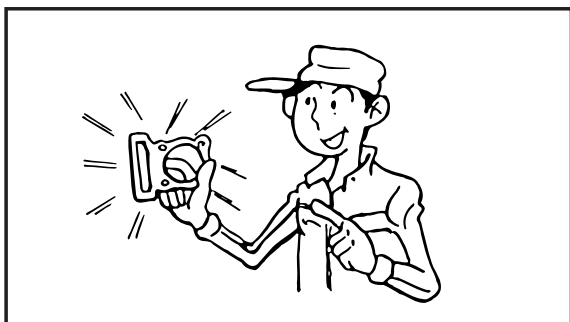

EAS00021


REPLACEMENT PARTS

Use only genuine Yamaha parts for all replacements. Use oil and grease recommended by Yamaha for all lubrication jobs. Other brands may be similar in function and appearance, but inferior in quality.

EAS00022

GASKETS, OIL SEALS AND O-RINGS


1. When overhauling the engine, replace all gaskets, seals and O-rings. All gasket surfaces, oil seal lips and O-rings must be cleaned.
2. During reassembly, properly oil all mating parts and bearings and lubricate the oil seal lips with grease.

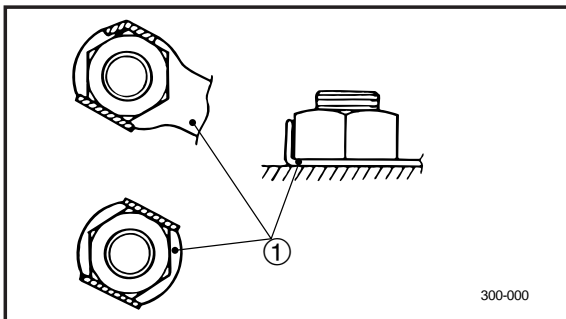

EAS00023

LOCK WASHERS/PLATES AND COTTER PINS

After removal, replace all lock washers/plates ① and cotter pins. After the bolt or nut has been tightened to specification, bend the lock tabs along a flat of the bolt or nut.

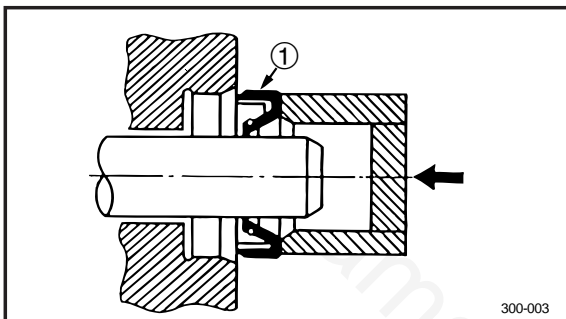

EAS00024


BEARINGS AND OIL SEALS

Install bearings and oil seals so that the manufacturer's marks or numbers are visible. When installing oil seals, lubricate the oil seal lips with a light coat of lithium-soap-based grease. Oil bearings liberally when installing, if appropriate.


① Oil seal

CAUTION:

Do not spin the bearing with compressed air because this will damage the bearing surfaces.

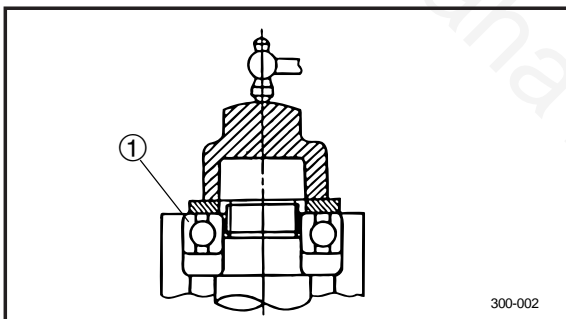

① Bearing

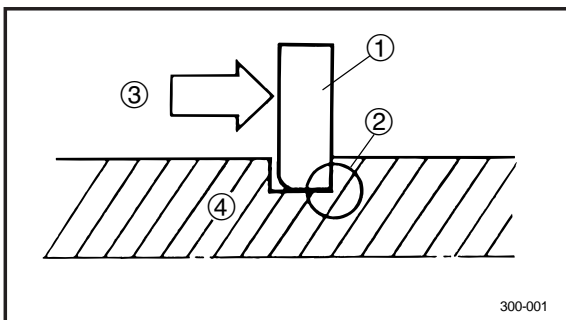

EAS00025

CIRCLIPS

Before reassembly, check all circlips carefully and replace damaged or distorted circlips. Always replace piston pin clips after one use. When installing a circlip ①, make sure the sharp-edged corner ② is positioned opposite the thrust ③ that the circlip receives.

④ Shaft



EAS00026

CHECKING THE CONNECTIONS

Check the leads, couplers, and connectors for stains, rust, moisture, etc.

1. Disconnect:

- lead
- coupler
- connector

2. Check:

- lead
- coupler
- connector

Moisture → Dry with compressed air.

Rust/stains → Connect and disconnect several times.

3. Check:

- all connections

Loose connection → Connect properly.

NOTE:

If the pin ① on the terminal is flattened, bend it up.

4. Connect:

- lead
- coupler
- connector

NOTE:

Make sure all connections are tight.

5. Check:





- continuity
- (with the pocket tester)



Pocket tester
90890-03112

NOTE:

- If there is no continuity, clean the terminals.
- When checking the wire harness, perform steps (1) to (3).
- As a quick remedy, use a contact revitalizer available at most part stores.

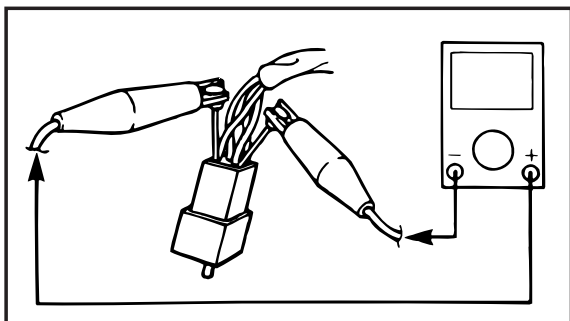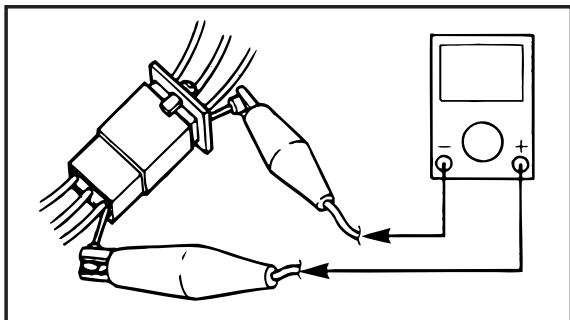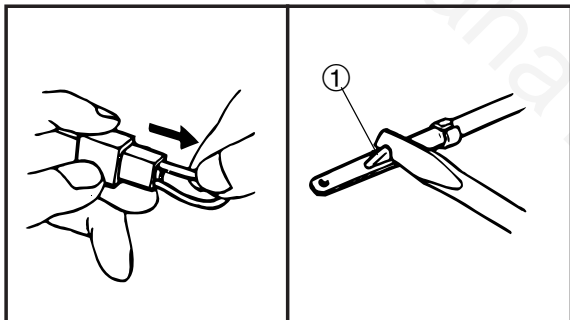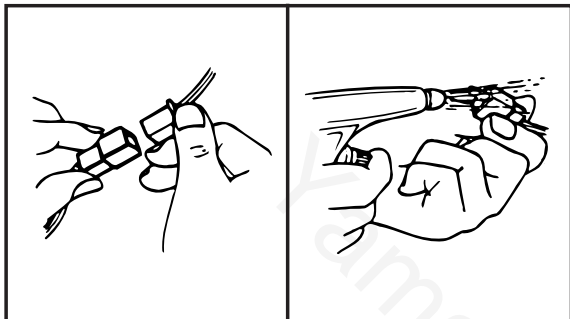



EAS00027

SPECIAL TOOLS

The following special tools are necessary for complete and accurate tune-up and assembly. Use only the appropriate special tools as this will help prevent damage caused by the use of inappropriate tools or improvised techniques. Special tools, part numbers or both may differ depending on the country. When placing an order, refer to the list provided below to avoid any mistakes.

Tool No.	Tool name/Usage	Illustration
90890-01052	Meter gear bush tool This tool is used to remove or install the bushing.	
90890-01135	Crankcase separating tool This tool is necessary for separating the crankcase.	
90890-01184	Fork seal driver weight This tool is used for to install the oil seal.	
90890-01186	Fork seal driver attachment This tool is used to install the oil seal.	
90890-01268	Ring nut wrench This tool is used to loosen and tighten the steering ring nut	
90890-01274	Crankshaft instoller pot This tool is necessary for installing the crankshaft.	
90890-01275	Crankcase installer bolt This tool is necessary for installing the crankshaft.	


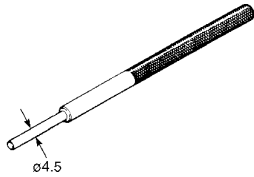
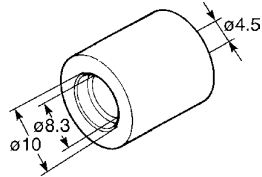
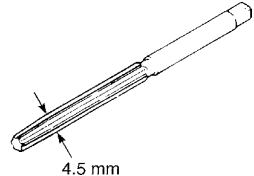
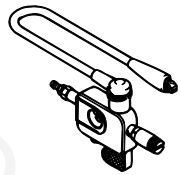


Tool No.	Tool name/Usage	Illustration
90890-01278	Adaptor (M12) This tool is necessary for installing the crankshaft.	
90890-01311	Tappet adjusting tool This tool is necessary for adjusting valve clearance.	
Radiator cap tester 90890-01325 Radiator cap tester adapter 90890-01352	Radiator cap tester Radiator cap tester adapter These tools are used to check the cooling system.	
90890-01326	T-handle This tool is used for holding the damper rod holder when removing or installing the damper rod holder.	
90890-01362	Flywheel puller This tool is used for removing the rotor.	
90890-01403	Steering nut wrench This tool is used to loosen and tighten the steering ring nut	
90890-01701	Sheave holder This tool is used for holding the generator rotor.	
90890-03079	Thickness gauge This tool is used to measure the valve clearance.	



Tool No.	Tool name/Usage	Illustration
90890-03081	<p>Compression gauge</p> <p>These tools are used to measure the engine compression.</p>	
90890-03112	<p>Pocket tester</p> <p>This instrument is necessary for checking the electrical system.</p>	
90890-03113	<p>Engine tachometer</p> <p>This tool is needed for detecting engine rpm.</p>	
<p>Middle driven shaft bearing driver 90890-04058</p> <p>Mechanical seal installer 90890-04145</p>	<p>Middle driven shaft bearing driver Mechanical seal installer</p> <p>These tools are used to install the water pump seal.</p>	
90890-04108	<p>Valve spring compressor Attachment</p> <p>This tool is used when removing or installing the valve and valve spring.</p>	
90890-04019	<p>Valve spring compressor</p> <p>This tool is used when removing or installing the valve and valve spring.</p>	
90890-04081	<p>Spacer</p> <p>This tool is necessary for insatlling the crankshaft.</p>	
90890-04086	<p>Universal clutch holder</p> <p>This tool is needed to hold the clutch when removing or installing the clutch boss nut.</p>	



Tool No.	Tool name/Usage	Illustration
90890-04101	Valve lapper This tool is used for removeing and installing the lifter and for lapping the valve.	
90890-04116	Valve guide remover (4.5 mm) This tool is needed to remove and installing the valve guide.	
90890-04117	Valve guide installer (4.5 mm) This tool is needed to install the valve guide.	
90890-04118	Valve guide reamer (4.5 mm) This tool is needed rebore the new valve guide.	
90890-06754	Ignition checker This instrument is necessary for checking the ignition system components.	



CHAPTER 2 SPECIFICATIONS

GENERAL SPECIFICATIONS	2-1
MAINTENANCE SPECIFICATIONS	2-4
ENGINE	2-4
TIGHTENING TORQUES	2-9
CHASSIS	2-11
TIGHTENING TORQUES	2-13
ELECTRICAL	2-15
CONVERSION TABLE	2-17
GENERAL TIGHTENING TORQUE SPECIFICATIONS	2-17
LUBRICATION POINTS AND LUBRICANT TYPES	2-18
ENGINE	2-18
CHASSIS	2-20
COOLING SYSTEM DIAGRAMS	2-21
CABLE ROUTING	2-22



YamahaT135.COM



SPECIFICATIONS

GENERAL SPECIFICATIONS

Model	T135SE/T135S
Model code	5YP1 (T135SE) 5YP2 (T135S)
Dimensions	
Overall length	1,945 mm (76.6 in)
Overall width	705 mm (27.8 in)
Overall height	1,065 mm (41.9 in)
Seat height	770 mm (30.3 in)
Wheelbase	1,245 mm (49.0 in)
Minimum ground clearance	140 mm (5.51 in)
Minimum turning radius	1,900 mm (74.8 in)
Weight	
Wet (with oil and full fuel tank)	109 kg (240 lb)
Engine	
Engine type	Liquid-cooled 4-stroke, SOHC
Cylinder arrangement	Forward-inclined single cylinder
Displacement	134.4 cm ³ (8.20 cu.in)
Bore × stroke	54.0 × 58.7 mm (2.13 × 2.31 in)
Compression ratio	10.9 : 1
Compression pressure (STD)	560 kPa (80 psi) (5.6 kgf/cm ²) at 500 r/m/ with electric starter
Starting system	Kick and electric starter
Lubrication system	Wet sump
Engine idling speed	1,300 – 1,500 r/min
Oil type or grade	
Engine oil	SAE 20W40 type SF or higher grade motor oil
Periodic oil change amount	0.8 L (0.70 Imp.qt, 0.85 US qt)
Total amount	1.15 L (1.01 Imp.qt, 1.22 US qt)
Oil filter	Paper
Oil pump	Gear pump
Cooling system	
Coolant	YAMAHA GENUINE COOLANT
Coolant reservoir capacity (up to the maximum level mark)	0.28L (0.25 Imp.qt, 0.30 US qt)
Radiator capacity (include all routes)	0.62L (0.55 Imp.qt, 0.66 US qt)
Air filter	Dry type paper element
Fuel	
Recommended fuel	Regular gasoline
Fuel tank capacity	4.0 L (0.88 Imp.gal, 1.06 US gal)

GENERAL SPECIFICATIONS

SPEC



Model		T135SE/T135S
Carburetor		
Type/quantity		VM22/1
Manufacturer		MIKUNI
Spark plug		
Type		CPR8EA-9
Manufacturer		NGK
Spark plug gap		0.8 – 0.9 mm (0.031 – 0.035 in)
Clutch type		Wet, multiple-disc and centrifugal automatic
Transmission		
Primary reduction system		Spur gear
Primary reduction ratio		69/24 (2.875)
Secondary reduction system		Chain drive
Secondary reduction ratio		39/15 (2.600)
Transmission type		Constant mesh 4 speed
Operation		Left foot operation
Gear ratio	1st	34/12 (2.833)
	2nd	30/16 (1.875)
	3rd	23/17 (1.353)
	4th	23/22 (1.045)
Chassis		
Frame type		Diamond
Caster angle		25.3°
Trail		73.0 mm (2.87 in)
Tire		
Type		With tube
Size	front	60/100-17M/C 33P
	rear	80/90-17M/C 44P
Model (manufacturer)	front	IRC/NF63B, Vee Rubber/V304
	rear	IRC/NR78Y, Vee Rubber/V304
Min. tire tread depth	front	0.8 mm (0.03 in)
	rear	0.8 mm (0.03 in)
Tire pressure (cold tire)		
Maximum load*-except vehicle		110 kg (243 lb)
	front	200 kPa (29 psi) (2.00 kgf/cm ²)
	rear	225 kPa (33 psi) (2.25 kgf/cm ²)

* Load is the total weight of cargo, rider, passenger, and accessories.

GENERAL SPECIFICATIONS

SPEC





Model	T135SE/T135S
Brake Front brake type operation Rear brake type operation	Single disc brake Right hand operation Drum brake Right foot operation
Suspension Front suspension Rear suspension	Telescopic fork Swingarm (monocross)
Shock absorber Front shock absorber Rear shock absorber	Coil spring/oil damper Coil spring/oil damper
Wheel travel Front wheel travel Rear wheel travel	100 mm (3.94 in) 90 mm (3.54 in)
Electrical Ignition system Generator system Battery type/manufacturer Battery capacity	DC. C.D.I. A.C. magneto GM5Z-3B/LOCAL MADE 12 V 5 AH
Headlight type	Krypton bulb
Bulbs (voltage/wattage × quantity) Headlight Auxiliary light Tail/brake light Front turn signal light Rear turn signal light Meter light High beam indicator light Neutral indicator light Turn signal indicator light Coolant temperature warning light Gear position indicator light	12 V 32 W/32 W × 1 12 V 5 W × 2 12 V 5 W/21 W × 1 12 V 10 W × 2 12 V 10 W × 2 12 V 1.7 W × 1 12 V 1.7 W × 1 12 V 1.7 W × 1 12 V 1.7 W × 1 12 V 1.7 W × 1 12 V 1.7 W × 4



MAINTENANCE SPECIFICATIONS






ENGINE

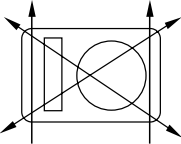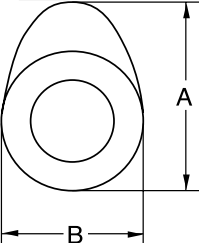Item	Standard	Limit
Cylinder head Max. warpage “*” 	----	0.03 mm (0.0012 in)
Cylinder Bore Out of round limit	54.000 – 54.010 mm (2.1260 – 2.1264 in) ----	54.1 mm (2.1299 in) 0.05 mm (0.002 in)
Camshaft Drive Method Cam dimensions Intake “A” “B” Exhaust “A” “B” Camshaft runout limit 	Chain drive (left) 29.643 – 29.743 mm (1.1670 – 1.1710 in) 25.073 – 25.173 mm (0.9871 – 0.9911 in) 29.942 – 30.042 mm (1.1788 – 1.1828 in) 25.019 – 25.119 mm (0.9850 – 0.9889 in)	29.613 mm (1.1659 in) 25.043 mm (0.9859 in) 29.912 mm (1.1776 in) 24.989 mm (0.9838 in)
Timing chain Timing chain type/No. of links Tensioning system	SILENT CHAIN/96 Automatic	---- ----
Rocker arm/rocker arm shaft Rocker arm inside diameter Rocker arm shaft outside diameter Rocker-arm-to-rocker-arm-shaft clearance	9.985 – 10.000 mm (0.3931 – 0.3937 in) 9.966 – 9.976 mm (0.3924 – 0.3928 in) 0.009 – 0.034 mm (0.0004 – 0.0130 in)	10.030 mm (0.0012 in) 9.950 mm (0.3917 in) 0.08 mm (0.0031 in)






MAINTENANCE SPECIFICATIONS

SPEC

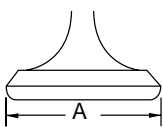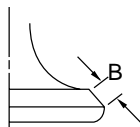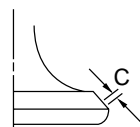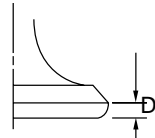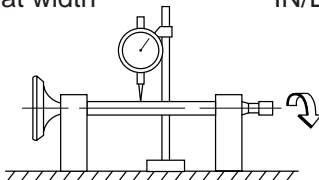


Item		Standard		Limit
Valve, valve seat, valve guide				
Valve clearance (cold)	IN	0.10 – 0.14 mm (0.0039 – 0.0055 in)		----
	EX	0.16 – 0.20 mm (0.0063 – 0.0079 in)		----
Valve dimensions				
				
Head Diameter		Face Width	Seat Width	Margin Thickness
“A” head diameter	IN	19.40 – 19.60 mm (0.7638 – 0.7717 in)		----
	EX	16.90 – 17.10 mm (0.6654 – 0.6732 in)		----
“B” face width	IN	1.583 – 2.138 mm (0.060 – 0.0842 in)		----
	EX	1.538 – 2.138 mm (0.0606 – 0.0842 in)		----
“C” seat width	IN	0.9 – 1.1 mm (0.035 – 0.043 in)		1.6 mm (0.0630 in)
	EX	0.9 – 1.1 mm (0.035 – 0.043 in)		1.6 mm (0.0630 in)
“D” margin thickness	IN	0.5 – 0.9 mm (0.20 – 0.36 in)		----
	EX	0.5 – 0.9 mm (0.20 – 0.36 in)		----
Valve stem outside diameter	IN	4.475 – 4.490 mm (0.1762 – 0.1768 in)		4.450 mm (0.1752 in)
	EX	4.460 – 4.475 mm (0.1756 – 0.1762 in)		4.435 mm (0.1746 in)
Guide inside diameter	IN	3.950 – 4.050 mm (0.1555 – 0.1594 in)		4.542 mm (0.1788 in)
	EX	3.950 – 4.050 mm (0.1555 – 0.1594 in)		4.542 mm (0.1788 in)
Valve-stem-to-guide clearance	IN	0.0010 – 0.037mm (0 – 0.0015 in)		0.080 mm (0.0032 in)
	EX	0.025 – 0.052 mm (0.0010 – 0.0020 in)		0.100 mm (0.0039 in)
Valve stem runout limit		----		0.01 mm (0.0004 in)
Valve seat width	IN/EX	0.9 – 1.1 mm (0.035 – 0.043 in)		1.6 mm (0.0630 in)
				

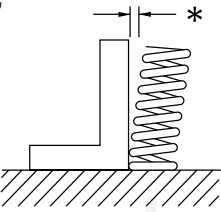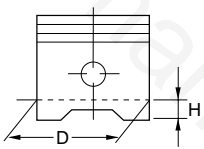

Item	Standard	Limit
Valve spring		
Free length IN/EX	47.33 mm (1.86 in)	44.96 mm (1.77 in)
Installed length (valve closed) IN/EX	35.30 mm (1.39 in)	----
Compressed spring force IN/EX	135.6 – 156.0 N (13.8 – 15.8 kgf) at 35.3 mm (1.39 in)	----
Tilt limit “*” 	IN/EX ----	2.0 mm (0.08 in)
Winding direction IN/EX	Clockwise	----
Piston		
Piston-to-cylinder clearance	0.015 – 0.048 mm (0.0006 – 0.0019 in)	0.150 mm (0.0059 in)
Piston size “D” Measuring point “H” Offset Offset direction Piston pin bore inside diameter Piston pin outside diameter	 53.962 – 53.985 mm (2.1245 – 2.1254 in) 5.0 mm (0.1969 in) 0.25 mm (0.0098 in) Intake side 14.002 – 14.013 mm (0.5513– 0.5517 in) 13.995 – 14.000 mm (0.5510– 0.5512 in)	 ---- ---- ---- ---- 14.043 mm (0.5529 in) 13.975 mm (0.5502 in)
Piston rings		
Top ring		
Ring type	Barrel	----
Dimensions (B × T) End gap (installed)	 0.80 × 1.90 mm (0.03 × 0.07 in) 0.10 – 0.25 mm (0.0098 in) (0.00-0.01 in)	 ---- 0.40 mm (0.0157 in)
Ring side clearance (installed)	0.030 – 0.065 mm (0.0012-0.0026 in)	0.10 mm (0.0039 in)
2nd ring		
Ring type	Taper	----
Dimensions (B × T) End gap (installed)	 0.80 × 2.15 mm (0.03 × 0.08 in) 0.10 – 0.25 mm (0.0098 in) (0.00-0.01 in)	 ---- 0.40 mm (0.0157 in)
Ring side clearance	0.020 – 0.055 mm (0.0008-0.0022 in)	0.10 mm (0.0039 in)
Oil ring		
Dimensions (B × T) End gap (installed of oil ring rails)	 1.50 × 1.95 mm (0.06 × 0.08 in) 0.20 – 0.70 mm (0.01 – 0.03 in)	 ---- ----

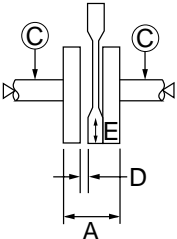


Item	Standard	Limit
Crankshaft 		
Crank width "A"	45.95 – 46.00 mm (1.81-1.81 in)	----
Max. runout limit "C"	----	0.03 mm (0.0012 in)
Big end side clearance "D"	0.11 – 0.41 mm (0.0403 – 0.016 in)	----
Big end radial clearance "E"	0.004 – 0.014 mm (0.10 – 0.11 in)	----
Clutch		
Friction plate #1		
Thickness	2.5 – 2.7 mm (0.10 – 0.11 in)	2.4 mm (0.09 in)
Plate quantity	3	----
Friction plate #2		
Thickness	2.5 – 2.7 mm (0.10 – 0.11 in)	2.4 mm (0.09 in)
Plate quantity	1	----
Clutch plates		
Thickness	1.59 – 1.68 mm (0.06-0.07 in)	----
Plate quantity	3	----
Max. warpage	----	0.05 mm (0.0020 in)
Clutch springs		
Free length	40.5 mm (1.60 in)	38.5 mm (1.52 in)
Spring quantity	4	----
Clutch release method	Inner push, cam push	----
Clutch shoe thickness	2.0 mm (0.08 in)	----
Clutch shoe groove depth	1.0 mm (0.04 in)	0.1 mm (0.0039 in)
Clutch housing inside diameter	116 mm (4.57 in)	117 mm (4.6063 in)
Weight outside diameter	116 mm (4.57 in)	115 mm (4.5276 in)
Clutch - in revolution	1,750 – 2,150 r/min	----
Clutch - stall revolution	2,930 – 3,430 r/min	----
Push rod bending limit	----	0.5 mm (0.02 in)
Transmission		
Main axle runout limit	----	0.03 mm (0.0012 in)
Drive axle runout limit	----	0.03 mm (0.0012 in)

MAINTENANCE SPECIFICATIONS

SPEC



Item	Standard	Limit
Kickstarter		
Kickstarter type	Ratchet type	----
Spring free length	15.5 mm (0.61 in)	----
Carburetor		
Type	VM22	----
I.D. mark	5YP1 00	----
Main jet (M.J)	#105	----
Main air jet (M.A.J)	ø1.2	----
Jet needle (J.N)	5 K010	----
Needle jet (N.J)	N-9M	----
Pilot outlet (P.O)	ø1	----
Pilot jet (P.J)	#20	----
Pilot air screw turns out	1-5/8	----
Pilot air jet 1	#55	----
Valve seat size	ø2	----
Throttle valve size	#2.0	----
Float height	9.2 mm (0.3622 in)	----
Oil pump		
Oil pump type	Trochoid type	----
Inner-rotor-to-outer-rotor-tip clearance	0.15 mm (0.0059 in)	0.20 mm (0.0079 in)
Outer-rotor-to-oil-pump housing clearance	0.06 – 0.11 mm (0.0024 – 0.0043 in)	0.15 mm (0.0059 in)
Oil-pump-housing-to-inner-rotor-and-outer-rotor clearance	0.06 – 0.11 mm (0.0024 – 0.0043 in)	0.15 mm (0.0059 in)

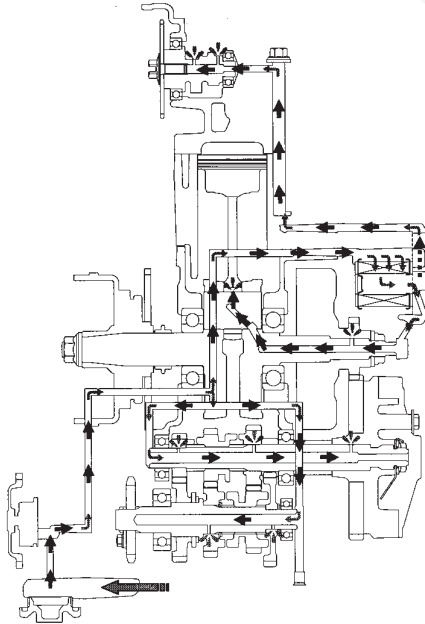Model	T135SE/T135S
Lubrication chart 	



TIGHTENING TORQUES

ENGINE

Part to be tightened	Part name	Thread size	Q'ty	Tightening torque			Remarks
				Nm	m·kg	ft·lb	
Cylinder head	Bolt	M8	4	22	2.2	16	
Cylinder head (timing chain side)	Bolt	M6	2	10	1.0	7.2	
Cylinder head (oil check)	Screw	M6	1	7	0.7	5.0	
Spark plug	—	M10	1	13	1.3	9.5	
Cylinder head cover	Bolt	M6	5	10	1.0	7.2	
Reed valve assembly	Bolt	M6	2	10	1.0	7.2	
Water pump assembly	Bolt	M6	3	10	1.0	7.2	
Stud bolt (cylinder head)	Bolt	M8	2	15	1.5	11	
Cylinder (coolant water drain)	Bolt	M6	1	7	0.7	5.0	
Generator rotor	Nut	M12	1	70	7.0	50	
Timing chain guide (intake side)	Screw	M6	1	10	1.0	7.2	
Valve adjusting screw locknut (intake and exhaust side)	Nut	M5	4	7	0.7	5.0	
Camshaft sprocket	Bolt	M8	1	30	3.0	22	
Camshaft retainer	Bolt	M6	2	7	0.7	5.0	
Timing chain tensioner assembly	Bolt	M6	2	10	1.0	7.2	
Thermostat cover	Bolt	M6	2	10	1.0	7.2	
Oil pump assembly	Bolt	M5	2	7	0.7	5.0	
Element cover	Bolt	M6	3	10	1.0	7.2	
Engine oil drain bolt	Bolt	M35	1	32	3.2	23	
Oil pump cover plate	Bolt	M6	2	10	1.0	7.2	
Intake manifold (engine side)	Bolt	M6	2	10	1.0	7.2	
Carburetor assembly	Bolt	M6	2	10	1.0	7.2	
Resonator	Bolt	M6	1	10	1.0	7.2	
Exhaust pipe	Nut	M8	2	15	1.5	11	
Muffler and muffler bracket	Bolt	M8	1	17	1.7	13	
Muffler and passenger footrest	Bolt	M10	1	38	3.8	28	
Air filter assembly	Bolt	M6	2	10	1.0	7.2	
Crankcase	Bolt	M6	14	10	1.0	7.2	
Crankcase cover (left)	Bolt	M6	8	10	1.0	7.2	
Drive sprocket cover	Bolt	M6	2	7	0.7	5.0	
Crankcase cover (right)	Bolt	M6	10	10	1.0	7.2	
Center plug	—	M32	1	7	0.7	5.0	
Timing check plug	—	M14	1	3	0.3	2.2	
Kick crank assembly	Bolt	M10	1	50	5.0	36	
Ratchet wheel guide	Bolt	M6	2	12	1.2	9.0	
Starter clutch	Bolt	M6	3	14	1.4	10.1	stake
Clutch shoe housing	Nut	M12	1	50	5.0	36	
Clutch pressure plate	Bolt	M6	4	12	1.2	9.0	
Clutch boss	Nut	M14	1	70	7.0	50.4	

MAINTENANCE SPECIFICATIONS

SPEC



Part to be tightened	Part name	Thread size	Q'ty	Tightening torque			Remarks
				Nm	m·kg	ft·lb	
Drive sprocket	Bolt	M6	1	10	1.0	7.2	
Main axle bearing retainer	Screw	M6	2	7	0.7	5.0	
Clutch release adjusting locknut	Nut	M6	1	8	0.8	6.0	
Shift pedal	Bolt	M8	1	18	1.8	13	
Shift drum segment	Bolt	M6	1	12	1.2	9.0	
Shift drum stopper lever	Bolt	M6	1	10	1.0	7.2	
Shift lever stopper screw	Screw	M8	1	10	1.0	7.2	
Pickup coil	Bolt	M6	2	10	1.0	7.2	
Stator coil	Bolt	M6	3	10	1.0	7.2	
Neutral switch	Screw	M5	2	4	0.4	2.9	
Starter motor	Bolt	M6	2	10	1.0	7.2	




CHASSIS

Item	Standard	Limit
Steering system		
Steering bearing type	Ball and race bearing	----
Lock-to-lock angle (left/right)	45°	----
Front suspension		
Front fork travel	100 mm (3.94 in)	----
Fork spring free length	295.3 mm (11.63 in)	289.4 mm (11.39 in)
Installed length	288.3 mm (11.35 in)	----
Spring rate	(K1) 3.60 N/mm (0.37 kgf/mm, 20.56 lb/in)	----
	(K2) 8.50 N/mm (0.87 kgf/mm, 48.54 lb/in)	----
Stroke	(K1) 0 – 65.0 mm (0.00 – 2.56 in)	----
	(K2) 65 – 100 mm (2.56 – 3.94 in)	----
Optional spring available	No	----
Oil capacity	0.064 L (64 cm ³)	----
Oil level	104.5 mm (4.11 in)	----
Recommended oil	Fork oil 10W or equivalent	----
Inner tube outer diameter	26 mm (1.02 in)	----
Inner tube bend limit	----	0.2 mm (0.0079 in)
Rear suspension		
Shock absorber stroke	27.5 mm (1.0827 in)	----
Spring free length	115.4 mm (4.54 in)	113.1 mm (4.4528 in)
Installed length	106.4 mm (4.19 in)	----
Spring rate	(K1) 220 N/mm (22.43 kgf/mm, 1256.2 lb/in)	----
	(K2) 316 N/mm (32.22 kgf/mm, 1804.36 lb/in)	----
Stroke	(K1) 0.0 – 8.0 mm (0.00 – 0.31 in)	----
	(K2) 8.0 – 27.5 mm (0.31 – 1.08 in)	----
Optional spring available	No	----
Front wheel		
Type	Spoke wheel	----
Rim size	17 × 1.20	----
Rim material	Steel	----
Max. radial wheel runout	----	1.0 mm (0.04 in)
Max. lateral wheel runout	----	0.5 mm (0.02 in)

MAINTENANCE SPECIFICATIONS

SPEC



Item	Standard	Limit
Rear wheel		
Type	Spoke wheel	----
Rim size	17 × 1.60	----
Rim material	Steel	----
Max. radial wheel runout	----	1.0 mm (0.04 in)
Max. lateral wheel runout	----	0.5 mm (0.02 in)
Drive chain		
Type/manufacturer	428/DAIDO	----
Link quantity	112	----
Drive chain slack	25 – 35 mm (0.98 – 1.38 in)	----
Front brake		
Disc brake type	Single	----
Disc outside diameter × thickness	220.0 × 3.5 mm (8.66 × 0.14 in)	3.0 mm (0.12 in)
Pad thickness inner	5.3 mm (0.21 in)	0.8 mm (0.03 in)
Pad thickness outer	5.3 mm (0.21 in)	0.8 mm (0.03 in)
		
Master cylinder inside diameter	11 mm (0.43 in)	----
Caliper cylinder inside diameter	33.3 mm (1.31 in)	----
Brake fluid type	DOT 3 or 4	----
Rear brake		
Drum brake type	Leading, trailing	----
Rear brake pedal free play (pedal end)	25 – 35 mm (0.98 – 1.38 in)	----
Drum inside diameter	130 mm (5.12 in)	131.0 mm (5.16 in)
Lining thickness	4 mm (0.16 in)	2 mm (0.08 in)
Shoe spring free length 1	52 mm (2.05 in)	61.2 mm (2.41 in)
Shoe spring free length 2	48 mm (1.89 in)	56.5 mm (2.22 in)
Throttle cable free play	3.0 – 7.0 mm (0.12 – 0.28 in)	----



TIGHTENING TORQUES

CHASSIS

Part to be tightened	Thread size	Tightening torque			Remarks
		Nm	m·kg	ft·lb	
Handlebar bracket and lower bracket	M10	53	5.3	39	
Handlebar and handlebar bracket	M8	23	2.3	13	
Brake hose and brake master cylinder	M10	26	2.6	19	
Brake hose and brake caliper	M10	26	2.6	19	
Brake master cylinder and holder	M6	11	1.1	8.0	
Brake master cylinder and brake lever	M6	7	0.7	5.0	
Rear view mirror (left and right)	M10	32	3.2	23	
Front wheel axle nut	M10	40	4.0	29	
Brake hose holder	M6	7	0.7	5.0	
Front fork and brake caliper	M10	35	3.5	25	
Bleed screw	M8	6	0.6	4.3	
Front fork cap bolt	M20	50	5.0	36	
Lower bracket pinch bolt	M10	43	4.3	31	
Damper rod bolt	M8	23	2.3	17	
Upper ring nut	M25	75	7.5	54	See NOTE
Lower ring nut	M25	30	3.0	22	See NOTE
Brake disc and wheel hub	M8	23	2.3	17	
Brake camshaft and brake camshaft lever	M6	7	0.7	5.0	
Driven sprocket and rear wheel drive hub	M8	30	3.0	22	
Rear wheel axle nut	M12	60	6.0	43	
Rear shock absorber and frame	M10	46	4.6	33	
Rear shock absorber and swingarm	M10	46	4.6	33	
Swingarm pivot nut	M12	66	6.6	48	
Engine mounting nut	M8	34	3.4	25	
Engine mounting nut	M10	72	7.2	52	
Swingarm and drive chain case	M6	7	0.7	5.0	
Drive chain adjuster locknut	M6	7	0.7	5.0	
Swingarm and brake torque rod	M8	16	1.6	12	
Brake shoe plate and brake torque rod	M8	19	1.9	14	
Rider footrest and crankcase	M8	23	2.3	17	
Passenger footrest and frame	M8	30	3.0	22	
Sidestand and rider footrest (bolt)	M8	26	2.6	19	
Sidestand and rider footrest (nut)	M8	17	1.7	12	
Front cowling bracket and crankcase cover (left and right)	M6	7	0.7	5.0	
Main switch and frame	M6	10	1.0	7.2	
Ignition coil and frame	M6	7	0.7	5.0	

MAINTENANCE SPECIFICATIONS

SPEC



Part to be tightened	Thread size	Tightening torque			Remarks
		Nm	m·kg	ft·lb	
Fuel tank and frame	M6	7	0.7	5.0	
Fuel cock and fuel tank	M6	7	0.7	5.0	
Seat and seat bracket	M6	7	0.7	5.0	

NOTE:

1. First tighten the lower ring nut 30 Nm (3.0 m • kg, 22 ft • lb) by using a torque wrench, then loosen the ring nut 1/4 turn.
2. Then, hold the lower ring nut and tighten the upper ring nut 75 Nm (7.5 m • kg, 54 ft • lb) by using a torque wrench.



ELECTRICAL

Item	Standard	Limit
System voltage	12 V	----
Ignition system		
Ignition timing (B.T.D.C.)	10° at 1,400 r/min	----
Advanced type	Digital	----
DC-C.D.I		
Pickup coil resistance/color	248 – 372 Ω at 20 °C (68 °F)/R–W	----
C.D.I. unit model/manufacturer	5YP/PT MORIC	----
Ignition coil		
Model/manufacturer	4ST/PT MORIC	----
Minimum ignition spark gap	6 mm	----
Primary coil resistance	0.32 – 0.48 Ω at 20 °C (68 °F)	----
Secondary coil resistance	5.68 – 8.52 k Ω at 20 °C (68 °F)	----
Spark plug cap		
Material	Resin	----
Resistance	5.0 k Ω	----
Charging system		
Type	A.C. magneto	----
Model/manufacturer	F5YP/PT MORIC	----
Nominal output	14 V 105 W at 5,000 r/min	----
Lighting coil resistance/color	0.29 – 0.43 Ω at 20 °C (68 °F)/Y–B	----
Charging coil resistance/color	0.38 – 0.58 Ω at 20 °C (68 °F)/W–B	----
Rectifier/regulator		
Regulator type	Semiconductor short-circuit	----
Model/manufacturer	SH656A-12/THA-SHINDENGEN	----
No load regulated voltage (DC)	14.1 – 14.9 V	----
(AC)	12.3 – 13.3 V	----
Rectifier capacity (DC)	8 A	----
(AC)	12 A	----
Withstand voltage	600 V	----
Battery		
Specific gravity	1.280	----

MAINTENANCE SPECIFICATIONS

SPEC



Item	Standard	Limit
Electric starting system (T135SE)		
Type	Constant mesh	----
Starter motor		
Model/manufacture	5YP/PT MORIC	----
Operation voltage	12 V	----
Power output	0.20 kW	----
Armature coil resistance	0.032 – 0.039 Ω at 20 °C (68 °F)	----
Brush overall length	7.0 mm (0.28 in)	3.5 mm (0.14 in)
Spring force	3.92 – 5.88 N (400-600 gf, 14.11 – 21.17 oz)	3.92 N (400 gf)
Commutator diameter	17.6 mm (0.69 in)	16.6 mm (0.65 in)
Mica undercut (depth)	1.35 mm (0.05 in)	----
Starter relay (T135SE)		
Model/manufacture	G4R/THA-OMRON	----
Amperage rating	50 A	----
Coil resistance	54 – 66 Ω at 20 °C (68 °F)	----
Horn		
Type	Plane	----
Quantity	1	----
Model/manufacture	GF-12/THA-NIKKO	----
Max. amperage	1.5 A	----
Performance	95 – 105 db (2 m)	----
Coil resistance	4.30 – 4.80 Ω at 20 °C (68 °F)	----
Turn signal relay		
Relay type	Condenser	----
Model/manufacture	FZ222SD/THA-DENSO	----
Self-canceling device built-in	No	----
Flasher frequency	75 – 95 cycle/min	----
Wattage	10 W \times 2 + 3.4 W	----
Fuel gauge		
Model/manufacture	5YP/THA-NIPPON SEIKI	----
Sender unit resistance- full	4 – 10 Ω at 20 °C (68 °F)	----
- empty	90 – 100 Ω at 20 °C (68 °F)	----
Circuit breaker		
Circuit breaker type	Fuse	----
Main	10 A	----
Reserve	10 A	----

Yamaha T135 Service Manual

CONVERSION TABLE/ GENERAL TIGHTENING TORQUE SPECIFICATIONS



EAS00028

CONVERSION TABLE

All specification data in this manual are listed in SI and METRIC UNITS.

Use this table to convert METRIC unit data to IMPERIAL unit data.

Ex.

METRIC	MULTIPLIER		IMPERIAL
** mm	0.03937	=	** in
2 mm	0.03937	=	0.08 in

CONVERSION TABLE

METRIC TO IMPERIAL			
	Metric unit	Multiplier	Imperial unit
Tightening torque	m·kg	7.233	ft·lb
	m·kg	86.794	in·lb
	cm·kg	0.0723	ft·lb
	cm·kg	0.8679	in·lb
Weight	kg	2.205	lb
	g	0.03527	oz
Speed	km/hr	0.6214	mph
Distance	km	0.6214	mi
	m	3.281	ft
	m	1.094	yd
	cm	0.3937	in
	mm	0.03937	in
Volume/ Capacity	cc (cm ³)	0.03527	oz (IMP liq.)
	cc (cm ³)	0.06102	cu.in
	lt (liter)	0.8799	qt (IMP liq.)
	lt (liter)	0.2199	gal (IMP liq.)
Misc.	kg/mm	55.997	lb/in
	kg/cm ²	14.2234	psi (lb/in ²)
	Centigrade (°C)	9/5+32	Fahrenheit (°F)

EAS00029

GENERAL TIGHTENING TORQUE SPECIFICATIONS

This chart specifies tightening torques for standard fasteners with a standard ISO thread pitch. Tightening torque specifications for special components or assemblies are provided for each chapter of this manual. To avoid warpage, tighten multi-fastener assemblies in a crisscross pattern and progressive stages until the specified tightening torque is reached. Unless otherwise specified, tightening torque specifications require clean, dry threads. Components should be at room temperature.

A: Width across flats



































B: Thread diameter

A (nut)	B (bolt)	General tightening torques	
		Nm	m·kg
10 mm	6 mm	6	0.6
12 mm	8 mm	15	1.5
14 mm	10 mm	30	3.0
17 mm	12 mm	55	5.5
19 mm	14 mm	85	8.5
22 mm	16 mm	130	13.0

LUBRICATION POINTS AND LUBRICANT TYPES

SPEC


LUBRICATION POINTS AND LUBRICANT TYPES
ENGINE

Lubrication point	Lubricant
Oil seal lips	
Bearings	
O-rings	
Cylinder head tightening washer and bolt thread	
Rocker arm inner surfaces	
Rocker arm shaft	
Camshaft	
Valve stem (IN, EX)	
Valve stem guide (IN, EX)	
Piston pin	
Piston outside and ring groove	
Piston ring	
Cylinder inner surface	
Starter clutch gear inner surface	
Starter idle gear inner surface	
Kickstarter ratchet wheel and ratchet wheel guide	
Kickstarter gear inner surface	
Kickstarter shaft	
Primary driven gear and primary drive gear 2 inner surface	
Clutch push rod #1, #2, ball and main axle inside surface	
Clutch housing inside surface and crankshaft outer surface	
Clutch boss housing, clutch plate and friction plate inside surface	
Clutch boss nut and lock washer contact surface	
Clutch shoe housing inner surface	
Cage	
Clutch shoe housing boss	
Oil pump assembly	
Shift guide inner surface	
Shift fork guide bar	
Shift shaft thrust surface	
Shift lever inner surface	
Shift shaft stopper lever inner surface	
Timing chain	
Transmission wheel gears inner surface	

LUBRICATION POINTS AND LUBRICANT TYPES**SPEC**

Lubrication point	Lubricant
Transmission side plate inner surface	
Transmission pinion gears inner surface	
Generator lead grommet	Yamaha bond No.1215
Crankcase mating surface	Yamaha bond No.1215
Timing chain tensioner bolts	Yamaha bond No.1215



















YamahaT135.COM

LUBRICATION POINTS AND LUBRICANT TYPES

SPEC



CHASSIS


Lubrication point	Lubricant
Front wheel oil seal lips	
Speedometer gear unit inner surface	
Rear wheel oil seal lips	
Rear brake camshaft	
Brake torque rod bolt	
Front wheel axle	
Rear wheel axle	
Upper brake caliper retaining bolt	
Lower brake caliper retaining bolt	
Throttle grip tube guide inner surface	
Brake lever pivot bolt	
Steering head bearing inner race	
Steering head bearing outer race	
Steering head upper bearing	
Steering head lower bearing	
Sidestand pivot bolt	
Swingarm pivot shaft	
Centerstand pivot shaft	



COOLING SYSTEM DIAGRAMS

- ① Radiator inlet hose
- ② Radiator cap
- ③ Hose clamp
- ④ Coolant reservoir hose
- ⑤ Frame cross pipe
- ⑥ Radiator
- ⑦ Radiator outlet hose
- ⑧ Over flow hose
- ⑨ Coolant reservoir tank

- [A] Align the white paint mark on the clamp with the white paint mark on the radiator.
- [B] Band the end of the cover, before install the projection of the reservoir tank.
- [C] Install the hook of the cover end into the slit of the bracket.

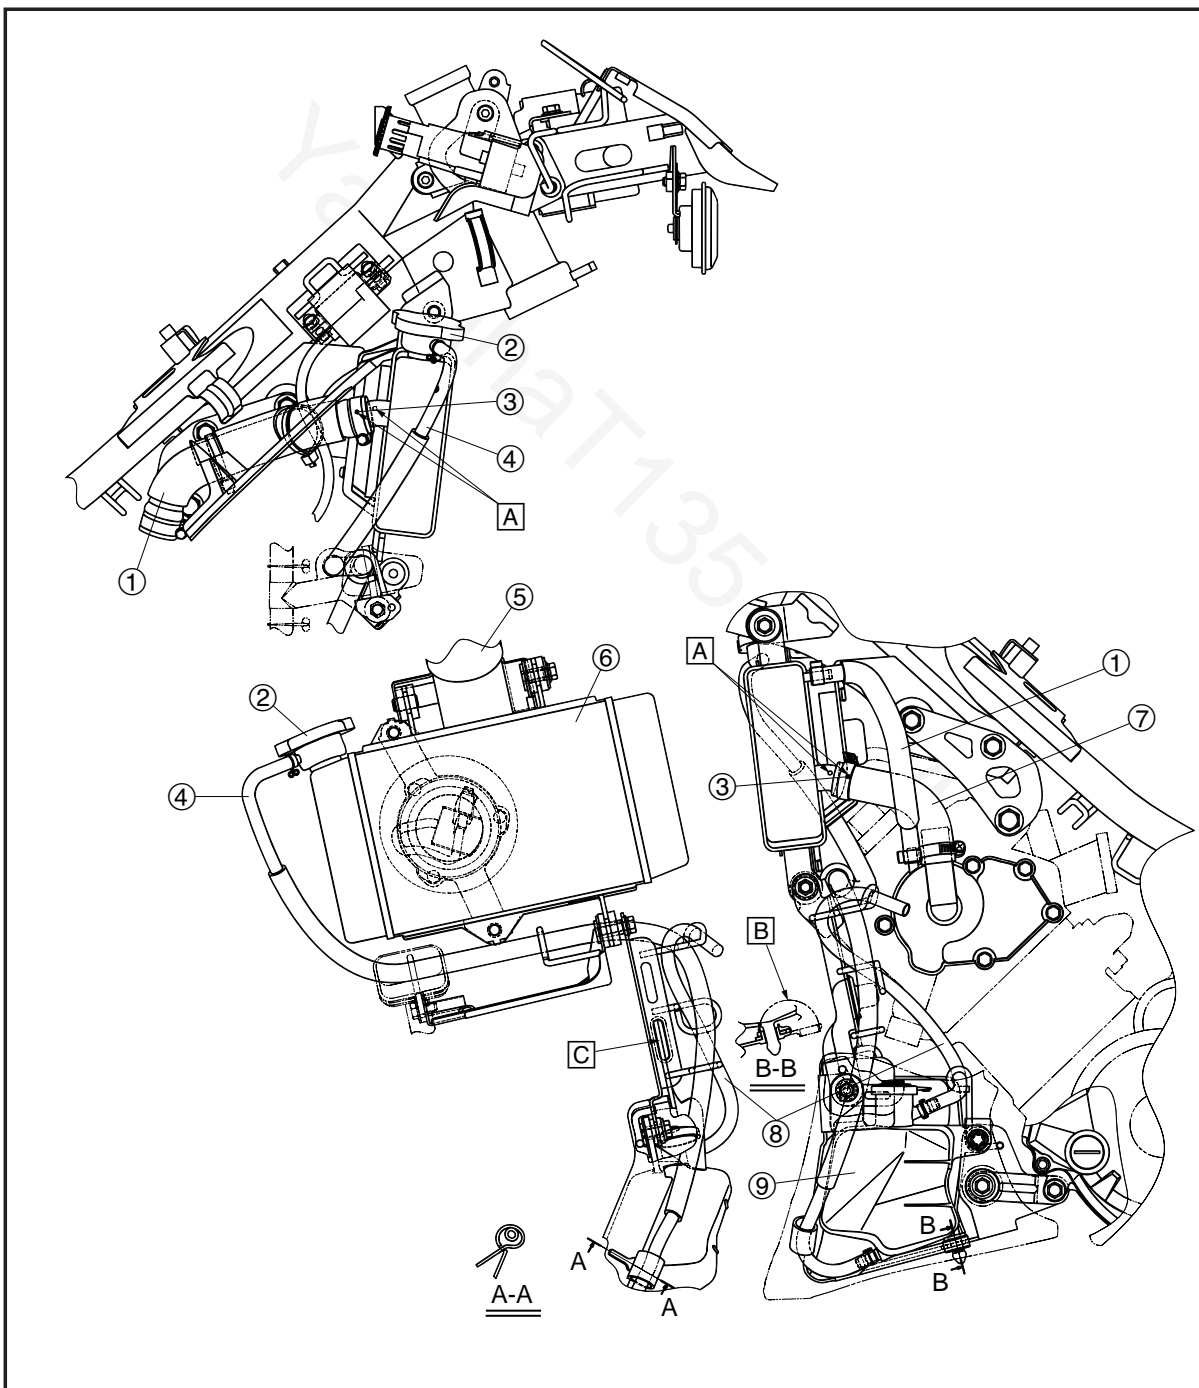




CABLE ROUTING

- ① Turn signal light relay
- ② Meter assembly
- ③ Left handlebar switch lead
- ④ Speedometer cable
- ⑤ Wireharness
- ⑥ Brake hose
- ⑦ Throttle cable
- ⑧ Front brake light switch lead


- [A] Install the turn signal relay onto the bracket.
- [B] Connect the left handlebar switch lead coupler in front of the handlebar left.
- [C] Pass through the choke cable into the wireharness.
- [D] Connect the couplers in front of the handlebar left side.
- [E] Do not pass the brake hose into the bracket.

- [F] Pass through into the wire guide, follow the routing order. Brake hose, throttle cable and wireharness.
- [G] Hook the strap of the wireharness onto the bracket.
- [H] Pass through the brake hose into the wire guide on the handlebar bracket.

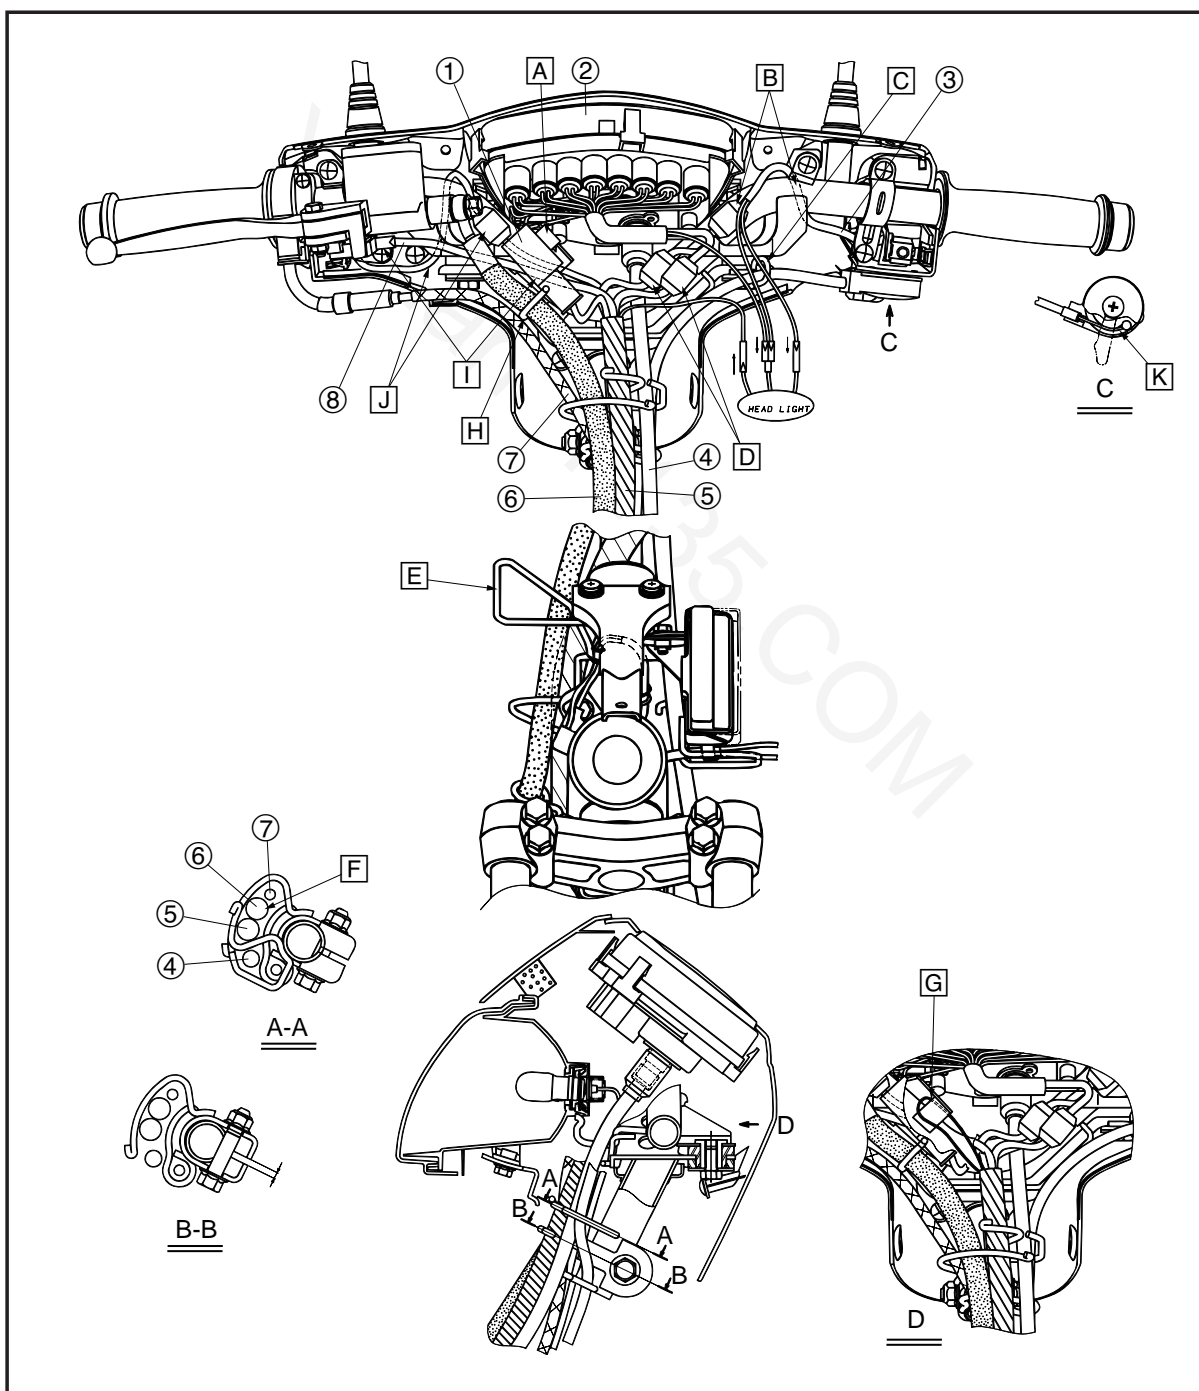



- I Pass the wireharness behind the turn signal relay and brake hose, and then connect the front brake switch.
- J Route the right handlebar switch lead behind the handlebar and connect the coupler with handlebar right side, and then set the turn signal light relay.
- K Take care not to bend the choke cable when installing.

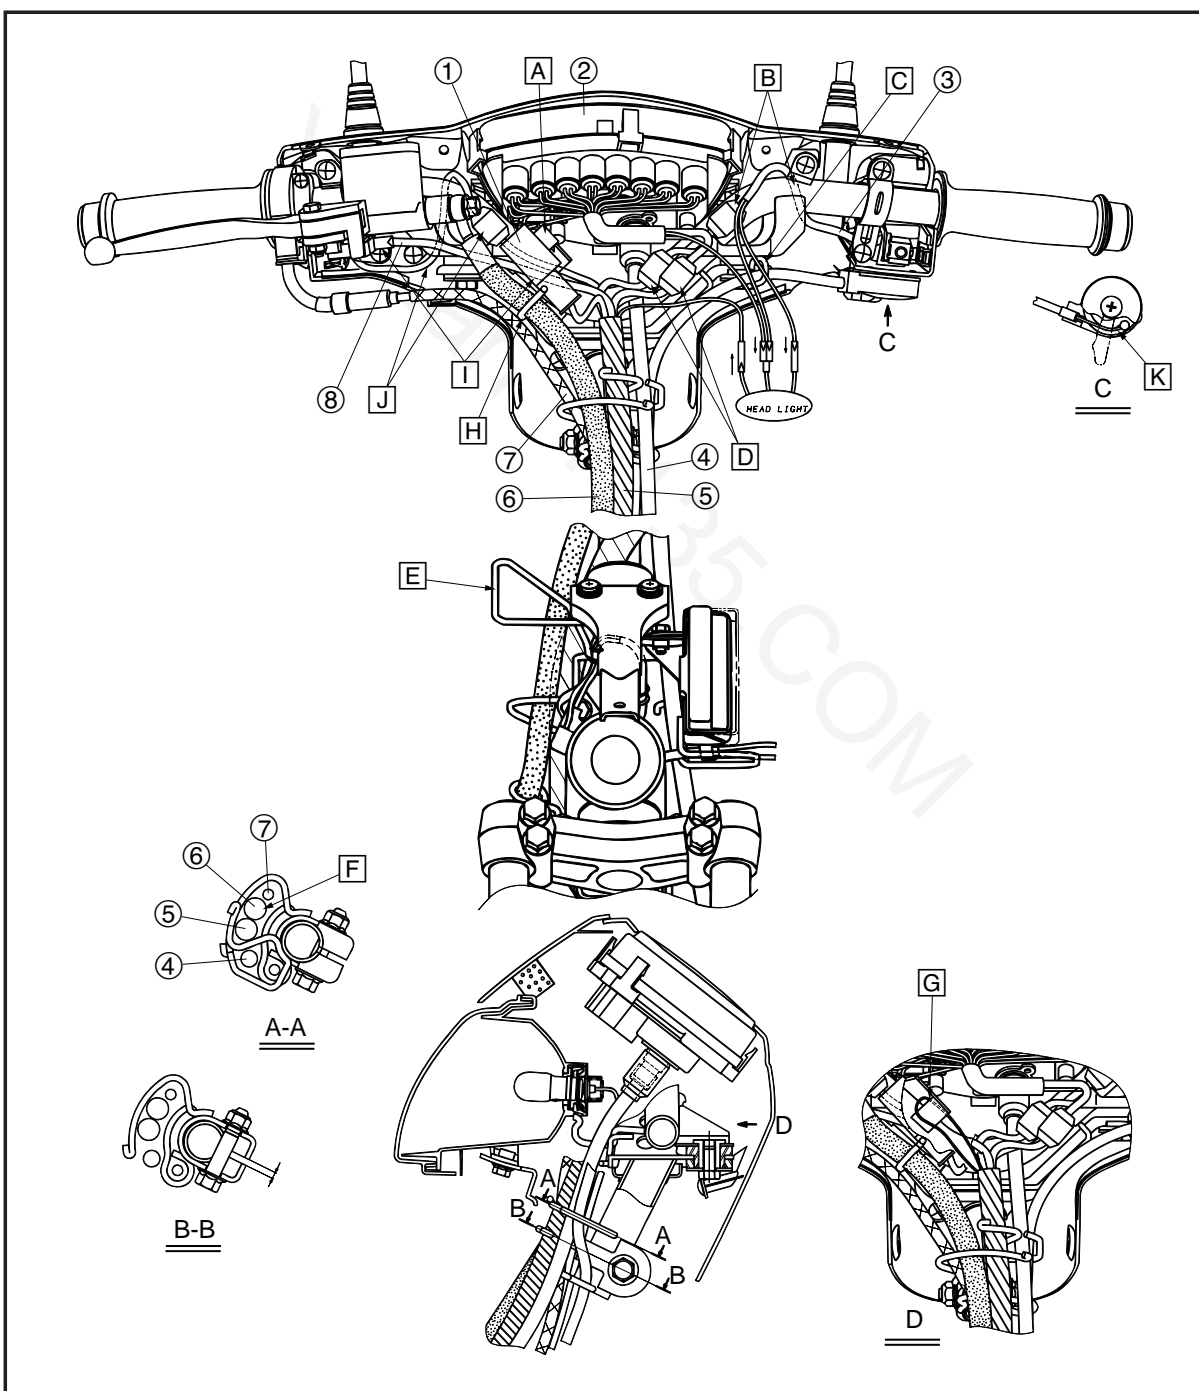



- ① Front turn signal light lead
- ② Fitting tape (red)
- ③ Throttle cable
- ④ C.D.I. unit
- ⑤ Case
- ⑥ Clamp
- ⑦ Breather pipe
- ⑧ Band
- ⑨ Air vent pipe
- ⑩ Stopper
- ⑪ Negative lead
- ⑫ Fuel hose
- ⑬ Vacuum hose
- ⑭ Overflow pipe

- ⑮ Neutral switch lead
- ⑯ A.C. magneto lead
- ⑰ Coolant reservoir hose
- ⑱ Water pump inlet hose
- ⑲ Radiator outlet hose
- ⑳ Speedometer cable

- [A] Route inside of the choke cable.
- [B] Pass through the throttle cable, choke cable and speedometer cable into the cable guide.
- [C] Pass through the C.D.I. unit


lead in front of the stay.

- [D] Check that the connection of the acceleration pump cable from case, after adjusting and clamp the throttle cable and acceleration pump cable.

- [E] Clamp the breather pipe.


- [F] Cover the throttle cable adjusting nut completely.

- [G] Clamp the neutral switch lead and A.C. magneto lead with clamp.

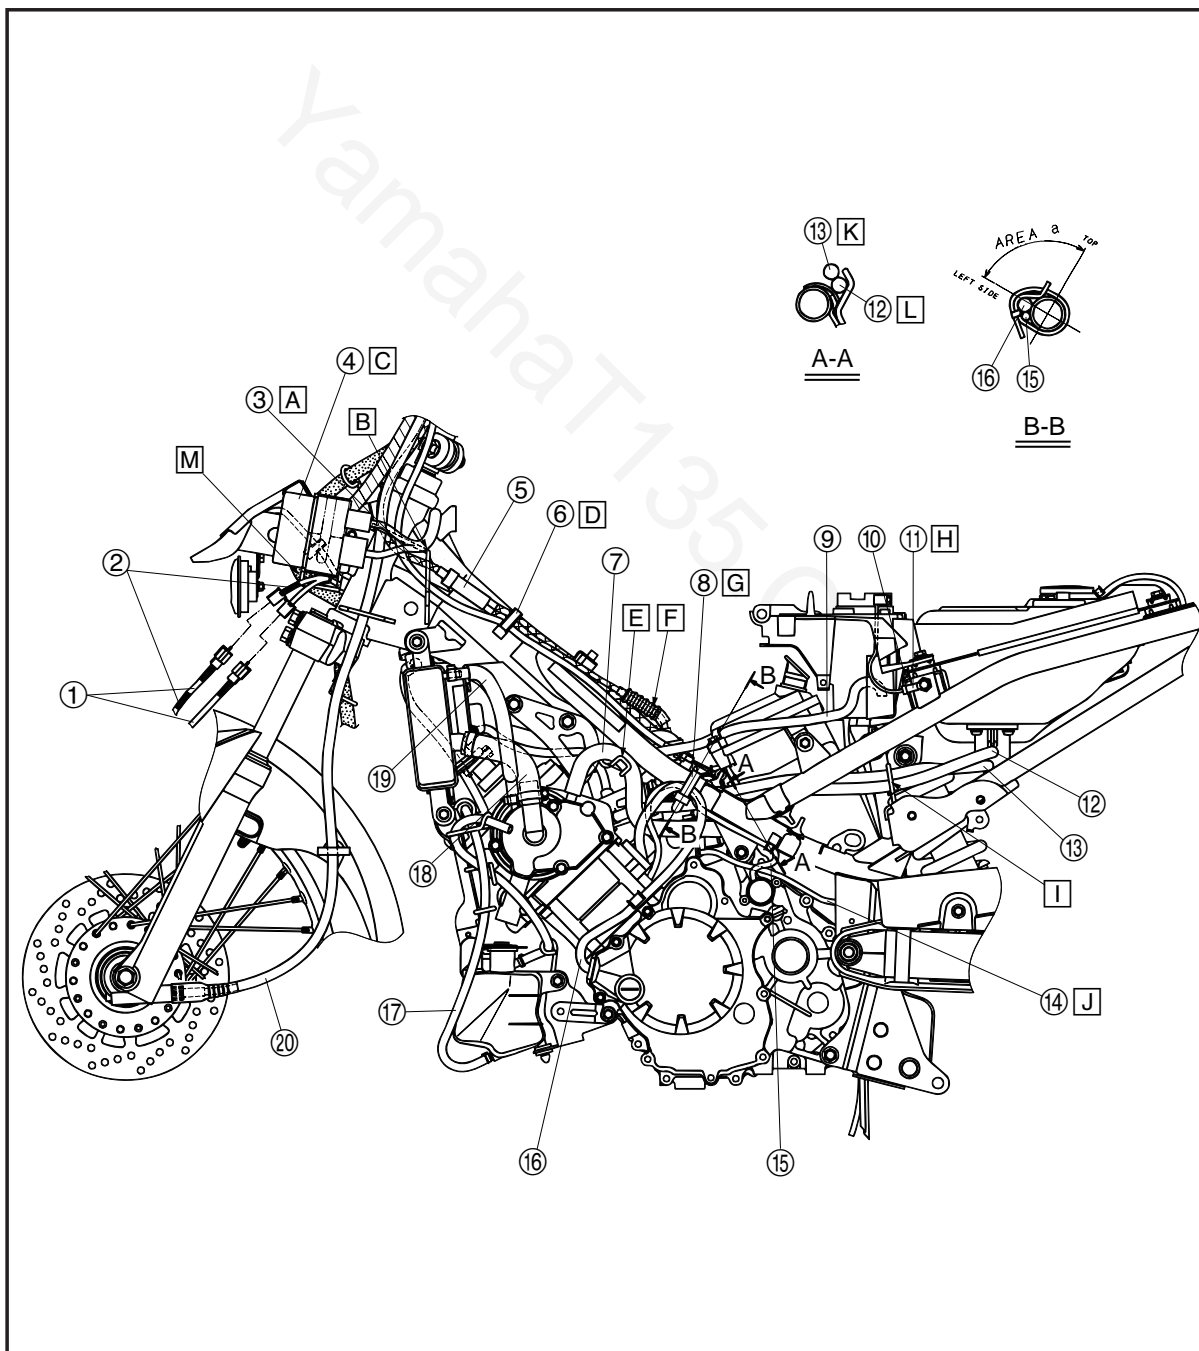



- [H] Install the negative lead, should be stopped.
- [I] Pass through the fuel hose and vacuum hose into the cable guide.
- [J] Route the overflow pipe to the left side of the engine and inside of the neutral switch lead.
- [K] Route the vacuum hose onto the fuel hose.
- [L] Route the fuel hose onto the cable guide.
- [M] Pass through the turn signal light lead into the guide.

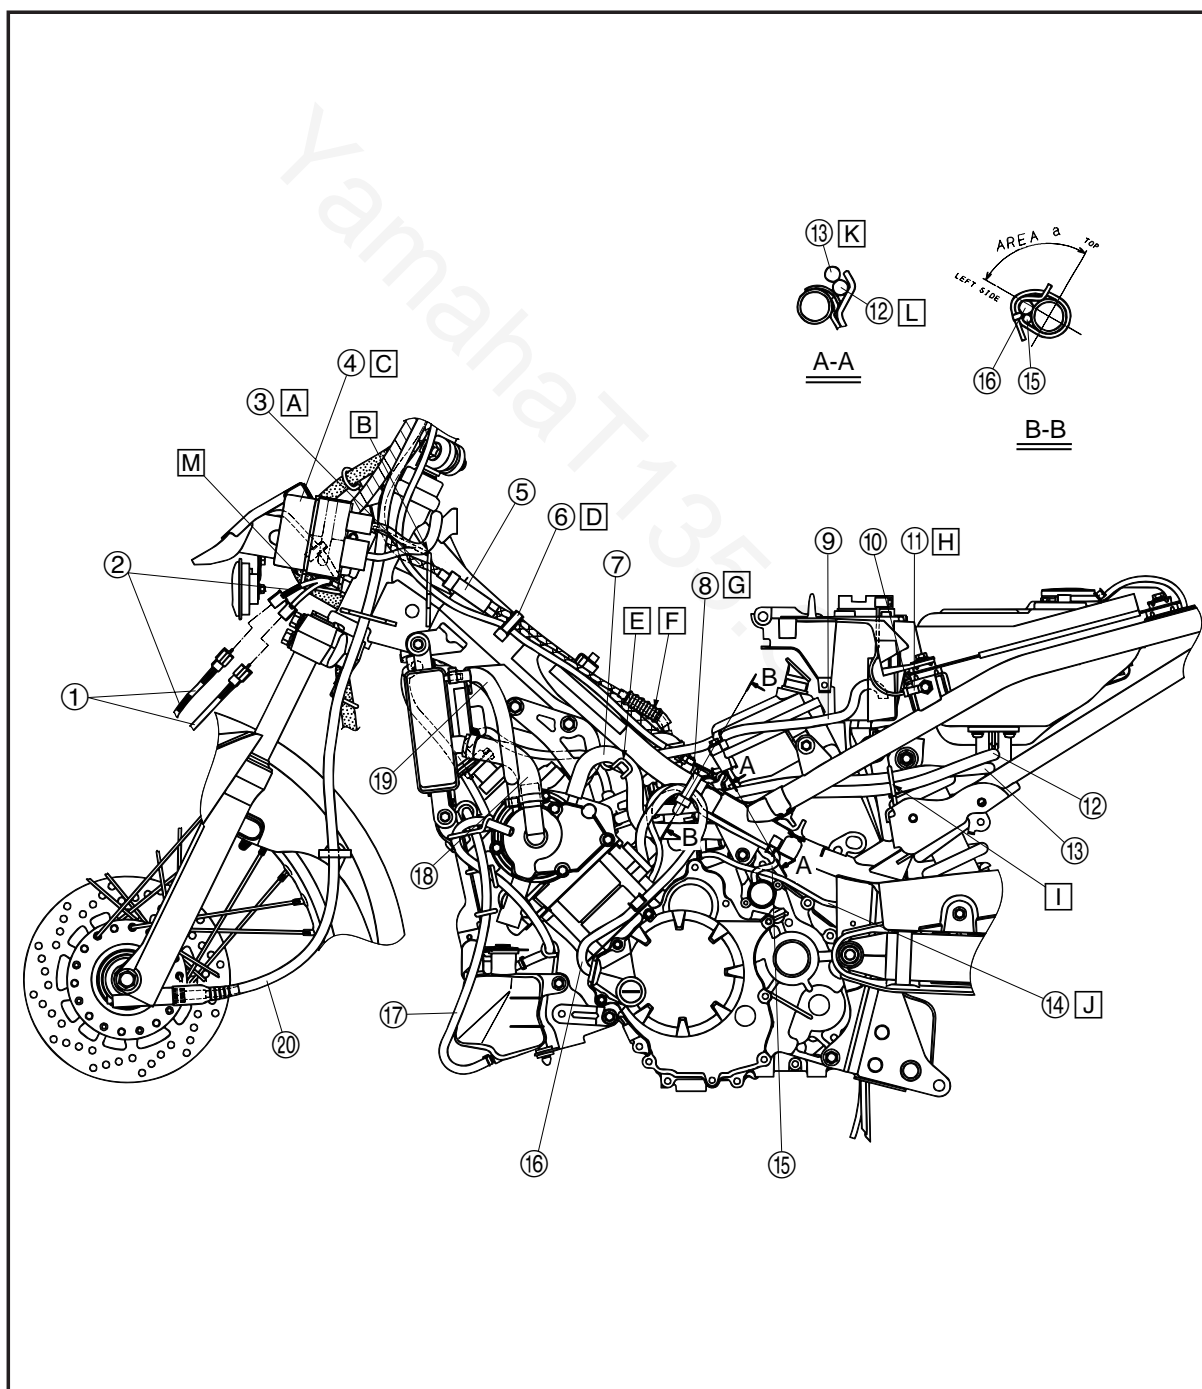




- ① Fan relay lead
- ② Positive lead
- ③ Fuse box
- ④ Starter motor lead (T135SE)
- ⑤ Rear brake switch lead
- ⑥ Battery breather pipe
- ⑦ Rectifier/regulator
- ⑧ Tail/brake light lead
- ⑨ Wireharness
- ⑩ Bracket
- ⑪ Frame
- ⑫ Air filter assembly


- ⑬ Overflow pipe
- ⑭ Drain hose
- ⑮ Protector
- [A] Pass through the fan relay lead into the frame pipe and fuel tank.
- [B] Close the clamp end until stop contact to the fuel tank.
- [C] Pass through the positive lead into the starter relay and breather pipe. (T135SE)

- [D] Pass through the starter motor lead under the wireharness. (T135SE)
- [E] Outside of the frame.
- [F] Be sure does not over the outside of the frame.
- [G] Set in the connected point to the bracket, after behind them.
- [H] Pass through the drain hose, battery breather pipe and over flow pipe into the cable guide.

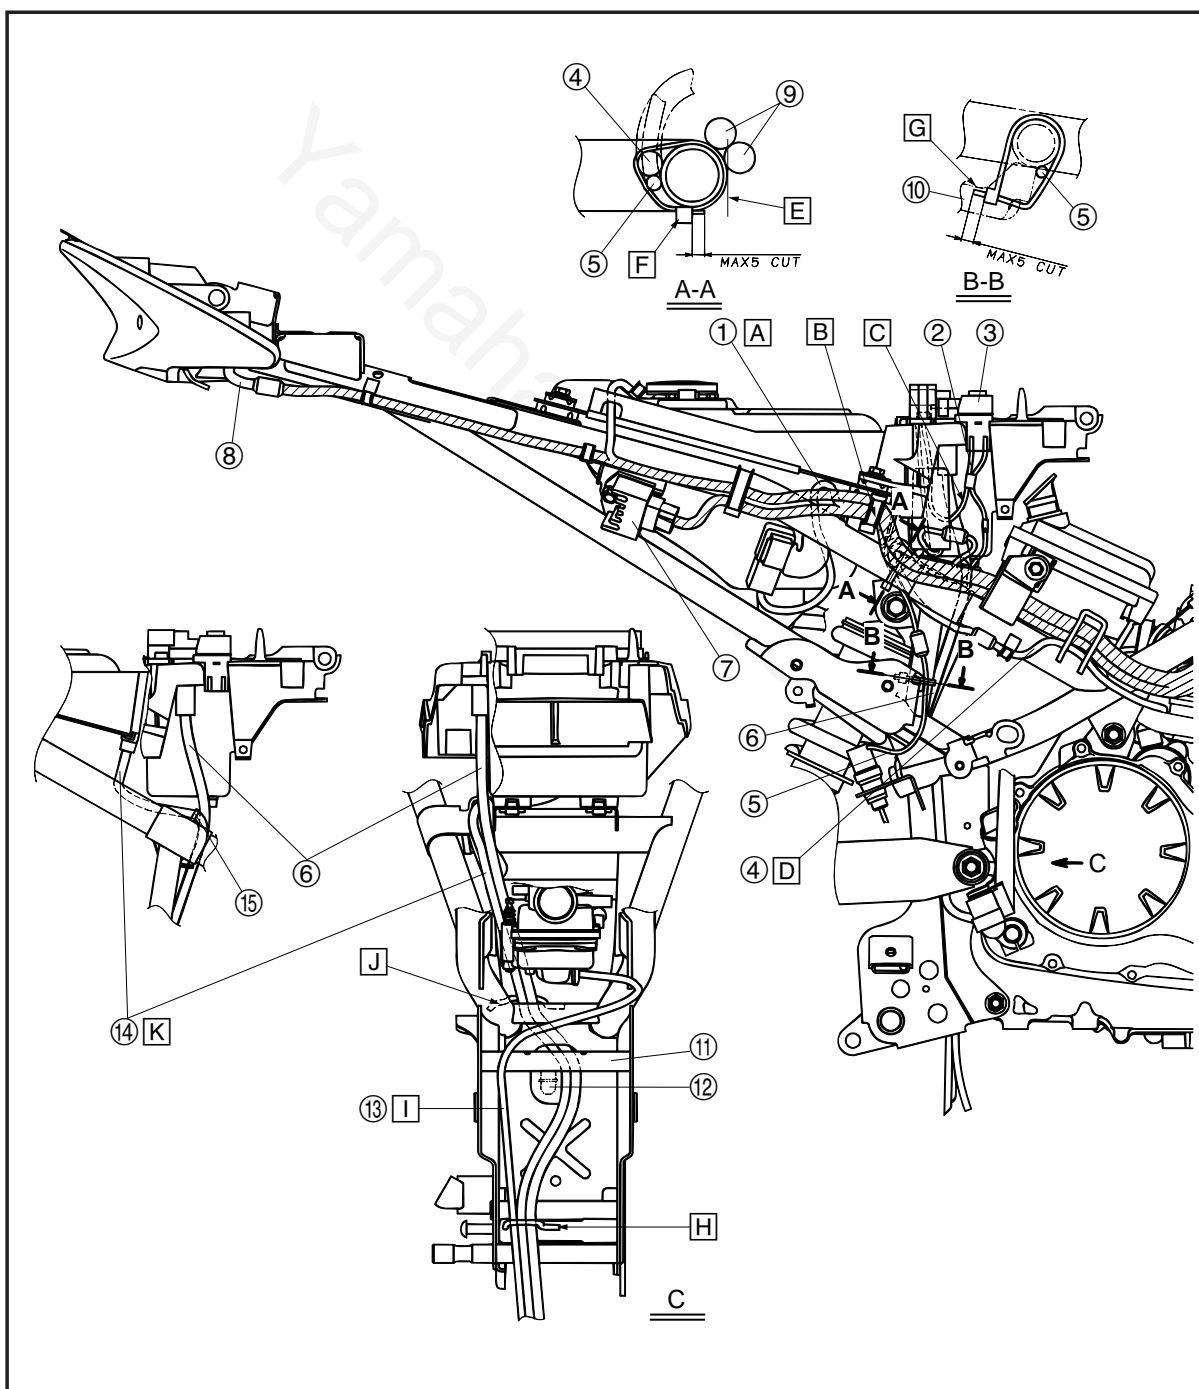



- [I] Route the overflow pipe in front of the cross pipe frame.
- [J] Pass through the drain hose and battery breather pipe into the guide.
- [K] Pass through the drain hose into the hole of the protector.

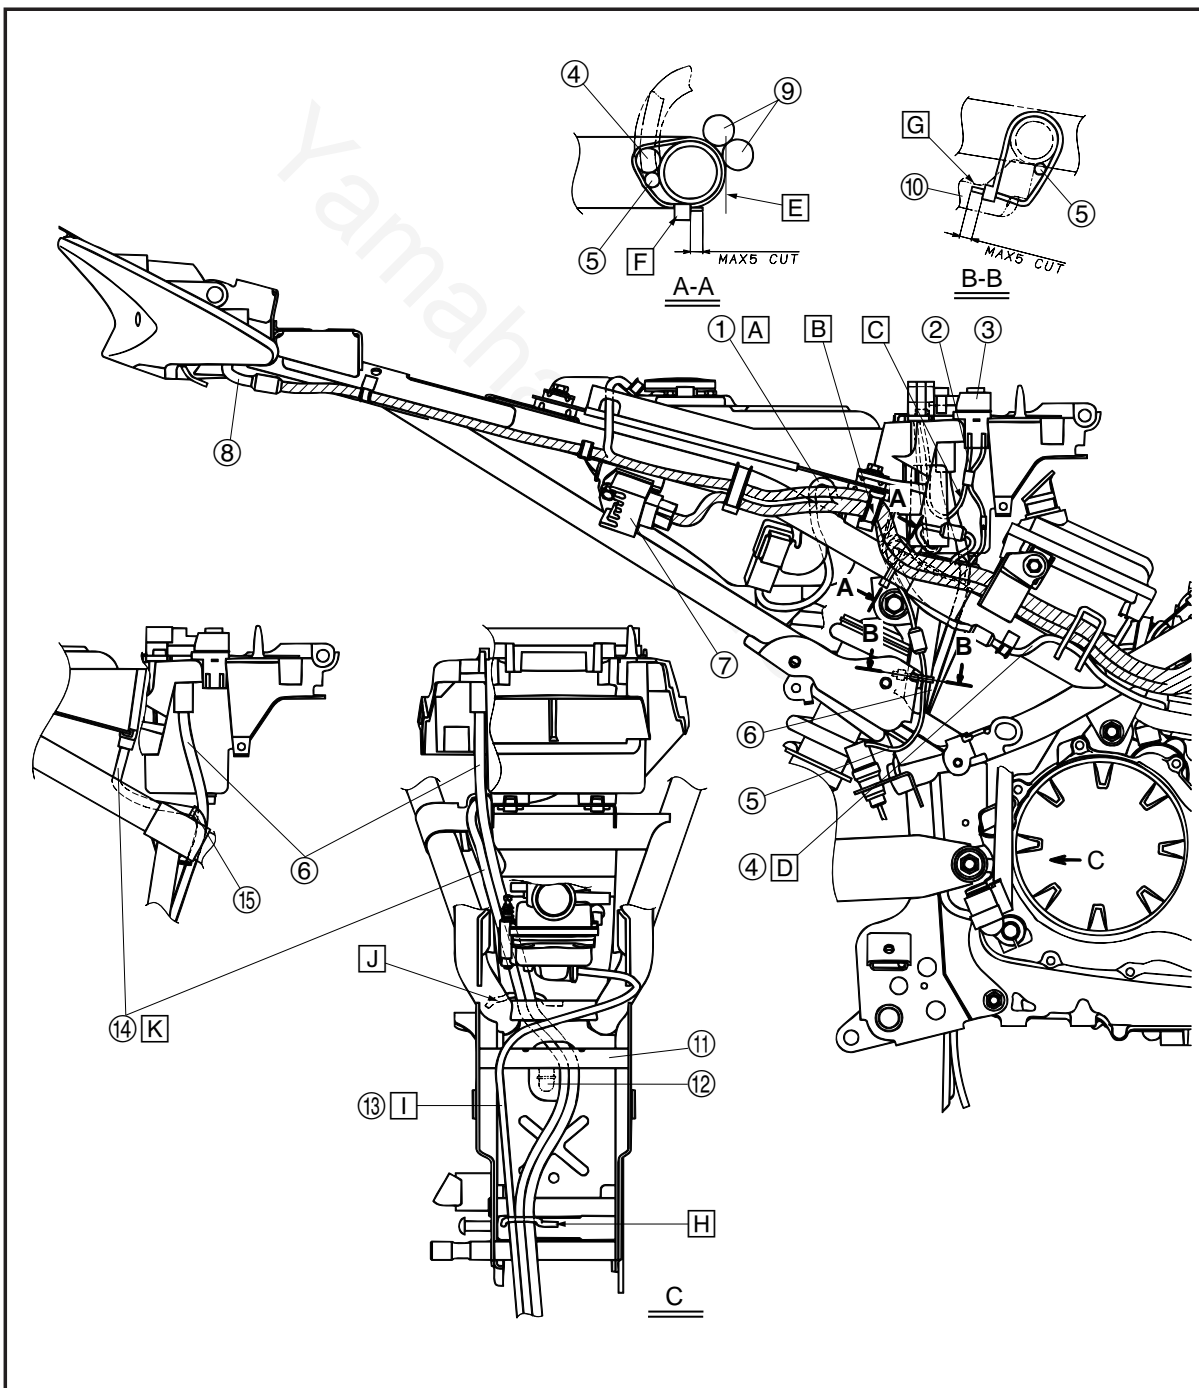




- ① Throttle position sensor lead
- ② Radiator inlet hose
- ③ Grommet
- ④ Plate
- ⑤ Fan motor lead
- ⑥ High tension cord
- ⑦ Main switch lead
- ⑧ Horn lead
- ⑨ Thermo switch lead
- ⑩ Bend hose
- ⑪ Fuel hose
- ⑫ Vacuum hose

- ⑬ Overflow pipe
- ⑭ Wireharness


- [A] Turn the downward of the separate part.
- [B] Route the brake hose through as shown.
- [C] Close the clamp certainly. Wireharness and cable guide clearance is wit in 16 mm, when straight the steering condition.

- [D] Pass through the wireharness into the main switch and cable guide. Pass through the hone lead and turn signal light lead under the wireharness.
- [E] Route the brake hose as shown.
- [F] Clamp the bend hose.
- [G] To the neutral switch.
- [H] Turn the clip inside without contact the vacuum hose.

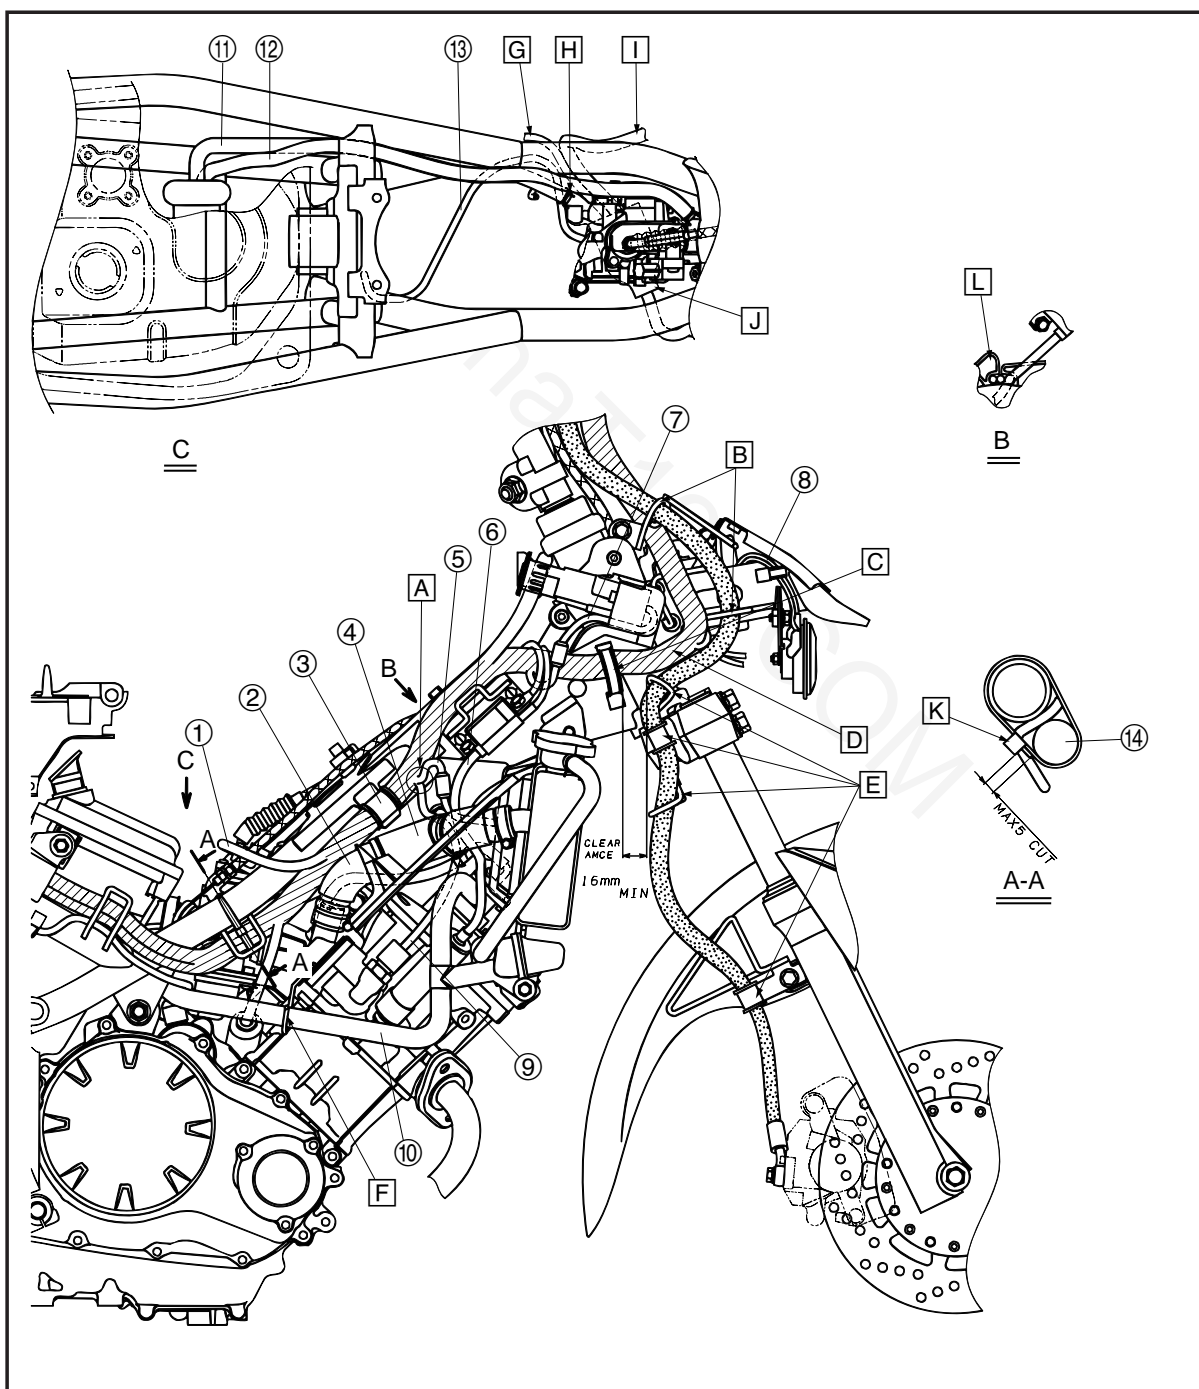




- I** To the A.C. magneto.
- J** Cover the protector completely
 , after the coupler connected.
- K** Set the connected point below
 the pipe end.
- L** Pass through the high tension
 cord, fan motor lead and ther-
 mo sensor lead into the cut
 part on the plate.

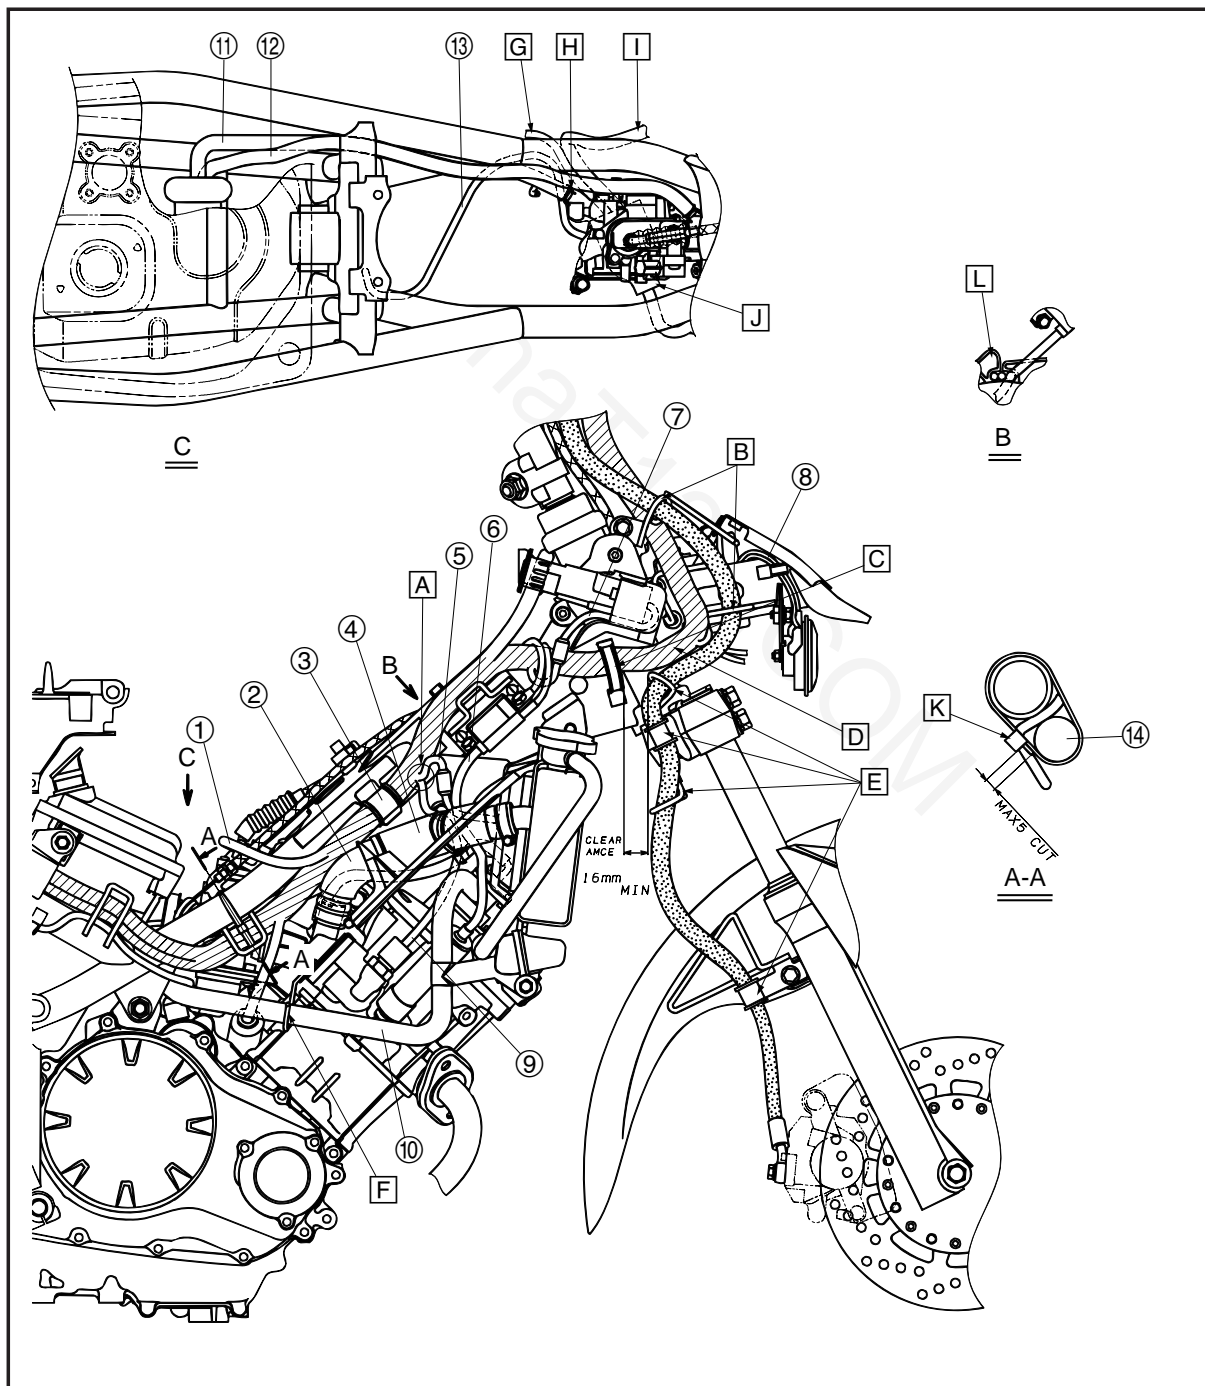



- ① Speedometer cable
- ② Acceleration pump cable
- ③ Throttle cable
- ④ Fuel sender lead
- ⑤ Choke cable

- [A] Route the acceleration pump cable into the right side of the stay.
- [B] Route the throttle cable into the left side of the stay.
- [C] Black plating joint.
- [D] Pass through the fuel sender lead in to the side hole of the fuel tank.
- [E] Clamp the fuel sender lead onto the hook of the box.
- [F] White plating joint.

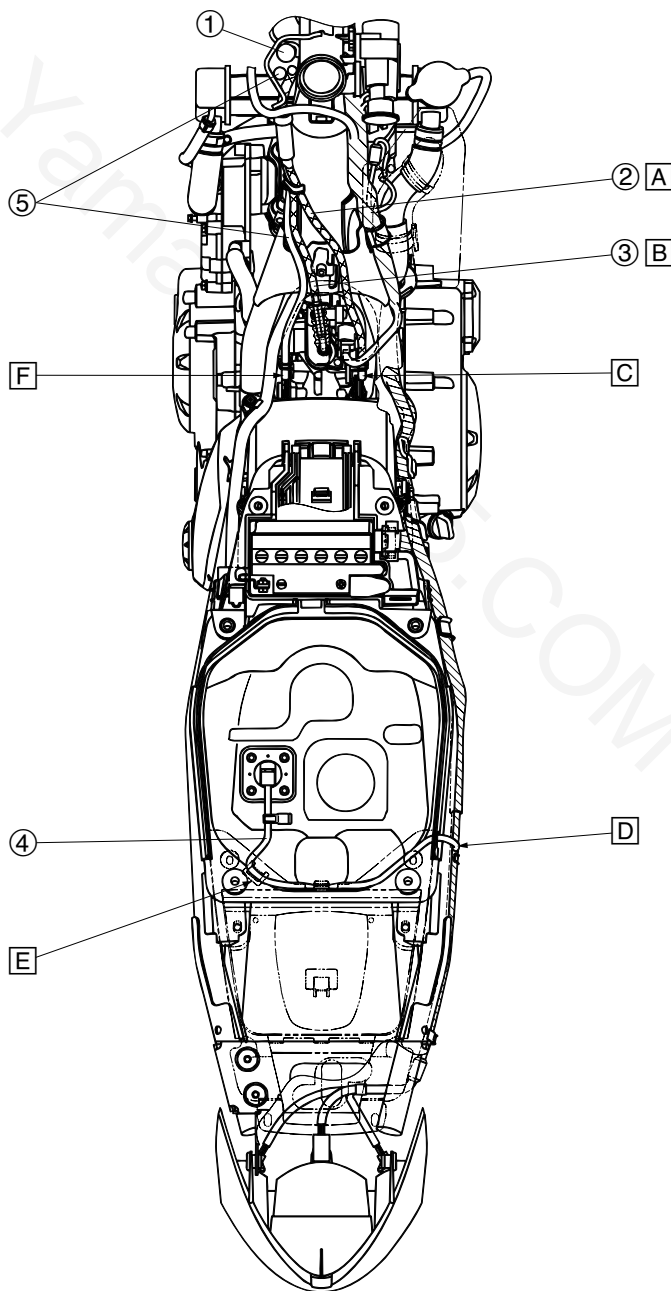



CHAPTER 3

PERIODIC CHECKS AND ADJUSTMENTS

INTRODUCTION	3-1
PERIODIC MAINTENANCE AND LUBRICATION INTERVALS	3-1
COVERS	3-3
REMOVING THE SIDE COWLINGS	3-3
INSTALLING THE SIDE COWLINGS	3-3
REMOVING THE FRONT COWLING	3-3
INSTALLING THE FRONT COWLING	3-3
REMOVING THE CENTER PANELS	3-4
INSTALLING THE CENTER PANELS	3-4
REMOVING THE REAR COWLINGS	3-4
INSTALLING THE REAR COWLINGS	3-5
REMOVING THE HEADLIGHT ASSEMBLY	3-6
INSTALLING THE HEADLIGHT ASSEMBLY	3-6
ENGINE	3-7
ADJUSTING THE VALVE CLEARANCE	3-7
ADJUSTING THE ENGINE IDLING SPEED	3-11
ADJUSTING THE THROTTLE CABLE FREE PLAY	3-12
CHECKING THE SPARK PLUG	3-14
MEASURING THE COMPRESSION PRESSURE	3-15
CHECKING THE ENGINE OIL LEVEL	3-17
CHANGING THE ENGINE OIL	3-18
CHECKING THE OIL FILTER	3-19
CHECKING THE EXHAUST SYSTEM	3-19
CLEANING THE AIR FILTER ELEMENT	3-20
ADJUSTING THE CLUTCH RELEASE SYSTEM	3-21
CHECKING THE CARBURETOR JOINT AND INTAKE MANIFOLD	3-21
CHECKING THE FUEL AND VACUUM HOSES	3-22
CHECKING THE CRANKCASE BREATHER PIPE	3-23
CHECKING THE COOLANT LEVEL	3-23
CHECKING THE COOLING SYSTEM	3-24
CHANGING THE COOLANT	3-25
CHASSIS	3-28
ADJUSTING THE REAR BRAKE	3-28
CHECKING THE FRONT BRAKE PADS	3-29
CHECKING THE REAR BRAKE SHOES	3-29
ADJUSTING THE REAR BRAKE LIGHT SWITCH	3-29
CHECKING THE FRONT BRAKE HOSE	3-30
BLEEDING THE HYDRAULIC BRAKE SYSTEM	3-31
ADJUSTING THE DRIVE CHAIN SLACK	3-32
LUBRICATING THE DRIVE CHAIN	3-34
CHECKING THE BRAKE FLUID LEVEL	3-34



CHECKING AND ADJUSTING THE STEERING HEAD	3-35
CHECKING THE FRONT FORK	3-37
CHECKING THE TIRES	3-38
CHECKING AND TIGHTENING THE SPOKES	3-40
CHECKING AND LUBRICATING THE CABLES	3-41
LUBRICATING THE LEVER AND PEDALS	3-41
LUBRICATING THE SIDESTAND	3-41
LUBRICATING THE CENTERSTAND	3-41
 ELECTRICAL SYSTEM	 3-42
CHECKING AND CHARGING THE BATTERY	3-42
CHECKING THE FUSE	3-46
REPLACING THE HEADLIGHT BULBS	3-47
ADJUSTING THE HEADLIGHT BEAM	3-48



EAS00036

PERIODIC CHECKS AND ADJUSTMENTS

INTRODUCTION

This chapter includes all information necessary to perform recommended checks and adjustments. If followed, these preventive maintenance procedures will ensure more reliable vehicle operation, a longer service life and reduce the need for costly overhaul work. This information applies to vehicles already in service as well as to new vehicles that are being prepared for sale. All service technicians should be familiar with this entire chapter.

EAS00037

PERIODIC MAINTENANCE AND LUBRICATION INTERVALS

NO.	ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING (× 1000 km)					ANNUAL CHECK
			1	6	12	18	24	
1	* Fuel line	• Check fuel and vacuum hoses for cracks or damage.		√	√	√	√	√
2	* Spark plug	• Check condition. • Clean and regap.		√		√		
		• Replace.			√		√	
3	* Valves	• Check valve clearance. • Adjust.		√	√	√	√	
4	* Air filter element	• Clean.		√		√		
		• Replace.			√		√	
5	* Battery	• Check electrolyte level and specific gravity. • Make sure that the breather hose is properly routed.		√	√	√	√	√
6	* Front brake	• Check operation, fluid level and vehicle for fluid leakage.	√	√	√	√	√	√
		• Replace brake pads.	Whenever worn to the limit					
7	* Rear brake	• Check operation and adjust brake pedal free play.	√	√	√	√	√	√
		• Replace brake shoes.	Whenever worn to the limit					
8	* Brake hose	• Check for cracks or damage.	√	√	√	√	√	√
		• Replace.	Every 4 years					
9	* Wheels	• Check runout, spoke tightness and for damage. • Tighten spokes if necessary.		√	√	√	√	
10	* Tires	• Check tread depth and for damage. • Replace if necessary.		√	√	√	√	√
		• Check air pressure. • Correct if necessary.						
11	* Wheel bearings	• Check bearing for looseness or damage.		√	√	√	√	
12	* Swingarm	• Check operation and for excessive play.		√	√	√	√	
		• Lubricate with lithium-soap-based grease.	Every 24000 km					
13	* Drive chain	• Check chain slack, alignment and condition. • Adjust and thoroughly lubricate chain with engine oil.	Every 500 km and after washing the motorcycle or riding in the rain					
14	* Steering bearings	• Check bearing play and steering for roughness.	√	√	√	√	√	
		• Lubricate with lithium-soap-based grease.	Every 24000 km					
15	* Chassis fasteners	• Make sure that all nuts, bolts and screws are properly tightened.		√	√	√	√	√
16	* Sidestand, centerstand	• Check operation. • Lubricate.		√	√	√	√	√
17	* Front fork	• Check operation and for oil leakage.		√	√	√	√	
18	* Shock absorber assembly	• Check operation and shock absorber for oil leakage.		√	√	√	√	
19	* Carburetor	• Check starter (choke) operation. • Adjust engine idling speed.	√	√	√	√	√	√
20	* Engine oil	• Change. • Check oil level and vehicle for oil leakage.	√	√	√	√	√	√
21	* Engine oil filter element	• Replace.	√		√		√	

PERIODIC MAINTENANCE AND LUBRICATION INTERVALS


CHK
ADJ

NO.	ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING (× 1000 km)					ANNUAL CHECK
			1	6	12	18	24	
22	* Cooling system	• Check coolant level and vehicle for coolant leakage.		√	√	√	√	√
		• Change the YAMAHA GENUINE COOLANT.	Every 3 years					
23	* Front and rear brake switches	• Check operation.	√	√	√	√	√	√
24	Moving parts and cables	• Lubricate.		√	√	√	√	√
25	* Throttle grip housing and cable	• Check operation and free play. • Adjust the throttle cable free play if necessary. • Lubricate the throttle grip housing and cable.		√	√	√	√	√
26	* Air induction system	• Check the air cut-off valve, reed valve, and hose for damage. • Replace any damaged parts if necessary.		√	√	√	√	√
27	* Lights, signals and switches	• Check operation. • Adjust headlight beam.	√	√	√	√	√	√

EAU18660

NOTE:

- The air filter needs more frequent service if you are riding in unusually wet or dusty areas.
- Hydraulic brake service
 - Regularly check and, if necessary, correct the brake fluid level.
 - Every two years replace the internal components of the brake master cylinder and caliper, and change the brake fluid.
 - Replace the brake hoses every four years and if cracked or damaged.

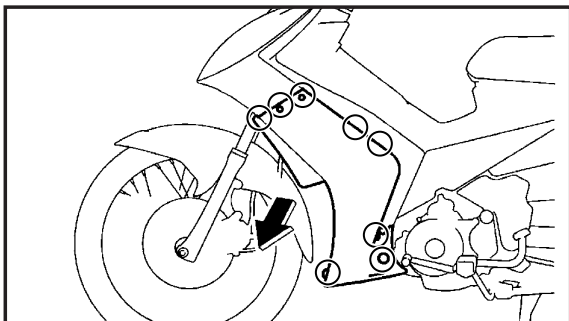


EASF0004

COVERS
REMOVING THE SIDE COWLINGS



1. Remove:
 - screws
 - bolts
 - side cowlings (left and right)

INSTALLING THE SIDE COWLINGS

For installation, reverse the removal procedure.

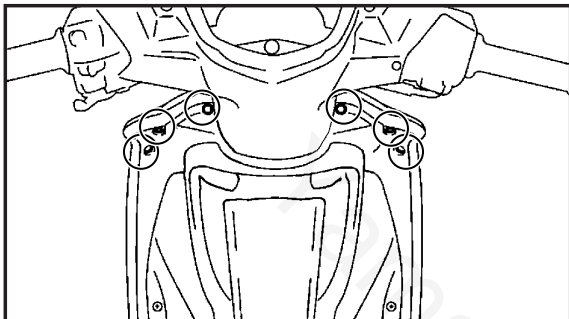**REMOVING THE FRONT COWLING**


1. Remove:
 - screws
 - front cowl

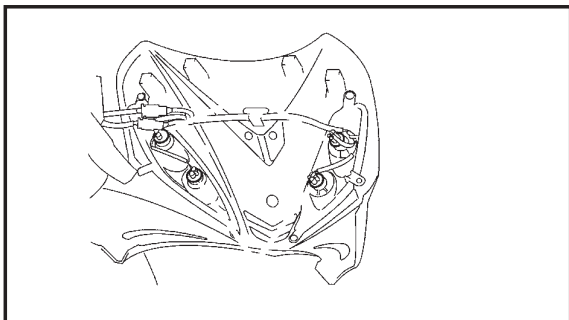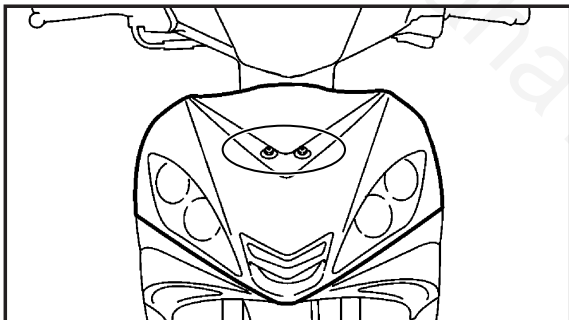

2. Disconnect:
 - turn signal light couplers

INSTALLING THE FRONT COWLING

For installation, reverse the removal procedure.


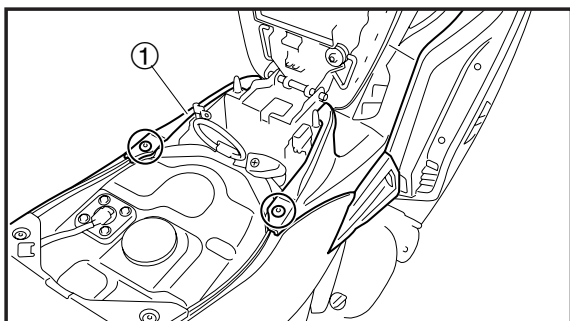
**REMOVING THE CENTER PANELS**

1. Remove:

- screws
- center panel (lower) ①
- main switch cover ②
- screws
- center panel (upper) ③

NOTE:

Remove the main switch cover by turning it in the direction of the arrow shown.

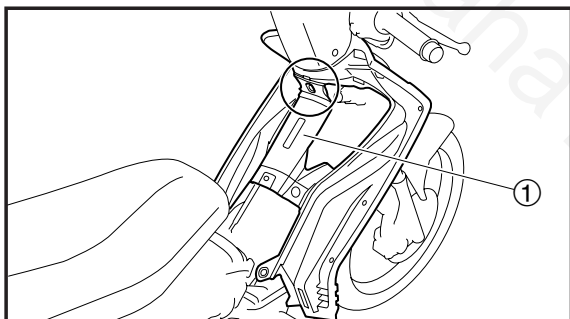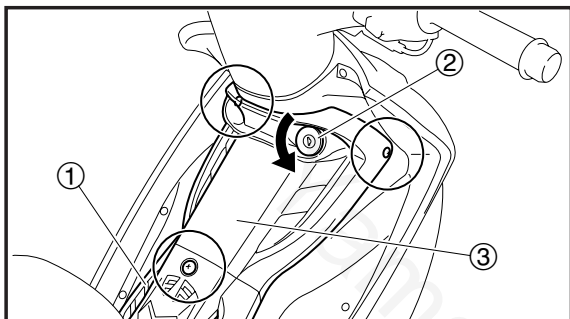


2. Remove:

- screw
- inner panel ①

INSTALLING THE CENTER PANELS

For installation, reverse the removal procedure.

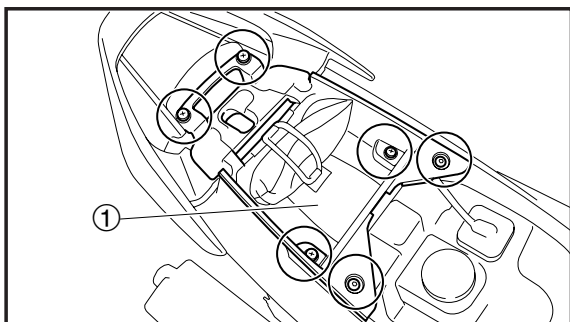
**REMOVING THE REAR COWLINGS**

1. Remove:

- screws
- center panel (lower)

2. Remove:

- screws
- storage compartment ①

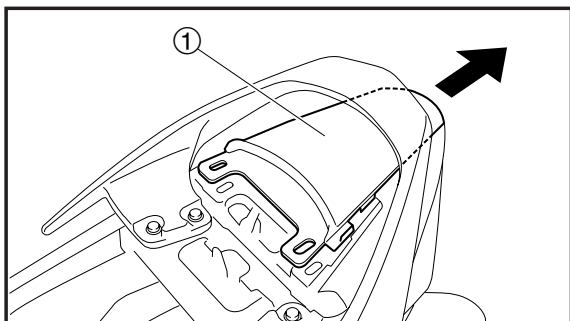


3. Remove:

- rear panel ①


NOTE:

Remove the rear panel by sliding it in the direction shown.

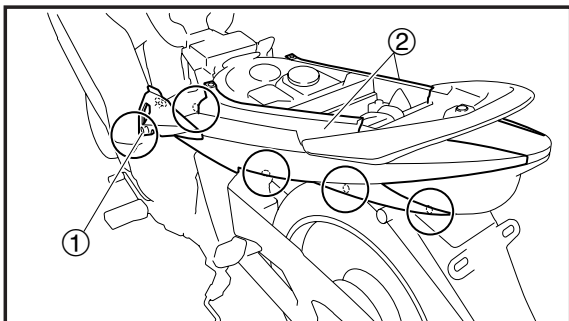

4. Remove:

- screws
- screw (with washer) ①
- screws
- rear cowlings (left and right) ②

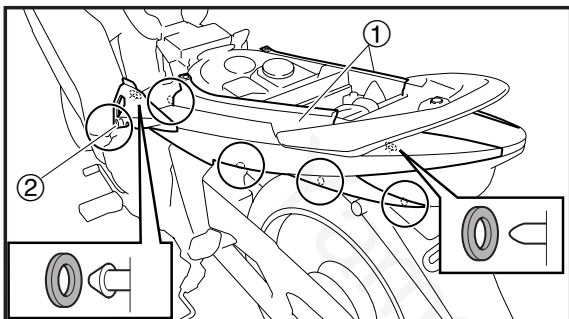
**INSTALLING THE REAR COWLINGS**

1. Install:

- rear cowlings (left and right) ①
- screws
- screw (with washer) ②

NOTE:

Before tightening the rear cowling screws, make sure that all projections (left and right) are securely fitted.

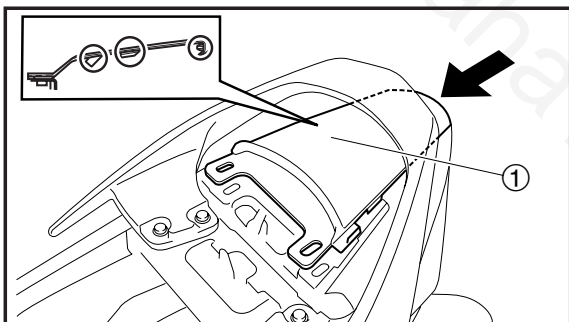


2. Install:

- rear panel ①
- storage compartment ②
- screws


NOTE:


Make sure that all projections are securely fitted.

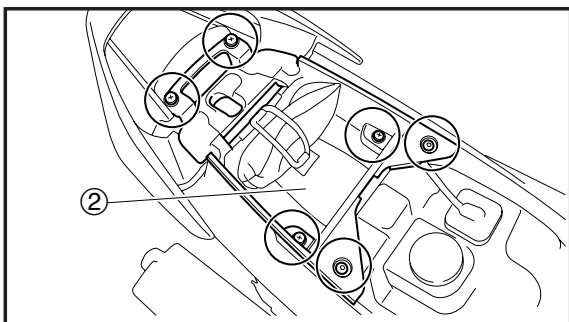

3. Install:



- center panel (upper) ①
- screw

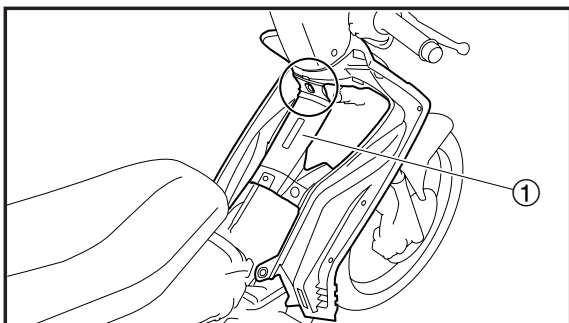

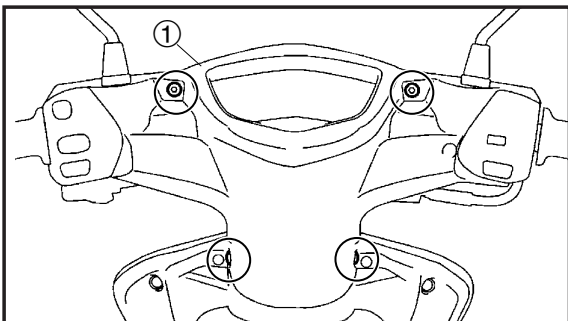**REMOVING THE HEADLIGHT ASSEMBLY**

1. Remove:

- screws
- headlight assembly ①

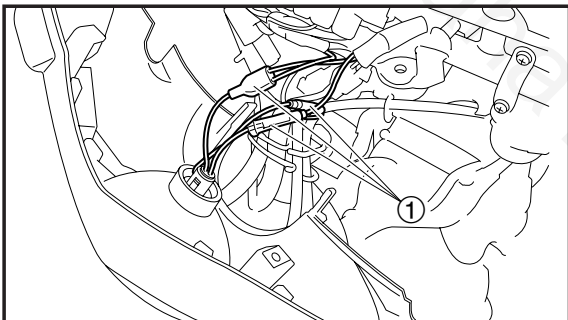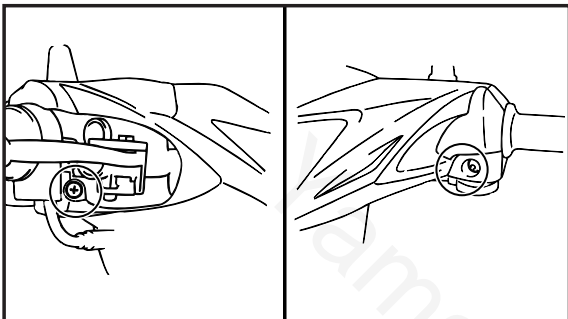

2. Disconnect:

- headlight connectors ①


INSTALLING THE HEADLIGHT ASSEMBLY

1. Connect:

- headlight connectors ①

2. Install:

- headlight assembly
- screws

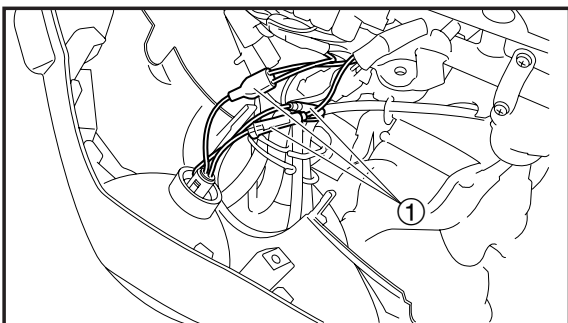



EAS00049

ENGINE**ADJUSTING THE VALVE CLEARANCE**

The following procedure applies to all of the valves.

NOTE:

- Valve clearance adjustment should be made on a cold engine, at room temperature.
- When the valve clearance is to be measured or adjusted, the piston must be at top dead center (TDC) on the compression stroke.

1. Remove:


- side cowlings (left and right)
- front cowling

Refer to "REMOVING THE SIDE COWLINGS" AND "REMOVING THE FRONT COWLING".

2. Drain:

- cooling system

Refer to "CHANGING THE COOLANT".

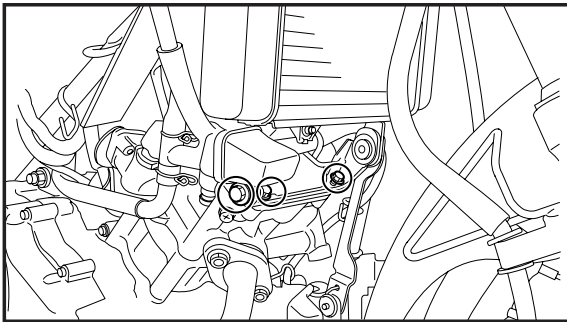


3. Remove:

- AIS resonator mount bolt
- AIS resonator
- spark plug
- bracket

Refer to "CHANGING THE COOLANT".

CAUTION:

Be sure to remove the AIS hose, before removing the AIS resonator, otherwise to brake the AIS resonator mount.

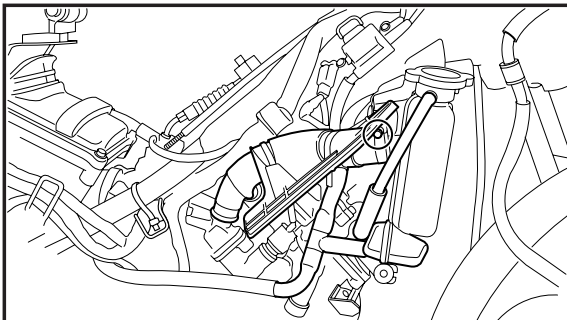

4. Disconnect:

- radiator inlet hose
- radiator outlet hose
- water pump inlet hose

ADJUSTING THE VALVE CLEARANCE

CHK
ADJ

11. Install:

- O-ring **New**
- timing check plug
(with O-ring)
- center plug
(with O-ring)


7 Nm (0.7 m•kg, 5.0 ft•lb)

7 Nm (0.7 m•kg, 5.0 ft•lb)

12. Install:

- gasket ① **New**
- cylinder head cover

10Nm (1.0 m•kg, 7.2 ft•lb)

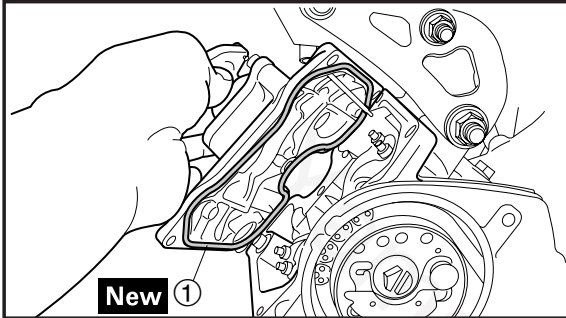

13. Install:

- O-ring **New**
- water pump assembly

10Nm (1.0 m•kg, 7.2 ft•lb)

14. Connect

- water pump inlet hose
- radiator outlet cover
- radiator inlet hose

15. Install:

- AIS resonator
- AIS resonator mount bolt
- spark plug

12.5Nm (1.25 m•kg, 9.0 ft•lb)

16. Fill:

- cooling system
- Refer to "CHANGING THE COOLANT".

17. Install:

- front cowling
 - side cowlings (left and right)
- Refer to "INSTALLING THE SIDE COWLINGS" and "INSTALLING THE FRONT COWLING".

Yamaha T135 Service Manual

ADJUSTING THE ENGINE IDLING SPEED/ ADJUSTING THE THROTTLE CABLE FREE PLAY

CHK
ADJ



6. Adjust:

- throttle cable free play

Refer to "ADJUSTING THE THROTTLE CABLE FREE PLAY".



**Throttle cable free play (at the
flange of the throttle grip)**
3–7 mm (0.12–0.28 in)

7. Install:

- rear cowling (left)
- front cowling
- side cowlings (left and right)


Refer to "INSTALLING THE REAR COWLINGS", "INSTALLING THE FRONT COWLING" and "INSTALLING THE REAR COWLINGS".

EAS00058

ADJUSTING THE THROTTLE CABLE FREE PLAY

NOTE:

Prior to adjusting the throttle cable free play, the engine idling speed should be adjusted.

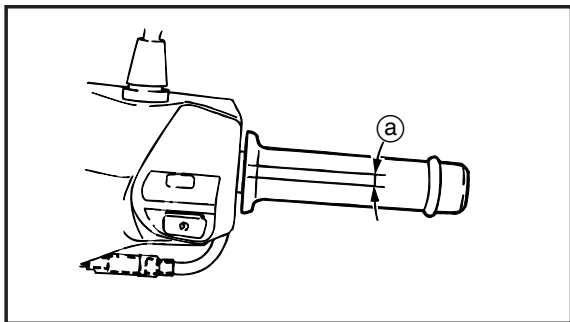

1. Check:

- throttle cable free play (a)

Out of specification → Adjust.




**Throttle cable free play (at the
flange of the throttle grip)**
3–7 mm (0.12–0.28 in)

2. Remove:

- center panel (lower)

Refer to "REMOVING THE CENTER PANELS".

ADJUSTING THE THROTTLE CABLE FREE PLAY

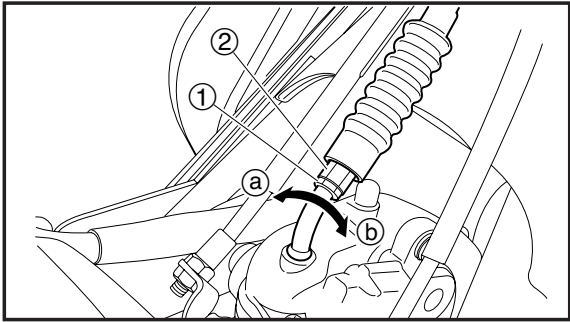

3. Adjust:
- throttle cable free play




- a. Pull back the adjusting nut cover.
b. Loosen the locknut ①
c. Turn the adjusting nut ② in direction ① or ② until the specified throttle cable free play is obtained.

Direction ①	Throttle cable free play is increased.
Direction ②	Throttle cable free play is decreased.

- d. Tighten the locknut.
e. Slide the adjusting nut cover to its original position.

⚠WARNING


After adjusting the throttle cable free play, start the engine and turn the handlebar to the right or left to ensure that this does not cause the engine idling speed to change.

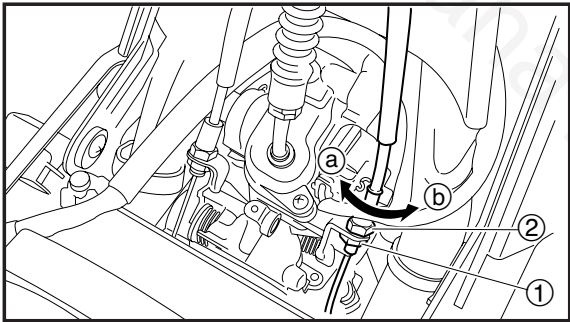

4. Adjust:
- accelerator pump cable



- a. Loosen the locknut ①
b. Turn the adjusting nut ② in direction ① or ② until align the projection ③ on the accelerator pump lever with projection ④ on the bracket. (⑤: within $\pm 1\text{mm}$)
c. Tighten the locknut.

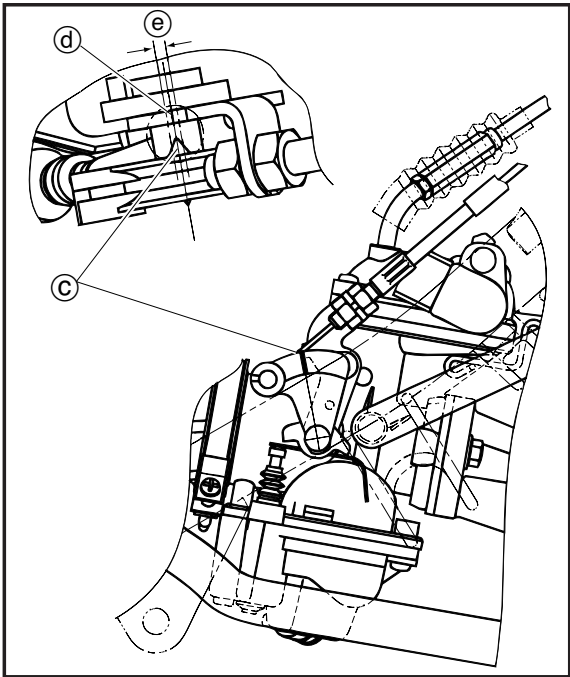



EAS00060

CHECKING THE SPARK PLUG

1. Remove:

- side cowl (right)

Refer to "REMOVING THE SIDE COWLINGS".

- AIS resonator

CAUTION:

Be sure to remove the AIS hose, before removing the AIS resonator, otherwise to brake the AIS resonator mount.

2. Disconnect:

- spark plug cap

3. Remove:

- spark plug

CAUTION:

Before removing the spark plug, blow away any dirt accumulated in the spark plug well with compressed air to prevent it from falling into the cylinder.

4. Check:

- spark plug type

Incorrect → Change.



Spark plug type (manufacturer)
CPR8EA-9 (NGK)

5. Check:

- electrode ①

Damage/wear → Replace the spark plug.

- insulator ②

Abnormal color → Replace the spark plug.

Normal color is medium-to-light tan.

6. Clean:

- spark plug

(with a spark plug cleaner or wire brush)

7. Measure:


- spark plug gap ③

(with a wire thickness gauge)

Out of specification → Regap.



Spark plug gap
0.8–0.9 mm (0.031–0.035 in)

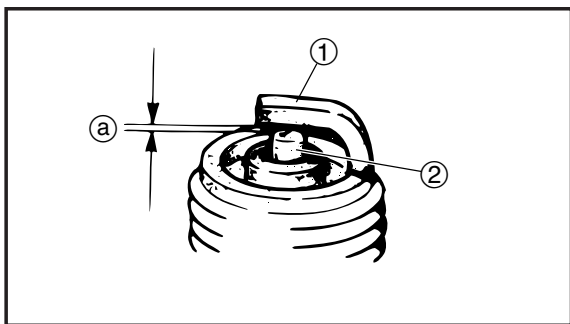

Yamaha T135 Service Manual

CHECKING THE SPARK PLUG/ MEASURING THE COMPRESSION PRESSURE

CHK
ADJ



8. Install:

- spark plug

13 Nm (1.3 m•kg, 9.5 ft•lb)

NOTE:

Before installing the spark plug, clean the spark plug and gasket surface.

9. Connect:

- spark plug cap

10. Install:

- AIS resonator
- center panel (lower)

Refer to "INSTALLING THE CENTER PANELS".

EAS00067

MEASURING THE COMPRESSION PRESSURE

NOTE:

Insufficient compression pressure will result in a loss of performance.

1. Remove:

- side cowling (right)

Refer to "REMOVING THE SIDE COWLING".

2. Measure:

- valve clearance

Out of specification → Adjust

Refer to "ADJUSTING THE VALVE CLEARANCE".

3. Start the engine, warm it up for several minutes, and then turn it off.

4. Disconnect:

- spark plug cap

5. Remove:

- spark plug

CAUTION:

Before removing the spark plug, use compressed air to blow away any dirt accumulated in the spark plug well to prevent it from falling into the cylinder.

Yamaha T135 Service Manual

MEASURING THE COMPRESSION PRESSURE/ CHECKING THE ENGINE OIL LEVEL

CHK
ADJ



8. Install:

- spark plug

13 Nm (1.3 m•kg, 9.5 ft•lb)

9. Connect:

- spark plug cap

10. Install:

- side cowling (right)

Refer to "INSTALLING THE SIDE COWLINGS".

EAS00070

CHECKING THE ENGINE OIL LEVEL

1. Stand the vehicle on a level surface.

NOTE:

Make sure the vehicle is upright.

2. Start the engine, warm it up for several minutes, and then turn it off.

3. Remove:



- oil level plug ①

4. Check:

- engine oil level

The engine oil level should be between the minimum level mark ① and maximum level mark ②.

Below the minimum level mark → Add the recommended engine oil to the proper level.

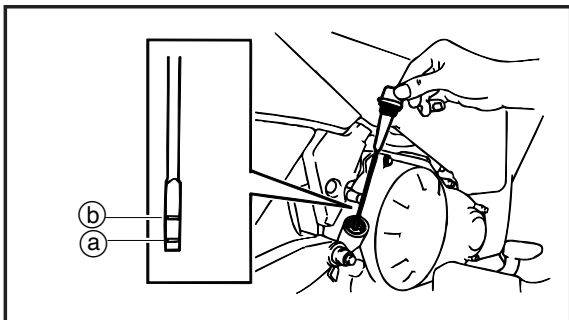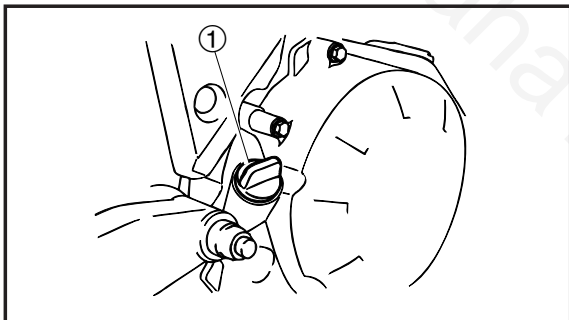

Recommended oil

SAE 20W40 type SF or SAE 20W50
motor oil

CAUTION:

Do not allow foreign materials to enter the crankcase.

NOTE:

- Insert the oil level plug back into the oil filler hole (without screwing it in), and then remove it again to check the oil level.
- Before checking the engine oil level, wait a few minutes until the oil has settled.

5. Start the engine, warm it up for several minutes, and then turn it off.



6. Check the engine oil level again.



EAS00075

CHANGING THE ENGINE OIL

1. Start the engine, warm it up for several minutes, and then turn it off.
2. Place a container under the engine oil drain bolt.

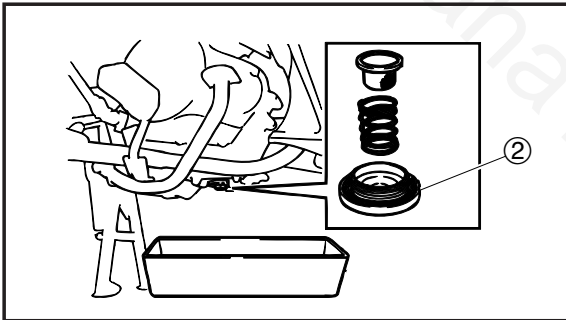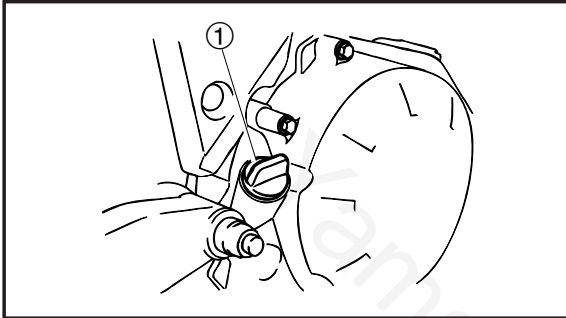

3. Remove:
 - oil level plug ①
 - engine oil drain plug ② (with O-ring)
 - spring
 - oil strainer
 4. Drain:
 - engine oil (completely from the crankcase)
 5. Check:
 - oil strainer
Clog → Clean.
Damage → Replace.
 6. Install:
 - oil strainer
 - spring
 - O-ring **New**
 - engine oil drain plug
- 32 Nm (3.2 m•kg, 23 ft•lb)**
7. Fill:
 - crankcase (with the specified amount of the recommended engine oil)



Quantity


Total amount

1.15 L (1.22 US qt, 1.01 Imp qt)

Periodic oil change amount


0.8 L (0.85 US qt, 0.70 Imp qt)

8. Install:
 - oil level plug
9. Start the engine, warm it up for several minutes, and then turn it off.
10. Check:
 - engine (for engine oil leaks)
11. Check:
 - engine oil level
Refer to "CHECKING THE ENGINE OIL LEVEL".

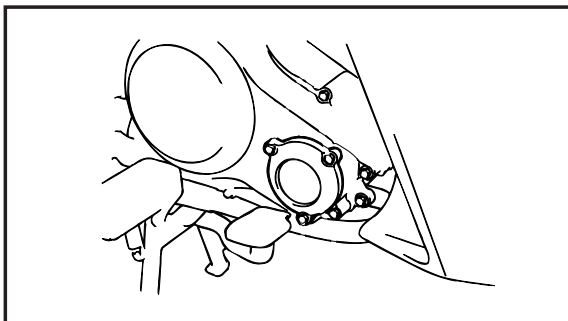


CHECKING THE OIL FILTER

1. Remove:
 - oil filter element cover
 - O-ring
 - oil filter element
2. Check:
 - oil filter element
 - Dirt or clog → Replace.

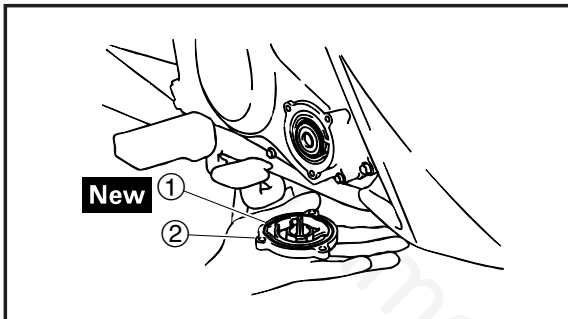

3. Install:
 - oil filter element
 - O-ring ① **New**
 - oil filter element cover


10 Nm (1.0 m•kg, 7.2 ft•lb)

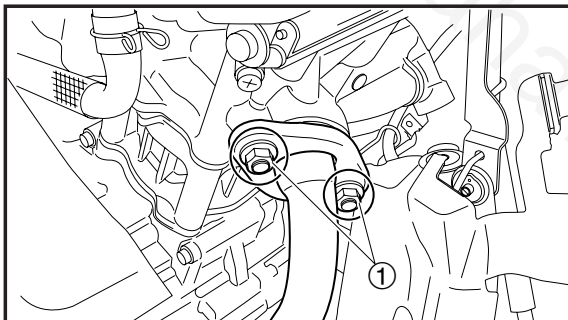





CHECKING THE EXHAUST SYSTEM

1. Check:
 - exhaust pipe nuts ①
 - Loose/damage → Tighten/replace.
 - exhaust pipe gasket
 - Exhaust gas leaks → Tighten/replace.

15 Nm (1.5 m•kg, 11 ft•lb)

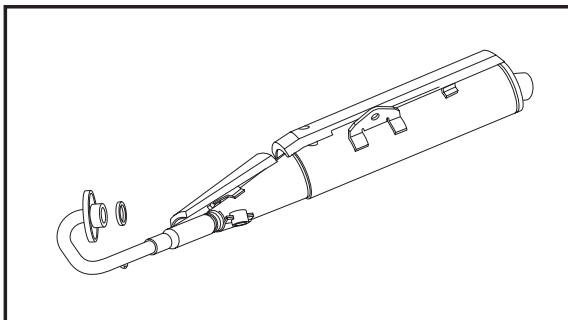

CLEANING THE AIR FILTER ELEMENT

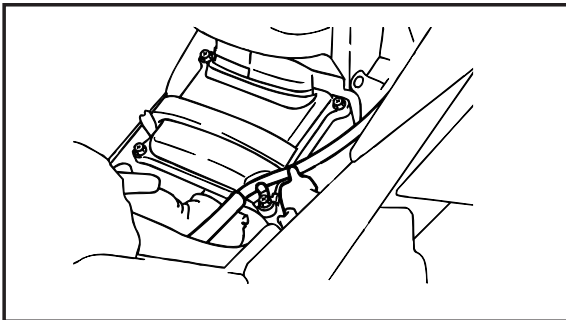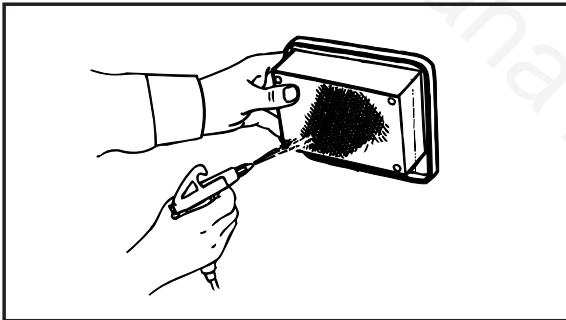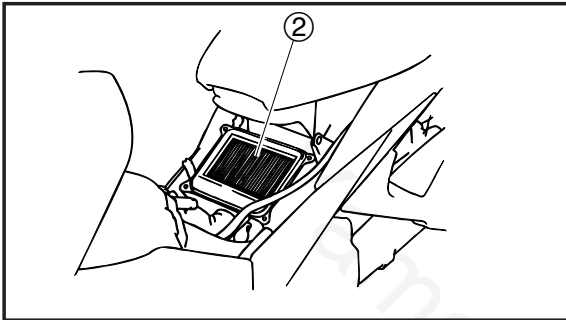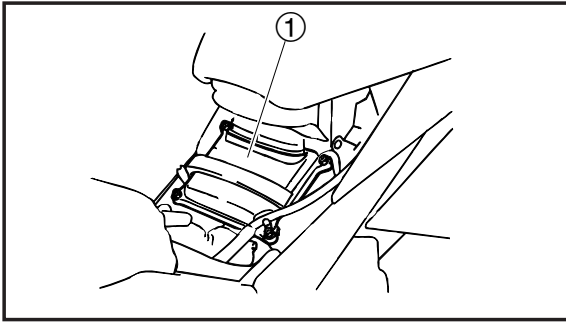CHK
ADJ

EAS00086

CLEANING THE AIR FILTER ELEMENT

1. Remove:

- center panel (lower)

Refer to "REMOVING THE CENTER PANELS".

2. Remove:

- air filter case cover ①
- air filter element ②

3. Clean:

- air filter elements

Apply compressed air to the outer surface of the air filter element.

4. Check:

- air filter element

Damage → Replace.

5. Install:

- air filter element
- air filter case cover
- breather hose

CAUTION:

Never operate the engine without the air filter element installed. Unfiltered air will cause rapid wear of engine parts and may damage the engine. Operating the engine without the air filter element will also affect the carburetor tuning, leading to poor engine performance.

NOTE:

When installing the air filter element into the air filter case cover, make sure their sealing surfaces are aligned to prevent any air leaks.



6. Install:

- center panel (lower)

Refer to "INSTALLING THE CENTER PANELS".

EAS00086


ADJUSTING THE CLUTCH RELEASE SYSTEM

1. Adjust:

- clutch release system



- Loosen the locknut ①.
- Turn the adjusting screw ② in completely, then turn the adjusting screw out the specified number of turns.

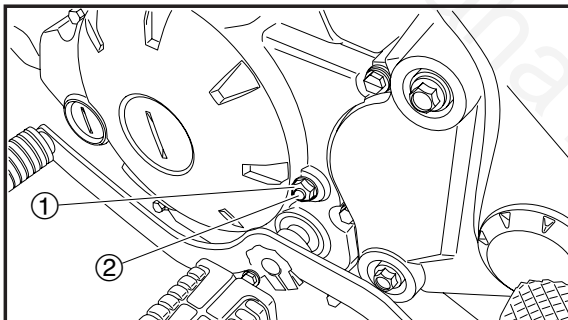

Adjusting screw:
 1/8 turns out

- Tighten the locknut.

8 Nm (0.8 m•kg, 6.0 ft•lb)

NOTE:

Hold the adjusting screw and tighten the locknut.



EAS00094

CHECKING THE CARBURETOR JOINT AND INTAKE MANIFOLD

1. Remove:

- side cowlings (left and right)
- center panels (upper and lower)
- front cowlings
- rear cowlings (left and right)
- inner panel


Refer to "COVERS".

2. Check:

- carburetor joint ①
- intake manifold ②

Cracks/damage → Replace.

Refer to "CARBURETOR" in chapter 6.

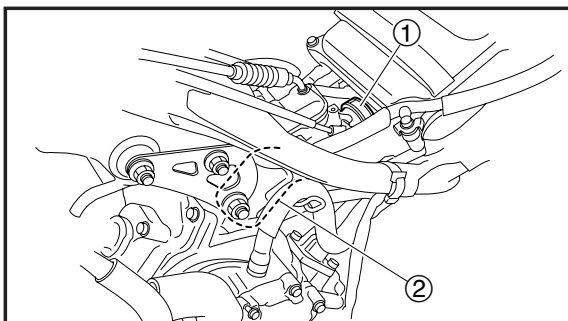


3. Install:
 - inner panel
 - rear cowlings (left and right)
 - front cowling
 - center panels (upper and lower)
 - side cowlings (left and right)
 Refer to "COVERS".

EAS00096

CHECKING THE FUEL AND VACUUM HOSES

The following procedure applies to all of the fuel and vacuum hoses.

1. Remove:
 - side cowlings (left and right)
 - center panels (upper and lower)
 - front cowling
 - rear cowlings (left and right)
 - inner panel
 Refer to "COVERS".
2. Check:
 - fuel cock vacuum hose ①
 - fuel hose ②
 Cracks/damage → Replace.
 Loose connection → Connect properly.
3. Install:
 - inner panel
 - rear cowlings (left and right)
 - front cowling
 - center panels (upper and lower)
 - side cowlings (left and right)
 Refer to "COVERS".

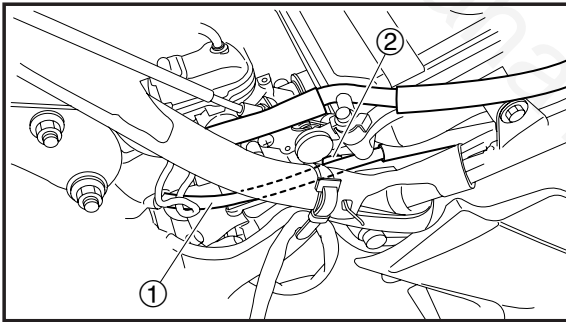




EAS00098

CHECKING THE CRANKCASE BREATHER PIPE

1. Remove:
 - side cowlings (left and right)
 - center panels (upper and lower)
 - front cowling
 - rear cowlings (left and right)
 - inner panelRefer to "COVERS".
2. Check:
 - crankcase breather pipe ①Cracks/damage → Replace.
Loose connection → Connect properly.

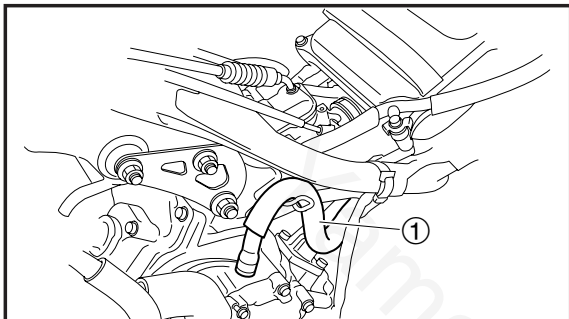

CAUTION:

Make sure the crankcase breather pipe is routed correctly.

3. Install:
 - inner panel
 - rear cowlings (left and right)
 - front cowling
 - center panels (upper and lower)
 - side cowlings (left and right)Refer to "COVERS".


EAS00103

CHECKING THE COOLANT LEVEL

1. Stand the vehicle on a level surface.

NOTE:

Make sure the vehicle is upright.

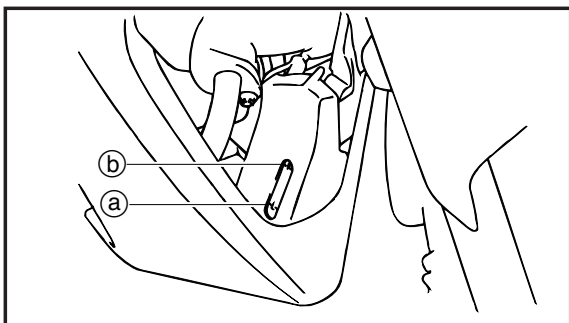

2. Check:
 - coolant levelThe coolant level should be between the minimum level mark (a) and maximum level mark (b).
Below the minimum level mark → Add the recommended coolant to the proper level.



CAUTION:

- Adding water instead of coolant lowers the antifreeze content of the coolant. If water is used instead of coolant check, and if necessary, correct the antifreeze concentration of the coolant.
- Use only distilled water. However, if distilled water is not available, soft water may be used.

3. Start the engine, warm it up for several minutes, and then turn it off.
4. Check:
 - coolant level


NOTE:

Before checking the coolant level, wait a few minutes until it settles.


EAS00104

CHECKING THE COOLING SYSTEM

1. Remove:
 - side cowlings (left and right)
 - front cowlingsRefer to "REMOVING THE SIDE COWLINGS" and "REMOVING THE FRONT COWLING".

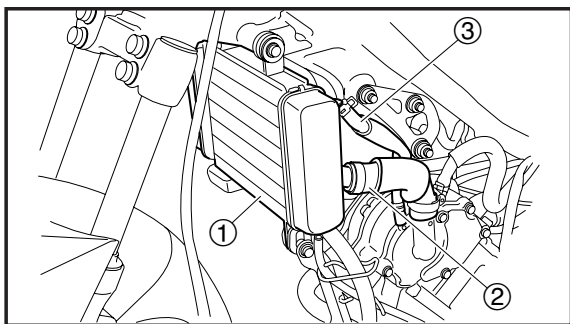

2. Check:
 - radiator ①
 - water pump inlet hose ②
 - radiator outlet hose ③
 - radiator inlet hose ④
 - thermostat outlet hose ⑤Cracks/damage → Replace.
Refer to "COOLING SYSTEM" in chapter 5.

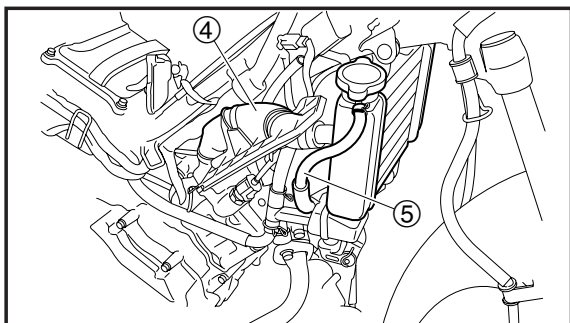

3. Install:
 - front cowlings
 - side cowlings (left and right)Refer to "REMOVING THE FRONT COWLING" and "REMOVING THE SIDE COWLINGS".




EAS00105

CHANGING THE COOLANT

1. Remove:

- side cowlings (left and right)
- front cowling

Refer to "REMOVING THE SIDE COWLINGS" and "REMOVING THE FRONT COWLING".

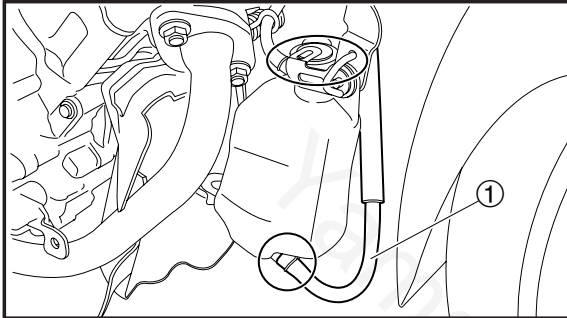

2. Remove:


- coolant reservoir tank cover
- coolant reservoir cap

3. Disconnect:

- coolant reservoir hose ①

4. Drain:

- coolant
(from the coolant reservoir)

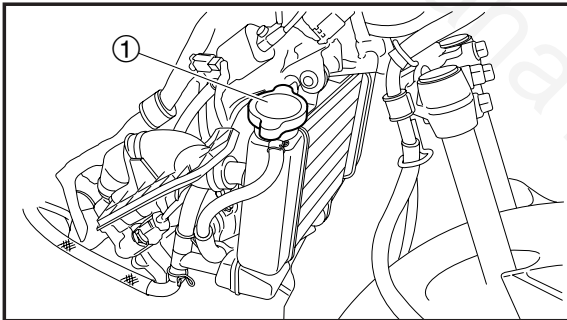

5. Remove:


- radiator cap ①

⚠ WARNING

A hot radiator is under pressure. Therefore, do not remove the radiator cap when the engine is hot. Scalding hot fluid and steam may be blown out, which could cause serious injury. When the engine has cooled, open the radiator cap as follows:

Place a thick rag or a towel over the radiator cap and slowly turn the radiator cap counter-clockwise toward the detent to allow any residual pressure to escape.

When the hissing sound has stopped, press down on the radiator cap and turn it counter-clockwise to remove.

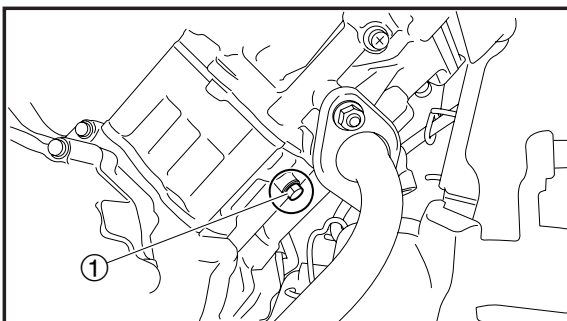



6. Remove:

- coolant drain bolt ①
(along with the copper washer)

7. Drain:

- coolant
(from the engine and radiator)

CHANGING THE COOLANT

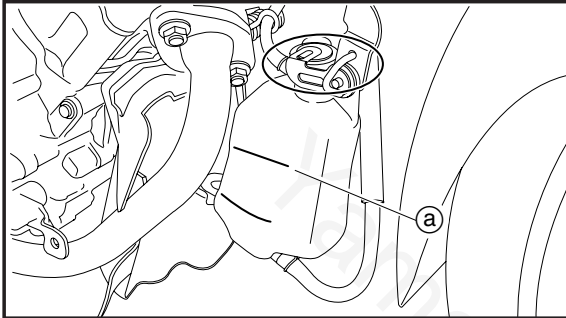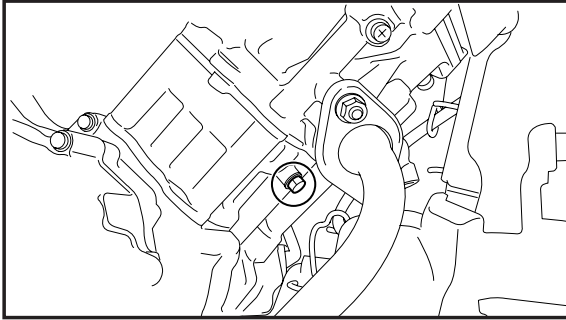CHK
ADJ

8. Install:

- copper washer **New**
- coolant drain bolt

7 Nm (0.7 m•kg, 5.0 ft•lb)

9. Connect:

- coolant reservoir hose

10. Fill:

- cooling system
(with the specified amount of the recommended coolant)



Recommended antifreeze
YAMAHA GENUINE COOLANT
 High-quality ethylene glycol
 antifreeze containing corrosion
 inhibitors for aluminum engines

Mixing ratio

1:1 (antifreeze:water)

Quantity

Radiator capacity

0.62 L (0.55 Imp qt, 0.66 US qt)

Coolant reservoir capacity

0.28 L (0.25 Imp qt, 0.30 US qt)

Up to the maximum level mark **(a)**

NOTE:

The specified amount of coolant is a standard amount. Fill the cooling system with coolant until coolant comes out of the air bleed bolt hole.

Handling notes for coolant

Coolant is potentially harmful and should be handled with special care.

⚠WARNING

- If coolant splashes in your eyes, thoroughly wash them with water and consult a doctor.
- If coolant splashes on your clothes, quickly wash it away with water and then with soap and water.
- If coolant is swallowed, induce vomiting and get immediate medical attention.

**CAUTION:**

- Adding water instead of coolant lowers the antifreeze content of the coolant. If water is used instead of coolant check, and if necessary, correct the antifreeze concentration of the coolant.
- Use only distilled water. However, if distilled water is not available, soft water may be used.
- If coolant comes into contact with painted surfaces, immediately wash them with water.
- Do not mix different types of antifreeze.

11. Install:

- radiator cap
- coolant reservoir cap
- coolant reservoir tank cover

12. Start the engine, warm it up for several minutes, and then stop it.

13. Check:

- coolant level

Refer to "CHECKING THE COOLANT LEVEL".

NOTE:


Before checking the coolant level, wait a few minutes until the coolant has settled.

14. Install:

- front cowling
- side cowlings (left and right)

Refer to "REMOVING THE FRONT COWLING" and "REMOVING THE SIDE COWLINGS".

ADJUSTING THE REAR BRAKE

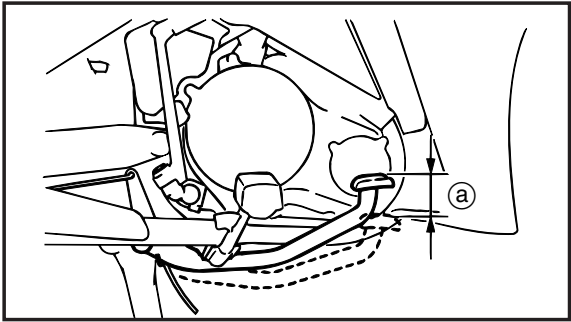

CHASSIS


EAS00113

ADJUSTING THE REAR BRAKE

1. Check:
- brake pedal free play (a)
- Out of specification → Adjust.



Brake pedal free play (at the end of the brake pedal)
25–35 mm (0.98–1.38 in)

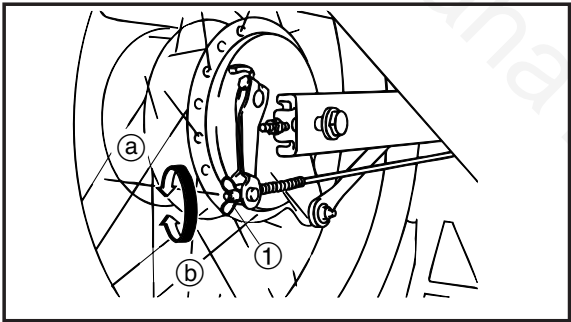

2. Adjust:
- brake pedal free play




- a. Turn the adjuster (1) in direction (a) or (b) until the specified brake pedal free play is obtained.

Direction (a)	Brake pedal free play is increased.
Direction (b)	Brake pedal free play is decreased.

CAUTION: After adjusting the brake pedal free play, make sure there is no brake drag.



3. Adjust:
- rear brake light switch
- Refer to “ADJUSTING THE REAR BRAKE LIGHT SWITCH”.

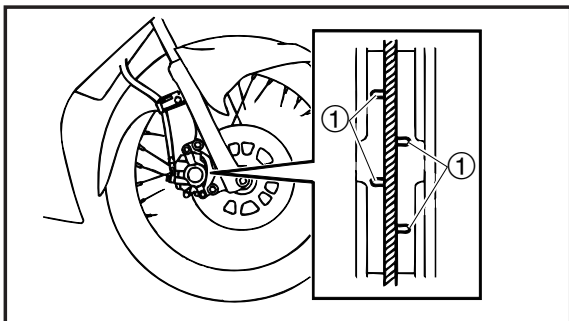


EAS00120

CHECKING THE FRONT BRAKE PADS

The following procedure applies to all of the brake pads.

1. Operate the brake.
2. Check:
 - front brake padWear indicator groove (1) almost disappeared → Replace the brake pads as a set. Refer to “REPLACING THE FRONT BRAKE PADS” in chapter 7.

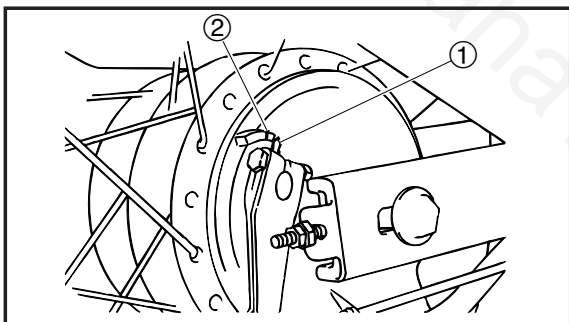

EAS00126

CHECKING THE REAR BRAKE SHOES


1. Operate the brake.
2. Check:
 - wear indicator (1)Reaches the wear limit line (2) → Replace the brake shoes as a set. Refer to “REAR WHEEL AND BRAKE” in chapter 7.

EAS00128

ADJUSTING THE REAR BRAKE LIGHT SWITCH

NOTE:

The rear brake light switch is operated by movement of the brake pedal. The rear brake light switch is properly adjusted when the brake light comes on just before the braking effect starts.

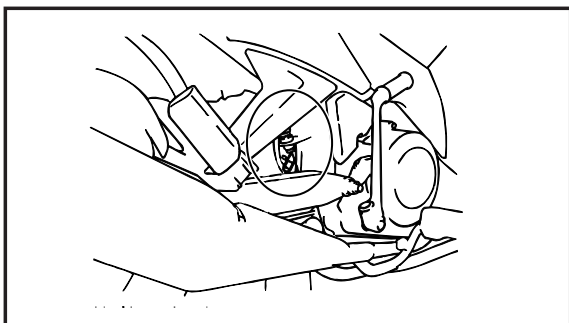


1. Check:
 - rear brake light operation timingIncorrect → Adjust.

Yamaha T135 Service Manual

ADJUSTING THE REAR BRAKE LIGHT SWITCH/ CHECKING THE FRONT BRAKE HOSE

**CHK
ADJ**

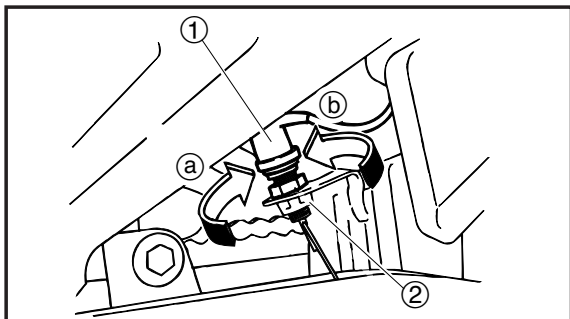


2. Adjust:
 - rear brake light operation timing



- a. Hold the main body ① of the rear brake light switch so that it does not rotate and turn the adjusting nut ② in direction ③ or ④ until the rear brake light comes on at the proper time.

Direction ③	Brake light comes on sooner.
Direction ④	Brake light comes on later.

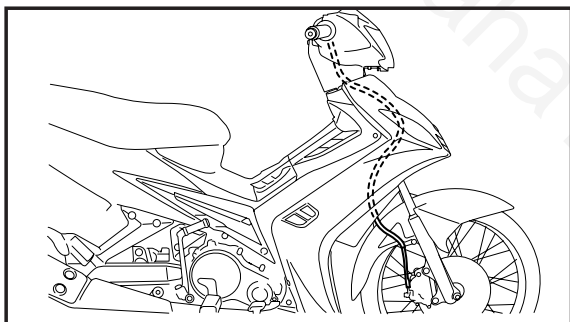

EAS00129

CHECKING THE FRONT BRAKE HOSE

1. Check:
 - brake hose
Cracks/damage/wear → Replace.
2. Check:
 - brake hose clamp
Loose Connection → Tighten the clamp bolt.
3. Hold the vehicle upright and apply the front brake several times.
4. Check:
 - brake hose
Brake fluid leakage → Replace the damaged hose.
Refer to “FRONT BRAKE” in chapter 7.



EAS00133

BLEEDING THE HYDRAULIC BRAKE SYSTEM


⚠ WARNING

Bleed the hydraulic brake system whenever:

- the system is disassembled.
- a brake hose is loosened, disconnected or replaced.
- the brake fluid level is very low.
- brake operation is faulty.

NOTE:

- Be careful not to spill any brake fluid or allow the brake master cylinder reservoir to overflow.
- When bleeding the hydraulic brake system, make sure there is always enough brake fluid before applying the brake. Ignoring this precaution could allow air to enter the hydraulic brake system, considerably lengthening the bleeding procedure.
- If bleeding is difficult, it may be necessary to let the brake fluid settle for a few hours. Repeat the bleeding procedure when the tiny bubbles in the hose have disappeared.

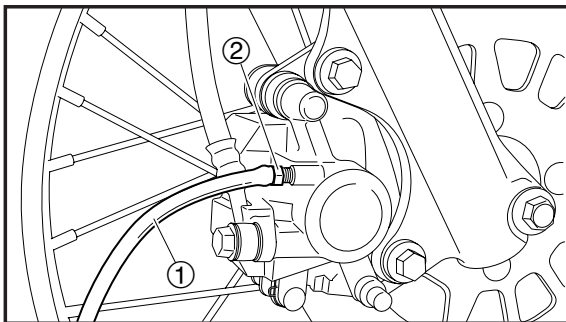

1. Bleed:
 - hydraulic brake system



- a. Fill the brake master cylinder reservoir to the proper level with the recommended brake fluid.
- b. Install the brake master cylinder reservoir diaphragm.
- c. Connect a clear plastic hose ① tightly to the bleed screw ②.
- d. Place the other end of the hose into a container.
- e. Slowly apply the brake lever several times.
- f. Fully pull the brake lever without releasing it.
- g. Loosen the bleed screw.

Yamaha T135 Service Manual

BLEEDING THE HYDRAULIC BRAKE SYSTEM/ ADJUSTING THE DRIVE CHAIN SLACK

CHK
ADJ



NOTE:

Loosening the bleed screw will release the pressure and cause the brake lever to contact the throttle grip.

- h. Tighten the bleed screw and then release the brake lever.
- i. Repeat steps (e) to (h) until all of the air bubbles have disappeared from the brake fluid in the plastic hose.
- j. Tighten the bleed screw to specification.



Bleed screw

6 Nm (0.6 m·kg, 4.3 ft·lb)

- k. Fill the brake master cylinder reservoir to the proper level with the recommended brake fluid.

Refer to "CHECKING THE BRAKE FLUID LEVEL".

⚠ WARNING

After bleeding the hydraulic brake system, check the brake operation.



EAS00140

ADJUSTING THE DRIVE CHAIN SLACK

NOTE:

The drive chain slack must be checked at the tightest point on the chain.

CAUTION:

A drive chain that is too tight will overload the engine and other vital parts, and one that is too loose can skip and damage the swingarm or cause an accident. Therefore, keep the drive chain slack within the specified limits.

ADJUSTING THE DRIVE CHAIN SLACK



1. Stand the vehicle on a level surface.

WARNING


Securely support the vehicle so that there is no danger of it falling over.

NOTE:

Place the vehicle on a suitable stand so that the rear wheel is elevated.

2. Spin the rear wheel several times and find the tightest position of the drive chain.
3. Check:
- drive chain slack (a)
- Out of specification → Adjust.

Drive chain slack
25–35 mm (0.93–1.38 in)

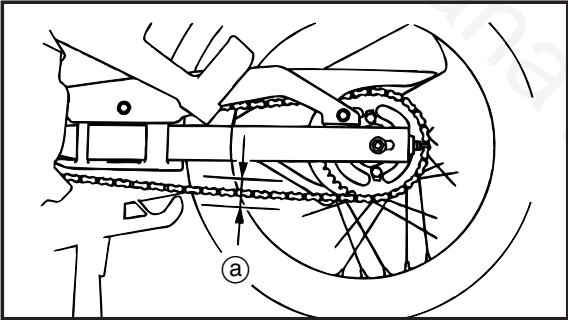

4. Adjust:
- drive chain slack



- a. Loosen the wheel axle nut.
- b. Loosen both locknuts (1).
- c. Turn both adjusting nuts (2) in direction (a) or (b) until the specified drive chain slack is obtained.

Direction (a)	Drive chain is tightened.
Direction (b)	Drive chain is loosened.

NOTE:

To maintain the proper wheel alignment, adjust both sides evenly.

- d. Tighten both locknuts to specification.

Locknut
7 Nm (0.7 m·kg, 5.0 ft·lb)

- e. Tighten the wheel axle nut to specification.

Wheel axle nut
60 Nm (6.0 m·kg, 43 ft·lb)





EAS00143

LUBRICATING THE DRIVE CHAIN


The drive chain consists of many interacting parts. If the drive chain is not maintained properly, it will wear out quickly. Therefore, the drive chain should be serviced, especially when the vehicle is used in dusty areas.

Use only kerosene to clean the drive chain.

Wipe the drive chain dry and thoroughly lubricate it with engine oil or chain lubricant that is suitable for non-O-ring chains.



Recommended lubricant
Engine oil or chain lubricant
suitable for non-O-ring chains

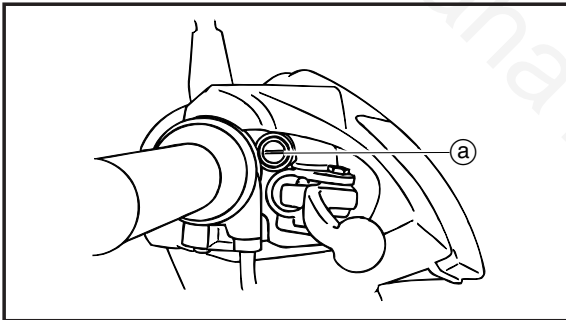

EAS00115

CHECKING THE BRAKE FLUID LEVEL

1. Stand the vehicle on a level surface.

NOTE:

Make sure the vehicle is upright.

2. Check:

- brake fluid level

Below the minimum level mark (a) → Add the recommended brake fluid to the proper level.



Recommended brake fluid
DOT3 or 4

⚠ WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.



CAUTION:

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

NOTE:

In order to ensure a correct reading of the brake fluid level, make sure the top of the brake fluid reservoir is horizontal.

EASF0010

**CHECKING AND ADJUSTING THE
STEERING HEAD**


1. Stand the vehicle on a level surface.

⚠WARNING

Securely support the vehicle so that there is no danger of it falling over.

NOTE:

Place the vehicle on a suitable stand so that the front wheel is elevated.

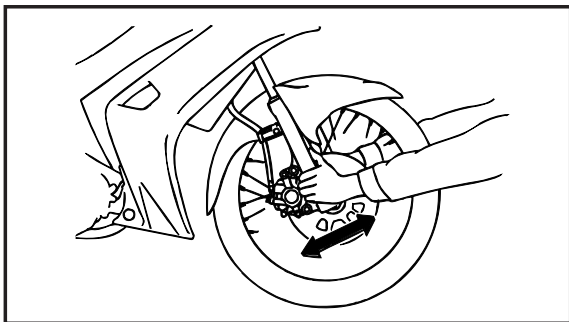




2. Check:

- steering head
Grasp the bottom of the front fork legs and gently rock the front fork.
Binding/looseness → Adjust the steering head.

3. Remove:

- side cowlings (left and right)
- front cowling
- center panels (upper and lower)
- inner panel
Refer to "COVERS".

CHECKING AND ADJUSTING THE STEERING HEAD

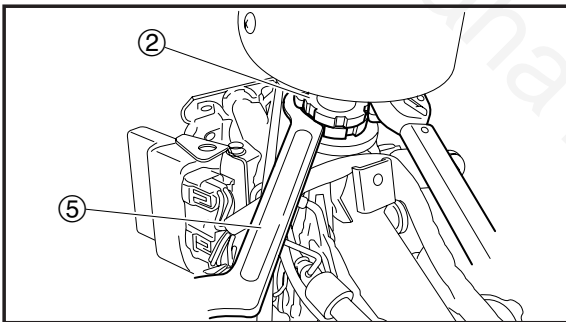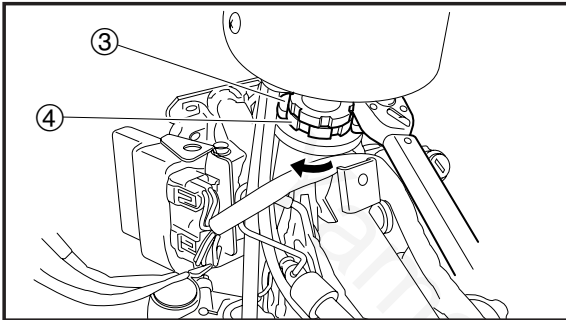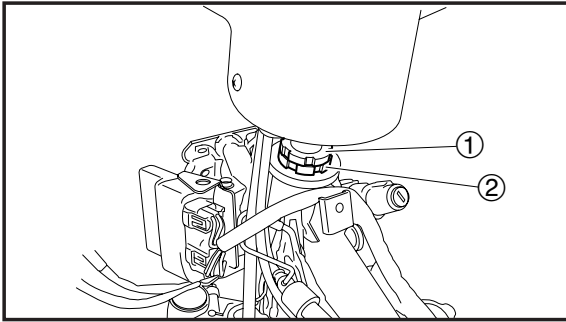CHK
ADJ

4. Adjust:
- steering head



- Loosen the upper ring nut (1).
- Loosen the lower ring nut (2) and then tighten it to specification with a steering nut wrench (3).

NOTE:

Set the torque wrench at a right angle to the steering nut wrench.



Steering nut wrench
90890-01403



Lower ring nut
30 Nm (3.0 m·kg, 22 ft·lb)

- Loosen the lower ring nut counterclockwise 1/4 of a turn.
- Hold the lower ring nut with a ring nut wrench (4) and tighten the upper ring nut (2) with a steering nut wrench.

⚠ WARNING

Do not overtighten the lower ring nut.



Ring nut wrench
90890-01268



Upper ring nut
75 Nm (7.5 m·kg, 54 ft·lb)

- Check the steering head for looseness or binding by turning the front fork all the way in both directions. If any binding is felt, remove the lower bracket and check the upper and lower bearings.
Refer to "STEERING HEAD" in chapter 7.
- Slide the rubber cover to its original position.



5. Install:
- front cowlings (left and right)
 - center panel
- Refer to "INSTALLING THE FRONT COWLINGS".




EAS00149

CHECKING THE FRONT FORK

1. Stand the vehicle on a level surface.


⚠ WARNING

Securely support the vehicle so that there is no danger of it falling over.

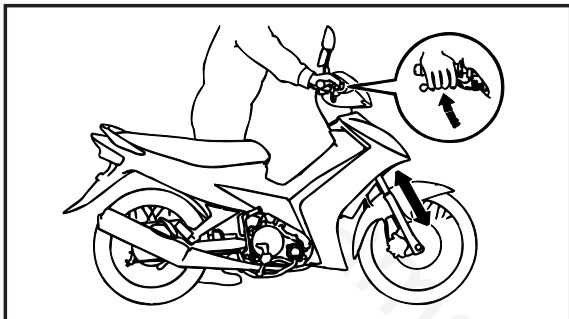

2. Check:
 - inner tube
Damage/scratches → Replace.
 - oil seal
Oil leakage → Replace.
3. Hold the vehicle upright and apply the front brake.
4. Check:
 - front fork operation
Push down hard on the handlebar several times and check if the front fork rebounds smoothly.
Rough movement → Repair.
Refer to "FRONT FORK" in chapter 7.

CHECKING THE TIRES

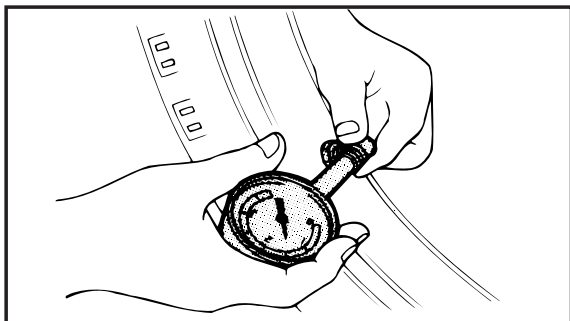CHK
ADJ

EASF0015

CHECKING THE TIRES

The following procedure applies to both of the tires.

1. Check:
 - tire pressure
 Out of specification → Regulate.

⚠WARNING

- The tire pressure should only be checked and regulated when the tire temperature equals the ambient air temperature.
- The tire pressure and the suspension must be adjusted according to the total weight (including cargo, rider, passenger and accessories) and the anticipated riding speed.
- Operation of an overloaded vehicle could cause tire damage, an accident or an injury. **NEVER OVERLOAD THE VEHICLE.**


Basic weight (with oil and a full fuel tank)	109 kg (240 lb)	
Maximum load*	110 kg (243 lb)	
Cold tire pressure	Front	Rear
	200 kPa (2.00 kgf/cm ² 29 psi)	225 kPa (2.25 kgf/cm ² 33 psi)

* Total weight of rider, passenger, cargo and accessories

⚠WARNING

It is dangerous to ride with a worn-out tire. When the tire tread reaches the wear limit, replace the tire immediately.

CHECKING THE TIRES

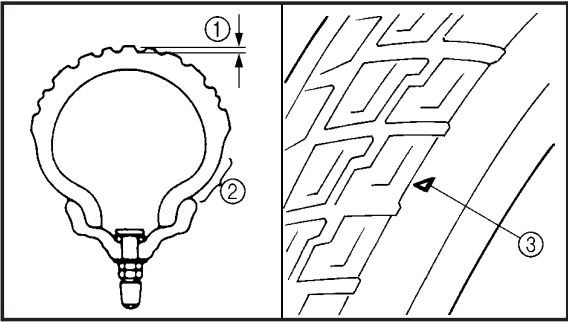

2. Check:
- tire surfaces
- Damage/wear → Replace the tire.



Minimum tire tread depth
0.8 mm (0.03 in)

- ① Tire tread depth
② Sidewall
③ Wear indicator

⚠WARNING

- Do not use a tubeless tire on a wheel designed only for tube tires to avoid tire failure and personal injury from sudden deflation.
- When using tube tires, be sure to install the correct tube.
- Always replace a new tube tire and a new tube as a set.
- To avoid pinching the tube, make sure the wheel rim band and tube are centered in the wheel groove.
- Patching a punctured tube is not recommended. If it is absolutely necessary to do so, use great care and replace the tube as soon as possible with a good quality replacement.


Tube wheel	Tube tire only
Tubeless wheel	Tube or tubeless tire

- After extensive tests, the tires listed below have been approved by Yamaha Motor Co., Ltd. for this model. The front and rear tires should always be by the same manufacturer and of the same design. No guarantee concerning handling characteristics can be given if a tire combination other than one approved by Yamaha is used on this vehicle.

Yamaha T135 Service Manual


CHECKING THE TIRES/ CHECKING AND TIGHTENING THE SPOKES

CHK
ADJ

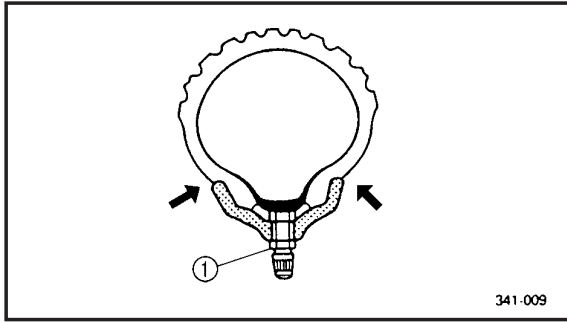

⚠ WARNING


- New tires have a relatively low grip on the road surface until they have been slightly worn. Therefore, approximately 100 km should be traveled at normal speed before any high-speed riding is done.
- After a tire has been repaired or replaced, be sure to tighten the tire air valve stem locknut ① to specification.

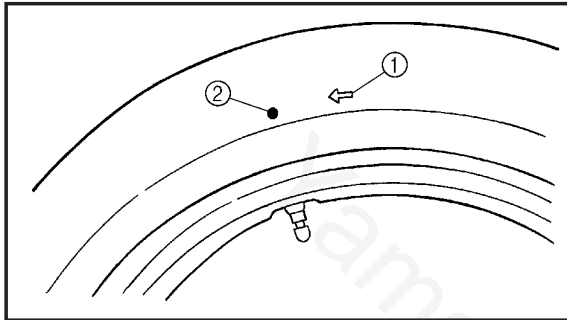

NOTE:

For tires with a direction of rotation mark ①:

- Install the tire with the mark pointing in the direction of wheel rotation.
- Align the mark ② with the valve installation point.

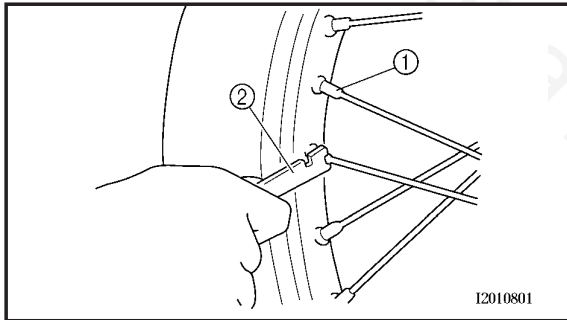

EAS00169

CHECKING AND TIGHTENING THE SPOKES

The following procedure applies to all of the spokes.

1. Check:

- spoke ①
 - Bends/damage → Replace.
 - Loose → Tighten.
 - Tap the spokes with a screwdriver.

NOTE:

A tight spoke will emit a clear, ringing tone; a loose spoke will sound flat.

2. Tighten:

- spoke
 - (with a spoke wrench ②)

3 Nm (0.3 m•kg, 2.2 ft•lb)

NOTE:

Be sure to tighten the spokes before and after break-in.



EAS00170

CHECKING AND LUBRICATING THE CABLES

The following procedure applies to all of the inner and outer cables.

⚠ WARNING

Damaged outer cable may cause the cable to corrode and interfere with its movement.

Replace damaged outer cable and inner cables as soon as possible.

1. Check:
 - outer cable
Damage → Replace.
2. Check:
 - cable operation
Rough movement → Lubricate.



Recommended lubricant
Engine oil or a suitable cable lubricant

NOTE:

Hold the cable end upright and pour a few drops of lubricant into the cable sheath or use a suitable lubricating device.

EAS00171

LUBRICATING THE LEVER AND PEDALS

Lubricate the pivoting point and metal-to-metal moving parts of the lever and pedals.



Recommended lubricant
Lithium-soap-based grease

EAS00172

LUBRICATING THE SIDESTAND

Lubricate the pivoting point and metal-to-metal moving parts of the sidestand.



Recommended lubricant
Lithium-soap-based grease

EAS00173

LUBRICATING THE CENTERSTAND

Lubricate the pivoting point and metal-to-metal moving parts of the centerstand.



Recommended lubricant
Lithium-soap-based grease

CHECKING AND CHARGING THE BATTERY

CHK
ADJ

EAS00176

ELECTRICAL SYSTEM
CHECKING AND CHARGING THE
BATTERY**⚠ WARNING**

Batteries generate explosive hydrogen gas and contain electrolyte which is made of poisonous and highly caustic sulfuric acid. Therefore, always follow these preventive measures:


- Wear protective eye gear when handling or working near batteries.
- Charge batteries in a well-ventilated area.
- Keep batteries away from fire, sparks or open flames (e.g., welding equipment, lighted cigarettes).
- DO NOT SMOKE when charging or handling batteries.
- KEEP BATTERIES AND ELECTROLYTE OUT OF REACH OF CHILDREN.
- Avoid bodily contact with electrolyte as it can cause severe burns or permanent eye injury.

FIRST AID IN CASE OF BODILY CONTACT:
EXTERNAL

- Skin — Wash with water.
- Eyes — Flush with water for 15 minutes and get immediate medical attention.

INTERNAL

- Drink large quantities of water or milk followed with milk of magnesia, beaten egg or vegetable oil. Get immediate medical attention.


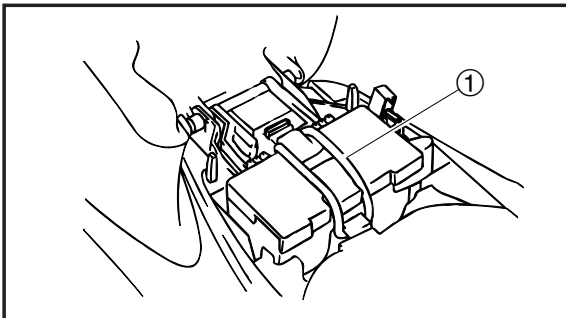


1. Open the seat and battery cover.

2. Remove

- battery band ①

CHECKING AND CHARGING THE BATTERY

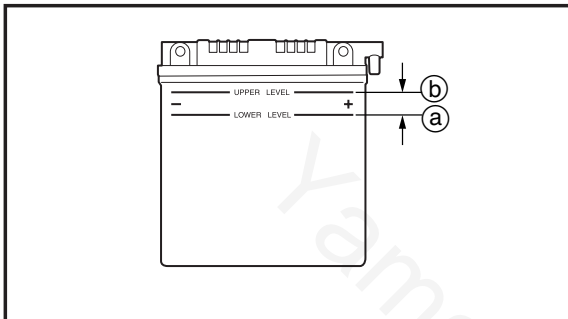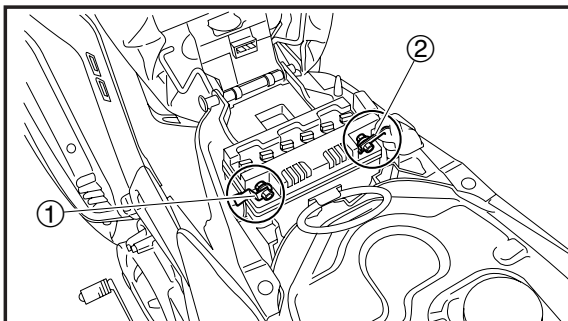CHK
ADJ

3. Disconnect:
- battery leads
(from the battery terminals)

CAUTION:

First, disconnect the negative battery lead ①, and then the positive battery lead ②.


4. Disconnect:
- battery breather hose
5. Remove:
- battery
6. Check:
- electrolyte level

The electrolyte level should be between the minimum level mark ① and the maximum level mark ②.

Below the minimum level mark → Add distilled water to the proper level.

CAUTION:


Add only distilled water. Tap water contains minerals which are harmful to the battery.

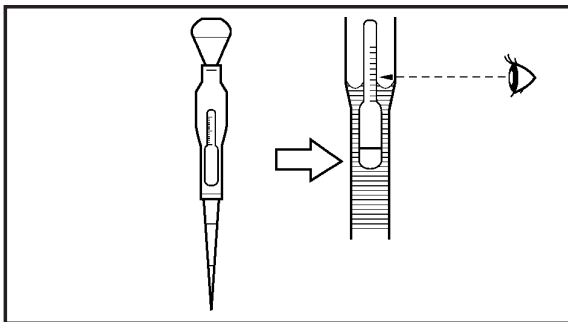

7. Check:
- specific gravity
- Less than 1.280 → Recharge the battery.



Specific gravity
1.280 at 20 °C (68 °F)

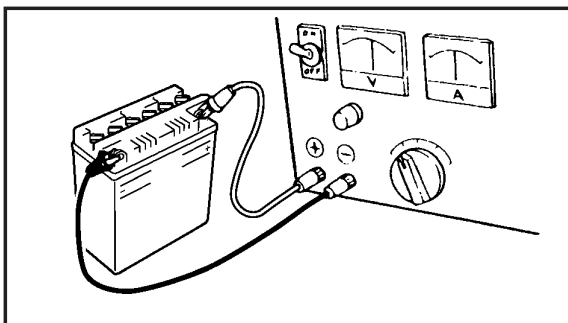

8. Charge:
- battery

Battery charging amperage and time
0.5 amps/10 hrs

WARNING

Do not quick charge a battery.

**CAUTION:**

- Loosen the battery sealing caps.
- Make sure the battery breather hose and battery vent are free of obstructions.
- To ensure maximum performance, always charge a new battery before using it.
- Do not use a high-rate battery charger. They force a high-amperage current into the battery quickly and can cause battery overheating and battery plate damage.
- If it is impossible to regulate the charging current on the battery charger, be careful not to overcharge the battery.
- When charging a battery, be sure to remove it from the vehicle. (If charging has to be done with the battery mounted on the vehicle, disconnect the negative lead from the battery terminal.)
- To reduce the chance of sparks, do not plug in the battery charger until the battery charger leads are connected to the battery.
- Before removing the battery charger lead clips from the battery terminals, be sure to turn off the battery charger.
- Make sure the battery charger lead clips are in full contact with the battery terminal and that they are not shorted. A corroded battery charger lead clip may generate heat in the contact area and a weak clip spring may cause sparks.
- If the battery becomes hot to the touch at any time during the charging process, disconnect the battery charger and let the battery cool before reconnecting it. Hot batteries can explode!

NOTE:


Replace the battery whenever:

- battery voltage does not rise to specification or bubbles fail to rise during charging,
- sulfation of one or more battery cells occurs (as indicated by the battery plates turning white or material accumulating in the bottom of the battery cell),
- specific gravity readings after a long, slow charge indicate that the charge of one battery cell is lower than the rest,

CHECKING AND CHARGING THE BATTERY

CHK
ADJ


- warping or buckling of the battery plates or insulators is evident.

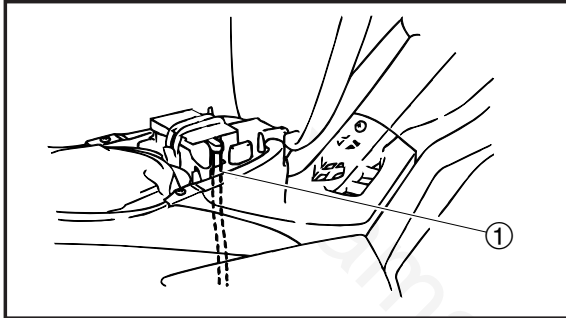

9. Check:
 - battery breather hose and battery vent
Obstruction → Clean.
Damage → Replace.
10. Install:
 - battery
11. Connect:
 - battery breather hose ①

CAUTION:

- When checking the battery, make sure the battery breather hose is properly installed and routed correctly. If the battery breather hose is positioned so as to allow electrolyte or hydrogen gas from the battery to contact the frame, the vehicle and its finish may be damaged.
- Make sure the battery breather hose is properly routed away from the drive chain and from below the swingarm.

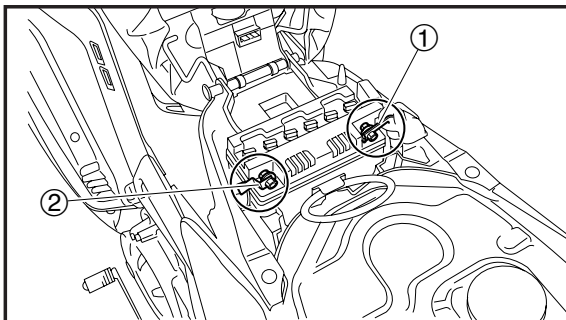

12. Check:
 - battery terminals
Dirt → Clean with a wire brush.
Loose connection → Connect properly.
13. Connect:
 - battery leads
(to the battery terminals)

CAUTION:

First, connect the positive battery lead ①, and then the negative battery lead ②.

14. Lubricate:
 - battery terminals



Recommended lubricant
Dielectric grease

15. Install:
 - battery band





EASF0017

CHECKING THE FUSE

CAUTION:

To avoid a short circuit, always set the main switch to "OFF" when checking or replacing a fuse.

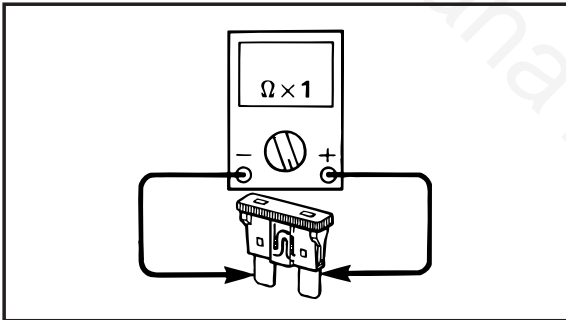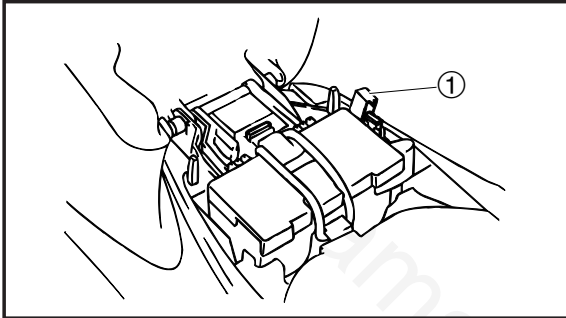

1. Open the seat and battery cover.

2. Remove:

- fuse holder ①

3. Check:

- fuse



a. Connect the pocket tester to the fuse and check the continuity.

NOTE:

Set the pocket tester selector to " $\Omega \times 1$ ".



Pocket tester
90890-03112

b. If the pocket tester indicates " ∞ ", replace the fuse.



4. Replace:

- blown fuse

WARNING

Never use a fuse with an amperage rating other than that specified. Improvising or using a fuse with the wrong amperage rating may cause extensive damage to the electrical system, cause the lighting and ignition systems to malfunction and could possibly cause a fire.

5. Install:

- fuse holder




EAS00183


REPLACING THE HEADLIGHT BULBS

The following procedure applies to both of the headlight bulbs.

1. Remove:
 - headlight assembly
 Refer to "REMOVING THE HEADLIGHT ASSEMBLY".

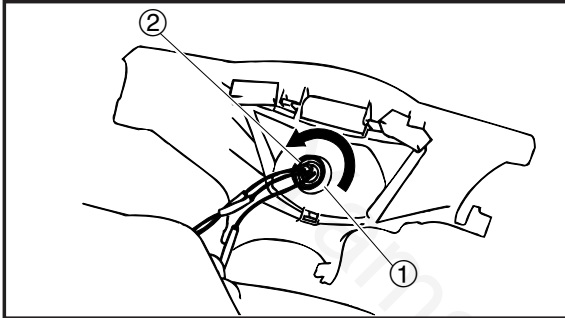

2. Remove:
 - headlight bulb holder ①

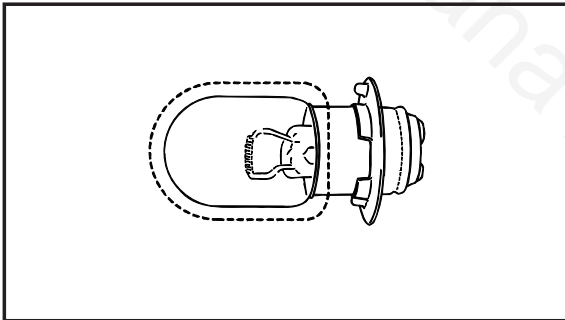

3. Remove:
 - headlight bulb

⚠ WARNING

Since the headlight bulb gets extremely hot, keep flammable products and your hands away from the bulb until it has cooled down.

4. Install:
 - headlight bulb **New**
 Secure the new headlight bulb with the headlight bulb holder.


CAUTION:

Avoid touching the glass part of the headlight bulb to keep it free from oil, otherwise the transparency of the glass, the life of the bulb and the luminous flux will be adversely affected. If the headlight bulb gets soiled, thoroughly clean it with a cloth moistened with alcohol or lacquer thinner.

5. Install:
 - headlight bulb holder
6. Install:
 - headlight bulb cover
 - headlight assembly
 Refer to "INSTALLING THE HEADLIGHT ASSEMBLY".

ADJUSTING THE HEADLIGHT BEAM

CHK
ADJ

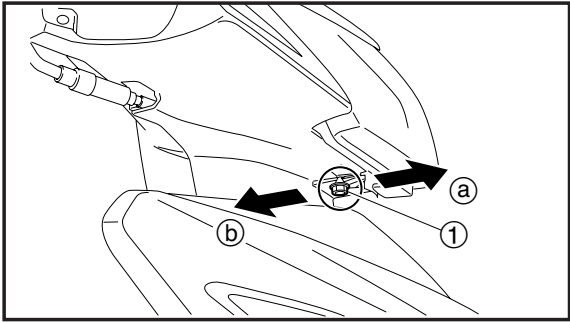

EAS00186

ADJUSTING THE HEADLIGHT BEAM

1. Adjust:
- headlight beam (vertically)



- a. Loosen the bolt ①.
- b. Slide the bottom of the headlight unit forward ② or backward ③.

Slide forward ②	Headlight beam is raised.
Slide backward ③	Headlight beam is lowered.

- c. Tighten the bolt ①.





CHAPTER 4 ENGINE

REMOVING THE ENGINE	4-1
COOLING SYSTEM	4-1
ENGINE OIL	4-1
CARBURETOR	4-1
FOOTREST	4-2
MUFFLER	4-2
BRAKE PEDAL	4-2
SHIFT PEDAL	4-2
SIDE COWLING BRACKET	4-3
WIRE, CABLE AND HOSE	4-3
ENGINE ASSEMBLY	4-4
 INSTALLING THE ENGINE	 4-5
ENGINE ASSEMBLY	4-5
WIRE, CABLE AND HOSE	4-6
SIDE COWLING BRACKET	4-6
SHIFT PEDAL	4-6
BRAKE PEDAL	4-6
MUFFLER	4-6
FOOTREST	4-7
CARBURETOR	4-7
COOLING SYSTEM	4-7
ENGINE OIL	4-7
 CYLINDER HEAD	 4-8
REMOVING THE CYLINDER HEAD	4-9
CHECKING THE CYLINDER HEAD	4-11
CHECKING TIMING CHAIN GUIDE	4-12
CHECKING THE TIMING CHAIN TENSIONER	4-13
INSTALLING THE CYLINDER HEAD	4-13
 CAMSHAFT	 4-17
REMOVING THE ROCKER ARMS AND CAMSHAFT	4-18
CHECKING THE CAMSHAFT	4-19
CHECKING THE ROCKER ARMS AND ROCKER ARM SHAFTS	4-19
CHECKING THE CAMSHAFT SPROCKET	4-21
INSTALLING THE CAMSHAFT AND ROCKER ARMS	4-21
 VALVES AND VALVE SPRINGS	 4-22
REMOVING THE VALVES	4-23
CHECKING THE VALVES AND VALVE GUIDES	4-24
CHECKING THE VALVE SEATS	4-26
CHECKING THE VALVE SPRINGS	4-28
INSTALLING THE VALVES	4-29



CYLINDER AND PISTON	4-31
REMOVING THE CYLINDER AND PISTON	4-32
CHECKING THE CYLINDER AND PISTON	4-33
CHECKING THE PISTON RINGS	4-34
CHECKING THE PISTON PIN	4-35
INSTALLING THE PISTON AND CYLINDER	4-36
 GENERATOR AND STARTER CLUTCH	 4-38
REMOVING THE GENERATOR	4-39
REMOVING THE STARTER CLUTCH (T135SE)	4-40
CHECKING THE STARTER CLUTCH (T135SE)	4-41
INSTALLING THE STARTER CLUTCH (T135SE)	4-42
INSTALLING THE GENERATOR	4-42
 OIL PUMP	 4-44
REMOVING THE OIL PUMP	4-45
DISASSEMBLING THE OIL PUMP	4-45
CHECKING THE OIL PUMP	4-46
ASSEMBLING THE OIL PUMP	4-47
INSTALLING THE OIL PUMP	4-48
 CLUTCH	 4-49
REMOVING THE CLUTCH	4-50
CHECKING THE FRICTION PLATES	4-52
CHECKING THE CLUTCH PLATES	4-52
CHECKING THE CLUTCH SPRINGS	4-53
CHECKING THE CLUTCH HOUSING	4-53
CHECKING THE CLUTCH BOSS	4-53
CHECKING THE CLUTCH PRESSURE PLATE	4-54
CHECKING THE CLUTCH PUSH RODS	4-54
CHECKING THE PRIMARY DRIVEN GEAR	4-54
CHECKING THE CLUTCH SHOE HOUSING	4-55
CHECKING THE CLUTCH SHOE	4-55
CHECKING THE CAGE	4-55
CHECKING THE CLUTCH RELEASE SHIFT ARM	4-56
INSTALLING THE CLUTCH	4-56
 SHIFT SHAFT	 4-58
REMOVING THE SHIFT SHAFT	4-59
CHECKING THE SHIFT SHAFT	4-61
CHECKING THE STOPPER LEVER	4-61
CHECKING THE SHIFT GUIDE	4-61
CHECKING THE OIL SEAL	4-61
INSTALLING THE SHIFT SHAFT	4-62
 CRANKCASE AND CRANKSHAFT	 4-63
DISASSEMBLING THE CRANKCASE	4-64
CHECKING THE CRANKSHAFT AND CONNECTING ROD	4-65
CHECKING THE CRANKCASE	4-67



CHECKING THE BEARINGS	4-67
CHECKING THE TIMING CHAIN GUIDE	4-67
CHECKING THE TIMING CHAIN	4-67
INSTALLING THE CRANKSHAFT	4-68
ASSEMBLING THE CRANKCASE	4-68
 KICKSTARTER	 4-70
REMOVING THE KICKSTARTER	4-71
CHECKING THE KICKSTARTER	4-73
INSTALLING THE KICKSTARTER	4-74
 TRANSMISSION	 4-76
REMOVING THE TRANSMISSION	4-77
DISASSEMBLING THE TRANSMISSION	4-77
CHECKING THE SHIFT FORKS	4-78
CHECKING THE SHIFT DRUM ASSEMBLY	4-79
CHECKING THE TRANSMISSION	4-79
INSTALLING THE TRANSMISSION	4-80



YamahaT135.COM



EASF0018

ENGINE REMOVING THE ENGINE

NOTE:

It is not necessary to remove the engine in order to remove the following components.

- Cylinder head
- Cylinder
- Piston
- Clutch
- Shift shaft
- Oil pump
- Generator
- Starter clutch

1. Remove:

- side cowlings (left and right)
 - front cowling
 - center panels (upper and lower)
 - rear cowlings (left and right)
- Refer to "COVERS" in chapter 3.

- drive sprocket

Refer to "DRIVE CHAIN AND SPROCKETS" in chapter 7.

COOLING SYSTEM

1. Drain:

- coolant
(completely from the water jacket)

Refer to "CHANGING THE COOLANT" in chapter 3.

2. Remove:

- radiator assembly
- water pump assembly

Refer to "RADIATOR" and "WATER PUMP" in chapter 5.

ENGINE OIL

1. Drain:

- engine oil
(completely from the crankcase)


Refer to "CHANGING THE ENGINE OIL" in chapter 3.

CARBURETOR


1. Remove:

- carburetor assembly


Refer to "CARBURETOR" in chapter 6.

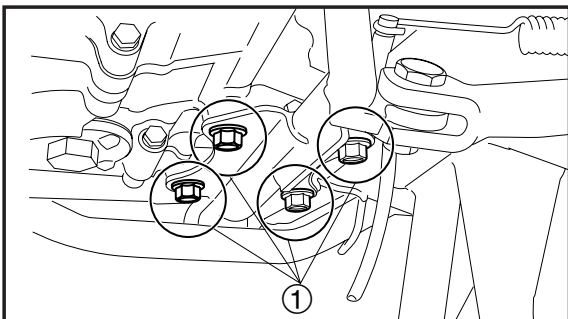**FOOTREST**

1. Remove:
 - footrest bolts ①
 - footrest

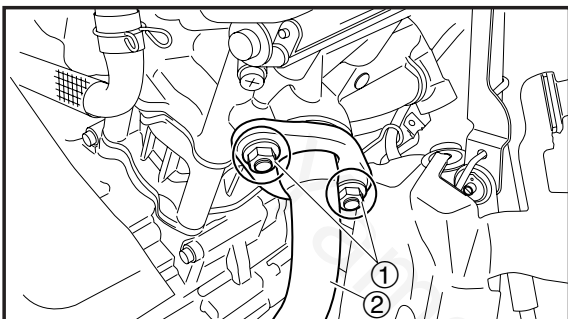**MUFFLER**


1. Remove:
 - exhaust pipe nuts ①
 - exhaust pipe ②

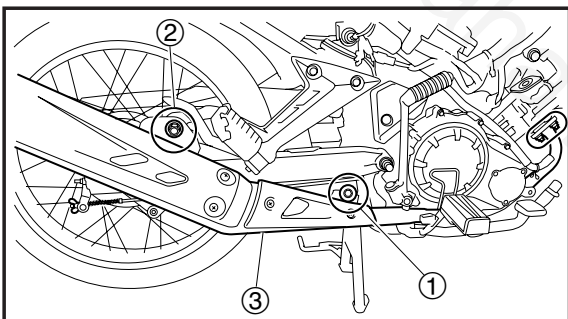


2. Remove:
 - lower muffler bolt ①
 - washer
 - upper muffler bolt ②
 - washers
 - nut
 - muffler ③

BRAKE PEDAL

1. Remove:
 - rear brake light switch spring
 - brake pedal spring
 - cotter pin
 - brake pedal

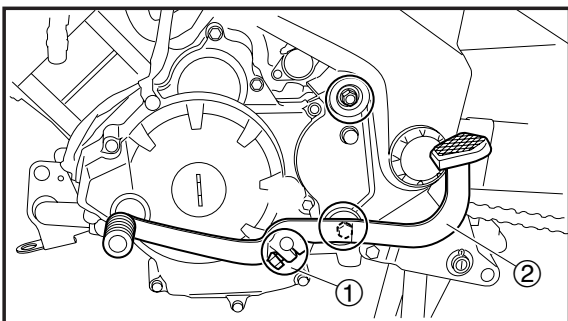
**SHIFT PEDAL**

1. Remove:
 - shift pedal bolt ①
 - shift pedal ②
 - sprocket cover

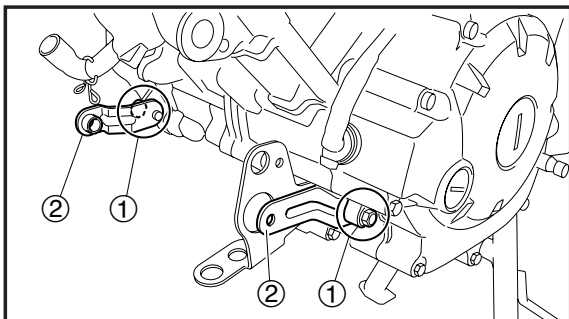**SIDE COWLING BRACKET**


1. remove:

- side cowl bracket bolts ①
- side cowl bracket ②

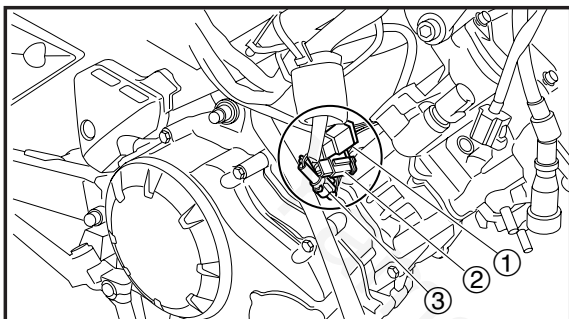**WIRE, CABLE AND HOSE**

1. Disconnect:

- neutral switch lead coupler ①
- stator coil lead coupler ②
- pick up coil lead coupler ③
- crankcase breather pipe

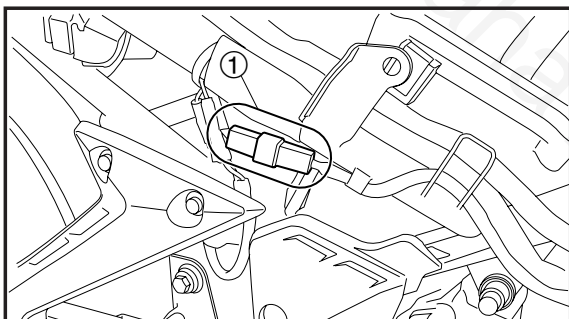


2. Remove:

- starter motor lead coupler (T135SE)

3. Remove:

- spark plug cap

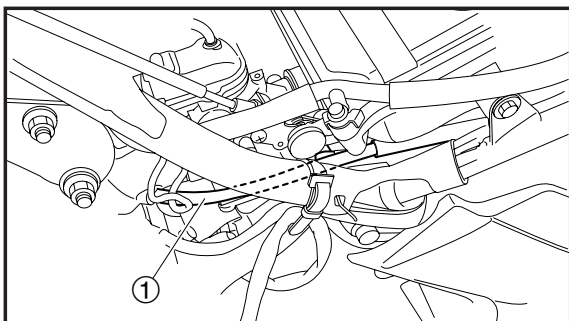


4. Remove:

- fuel cock vacuum hose ①


REMOVING THE ENGINE

ENG

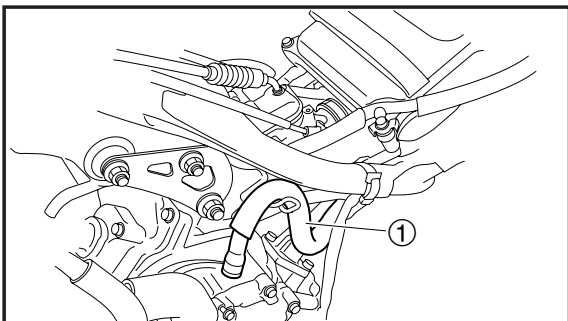

5. Remove:

- crankcase breather pipe ①

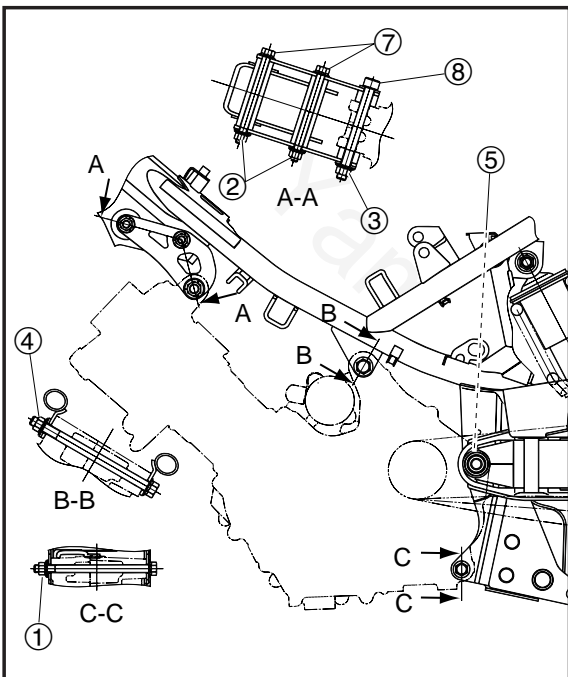


ENGINE ASSEMBLY

1. Loosen:

- rear lower mounting nut ①
- plate nuts (front and rear) ②
- front mounting nut ③
- rear upper mounting nut ④
- pivot shaft nut ⑤

2. Remove:

- rear lower mounting nut ①
- washer
- rear lower mounting bolt ⑥
- plate nuts (front and rear) ②
- washers (front and rear)
- plate bolts (front and rear) ⑦
- front mounting nut ③
- washer
- front mounting bolt ⑧
- plate (left and right) ⑨
- rear upper mounting nut ④
- washer
- rear upper mounting bolt ⑩
- pivot shaft nut ③
- washer
- pivot shaft ⑪
- engine assembly

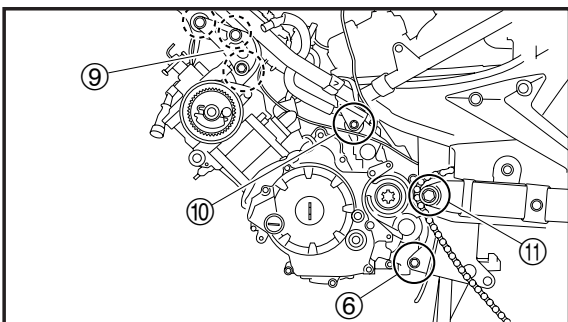**⚠WARNING**

Securely support the vehicle so there is no danger of it falling over.





EASF0019

INSTALLING THE ENGINE ENGINE ASSEMBLY

⚠ WARNING

Securely support the vehicle so there is no danger of it falling over when installing engine.

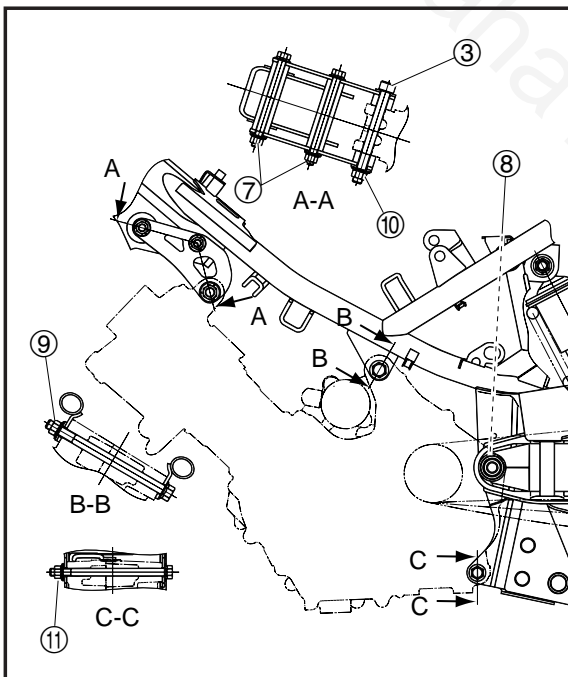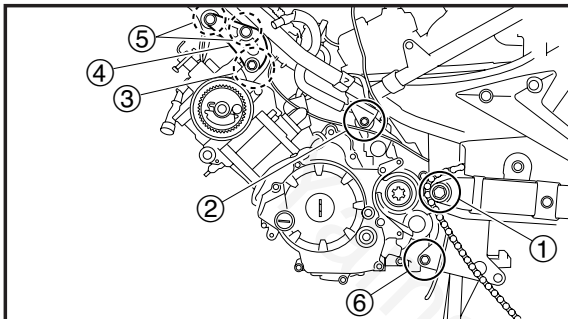

1. Install:

- engine assembly
- pivot shaft ①
- washer
- pivot shaft nut
- rear upper mounting bolt ②
- washer
- rear upper mounting nut
- front mounting bolt ③
- washer
- front mounting nut
- plate (left and right) ④
- plate bolts (front and rear) ⑤
- washers (front and rear)
- plate nuts (front and rear)
- rear lower mounting bolt ⑥
- washer
- rear lower mounting nut

2. Temporary tighten:

- plate nuts (front and rear) ⑦

10 Nm (1.0 m•kg, 7.2 ft•lb)

3. Tighten:

- pivot shaft nut ⑧

66 Nm (6.6 m•kg, 48 ft•lb)

- rear upper mounting nut ⑨

72 Nm (7.2 m•kg, 52 ft•lb)

- front mounting nut ⑩

72 Nm (7.2 m•kg, 52 ft•lb)

- plate nuts (front and rear) ⑦


34 Nm (3.4 m•kg, 25 ft•lb)

- rear lower mounting nut ⑪

34 Nm (3.4 m•kg, 25 ft•lb)

**WIRE, CABLE AND HOSE**

1. Connect:
 - starter motor lead coupler (T135SE)
 - neutral switch lead coupler
 - pickup coil lead coupler
 - stator coil lead coupler
2. Install:
 - crankcase breather pipe
 - fuel cock vacuum hose
 - spark plug cap

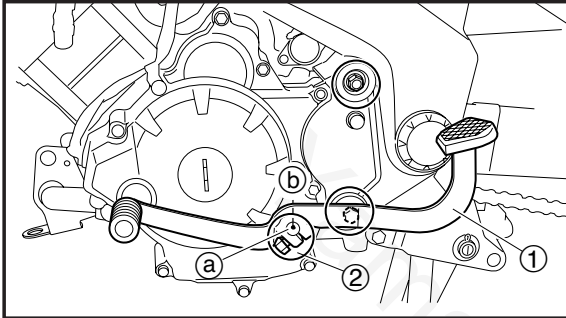**SIDE COWLING BRACKET**

1. Install:
 - side cowling bracket
 - side cowling bracket bolts

7 Nm (0.7 m•kg, 5.0 ft•lb)

SHIFT PEDAL

1. Install:
 - sprocket cover
 - shift pedal (1)
 - shift pedal bolt (2)

10 Nm (1.0 m•kg, 7.2 ft•lb)

18 Nm (1.8 m•kg, 13 ft•lb)

NOTE:

Align the punch mark (a) in the shift pedal with the punch mark (b) in the shift shaft.

BRAKE PEDAL

1. Install:
 - brake pedal
 - circlip **New**
 - brake pedal spring
 - rear brake light switch spring

MUFFLER

1. Install:
 - muffler
 - washers
 - nut
 - upper muffler bolt

38 Nm (3.8 m•kg, 27 ft•lb)

- washer
- lower muffler bolt


17 Nm (1.7 m•kg, 13 ft•lb)

2. Install:
 - exhaust pipe nuts


15 Nm (1.5 m•kg, 11 ft•lb)

INSTALLING THE ENGINE

ENG

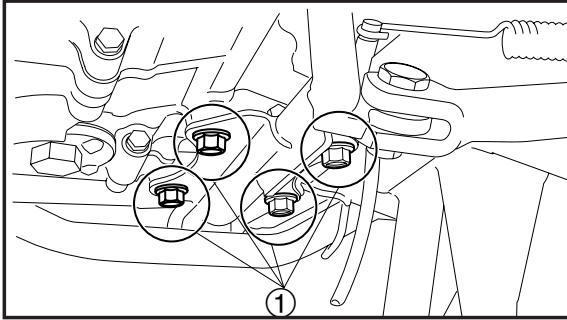**FOOTREST**

1. Install:
 - footrest
 - footrest bolts ①

 **23 Nm (2.3 m·kg, 17 ft·lb)**
CARBURETOR

1. Install:
 - carburetor assembly
 Refer to "CARBURETOR" in chapter 6.
2. Adjust:
 - throttle cable free play
 - rear brake light operation timing
 Refer to "ADJUSTING THE THROTTLE CABLE FREE PLAY" and "ADJUSTING THE REAR BRAKE LIGHT SWITCH" in chapter 3.



Throttle cable free play
(at the flange of the throttle grip)
3 – 7 mm (0.12 – 0.28 mm)

COOLING SYSTEM

1. Install:
 - water pump assembly
 - radiator assembly
 Refer to "RADIATOR" and "WATER PUMP" in chapter 5.
2. Fill:
 - coolant
 Refer to "CHANGING THE COOLANT" in chapter 3.

ENGINE OIL

1. Fill:
 - engine oil
 Refer to "CHANGING THE ENGINE OIL" in chapter 3.




EASF0023

CYLINDER HEAD



- ① Water pump
- ② Spark plug
- ③ Cylinder head cover
- ④ Dowel pin
- ⑤ Camshaft sprocket
- ⑥ Cylinder head
- ⑦ Timing chain guide (exhaust side)

- ⑧ Timing chain tensioner
- ⑨ Dowel pin
- ⑩ Gasket

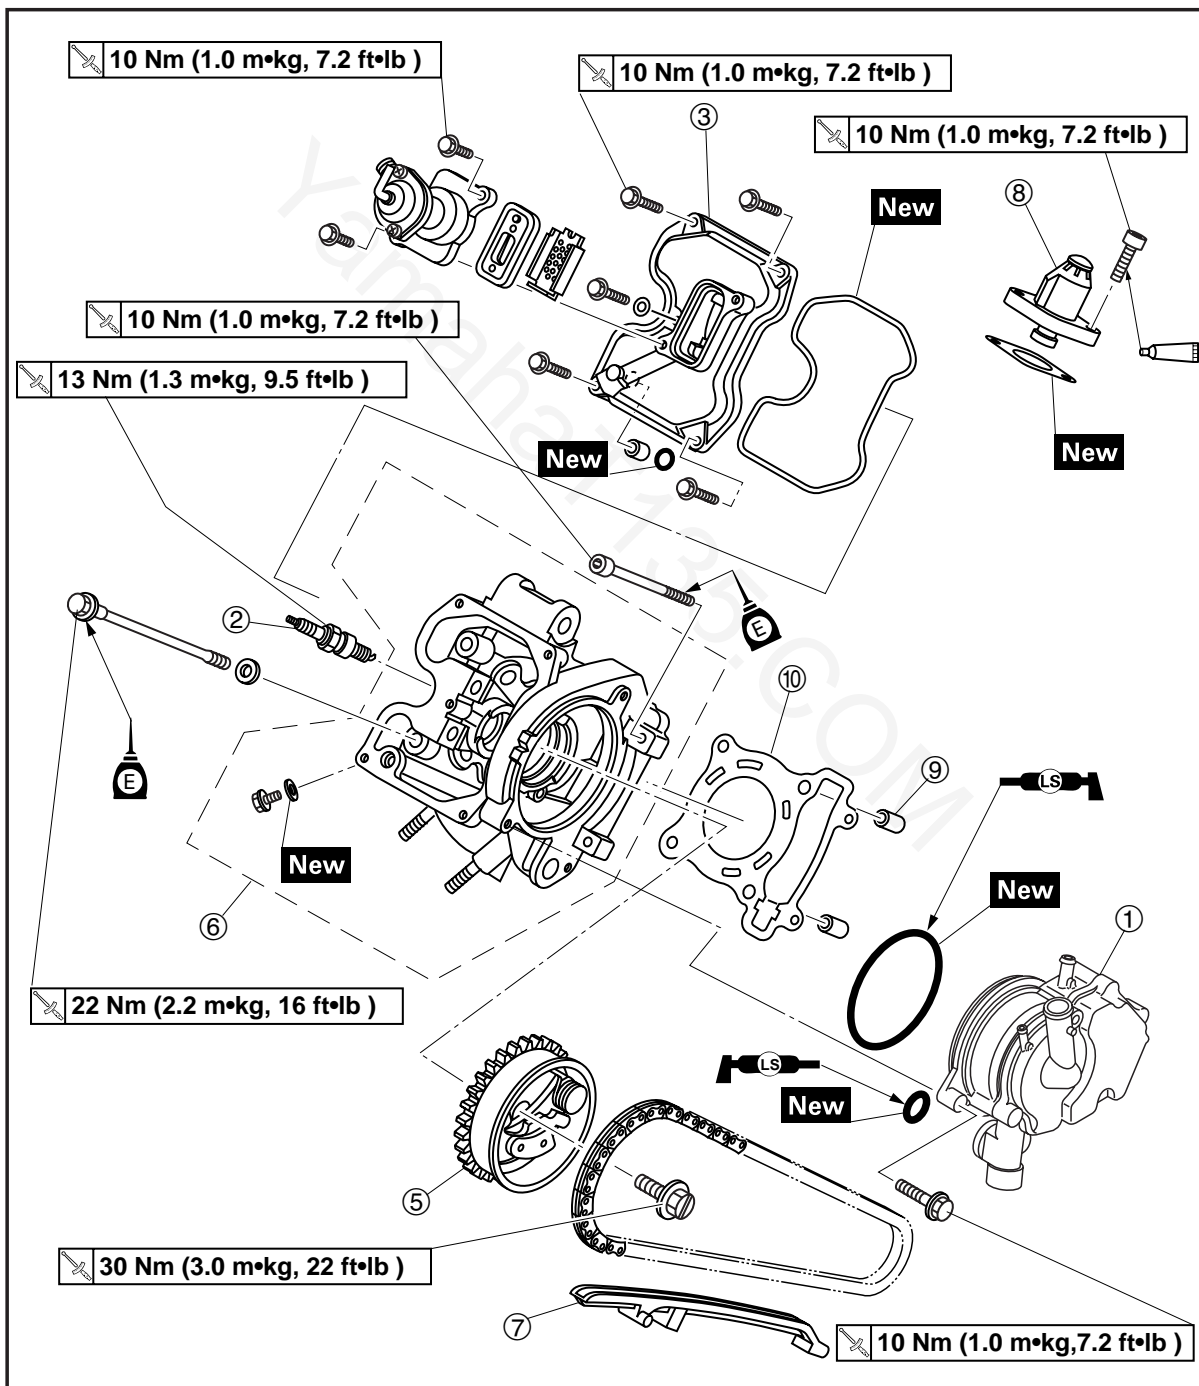





EAS00222

REMOVING THE CYLINDER HEAD


1. Remove
 - side cowlings (left and right)
 - front cowling
 - center panels (upper and lower)
 - rear cowlings (left and right)
 - Refer to “COVERS” in chapter 3.
 - carburetor assembly
 - Refer to “CARBURETOR” in chapter 6.
 - muffler
 - Refer to “REMOVING THE ENGINE”.
2. Drain:
 - cooling system
 - Refer to “CHANGING THE COOLANT” in chapter 3.

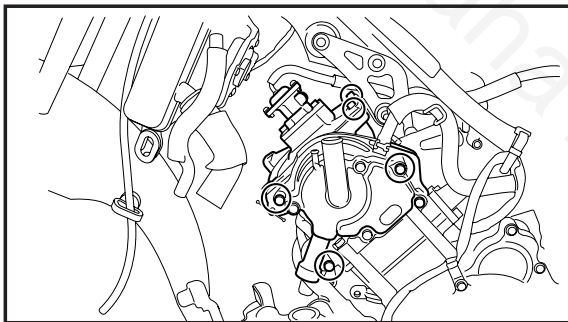

3. Remove:
 - water pump assembly bolts
 - water pump assembly
 - O-rings

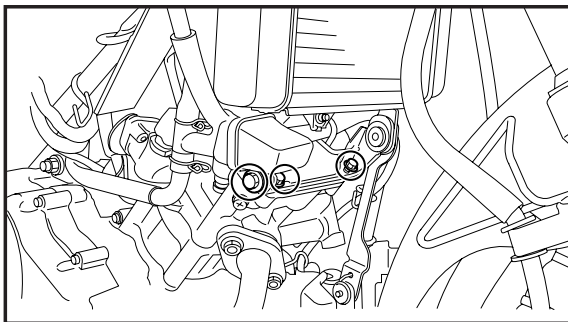

4. Remove:
 - spark plug cap ①
 - spark plug ②
5. Remove:
 - cylinder head cover bolts
 - cylinder head cover
 - gasket
 - dowel pin
 - O-ring

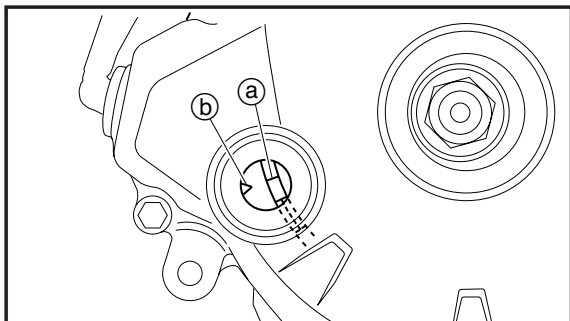



6. Align:

- "I" mark (a) on the generator rotor (with the stationary pointer (b) on the crankcase)



a. Turn the crankshaft counterclockwise.

- b. When the piston is at TDC on the compression stroke, align the "I" mark (c) on the camshaft sprocket with the stationary pointer (d) on the cylinder head.

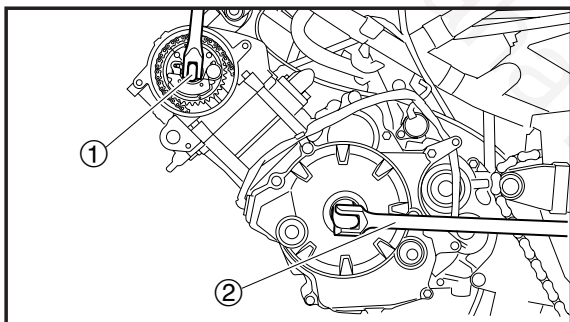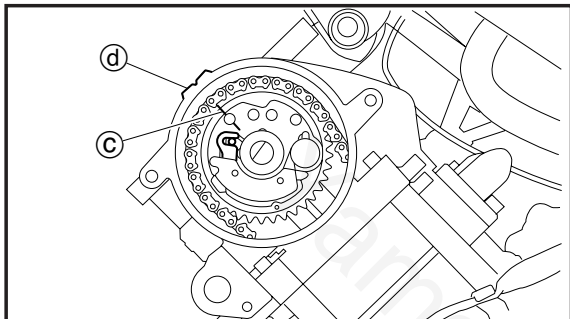


7. Loosen:

- camshaft sprocket bolt (1)


NOTE:

While holding the generator rotor with a wrench (2), loosen the camshaft sprocket bolt.

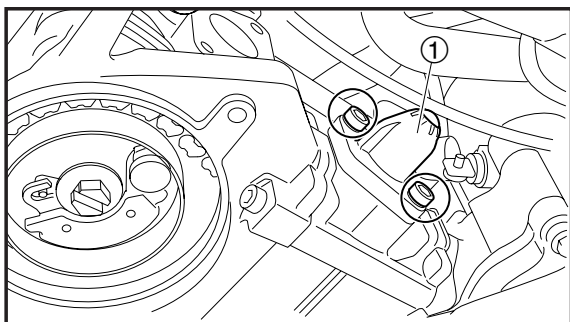

8. Remove:

- timing chain tensioner cap bolt
- timing chain tensioner bolts
- timing chain tensioner (1)
- gasket

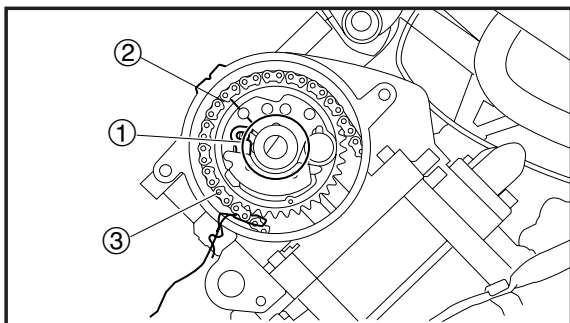


9. Remove:

- camshaft sprocket bolt (1)
- camshaft sprocket (2)
- timing chain (3)

NOTE:

To prevent the timing chain from falling into the crankcase, fasten it with a wire.

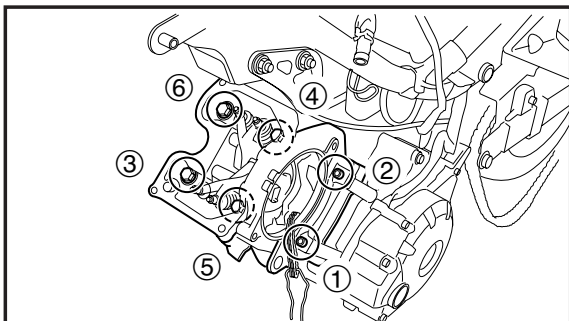


10. Remove:

- engine mount nut
- washer
- engine mount bolt
- cylinder head bolts
- cylinder head bolts
- washers
- cylinder head

NOTE:

- Loosen the nuts in the proper sequence as shown.
- Loosen each nut 1/2 of a turn at a time. After all of the nuts are fully loosened, remove them.

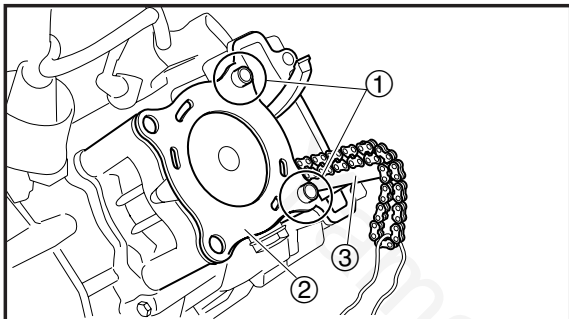

11. Remove:

- dowel pins ①
- gasket ②
- timing chain guide (exhaust side) ③

EAS00227

CHECKING THE CYLINDER HEAD


1. Eliminate:

- combustion chamber carbon deposits
(with a rounded scraper)

NOTE:

Do not use a sharp instrument to avoid damaging or scratching:

- spark plug bore threads
- valve seats

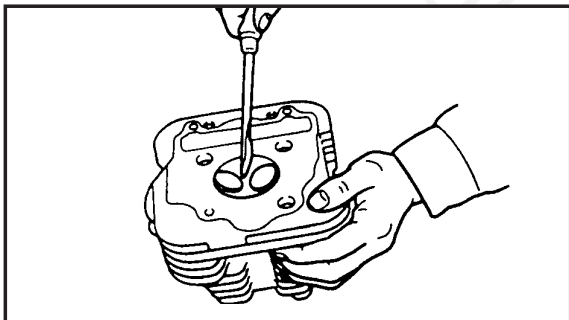


2. Check:

- cylinder head
- Damage/scratches → Replace.

CYLINDER HEAD

ENG

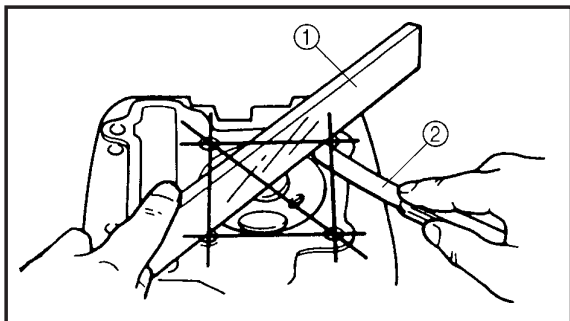

3. Measure:

- cylinder head warpage

Out of specification → Resurface the cylinder head.




Maximum cylinder head warpage
0.03 mm (0.0012 in)



- Place a straightedge ① and a thickness gauge ② across the cylinder head.
- Measure the warpage.
- If the limit is exceeded, resurface the cylinder head as follows.
- Place a 400 ~ 600 grit wet sandpaper on the surface plate and resurface the cylinder head using a figure-eight sanding pattern.

NOTE:

To ensure an even surface, rotate the cylinder head several times.

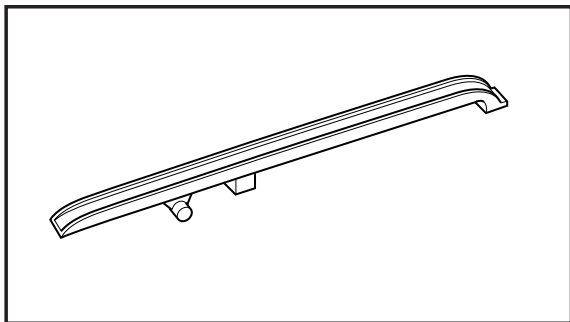**CHECKING TIMING CHAIN GUIDE**

1. Check:


- timing chain guide (exhaust side)
- Damage/wear → Replace.



EAS00210


CHECKING THE TIMING CHAIN TENSIONER

1. Check:
 - timing chain tensioner
 - Cracks/damage → Replace.

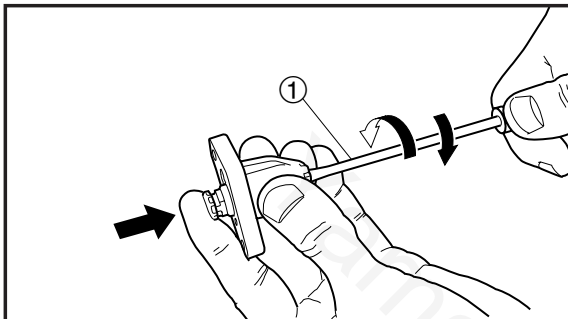

- a. While lightly pressing the timing chain tensioner rod by hand, turn the tensioner rod fully clockwise with a thin screwdriver ①.
- b. Remove the screwdriver and slowly release the timing chain tensioner rod.
- c. Make sure that the timing chain tensioner rod comes out of the timing chain tensioner housing smoothly. If there is rough movement, replace the timing chain tensioner.

2. Check:
 - cap bolt
 - one-way cam
 - timing chain tensioner rod
 - Damage/wear → Replace the defective part(s).

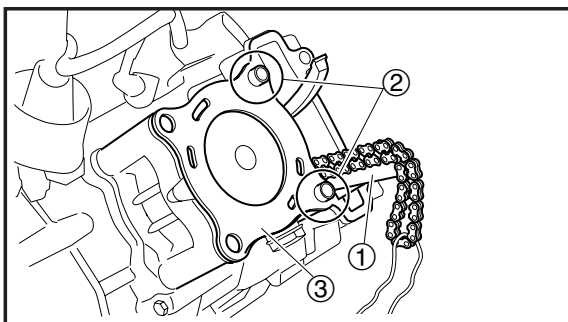

EAS00232





INSTALLING THE CYLINDER HEAD

1. Install:
 - timing chain guide (exhaust side) ①
 - dowel pins ②
 - gasket ③ **New**
2. Install:
 - cylinder head
 - washers
 - cylinder head bolts
 - cylinder head bolts
 - engine mount bolt
 - washer
 - engine mount nut

NOTE: _____
 Pass the timing chain through the timing chain cavity.

CYLINDER HEAD

ENG

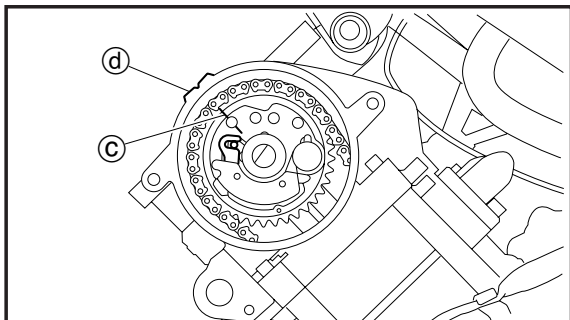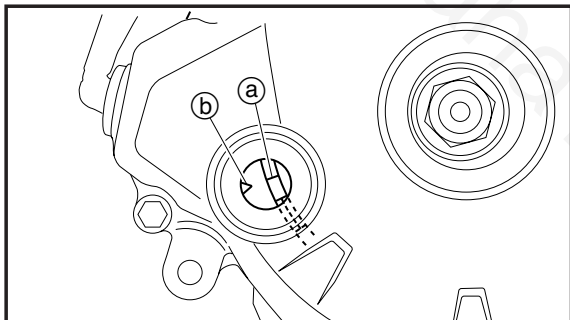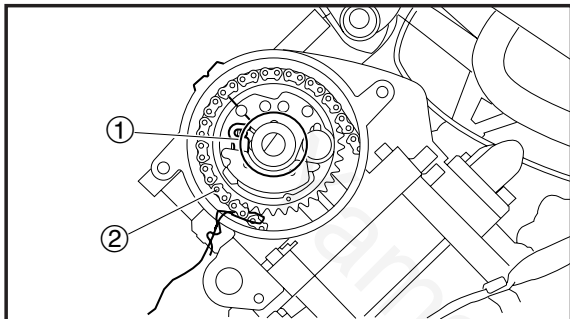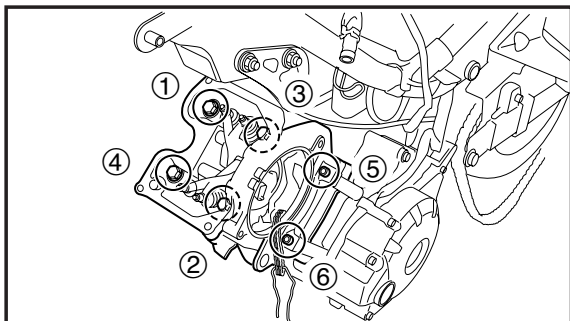

3. Tighten:

- cylinder head bolts

22 Nm (2.2 m•kg, 16 ft•lb)

- cylinder head bolts

10 Nm (1.0 m•kg, 7.2 ft•lb)

- engine mount nut

72 Nm (7.2 m•kg, 52 ft•lb)

NOTE:

- Lubricate the cylinder head bolts with engine oil.
- Tighten the cylinder head bolts in the proper tightening sequence as shown and torque them in two stages.

4. Install:

- camshaft sprocket ①
- timing chain ②



- Turn the crankshaft clockwise.
- Align the "I" mark (a) on the generator rotor with the stationary pointer (b) on the crankcase.
- Align the "I" mark (c) on the camshaft sprocket with the stationary pointer (d) on the cylinder head.
- Install the timing chain onto the camshaft sprocket, and then install the camshaft sprocket onto the camshaft.

NOTE:

- When installing the camshaft sprocket, be sure to keep the timing chain as tight as possible on the exhaust side.
- Align the projection (c) on the camshaft sprocket with the slot in the camshaft.

CAUTION:



Do not turn the crankshaft when installing the camshaft to avoid damage or improper valve timing.

- While holding the camshaft, temporarily tighten the camshaft sprocket bolt.
- Remove the wire from the timing chain.



CYLINDER HEAD

ENG

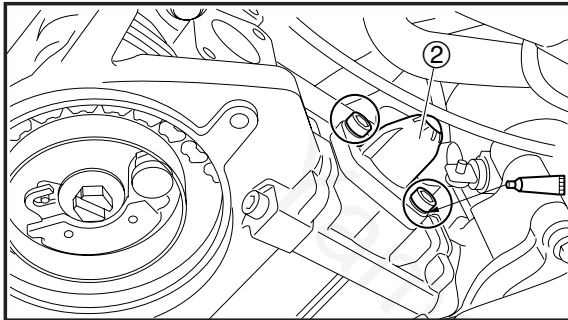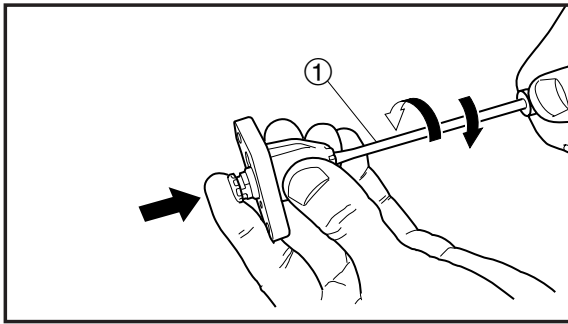

5. Install:
- timing chain tensioner



- a. While lightly pressing the timing chain tensioner rod by hand, turn the tensioner rod fully clockwise with a thin screwdriver ①.

NOTE:

Make sure that the tensioner rod has been fully set clockwise.

- b. Install the gasket and the timing chain tensioner ② onto the cylinder.

⚠ WARNING

Always use a new gasket.

NOTE:

Apply the YAMAHA bond 1215 onto the bolts.



Yamaha bond No. 1215
90890-85505



Timing chain tensioner bolt
10 Nm (1.0 m•kg, 7.2 ft•lb)

- c. Turn the timing chain tensioner rod counter-clockwise with a thin screwdriver ①, make sure it releases, and then tighten the cap bolt to specification.



6. Tighten:
- camshaft sprocket bolt





30 Nm (3.0 m•kg, 22 ft•lb)

CAUTION:

Be sure to tighten the camshaft sprocket bolt to the specified torque to avoid the possibility of the bolt coming loose and damaging the engine.

7. Turn:
- crankshaft
(several turns clockwise)

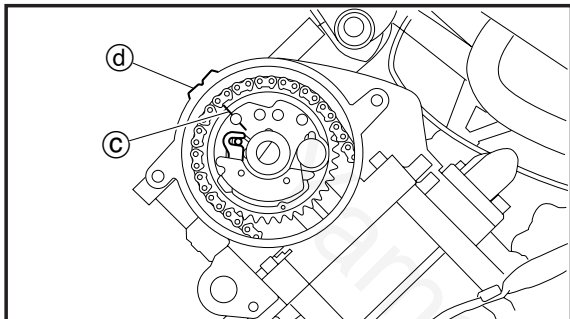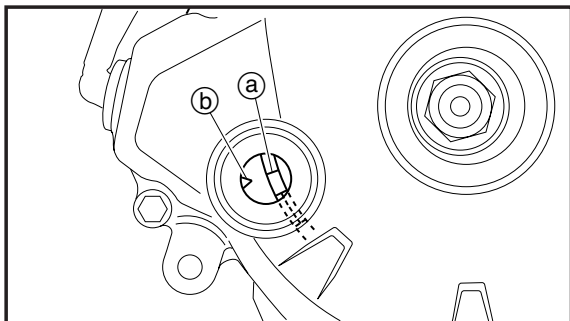

8. Check:

- "I" mark (a)

Align the "I" mark on the generator rotor with the stationary pointer (b) on the crankcase.

- "I" mark (c)

Align the "I" mark on the camshaft sprocket with the stationary pointer (d) on the cylinder head.

Out of alignment → Correct.

Refer to the installation steps above.

9. Measure:

- valve clearance

Out of specification → Adjust.

Refer to "ADJUSTING THE VALVE CLEARANCE" in chapter 3.

10. Install:

- O-rings **New**
- water pump assembly
- water pump assembly bolts

10 Nm (1.0 m•kg, 7.2 ft•lb)

11. Install:

- spark plug

13 Nm (1.3 m•kg, 9.5 ft•lb)

12. Install:

- intake manifold bolts
- intake manifold with carburetor

10 Nm (1.0 m•kg, 7.2 ft•lb)








EASf0020

CAMSHAFT



- ① Locknut
- ② Adjusting screw
- ③ Camshaft retainer
- ④ Camshaft
- ⑤ Rocker arm shaft
- ⑥ Rocker arm

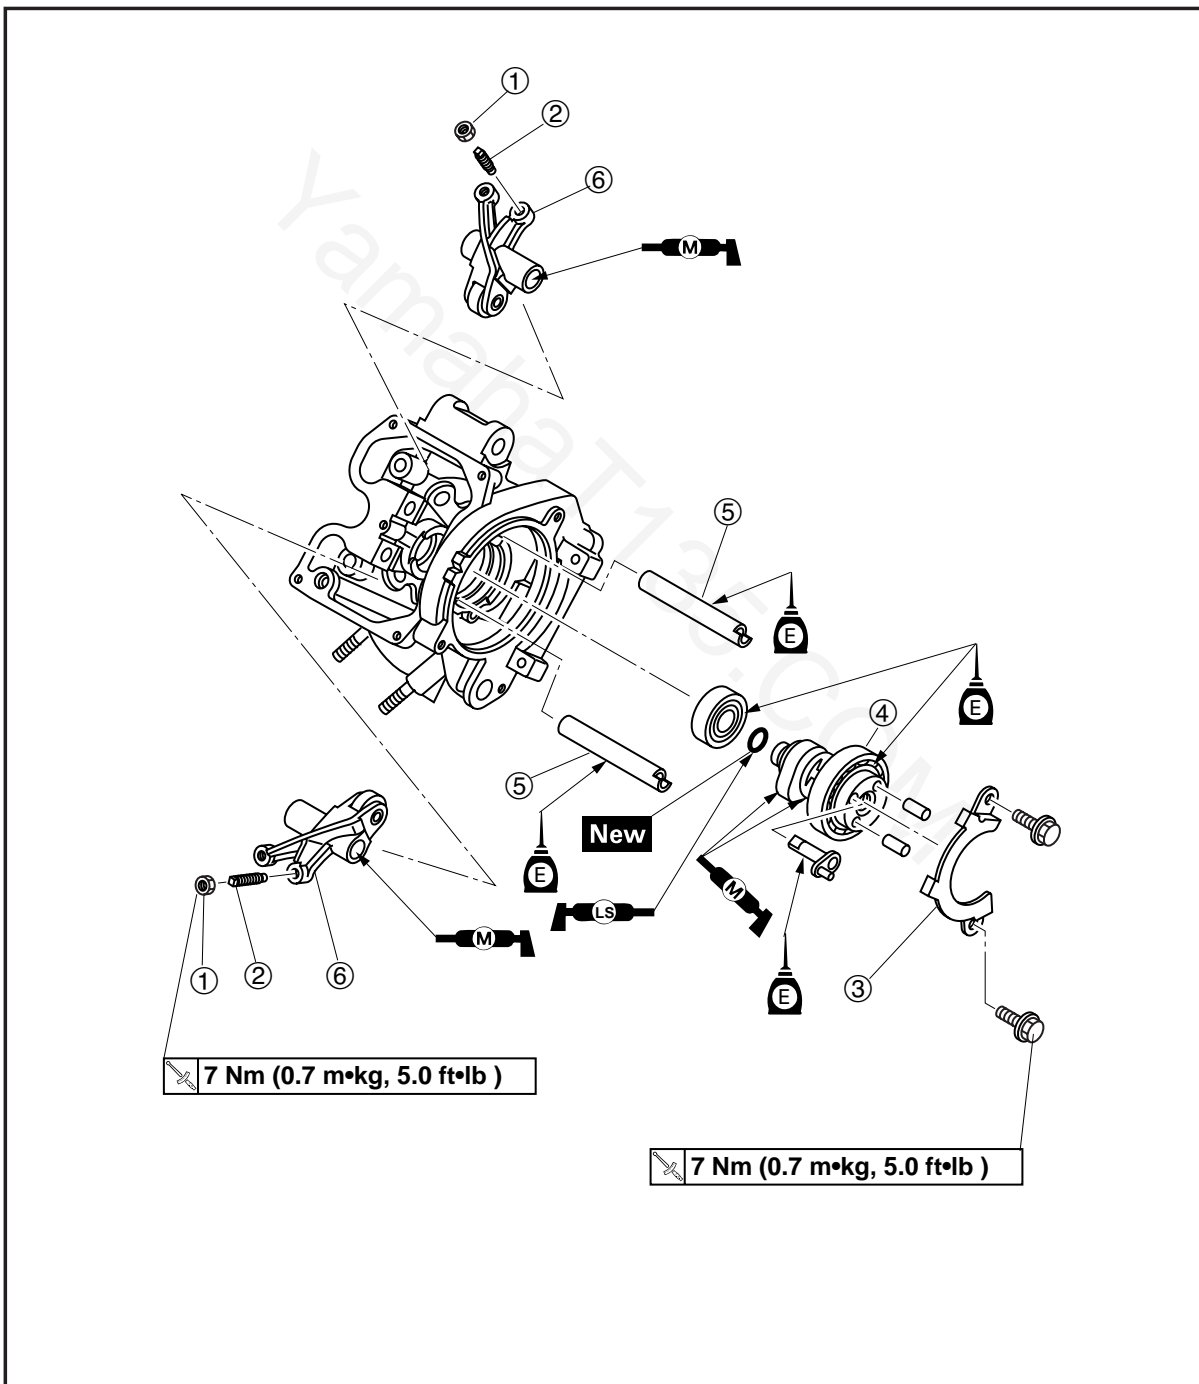

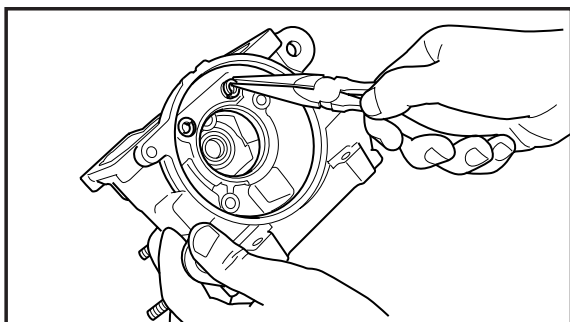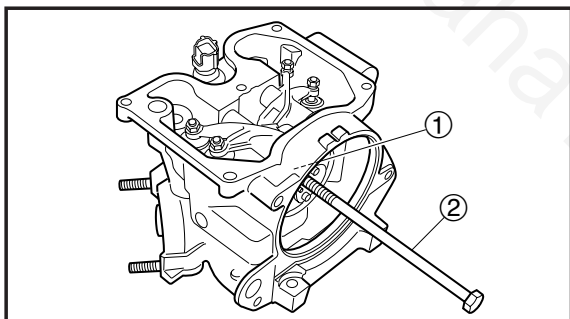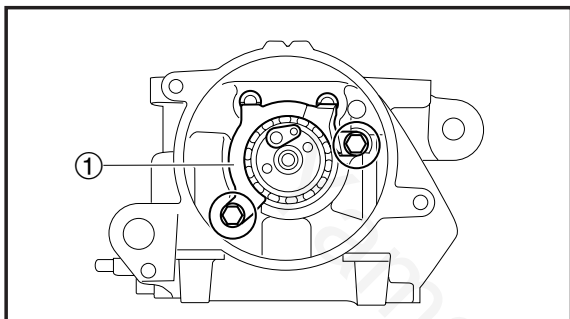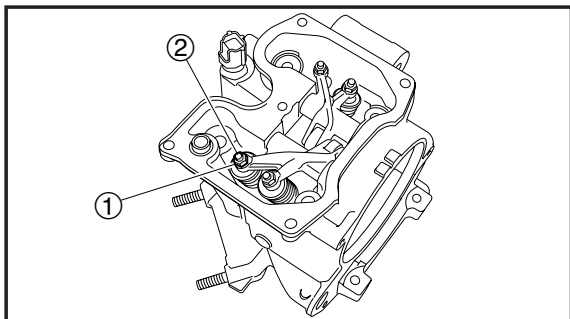

EASF0022

REMOVING THE ROCKER ARMS AND CAMSHAFT

NOTE:

Prior to remove the rocker arms and camshaft, remove the cylinder head.

1. Loosen:

- locknuts ①
- adjusting screws ②

2. Remove:

- camshaft retainer ①

3. Remove:


- camshaft ①

NOTE:

Screw an 8 mm bolt ② into the threaded end of the camshaft and then pull out the camshaft.

4. Remove:

- rocker arm shafts
- rocker arms

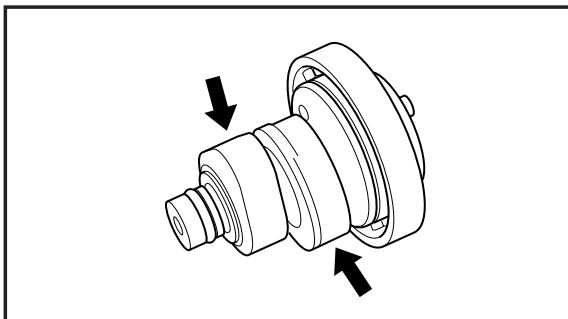


EAS00205


CHECKING THE CAMSHAFT

1. Check:

- camshaft lobes
Blue discoloration/pitting/scratches
→ Replace the camshaft.

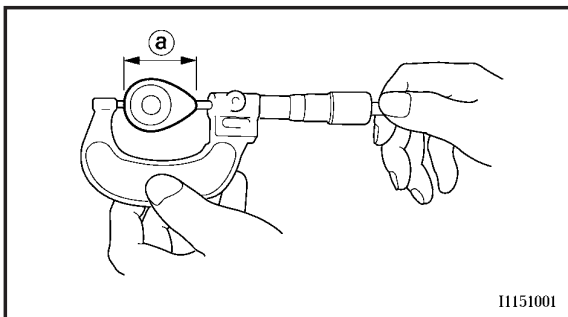

I1151001

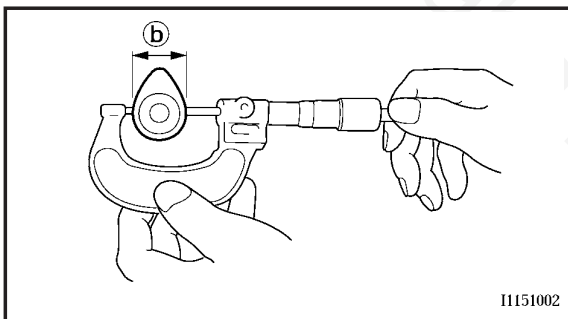

I1151002

2. Measure:


- camshaft lobe dimensions (a) and (b)
Out of specification → Replace the camshaft.

**Camshaft lobe dimension limit****Intake**

- (a) 29.613 mm (1.1659 in)
- (b) 25.043 mm (0.9859 in)

Exhaust

- (a) 29.912 mm (1.1776 in)
- (b) 24.989 mm (0.9838 in)

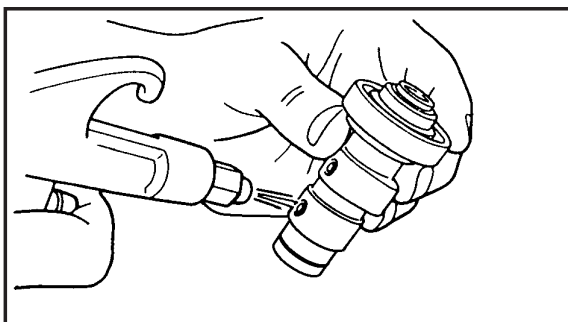

3. Check:

- camshaft oil passage
Obstructions → Blow out with compressed air.

EAS00206

CHECKING THE ROCKER ARMS AND ROCKER ARM SHAFTS

The following procedure applies to all of the rocker arms and rocker arm shafts.

1. Check:


- rocker arm
Damage/wear → Replace.



2. Check:

- rocker arm shaft

Blue discoloration/excessive wear/pitting/scratches → Replace or check the lubrication system.

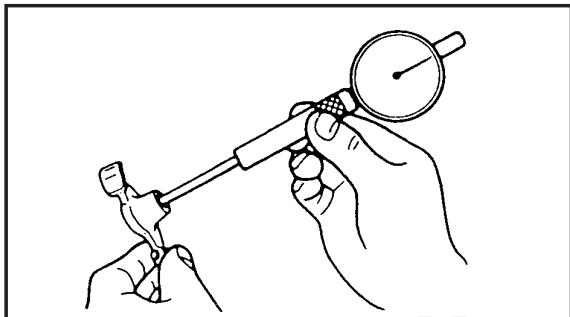

3. Measure:

- rocker arm inside diameter


Out of specification → Replace.

**Rocker arm inside diameter**

9.985 – 10.000 mm

(0.3931 – 0.3937 in)

<Limit>: 9.950 mm (0.3917 in)

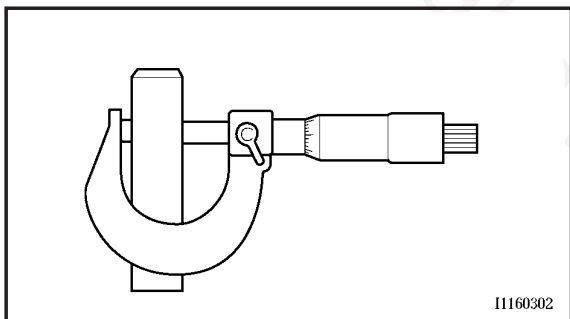

4. Measure:

- rocker arm shaft outside diameter

Out of specification → Replace.

**Rocker arm shaft outside diameter**

9.966 – 9.976 mm

(0.3924 – 0.3928 in)

<Limit>: 9.950 mm (0.3917 in)

5. Calculate:

- rocker-arm-to-rocker-arm-shaft clearance

NOTE:

Calculate the clearance by subtracting the rocker arm shaft outside diameter from the rocker arm inside diameter.


Above 0.08 mm → Replace the rocker arm and rocker arm shaft as a set.

**Rocker-arm-to-rocker-arm-shaft clearance**

0.009 – 0.034 mm

(0.0004 – 0.0013 in)

<Limit>: 0.080 mm (0.0031 in)

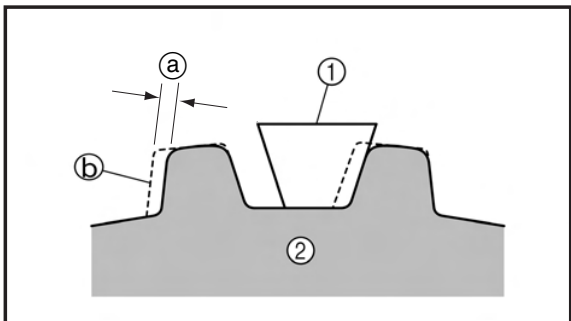

EAS00207

CHECKING THE CAMSHAFT SPROCKET

1. Check:

- camshaft sprocket

Worn more than 1/4 tooth (a) → Replace the camshaft sprocket and the timing chain as a set.

- (a) 1/4 tooth
- (b) Correct
- (1) Timing chain
- (2) Camshaft sprocket

EAS00219

INSTALLING THE CAMSHAFT AND ROCKER ARMS

1. Lubricate:

- camshaft journals



Recommended lubricant
Engine oil

2. Lubricate:

- rocker arm inside surface
- camshaft oil passage



Recommended lubricant
Molybdenum disulfide grease

3. Install:


- camshaft retainer (1)
- camshaft retainer bolt



7 Nm (0.7 m•kg, 5.0 ft•lb)

NOTE:

Install the camshaft retainer with the bent ends facing inward.

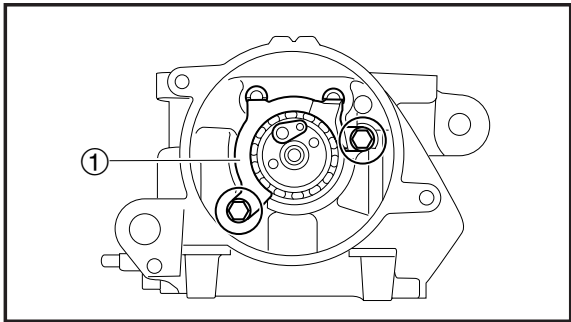




EASF0024

VALVES AND VALVE SPRINGS



- ① Valve cotter
- ② Upper spring seat
- ③ Valve spring
- ④ Valve stem seal
- ⑤ Lower spring seat
- ⑥ Intake valve
- ⑦ Exhaust valve

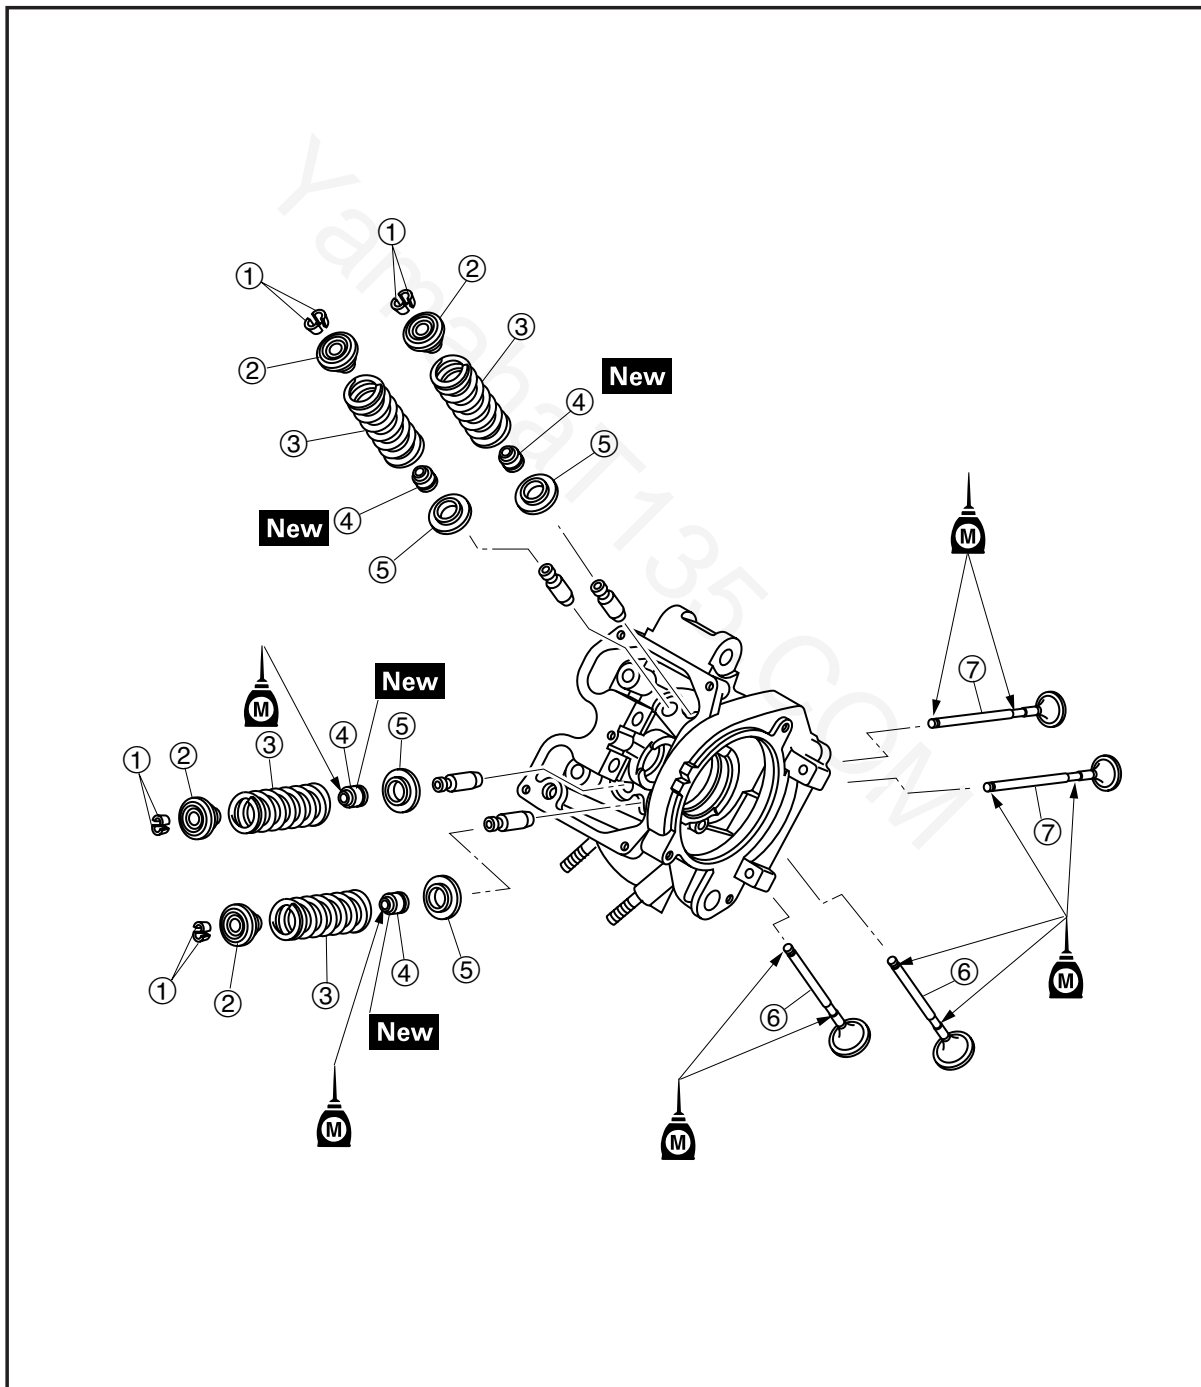



EASF0025


REMOVING THE VALVES**NOTE:**

Prior to remove the valves, remove the cylinder head, camshaft and rocker arms.

The following procedure applies to all of the valves and related components.

NOTE:

Before removing the internal parts of the cylinder head (e.g., valves, valve springs, valve seats), make sure the valves properly seal.

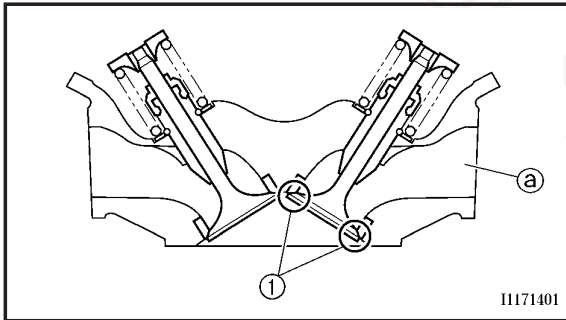

1. Check:

•valve sealing

Leakage at the valve seat → Check the valve face, valve seat, and valve seat width. Refer to "CHECKING THE VALVE SEATS".




- Pour a clean solvent (a) into the intake and exhaust ports.
- Check that the valves properly seal.

NOTE:

There should be no leakage at the valve seat ①.



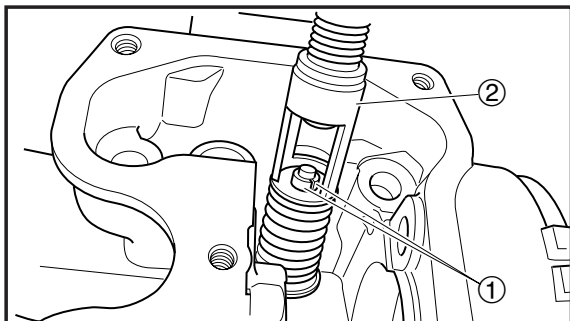


2. Remove:

- valve cotteners (1)

NOTE:

Remove the valve cotteners by compressing the valve spring with the valve spring compressor (2).

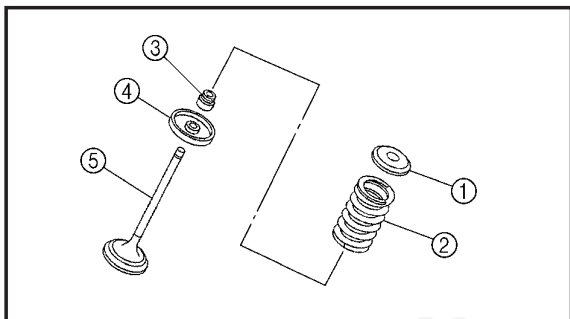

Valve spring compressor

90890-04019

Valve spring compressor

attachment


90890-04108

3. Remove:


- upper spring seat (1)
- valve spring (2)
- valve stem seal (3)
- lower spring seat (4)
- valve (5)

NOTE:

Identify the position of each part very carefully so that it can be reinstalled in its original place.

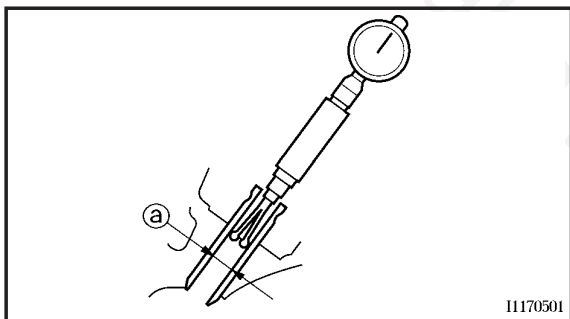

11170501

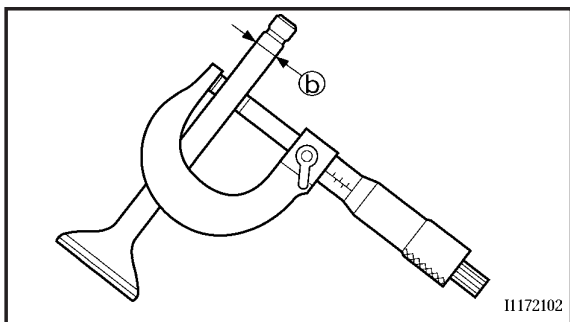

11172102

EAS00239

CHECKING THE VALVES AND VALVE GUIDES

The following procedure applies to all of the valves and valve guides.

1. Measure:

- valve-stem-to-valve-guide clearance

Valve-stem-to-valve-guide clearance =
Valve guide inside diameter (a) –
Valve stem diameter (b)

Out of specification → Replace the valve guide.



Valve-stem-to-valve-guide clearance

Intake

0.010 – 0.037 mm

(0.0004 – 0.0015 in)

<Limit>: 0.08 mm (0.0032 in)

Exhaust



0.025 – 0.052 mm

(0.001 – 0.002 in)

<Limit>: 0.10 mm (0.0039 in)

CYLINDER HEAD

ENG

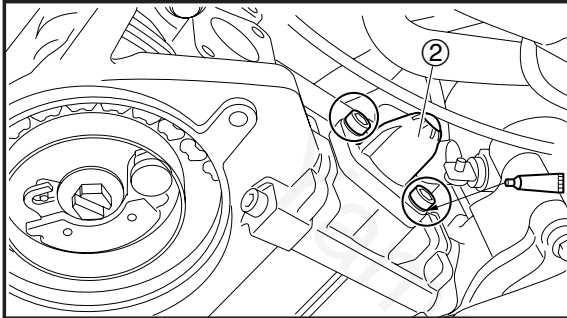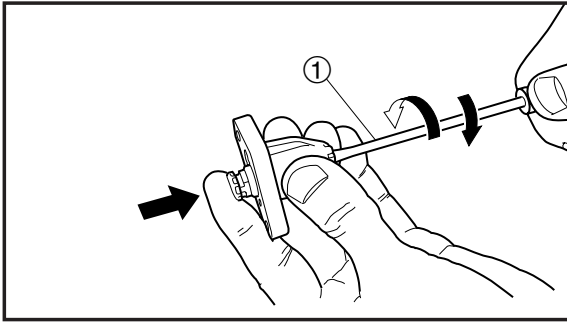

5. Install:
- timing chain tensioner



- a. While lightly pressing the timing chain tensioner rod by hand, turn the tensioner rod fully clockwise with a thin screwdriver ①.

NOTE:

Make sure that the tensioner rod has been fully set clockwise.

- b. Install the gasket and the timing chain tensioner ② onto the cylinder.

⚠ WARNING

Always use a new gasket.

NOTE:

Apply the YAMAHA bond 1215 onto the bolts.



Yamaha bond No. 1215
90890-85505




Timing chain tensioner bolt
10 Nm (1.0 m•kg, 7.2 ft•lb)

- c. Turn the timing chain tensioner rod counter-clockwise with a thin screwdriver ①, make sure it releases, and then tighten the cap bolt to specification.





6. Tighten:
- camshaft sprocket bolt

 **30 Nm (3.0 m•kg, 22 ft•lb)**

CAUTION:

Be sure to tighten the camshaft sprocket bolt to the specified torque to avoid the possibility of the bolt coming loose and damaging the engine.

7. Turn:
- crankshaft
(several turns clockwise)

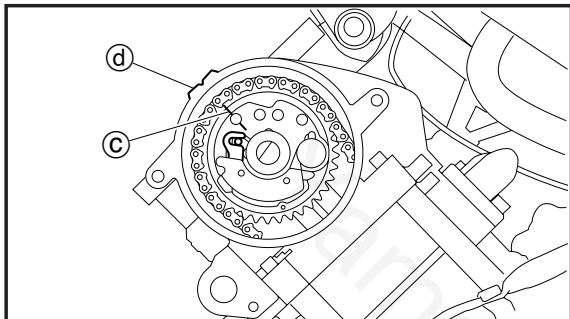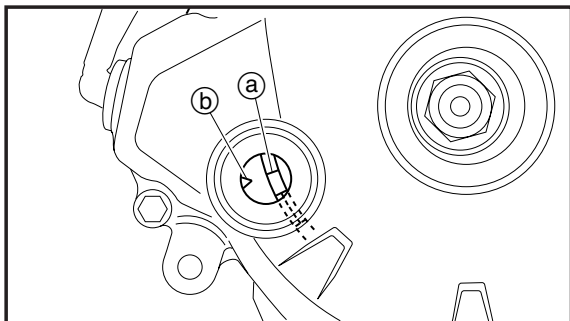

8. Check:

- "I" mark (a)

Align the "I" mark on the generator rotor with the stationary pointer (b) on the crankcase.

- "I" mark (c)

Align the "I" mark on the camshaft sprocket with the stationary pointer (d) on the cylinder head.

Out of alignment → Correct.

Refer to the installation steps above.

9. Measure:

- valve clearance

Out of specification → Adjust.

Refer to "ADJUSTING THE VALVE CLEARANCE" in chapter 3.

10. Install:

- O-rings **New**
- water pump assembly
- water pump assembly bolts

10 Nm (1.0 m•kg, 7.2 ft•lb)

11. Install:

- spark plug

13 Nm (1.3 m•kg, 9.5 ft•lb)

12. Install:

- intake manifold bolts
- intake manifold with carburetor

10 Nm (1.0 m•kg, 7.2 ft•lb)








EASf0020

CAMSHAFT



- ① Locknut
- ② Adjusting screw
- ③ Camshaft retainer
- ④ Camshaft
- ⑤ Rocker arm shaft
- ⑥ Rocker arm

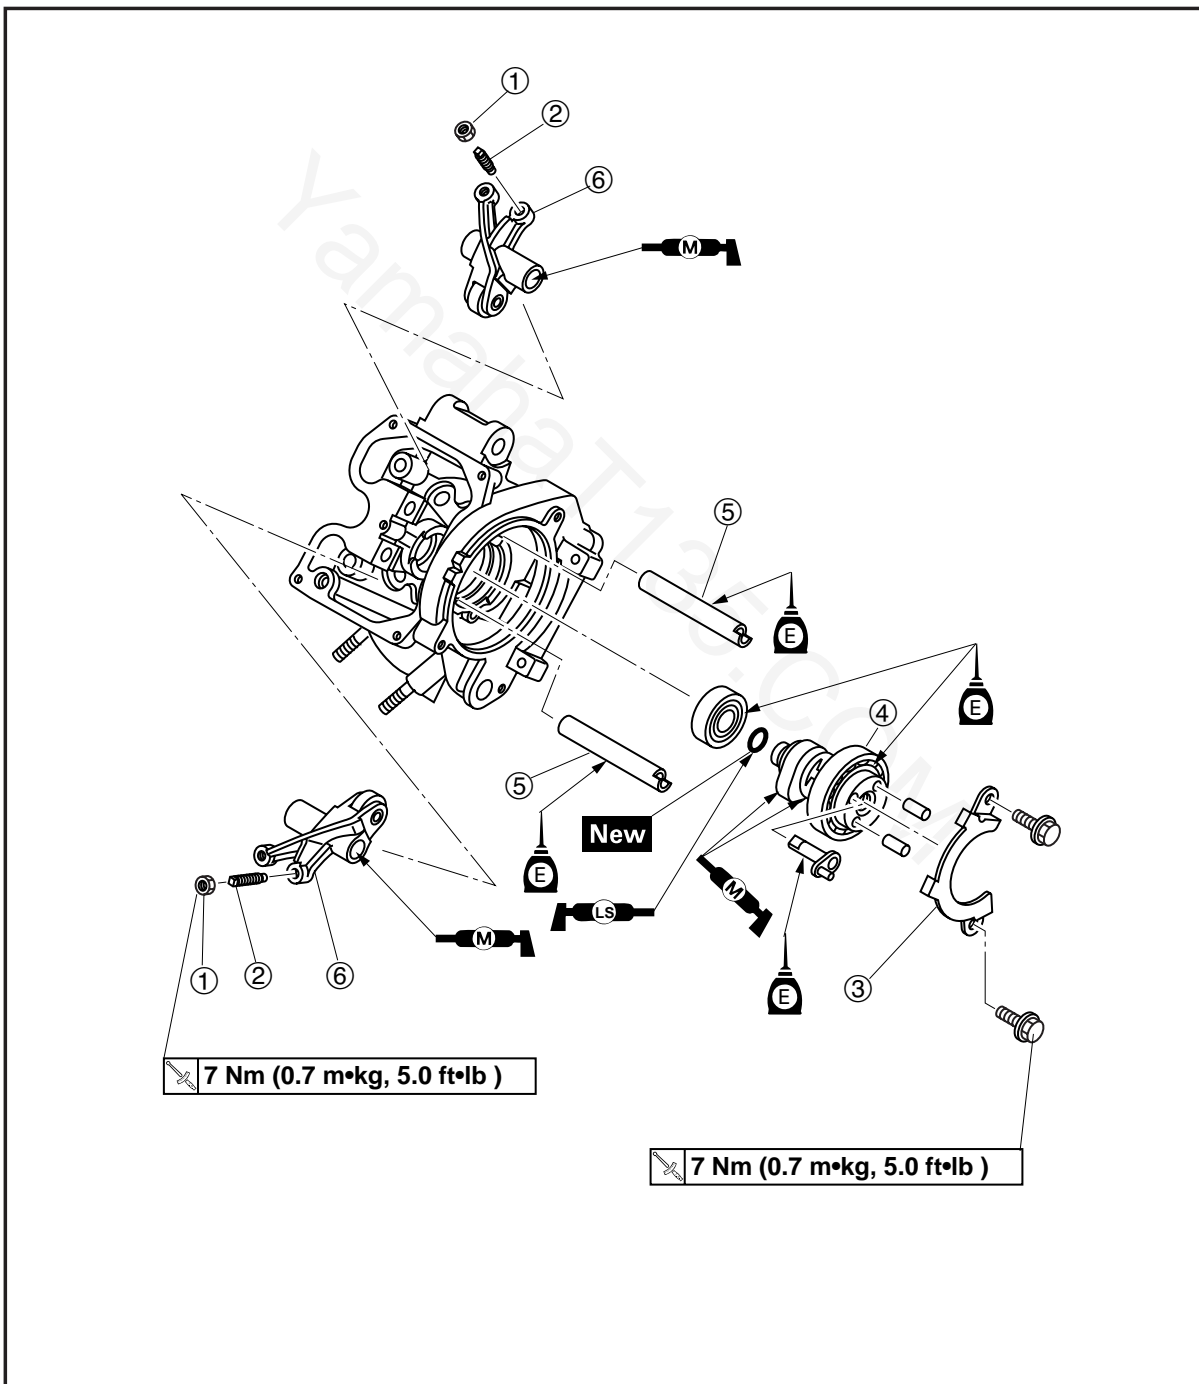

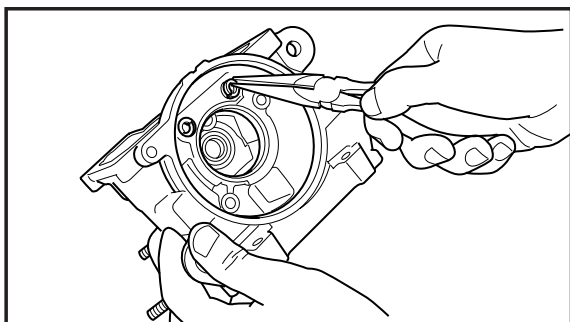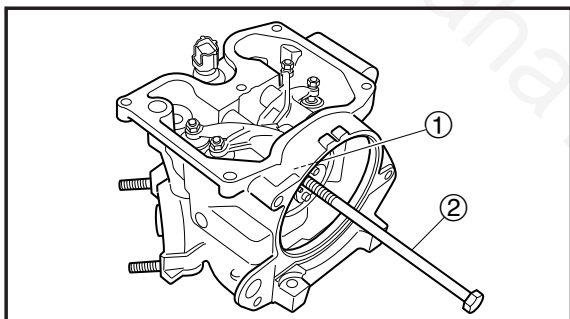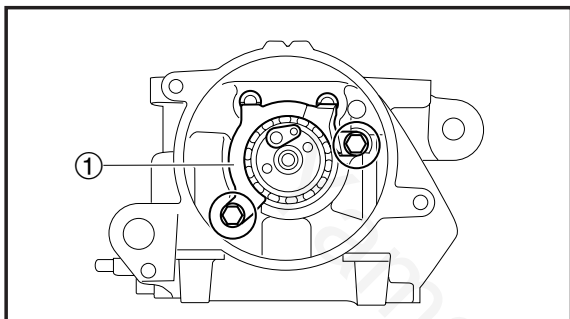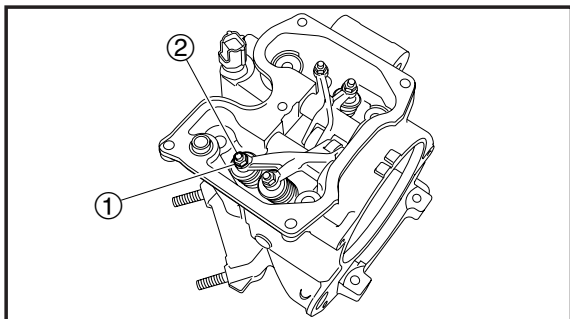

EASF0022

REMOVING THE ROCKER ARMS AND CAMSHAFT

NOTE:

Prior to remove the rocker arms and camshaft, remove the cylinder head.

1. Loosen:

- locknuts ①
- adjusting screws ②

2. Remove:

- camshaft retainer ①

3. Remove:


- camshaft ①

NOTE:

Screw an 8 mm bolt ② into the threaded end of the camshaft and then pull out the camshaft.

4. Remove:

- rocker arm shafts
- rocker arms

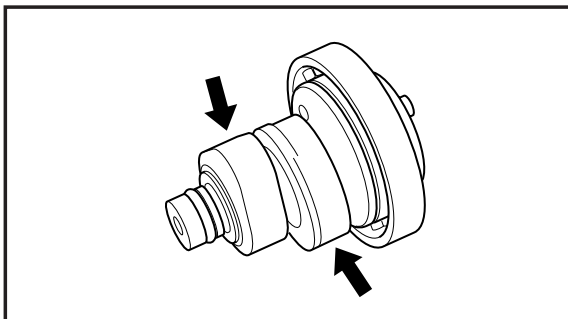


EAS00205


CHECKING THE CAMSHAFT

1. Check:

- camshaft lobes
Blue discoloration/pitting/scratches
→ Replace the camshaft.

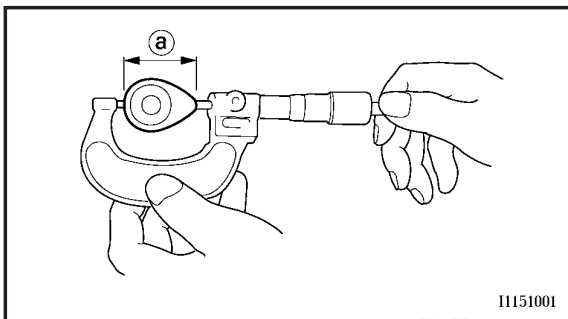

I1151001

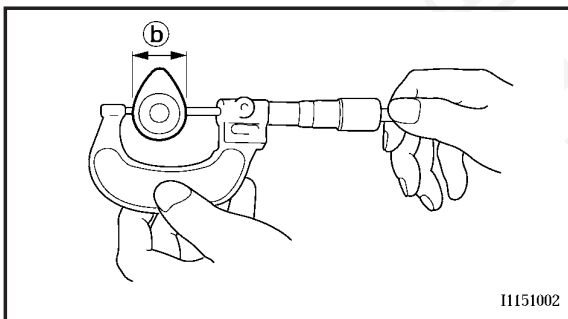

I1151002

2. Measure:


- camshaft lobe dimensions (a) and (b)
Out of specification → Replace the camshaft.

**Camshaft lobe dimension limit****Intake**

- (a) 29.613 mm (1.1659 in)
- (b) 25.043 mm (0.9859 in)

Exhaust

- (a) 29.912 mm (1.1776 in)
- (b) 24.989 mm (0.9838 in)

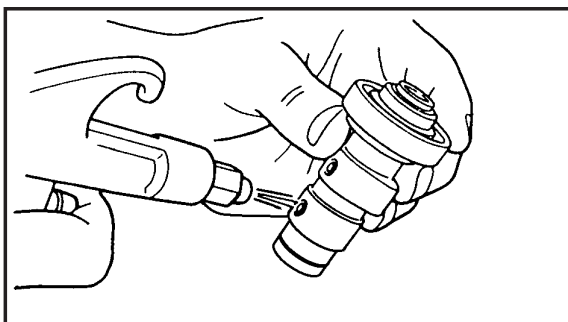

3. Check:

- camshaft oil passage
Obstructions → Blow out with compressed air.

EAS00206

CHECKING THE ROCKER ARMS AND ROCKER ARM SHAFTS

The following procedure applies to all of the rocker arms and rocker arm shafts.

1. Check:


- rocker arm
Damage/wear → Replace.



2. Check:

- rocker arm shaft

Blue discoloration/excessive wear/pitting/scratches → Replace or check the lubrication system.

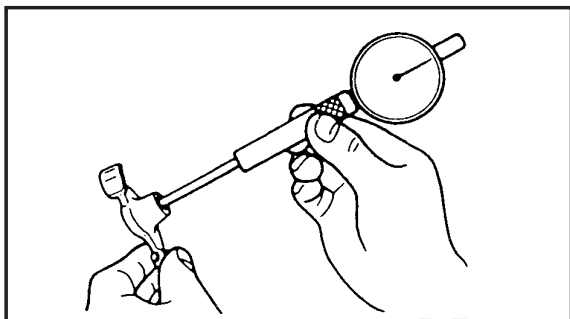

3. Measure:

- rocker arm inside diameter


Out of specification → Replace.

**Rocker arm inside diameter**

9.985 – 10.000 mm

(0.3931 – 0.3937 in)

<Limit>: 9.950 mm (0.3917 in)

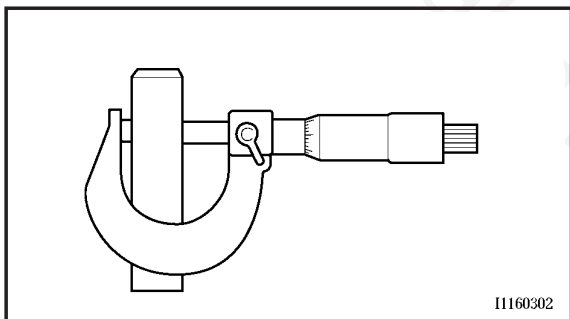

4. Measure:

- rocker arm shaft outside diameter

Out of specification → Replace.

**Rocker arm shaft outside diameter**

9.966 – 9.976 mm

(0.3924 – 0.3928 in)

<Limit>: 9.950 mm (0.3917 in)

5. Calculate:

- rocker-arm-to-rocker-arm-shaft clearance

NOTE:

Calculate the clearance by subtracting the rocker arm shaft outside diameter from the rocker arm inside diameter.


Above 0.08 mm → Replace the rocker arm and rocker arm shaft as a set.

**Rocker-arm-to-rocker-arm-shaft clearance**

0.009 – 0.034 mm

(0.0004 – 0.0013 in)

<Limit>: 0.080 mm (0.0031 in)

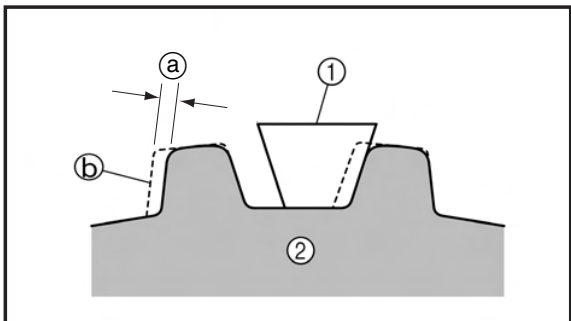

EAS00207

CHECKING THE CAMSHAFT SPROCKET

1. Check:

- camshaft sprocket

Worn more than 1/4 tooth (a) → Replace the camshaft sprocket and the timing chain as a set.

- (a) 1/4 tooth
- (b) Correct
- (1) Timing chain
- (2) Camshaft sprocket

EAS00219

INSTALLING THE CAMSHAFT AND ROCKER ARMS

1. Lubricate:

- camshaft journals



Recommended lubricant
Engine oil

2. Lubricate:

- rocker arm inside surface
- camshaft oil passage



Recommended lubricant
Molybdenum disulfide grease

3. Install:


- camshaft retainer (1)
- camshaft retainer bolt



7 Nm (0.7 m•kg, 5.0 ft•lb)

NOTE:

Install the camshaft retainer with the bent ends facing inward.

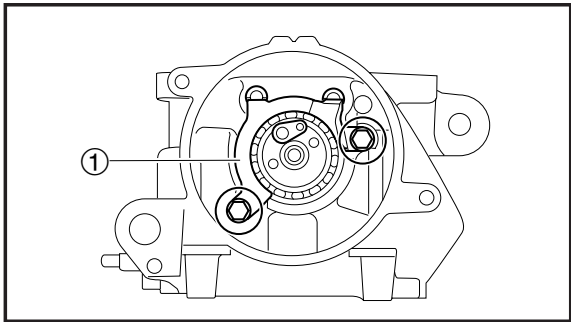




EASF0024

VALVES AND VALVE SPRINGS



- ① Valve cotter
- ② Upper spring seat
- ③ Valve spring
- ④ Valve stem seal
- ⑤ Lower spring seat
- ⑥ Intake valve
- ⑦ Exhaust valve

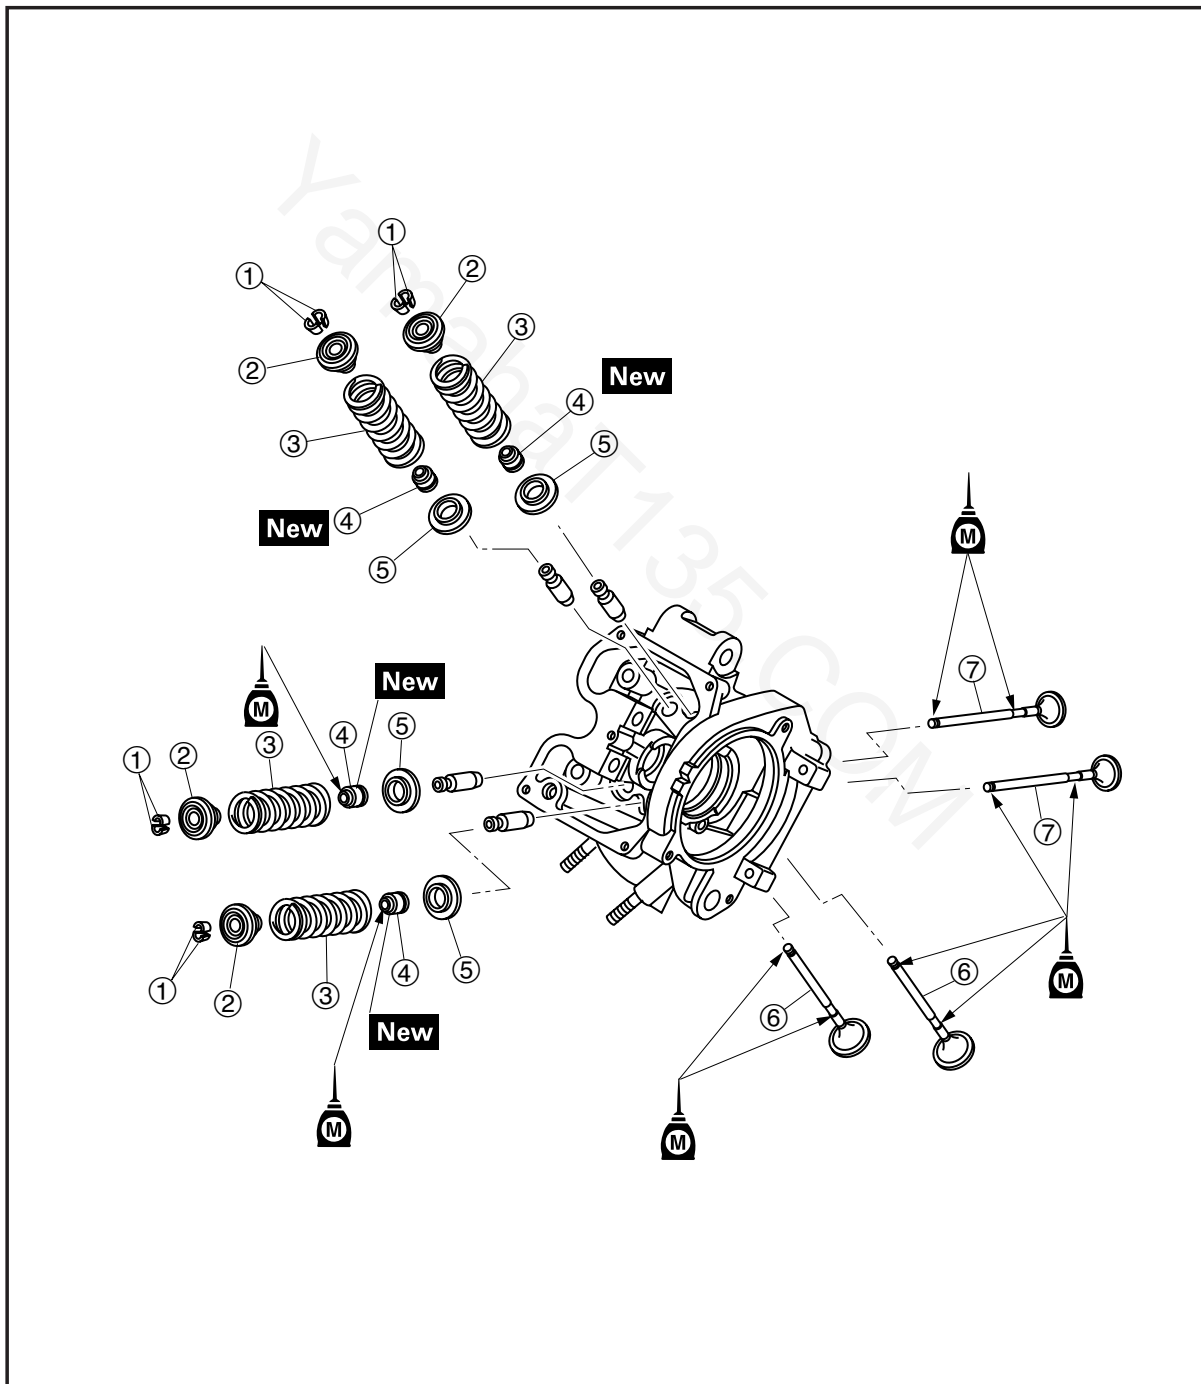



EASF0025


REMOVING THE VALVES**NOTE:**

Prior to remove the valves, remove the cylinder head, camshaft and rocker arms.

The following procedure applies to all of the valves and related components.

NOTE:

Before removing the internal parts of the cylinder head (e.g., valves, valve springs, valve seats), make sure the valves properly seal.

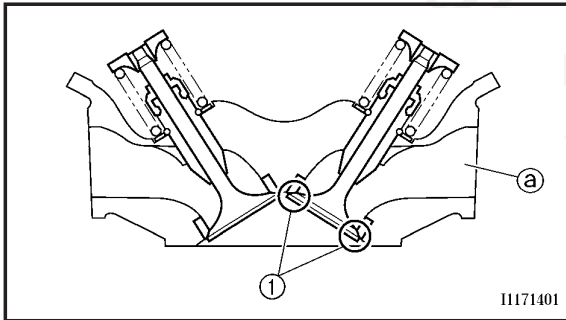

1. Check:

•valve sealing

Leakage at the valve seat → Check the valve face, valve seat, and valve seat width. Refer to "CHECKING THE VALVE SEATS".




- Pour a clean solvent (a) into the intake and exhaust ports.
- Check that the valves properly seal.

NOTE:

There should be no leakage at the valve seat ①.



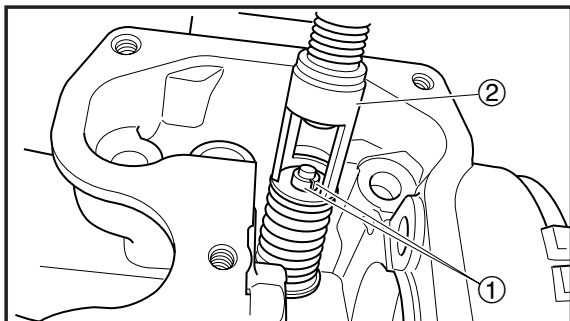


2. Remove:

- valve cotteners (1)

NOTE:

Remove the valve cotteners by compressing the valve spring with the valve spring compressor (2).

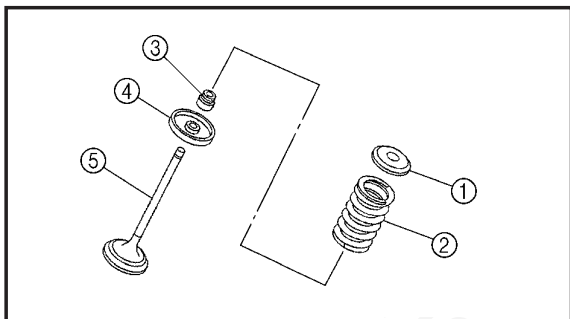

Valve spring compressor

90890-04019

Valve spring compressor

attachment


90890-04108

3. Remove:

- upper spring seat (1)
- valve spring (2)
- valve stem seal (3)
- lower spring seat (4)
- valve (5)

NOTE:

Identify the position of each part very carefully so that it can be reinstalled in its original place.

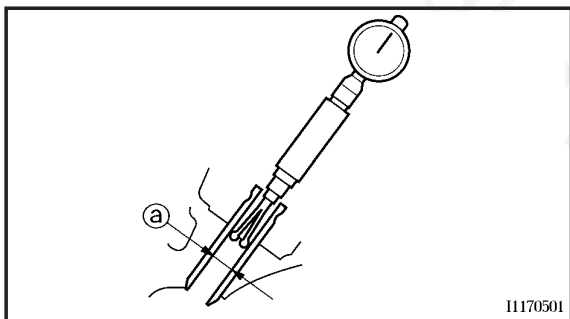

11170501

EAS00239


CHECKING THE VALVES AND VALVE GUIDES

The following procedure applies to all of the valves and valve guides.

1. Measure:

- valve-stem-to-valve-guide clearance

Valve-stem-to-valve-guide clearance =
Valve guide inside diameter (a) –
Valve stem diameter (b)

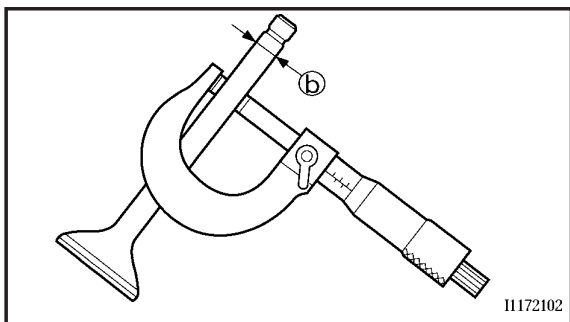

11172102

Out of specification → Replace the valve guide.



Valve-stem-to-valve-guide clearance

Intake

0.010 – 0.037 mm

(0.0004 – 0.0015 in)




<Limit>: 0.08 mm (0.0032 in)

Exhaust

0.025 – 0.052 mm

(0.001 – 0.002 in)

<Limit>: 0.10 mm (0.0039 in)

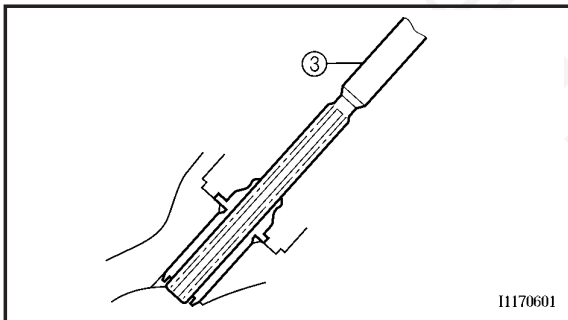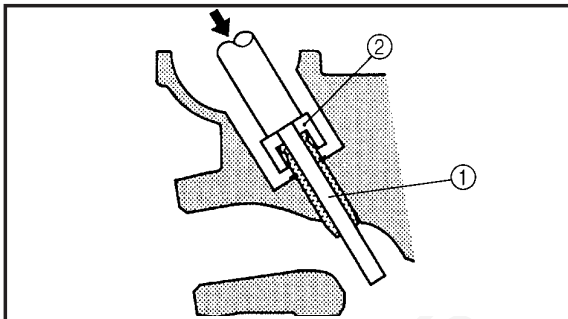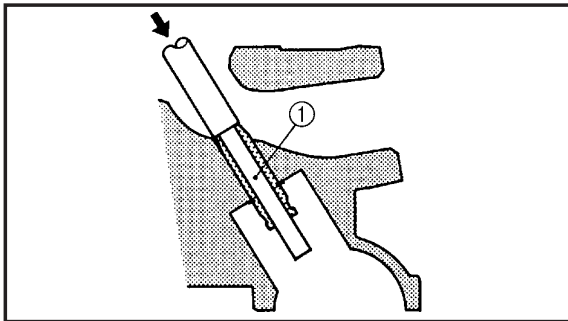

2. Replace:
- valve guide

NOTE:

To ease valve guide removal and installation, and to maintain the correct fit, heat the cylinder head to 100 °C in an oven.



- Remove the valve guide with the valve guide remover ①.
- Install the new valve guide with the valve guide installer ② and valve guide remover ①.
- After installing the valve guide, bore the valve guide with the valve guide reamer ③ to obtain the proper valve-stem-to-valve-guide clearance.

NOTE:

After replacing the valve guide, reface the valve seat.



Valve guide remover (4.5 mm)

90890-04116

Valve guide installer (4.5 mm)

90890-04117

Valve guide reamer (4.5 mm)


90890-04118



- Eliminate:
 - carbon deposits
(from the valve face and valve seat)
- Check:
 - valve face
Pitting/wear → Grind the valve face.
 - valve stem end
Mushroom shape or diameter larger than the body of the valve stem → Replace the valve.

5.Measure:

- valve margin thickness ①
- Out of specification Replace the valve.

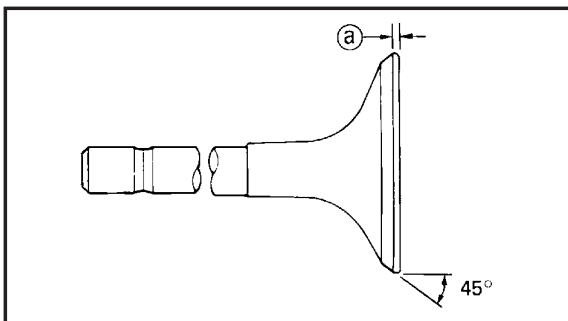


Valve margin thickness

Intake: 0.5 – 0.9 mm

(0.0197 – 0.0433 in)

Exhaust: 0.5 – 0.9 mm

(0.0197 – 0.0433 in)

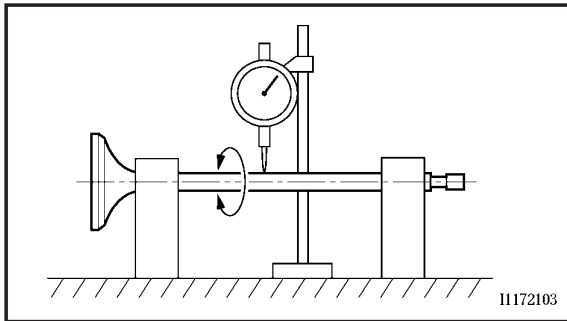

6. Measure:

- valve stem runout

Out of specification → Replace the valve.

NOTE:

- When installing a new valve, always replace the valve guide.
- If the valve is removed or replaced, always replace the valve stem seal.



Valve stem runout limit
0.01 mm (0.0004 in)

EAS00240

CHECKING THE VALVE SEATS

The following procedure applies to all of the valves and valve seats.

1. Eliminate:

- carbon deposits
(from the valve face and valve seat)



2. Check:

- valve seat
Pitting/wear → Replace the cylinder head.

3. Measure:

- valve seat width (a)

Out of specification → Replace the cylinder head.

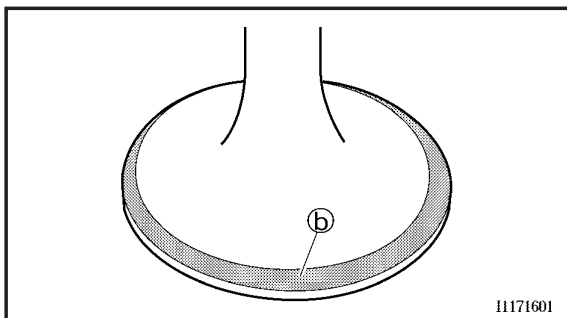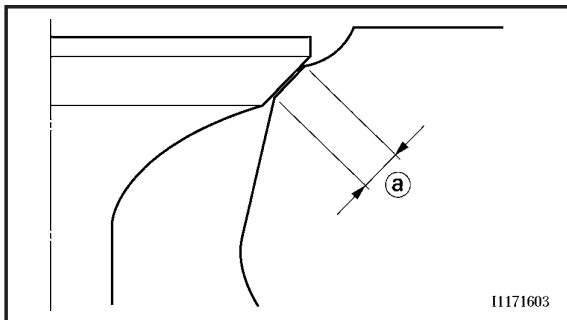





Valve seat width
Intake: 0.9 – 1.1 mm
(0.0354 – 0.0433 in)
Exhaust: 0.9 – 1.1 mm
(0.0354 – 0.0433 in)
<Limit>: 1.6 mm



- Apply Mechanic's blueing dye (Dykem) (b) onto the valve face.
- Install the valve into the cylinder head.
- Press the valve through the valve guide and onto the valve seat to make a clear impression.
- Measure the valve seat width.

**NOTE:**

Where the valve seat and valve face contacted one another, the blueing will have been removed.

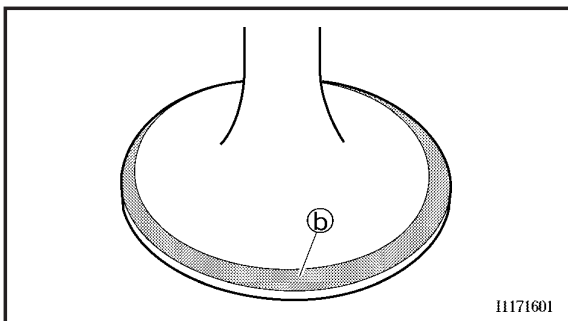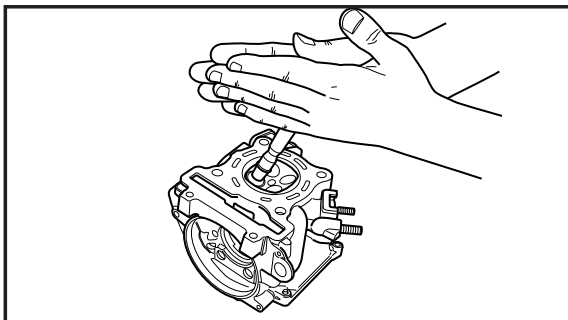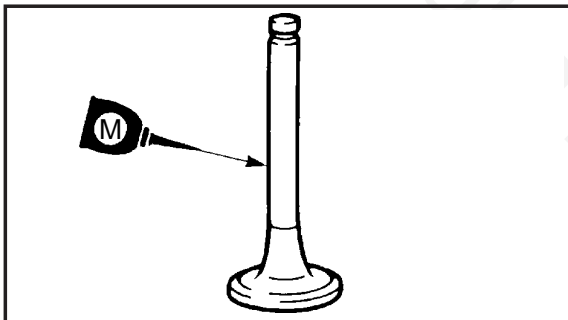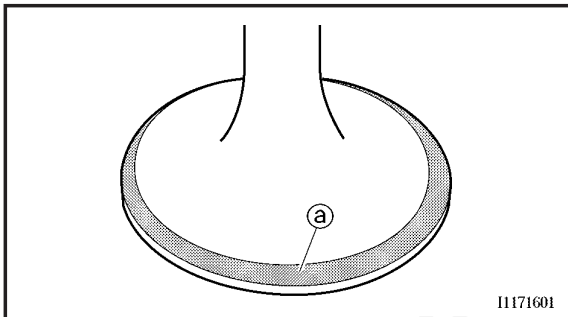

4. Lap:

- valve face
- valve seat

NOTE:

After replacing the cylinder head or replacing the valve and valve guide, the valve seat and valve face should be lapped.



- a. Apply a coarse lapping compound (a) to the valve face.

CAUTION:


Do not let the lapping compound enter the gap between the valve stem and the valve guide.

- b. Apply molybdenum oil onto the valve stem.
 c. Install the valve into the cylinder head.
 d. Turn the valve until the valve face and valve seat are evenly polished, then clean off all of the lapping compound.


NOTE:

For the best lapping results, lightly tap the valve seat while rotating the valve back and forth between your hands.

- e. Apply a fine lapping compound to the valve face and repeat the above steps.
 f. After every lapping procedure, be sure to clean off all of the lapping compound from the valve face and valve seat.
 g. Apply Mechanic's blueing dye (Dykem) (b) onto the valve face.
 h. Install the valve into the cylinder head.
 i. Press the valve through the valve guide and onto the valve seat to make a clear impression.

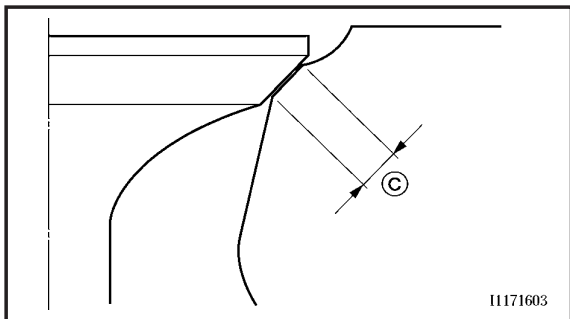

- j. Measure the valve seat width © again. If the valve seat width is out of specification, reface and lap the valve seat.

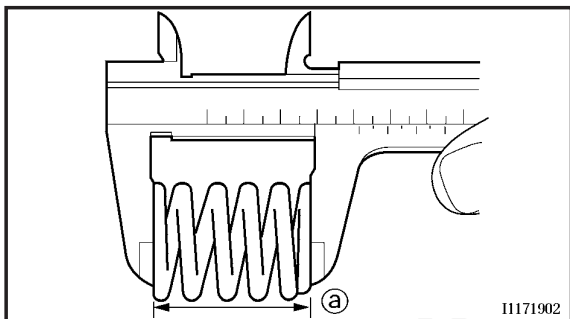

EAS00241

CHECKING THE VALVE SPRINGS

The following procedure applies to all of the valve springs.

1. Measure:

- valve spring free length (a)


Out of specification → Replace the valve spring.

**Valve spring free length**

Intake and exhaust valve
springs

47.33 mm (1.86 in)

<Limit>: 44.96 mm (1.77 in)

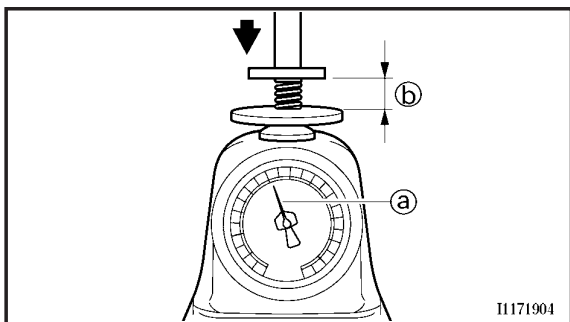

2. Measure:

- compressed valve spring force (a)

Out of specification → Replace the valve spring.


(b) Installed length

**Compressed valve spring force (installed)**

Intake and exhaust valve
springs

135.6 – 156.0 N

(13.83 – 15.91 kgf) at 24.2 mm

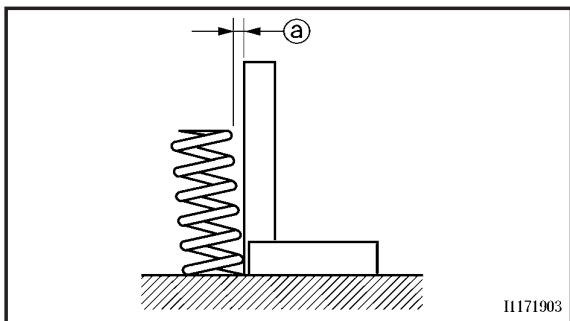

3. Measure:

- valve spring tilt (a)

Out of specification → Replace the valve spring.

**Spring tilt limit**

Intake and exhaust valve
springs

2.0 mm (0.08 in)




EAS00245

INSTALLING THE VALVES

The following procedure applies to all of the valves and related components.

1. Deburr:

- valve stem end
(with an oil stone)

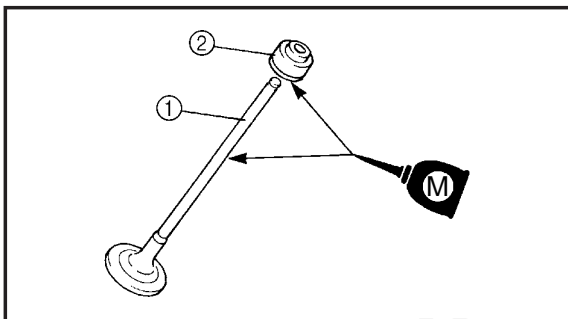


2. Lubricate:

- valve stem ①
- valve stem seal ②
(with the recommended lubricant)



Recommended lubricant
Molybudemium oil

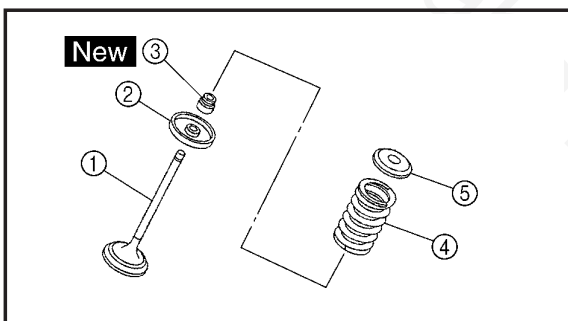


3. Install:

- valve ①
- lower spring seat ②
- valve stem seal ③
- valve spring ④
- upper spring seat ⑤
(into the cylinder head)


NOTE:

Install the valve spring with the larger pitch (a) facing up.

(b) Smaller pitch

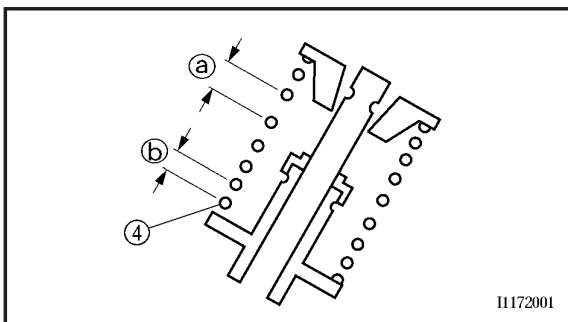

11172001

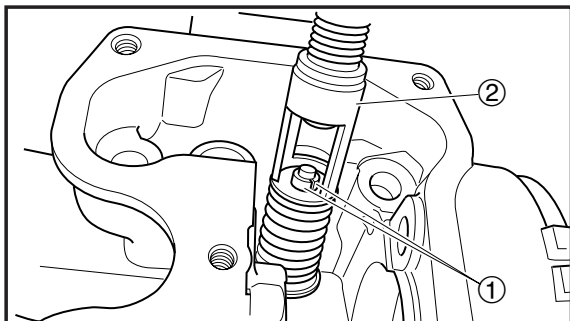

4. Install:

- valve cotters ①

NOTE:

Install the valve cotters by compressing the valve spring with the valve spring compressor ②




Valve spring compressor

90890-04019

Valve spring compressor
attachment

90890-04108

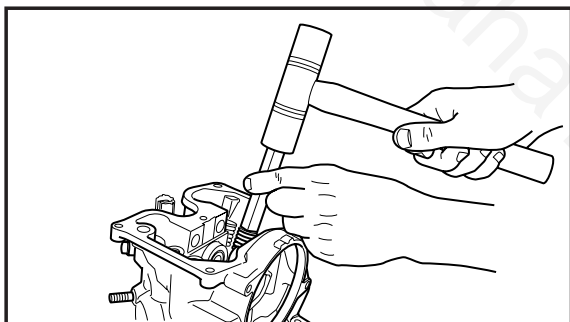

5. To secure the valve cotters onto the valve stem, lightly tap the valve tip with a soft-face hammer.

CAUTION:

Hitting the valve tip with excessive force could damage the valve.




EASF0027


CYLINDER AND PISTON



- ① Cylinder
- ② Cylinder gasket
- ③ Dowel pin
- ④ Top ring
- ⑤ 2nd ring
- ⑥ Oil ring
- ⑦ Piston pin clip

- ⑧ Piston pin
- ⑨ Piston

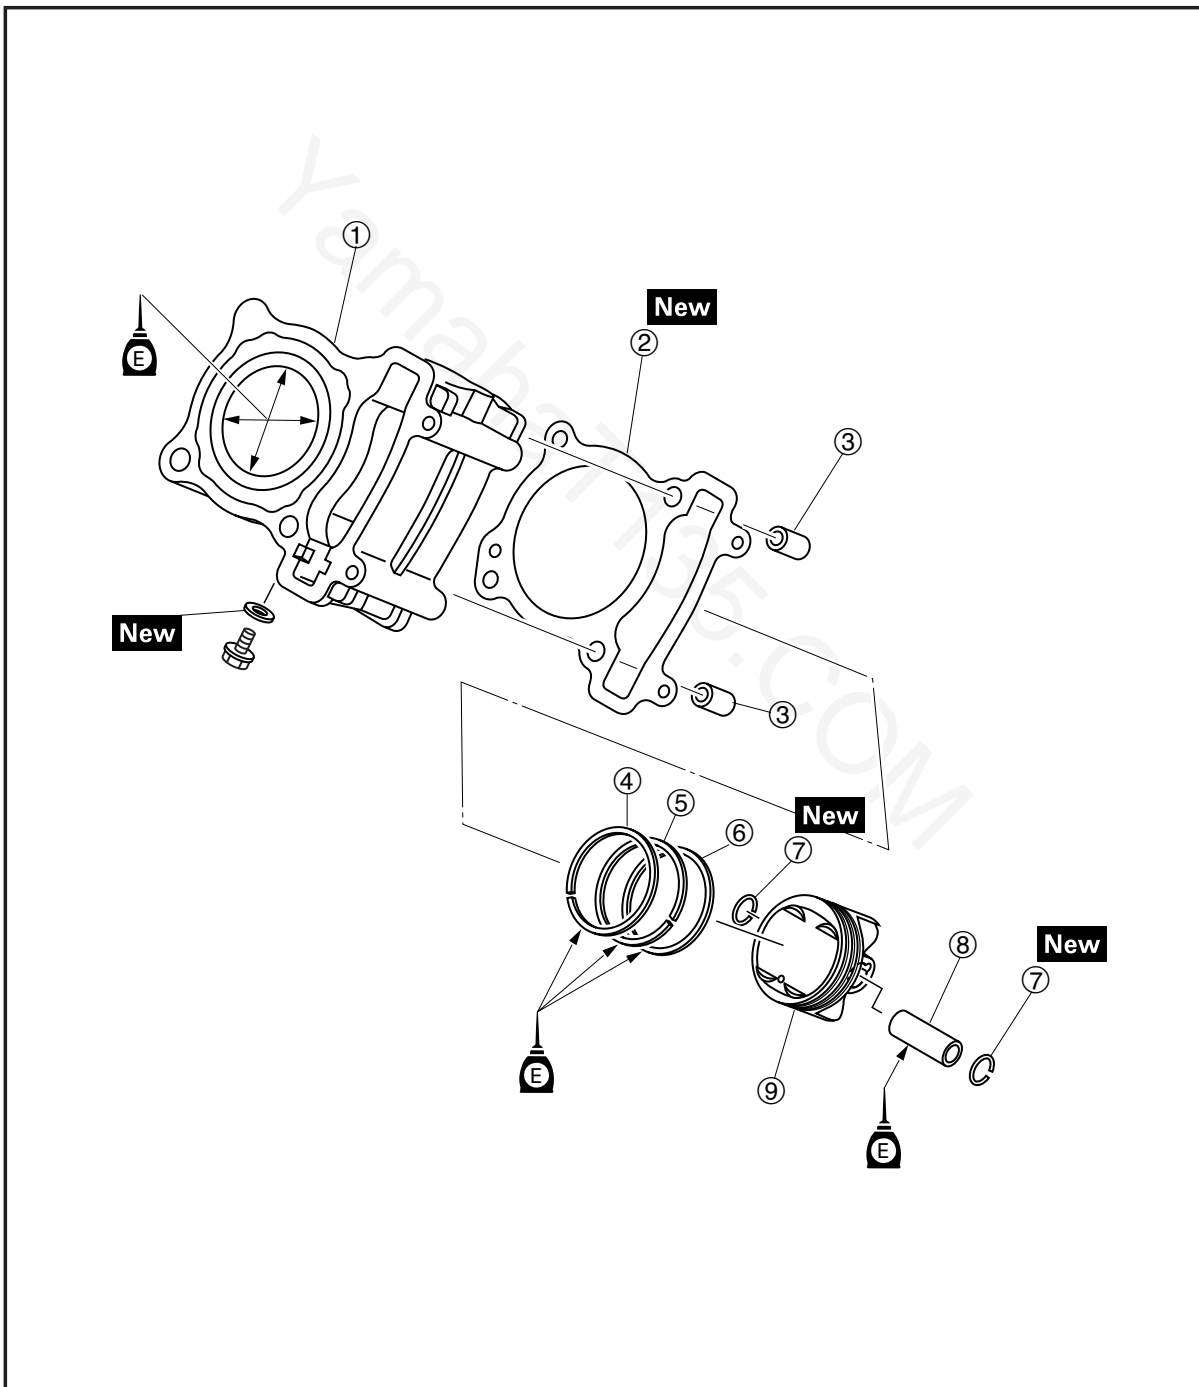

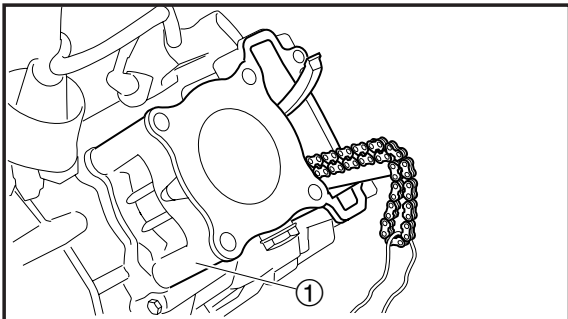


EASF0028

REMOVING THE CYLINDER AND PISTON

NOTE:

Prior to removing the cylinder and piston, remove the cylinder head.

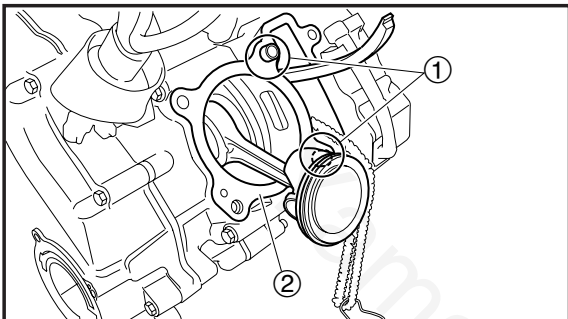


1. Remove:

- cylinder ①

2. Remove:

- dowel pins ①
- gasket ②

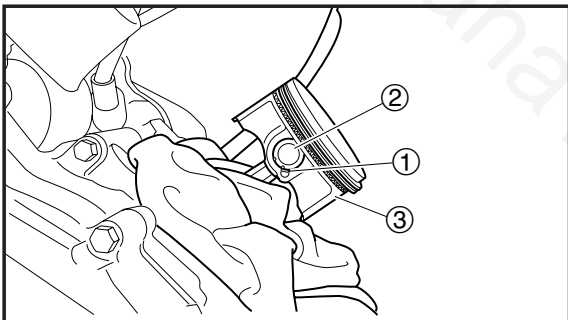

3. Remove:


- piston pin clip ①
- piston pin ②
- piston ③

CAUTION:

Do not use a hammer to drive the piston pin out.

NOTE:

- Before removing the piston pin clip, cover the crankcase opening with a clean rag to prevent the piston pin clip from falling into the crankcase.
- Before removing the piston pin, deburr the piston pin clip groove and the piston pin bore area of the piston. If both areas are deburred and the piston pin is still difficult to remove, remove it with a piston pin puller set.

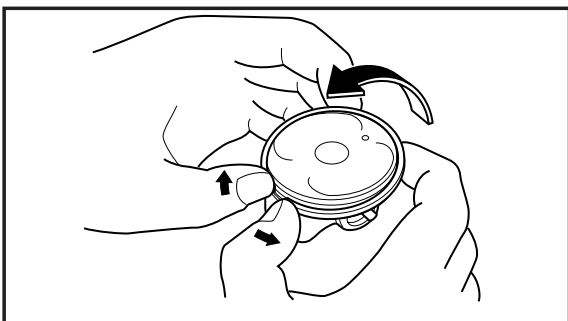

4. Remove:

- top ring
- 2nd ring
- oil ring

NOTE:

When removing a piston ring, open the end gap with your fingers and lift the other side of the ring over the piston crown.




EAS00255

CHECKING THE CYLINDER AND PISTON

1. Check:

- piston surface
- cylinder wall

Vertical scratches → Replace the cylinder, and replace the piston and piston rings as a set.

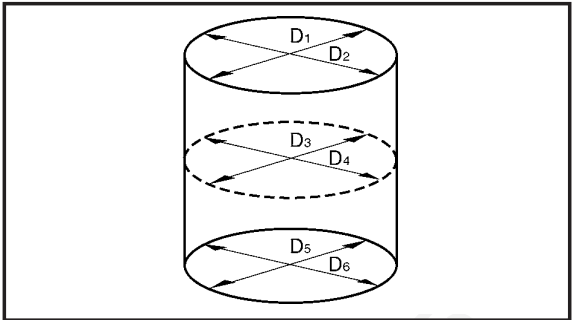

2. Measure:

- piston-to-cylinder clearance



- a. Measure cylinder bore “C” with the cylinder bore gauge.

NOTE: _____

Measure cylinder bore “C” by taking side-to-side and front-to-back measurements of the cylinder. Then, find the average of the measurements.

Cylinder bore “C”	54.000 – 54.010 mm (2.1260 – 2.1264 in)
Limit	54.100 mm (2.1299 in)
Taper limit “T”	0.05 mm (0.002 in)
Out-of-round “R”	0.05 mm (0.002 in)

“C” = maximum of D ₁ – D ₆
“T” = maximum of D ₁ or D ₂ – maximum of D ₅ or D ₆
“R” = maximum of D ₁ , D ₃ or D ₅ – minimum of D ₂ , D ₄ or D ₆

- b. If out of specification, replace the cylinder, and replace the piston and piston rings as a set.

- c. Measure piston skirt diameter “P” with a micrometer.

Ⓐ 5 mm from the bottom edge of the piston

	Piston size “P”
Standard	53.962 – 53.985 mm (2.1245 – 2.1254 in)

- d. If out of specification, replace the piston and piston rings as a set.

- e. Calculate the piston-to-cylinder clearance with the following formula.




Piston-to-cylinder clearance =
Cylinder bore "C" –
Piston skirt diameter "P"



Piston-to-cylinder clearance
0.0015 – 0.048 mm
(0.0006 – 0.0019 in)
<Limit>: 0.15 mm (0.0059)

- f. If out of specification, replace the cylinder, and replace the piston and piston rings as a set.

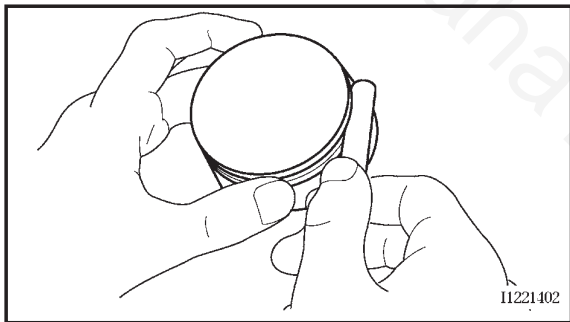

EAS00263

CHECKING THE PISTON RINGS

1. Measure:

- piston ring side clearance

Out of specification → Replace the piston and piston rings as a set.

NOTE:

Before measuring the piston ring side clearance, eliminate any carbon deposits from the piston ring grooves and piston rings.



Piston ring side clearance

Top ring

0.030 – 0.065 mm
(0.0012 – 0.0026 in)
<Limit>: 0.1 mm (0.0039 in)

2nd ring


0.020 – 0.055 mm
(0.0008 – 0.0022 in)
<Limit>: 0.1 mm (0.0039 in)

2. Install:

- piston ring
(into the cylinder)

NOTE:

Level the piston ring into the cylinder with the piston crown.

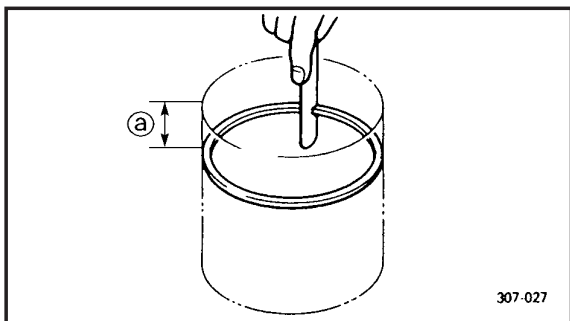

① 40 mm



3. Measure:

- piston ring end gap

Out of specification → Replace the piston ring.

NOTE:

The end gap of the oil ring expander cannot be measured. If the end gaps of the oil ring rails are excessive, replace all three piston rings.

**Piston ring end gap****Top ring**

0.10 – 0.25 mm

(0.0039 – 0.0098 in)

<Limit>: 0.4 mm (0.0157 in)

2nd ring

0.10 – 0.25 mm

(0.0039 – 0.0098 in)

<Limit>: 0.4 mm (0.0157 in)

Oil ring rails

0.20 – 0.70 mm (0.01 – 0.03 in)

EAS00265

CHECKING THE PISTON PIN

1. Check:


- piston pin

Blue discoloration/grooves → Replace the piston pin and then check the lubrication system.

2. Measure:

- piston pin outside diameter (a)

Out of specification → Replace the piston pin.

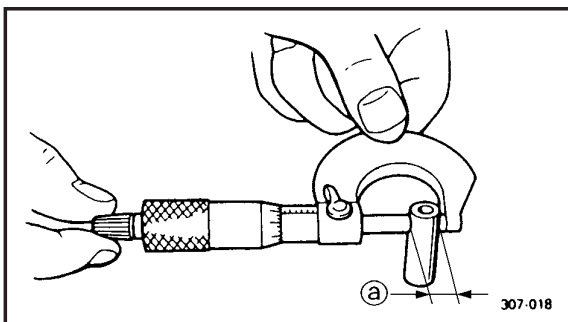**Piston pin outside diameter**

13.995 – 14.000 mm


(0.5510 – 0.5512 in)

<Limit>: 13.975 mm (0.5502 in)

3. Measure:

- piston pin bore diameter (of the piston) (b)

Out of specification → Replace the piston.

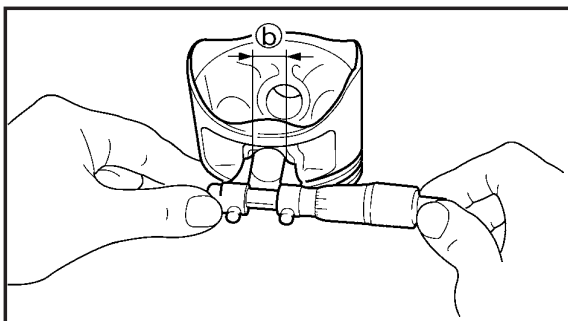**Piston pin bore diameter (of the piston)**

14.002 – 14.013 mm

(0.5513 – 0.5517 in)

<Limit>: 14.043 mm (0.5529 in)



4. Calculate:

- piston-pin-to-piston-pin-bore clearance
Out of specification → Replace the piston pin and piston as a set.

Piston-pin-to-piston-pin-bore clearance =
Piston pin bore diameter (b) –
Piston pin outside diameter (a)





Piston-pin-to-piston-pin-bore clearance

0.002 – 0.018 mm

(0.0001 – 0.0007 in)

<Limit>: 0.068 mm (0.027 in)

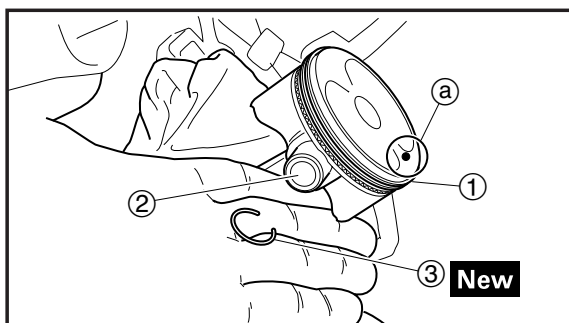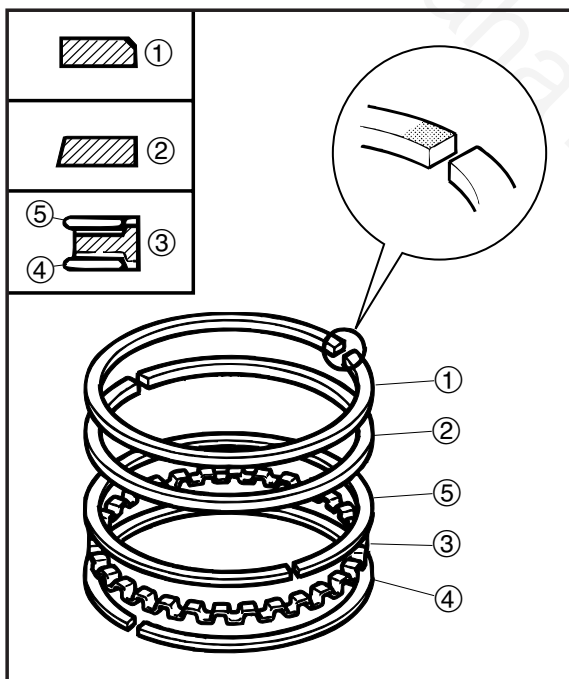

EAS00267

INSTALLING THE PISTON AND CYLINDER

1. Install:

- top ring ①
- 2nd ring ②
- oil ring expander ③
- lower oil ring rail ④
- upper oil ring rail ⑤

NOTE:


Be sure to install the piston rings so that the manufacturer's marks or numbers face up.

2. Install:

- piston ①
- piston pin ②
- piston pin clip ③ **New**

NOTE:

- Apply engine oil to the piston pin.
- Make sure the mark (a) on the piston points towards the exhaust side of the cylinder.
- Before installing the piston pin clip, cover the crankcase opening with a clean rag to prevent the clip from falling into the crankcase.

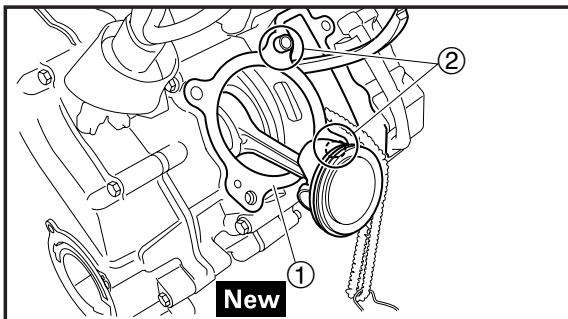

3. Install:

- gasket ① **New**
- dowel pins ②

4. Lubricate:


- piston
 - piston rings
 - cylinder
- (with the recommended lubricant)

NOTE:

Be sure to apply enough engine oil onto them.




Recommended lubricant
Engine oil

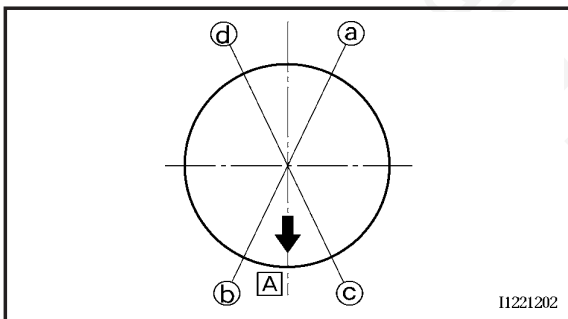

5. Offset:

- piston ring end gaps

- ① Top ring
- ② Lower oil ring rail
- ③ Upper oil ring rail
- ④ 2nd ring
- Ⓐ forward

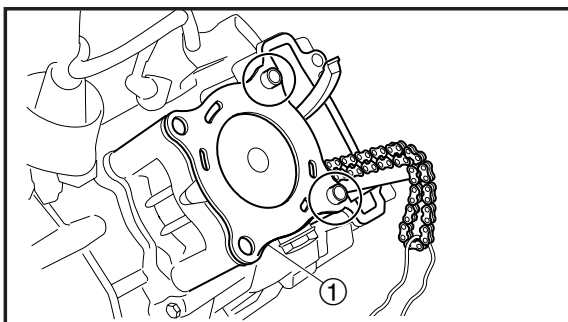

6. Install:

- cylinder ①

NOTE:

- While compressing the piston rings with one hand, install the cylinder with the other hand.
- Pass the timing chain and timing chain guide (intake side) through the timing chain cavity.




EASF0034

GENERATOR AND STARTER CLUTCH



- | | |
|-----------------------------|----------------------------------|
| ① Starter clutch gear | ⑧ Starter clutch idle gear shaft |
| ② Starter clutch roller | ⑨ Starter clutch idle gear |
| ③ Starter clutch spring cap | ⑩ Pickup coil |
| ④ Starter clutch spring | ⑪ Stator coil |
| ⑤ Starter clutch | ⑫ Gasket |
| ⑥ Woodruff key | ⑬ Dowel pin |
| ⑦ Generator rotor | ⑭ Crankcase cover (left) |

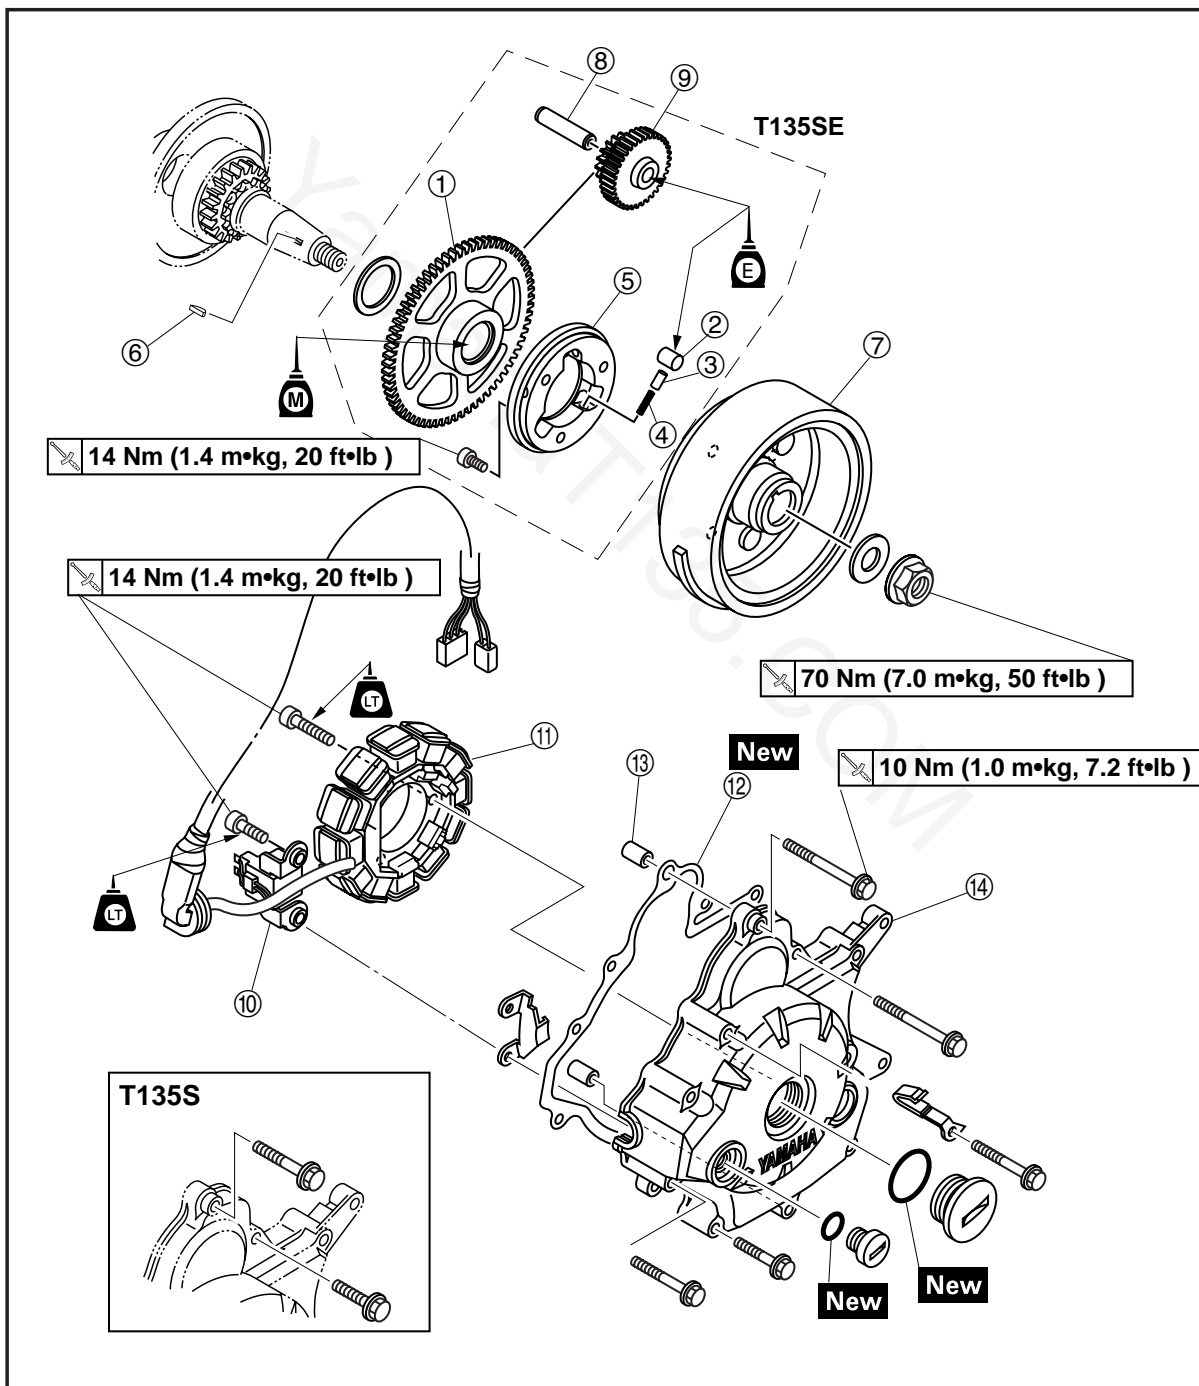



EAS00346


REMOVING THE GENERATOR

1. Drain:

- engine oil
(completely from the crankcase)
Refer to "CHANGING THE ENGINE OIL" in chapter 3.


2. Remove:

- side cowling (left)
Refer to "REMOVING THE SIDE COWLINGS" in chapter 3.
- shift pedal
- drive sprocket cover
Refer to "REMOVING THE DRIVE CHAIN AND SPROCKETS" in chapter 6.

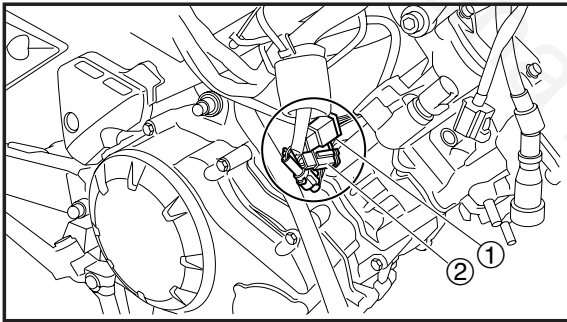

3. Disconnect:

- stator coil coupler ①
- pickup coil coupler ②

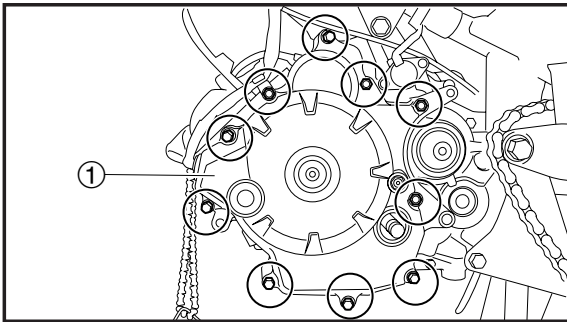

4. Remove:


- crankcase cover (left) ①
- gasket
- dowel pins

5. Remove:


- generator rotor nut ①
- washer

NOTE:

- While holding the generator rotor ② with the sheave holder ③, loosen the generator rotor nut.
- Do not allow the sheave holder to touch the projection on the generator rotor.

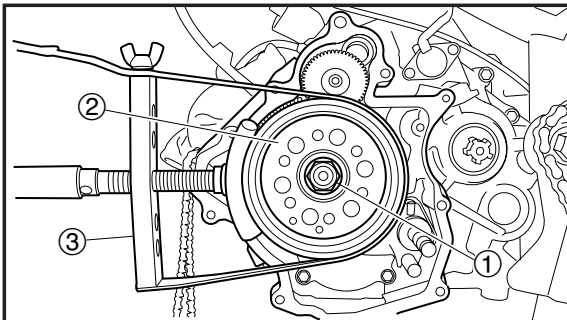

Sheave holder
90890-01701

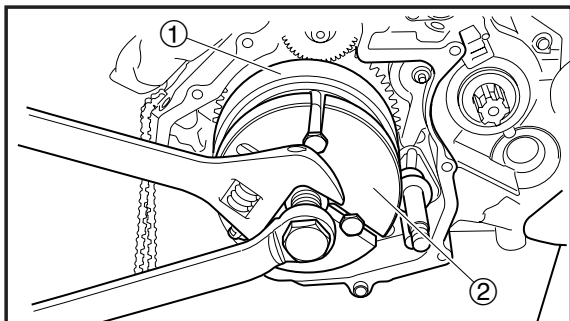


6. Remove:

- generator rotor ①
(with the flywheel puller ②)
- woodruff key



Flywheel puller
90890-01362

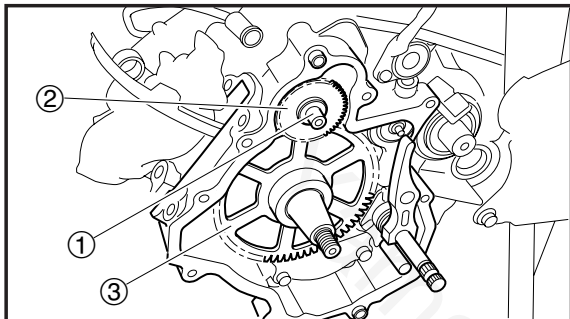


EAS00344

REMOVING THE STARTER CLUTCH (T135SE)


1. Remove:

- starter clutch idle gear shaft ①
- starter clutch idle gear ②
- starter clutch gear ③
- washer

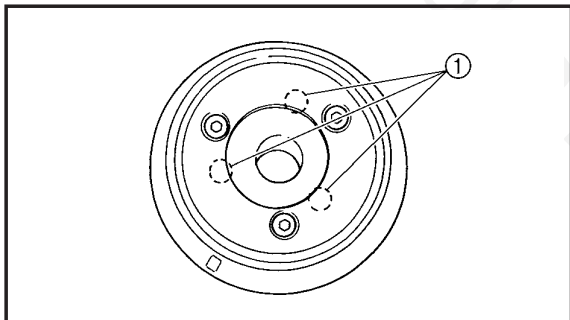

2. Remove:

- starter clutch rollers ①
- starter clutch spring caps
- starter clutch springs

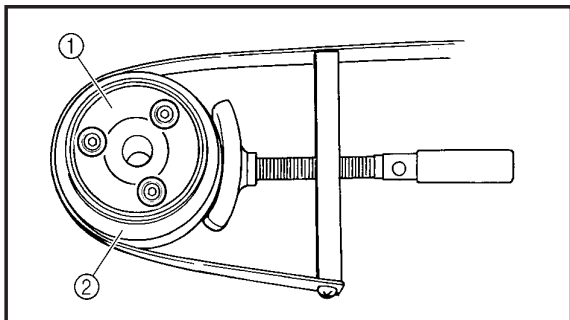

3. Remove:


- starter clutch bolt
- starter clutch ①

NOTE:

- While holding the generator rotor ② with the sheave holder, remove the starter clutch bolt.
- Do not allow the sheave holder to touch the projection on the generator rotor.



Sheave holder
90890-01701

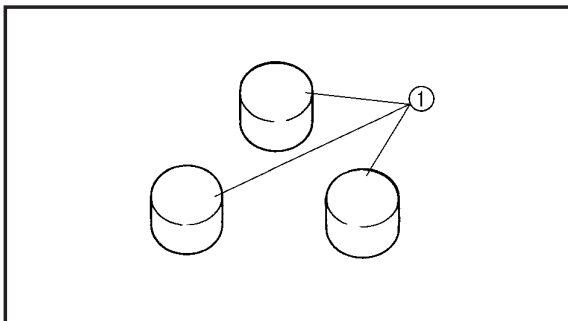


EAS00351

CHECKING THE STARTER CLUTCH (T135SE)

1. Check:

- starter clutch rollers ①
Damage/wear → Replace.

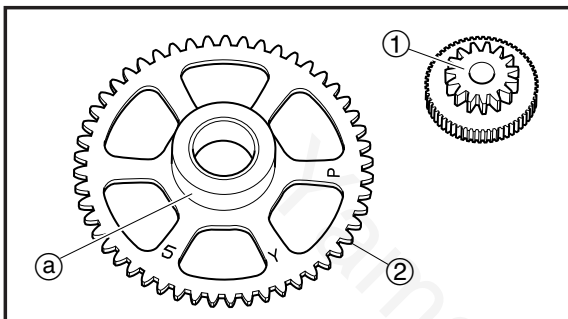


2. Check:

- starter clutch idle gear ①
- starter clutch gear ②
Burrs/chips/roughness/wear → Replace the defective part(s).

3. Check:

- starter clutch gear contacting surfaces (a)
Damage/pitting/wear → Replace the starter clutch gear.

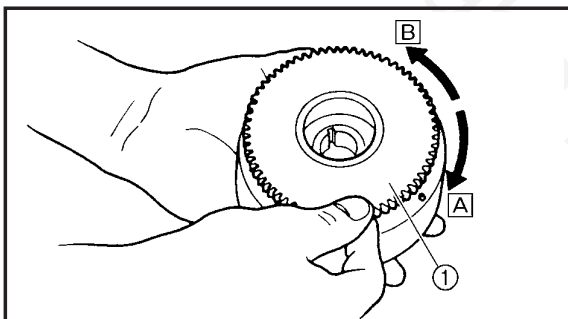



4. Check:

- starter clutch operation



- Install the starter clutch gear ① onto the starter clutch and hold the starter clutch.
- When turning the starter clutch gear clockwise [A], the starter clutch and the starter clutch gear should engage, otherwise the starter clutch is faulty and must be replaced.
- When turning the starter clutch gear counterclockwise [B], it should turn freely, otherwise the starter clutch is faulty and must be replaced.



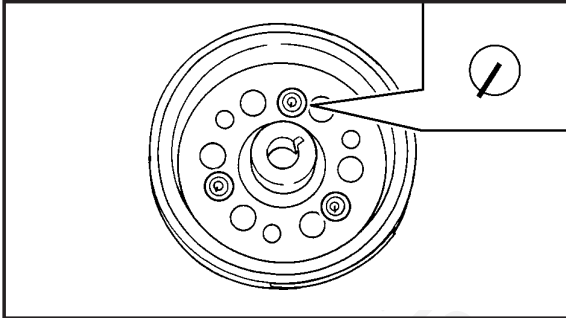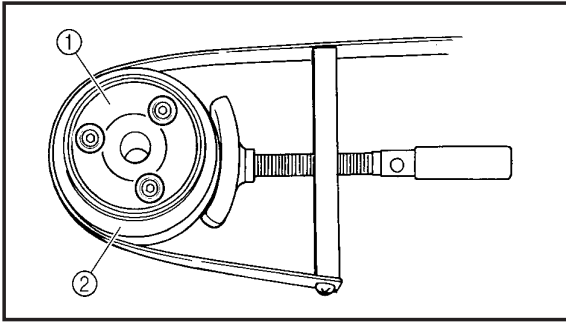

EAS00355

INSTALLING THE STARTER CLUTCH (T135SE)

1. Install:

- starter clutch ①

14 Nm (1.4 m•kg, 10 ft•lb)

NOTE:

- While holding the generator rotor ② with the sheave holder, tighten the starter clutch bolt.
- Do not allow the sheave holder to touch the projection on the generator rotor.
- Lock the threads on the starter clutch bolts by staking them with a center punch.



**Sheave holder
90890-01701**

EAS00353


INSTALLING THE GENERATOR

1. Install:

- woodruff key
- generator rotor
- generator rotor nut

NOTE:

- Clean the tapered portion of the crankshaft and the generator rotor hub.
- When installing the generator rotor, make sure the woodruff key is properly sealed in the key-way of the crankshaft.

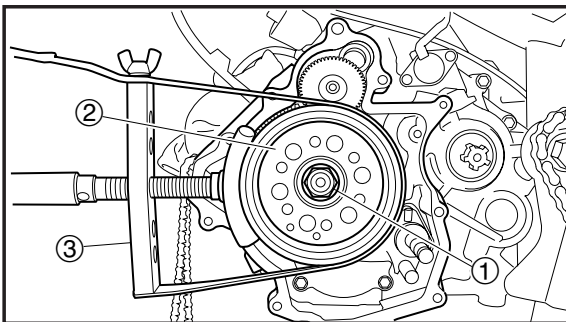

2. Tighten:

- generator rotor nut ①


70 Nm (7.0 m•kg, 50 ft•lb)

NOTE:

- While holding the generator rotor ② with the sheave holder ③, tighten the generator rotor nut.
- Do not allow the sheave holder to touch the projection on the generator rotor.




**Sheave holder
90890-01701**

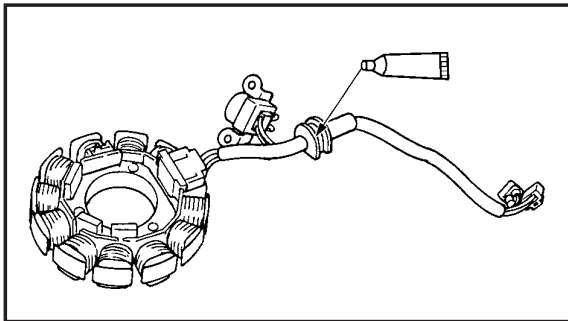

3. Apply:
- sealant
(on to the generator lead grommet)



Yamaha bond No. 1215
90890-85505

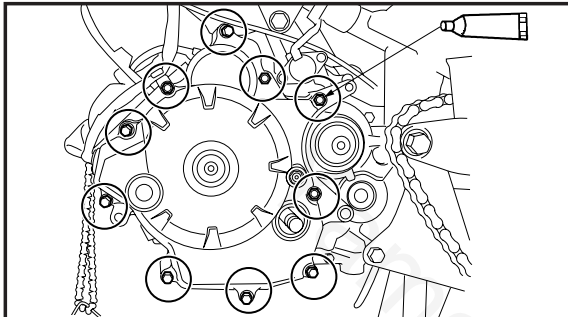

4. Apply:
- sealant

NOTE:

Be sure to apply the sealant onto the crankcase cover bolt thread as shown one.



Yamaha bond No. 1215
90890-85505

5. Install:
- gasket **New**
 - crankcase cover



10 Nm (1.0 m•kg, 7.2 ft•lb)




EASF0035

OIL PUMP





- ① Oil drain bolt
- ② O-ring
- ③ Spring
- ④ Oil strainer
- ⑤ Oil filter cover
- ⑥ O-ring
- ⑦ Oil filter
- ⑧ Gear cover
- ⑨ Oil pump assembly
- ⑩ Gasket

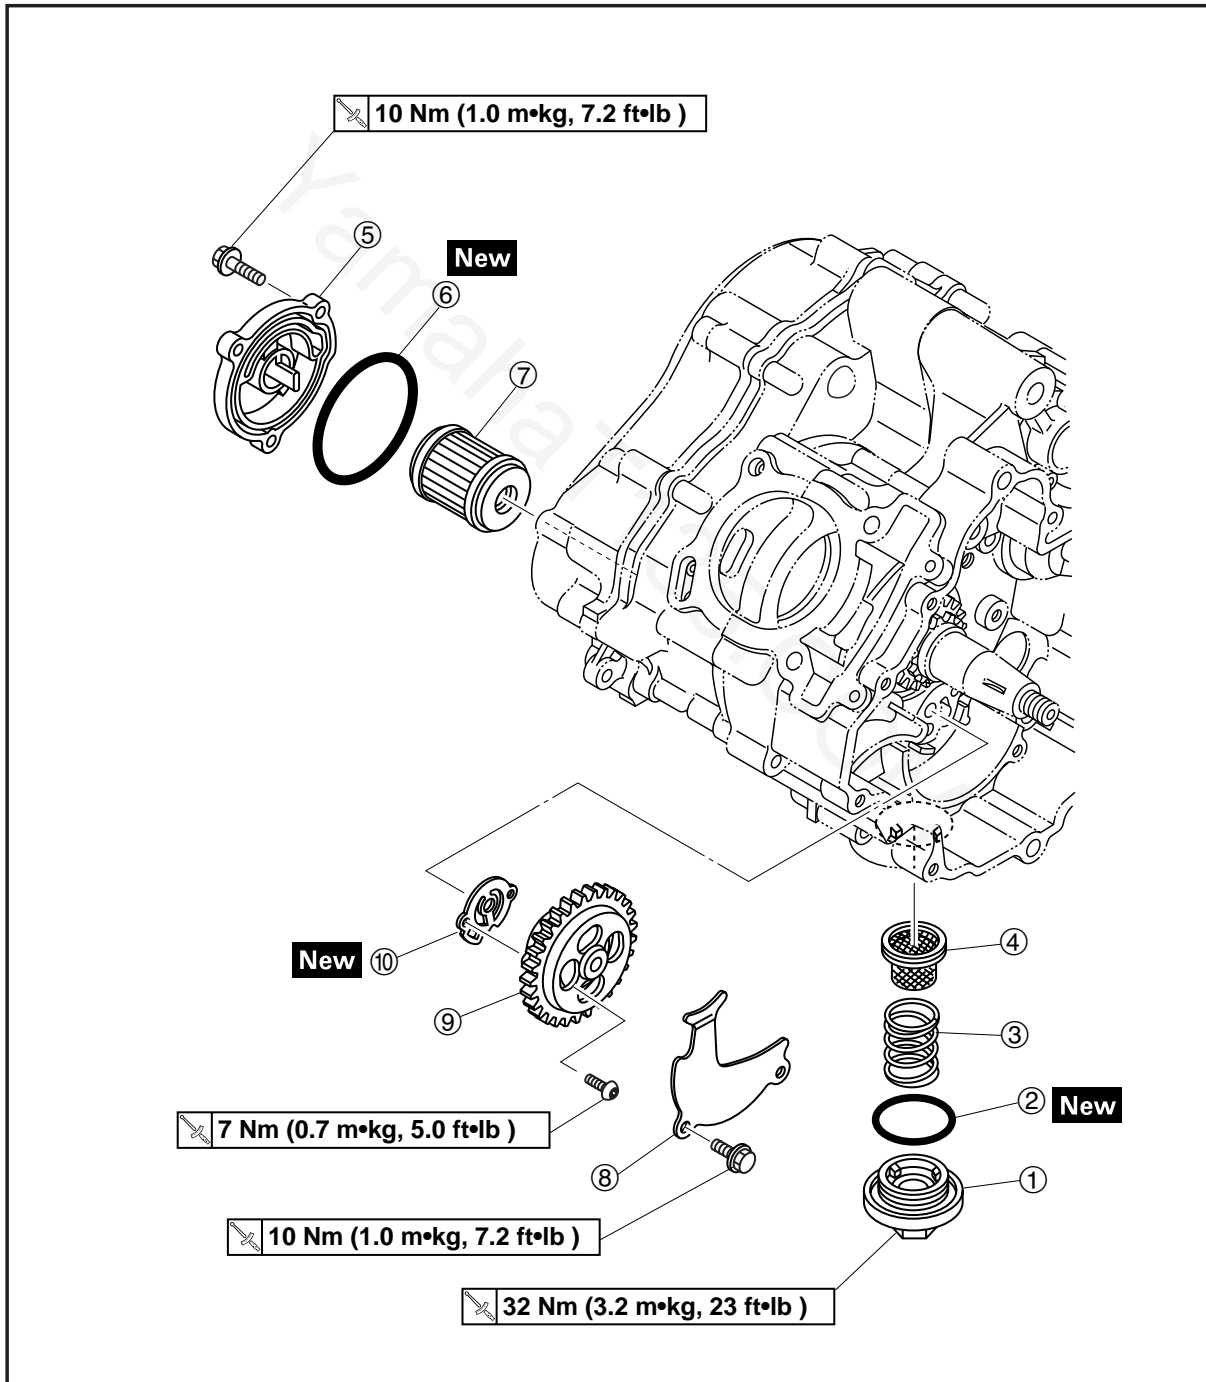


**REMOVING THE OIL PUMP**


1. Drain:
 - engine oil
(completely from the crankcase)
Refer to "CHANGING THE ENGINE OIL" in chapter 3.
2. Remove:
 - generator
Refer to "GENERATOR AND STARTER CLUTCH".
3. Remove:
 - clutch release shift arm

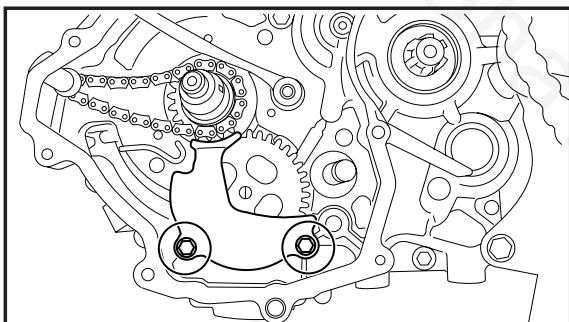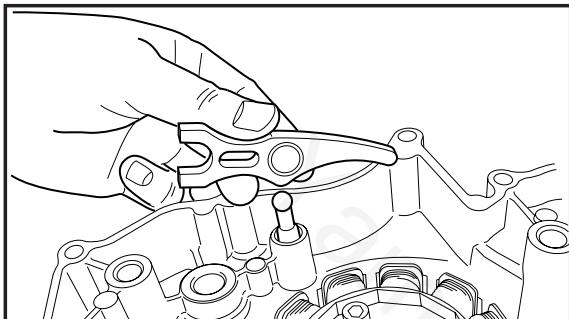



4. Remove:
 - gear cover

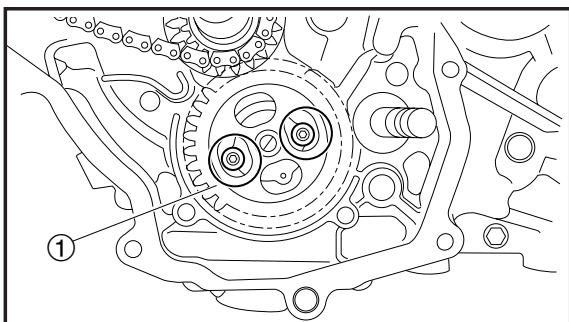

5. Remove:
 - oil pump assembly ①
 - gasket

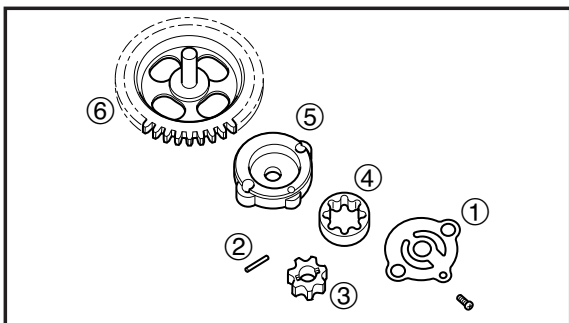**DISASSEMBLING THE OIL PUMP**

1. Remove:
 - screw
 - pump cover ①
 - pin ②
 - inner rotor ③
 - outer rotor ④
 - oil pump housing ⑤
 - oil pump driven cover ⑥

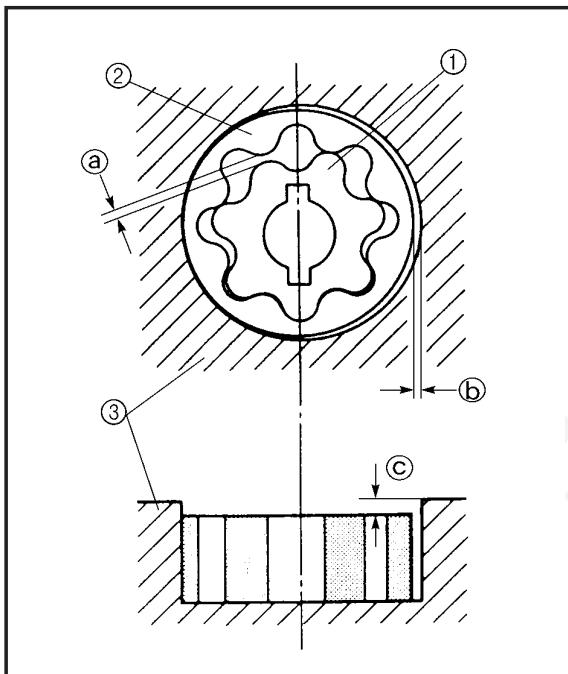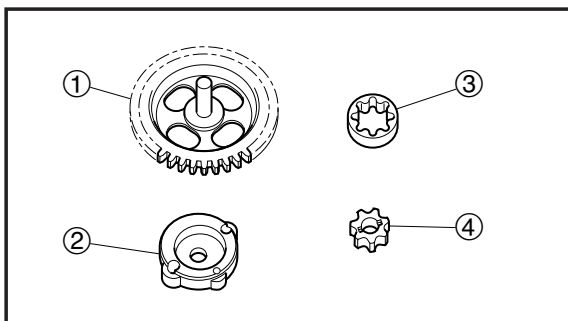

EAS00364

CHECKING THE OIL PUMP

1. Check:

- oil pump driven gear ①
- oil pump housing ②
- outer rotor
- inner rotor

Cracks/damage/wear → Replace the defective part(s).

2. Measure:

- inner-rotor-to-outer-rotor-tip clearance ①
- outer-rotor-to-oil-pump-housing clearance ②
- oil-pump-housing-to-inner-rotor-and-outer-rotor clearance ③

Out of specification → Replace the oil pump.

- ① Inner rotor
- ② Outer rotor
- ③ Oil pump housing

**Inner-rotor-to-outer-rotor-tip clearance**

0.15 mm (0.0059 in)

<Limit>: 0.20 mm (0.0079 in)

Outer-rotor-to-oil-pump-housing clearance

0.06 – 0.11 mm

(0.0024 – 0.0043 in)


<Limit>: 0.15 mm (0.0059 in)

Oil-pump-housing-to-inner-rotor-and-outer-rotor clearance

0.06 – 0.11 mm

(0.0024 – 0.0043 in)

<Limit>: 0.15 mm (0.0059 in)

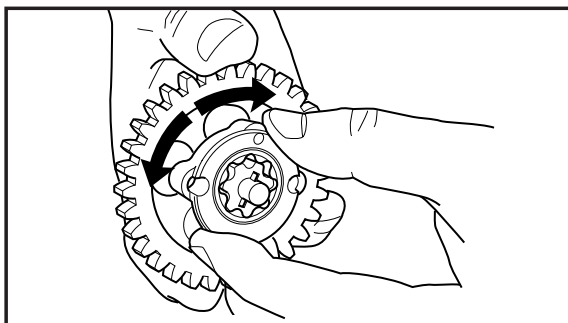

3. Check:

- oil pump operation

Rough movement → Repeat steps (1) and (2) or replace the defective part(s).



EAS00375


ASSEMBLING THE OIL PUMP

1. Lubricate:

- inner rotor
- outer rotor
- oil pump shaft
(with the recommended lubricant)



Recommended lubricant
Engine oil

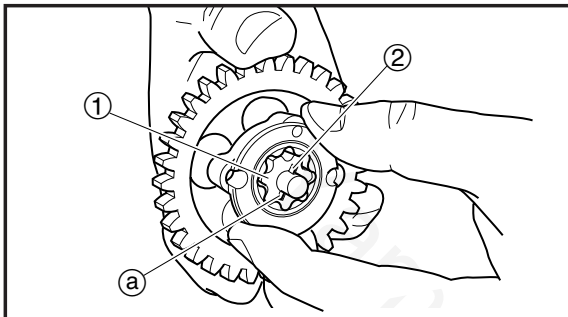


2. Install:

- oil pump shaft
(to the oil pump housing)
- inner rotor ①
- outer rotor
- pin ②
- oil pump housing cover ③
- screw ④

1 Nm (0.1 m•kg, 0.7 ft•lb)


NOTE:

When installing the inner rotor, align the pin in the oil pump shaft with the groove (a) in the inner rotor.

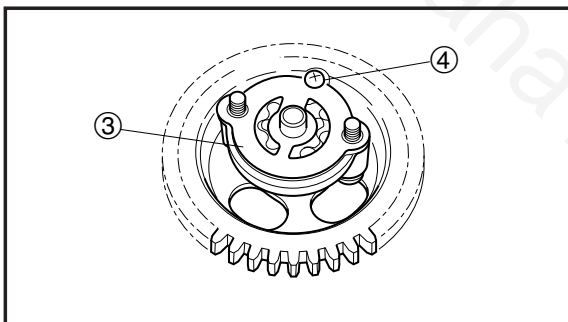

3. Check:

- oil pump operation
- Refer to "CHECKING THE OIL PUMP".

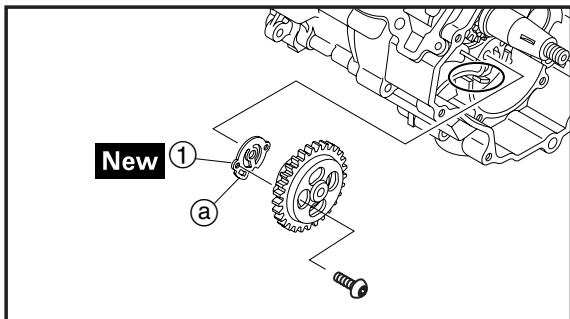

EAS00376

INSTALLING THE OIL PUMP

1. Install:

- gasket ① **New**
- oil pump assembly

7 Nm (0.7 m•kg, 5.0 ft•lb)**NOTE:**

Install the gasket with section (a) in the position as shown in the illustration.

CAUTION:

After tightening the bolts, make sure the oil pump turns smoothly.




EASF0029

CLUTCH



- | | | |
|------------------------------|----------------------------------|----------------------------|
| ① Clutch pressure plate bolt | ⑨ Clutch push rod #1 | ⑯ Clutch shoe housing nut |
| ② Clutch spring | ⑩ Clutch boss nut | ⑰ Primary drive gear |
| ③ Clutch pressure plate | ⑪ Clutch boss | ⑱ Clutch shoe housing |
| ④ Friction plate #1 | ⑫ Clutch housing | ⑲ Cage |
| ⑤ Clutch plate | ⑬ Clutch push rod #2 | ⑳ Clutch shoe housing boss |
| ⑥ Friction plate #2 | ⑭ Clutch release shift arm | ㉑ Clutch shoe |
| ⑦ Cushion ring | ⑮ Clutch release adjusting screw | |
| ⑧ Seat plate | | |



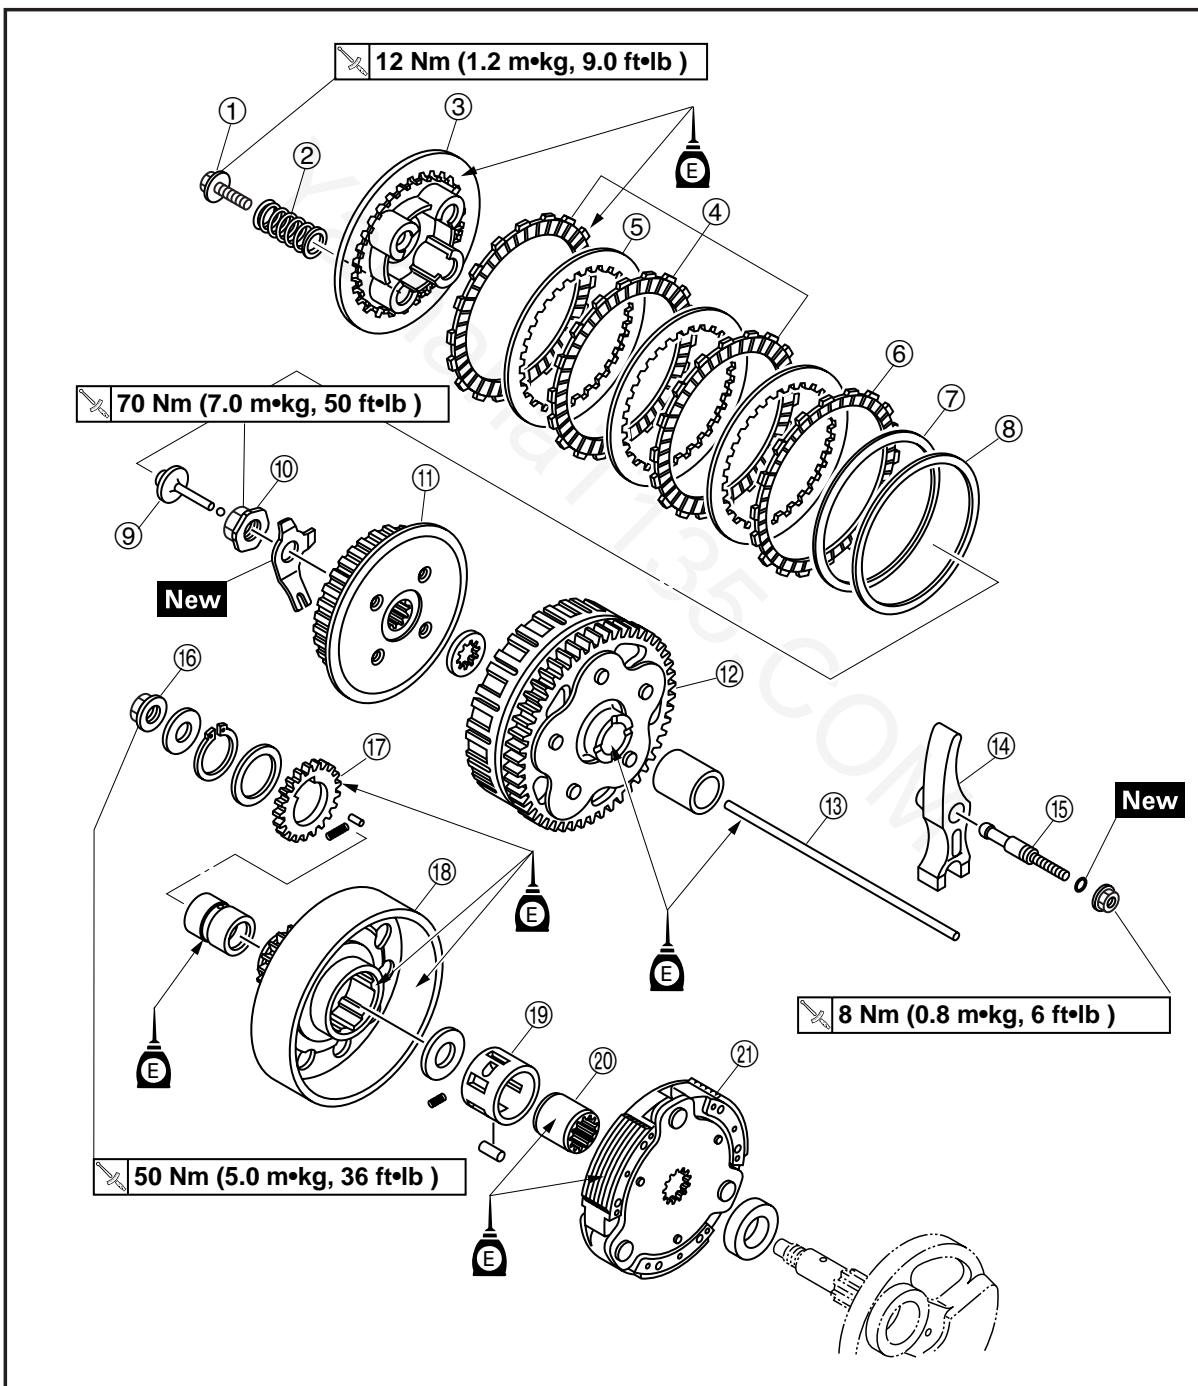




EAS00277

REMOVING THE CLUTCH

1. Drain:
 - engine oil
(completely from the crankcase)
Refer to "CHANGING THE ENGINE OIL" in chapter 3.
2. Remove:
 - side cowlings (left and right)
Refer to "REMOVING THE SIDE COWLINGS" in chapter 3.
 - muffler
 - footrest
 - brake pedal
Refer to "REMOVING THE ENGINE".
 - kickstarter lever
Refer to "KICKSTARTER".
 - crankcase cover (left)
Refer to "GENERATOR AND STARTER CLUTCH".
3. Remove:
 - clutch release shift arm ①

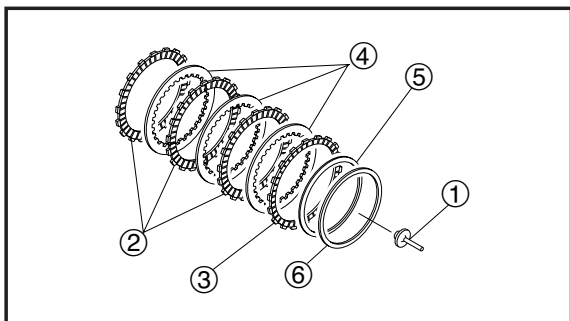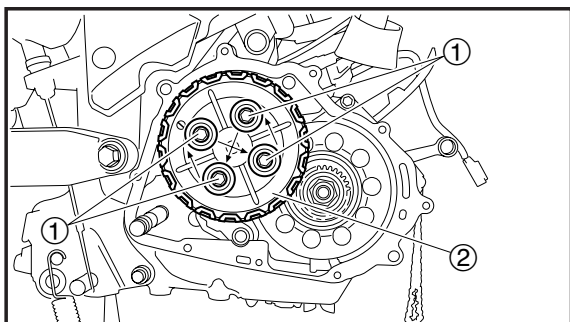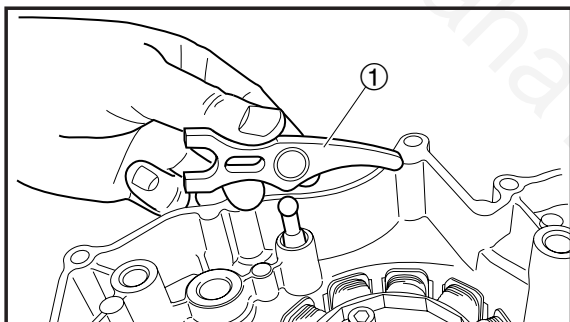


4. Remove:
 - crankcase cover (right)
5. Remove:
 - clutch pressure plate bolts ①
 - clutch springs
 - clutch pressure plate ②

NOTE:

Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.

6. Remove:
 - clutch push rod #1 ①
 - friction plates #1 ②
 - friction plates #2 ③
 - clutch plate ④
 - cushion ring ⑤
 - seat plate ⑥

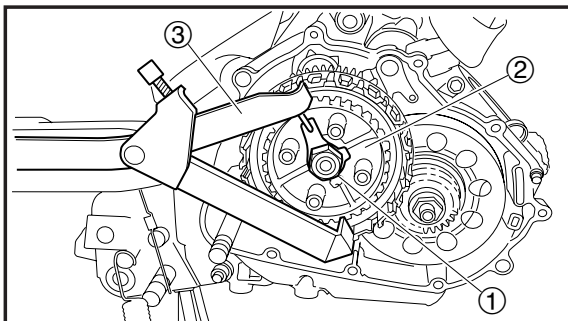

7. Straighten the lock washer tab.

8. Loosen:


- clutch boss nut ①

NOTE:

While holding the clutch boss ② with the universal clutch holder ③, loosen the clutch boss nut.




Universal clutch holder
90890-04086

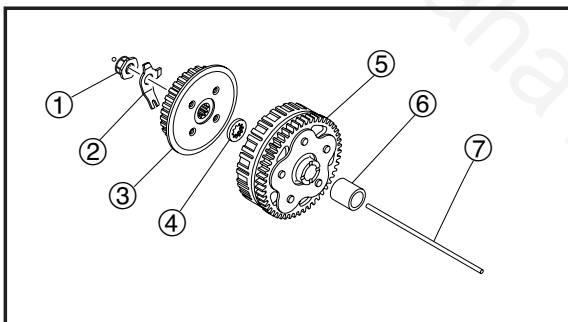

9. Remove:

- clutch boss nut ①
- lock washer ②
- clutch boss ③
- washer ④
- clutch housing ⑤
- spacer ⑥
- clutch push rod #2 ⑦

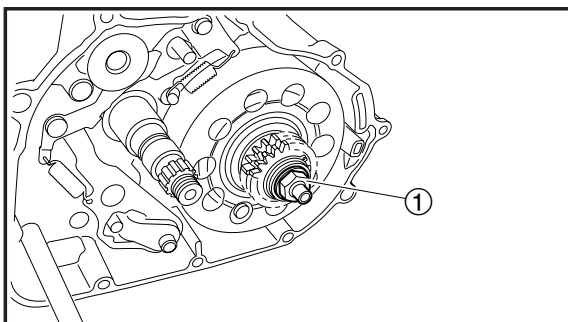


10. Remove:


- clutch shoe housing nut ①
- washer

NOTE:

- Loosen the clutch shoe housing nut while holding the generator rotor ② with the sheave holder ③.
- Do not allow the sheave holder to touch the projection on the generator rotor.

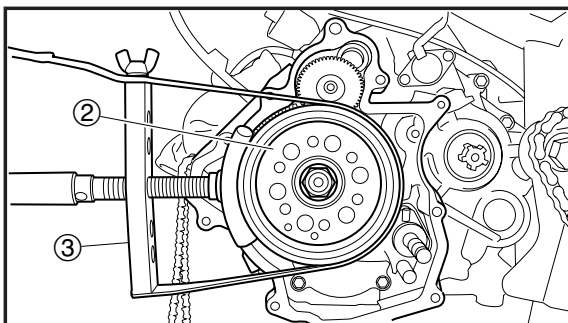


Sheave holder
90890-01701

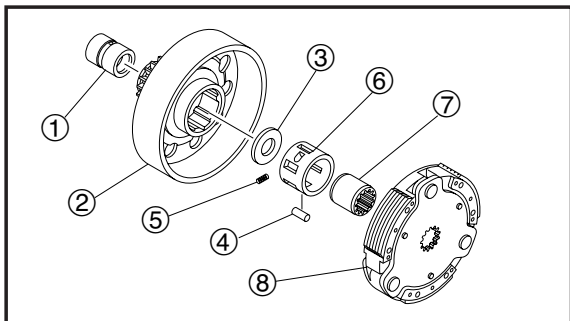

11. Remove:

- collar ①
- clutch shoe housing ②
- washer ③
- rollers ④
- cage springs ⑤
- cage ⑥
- clutch shoe housing boss ⑦
- clutch shoe ⑧

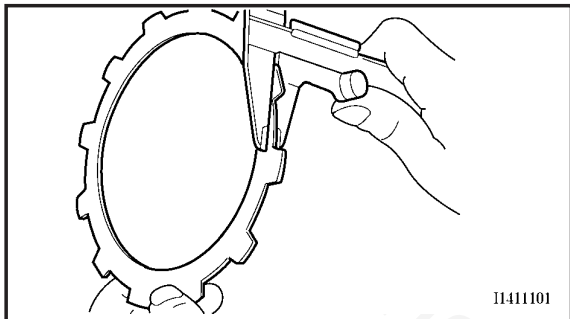

EAS00280

CHECKING THE FRICTION PLATES

The following procedure applies to all of the friction plates.

1. Check:

- friction plate

Damage/wear → Replace the friction plates as a set.

2. Measure:

- friction plate thickness

Out of specification → Replace the friction plates as a set.

NOTE:

Measure the friction plate at four places.

**Friction plate thickness**

2.5 – 2.7 mm (0.010 – 0.11 in)

<Limit>: 2.4 mm (0.0945 in)

EAS00281

CHECKING THE CLUTCH PLATES

The following procedure applies to all of the clutch plates.

1. Check:

- clutch plate

Damage → Replace the clutch plates as a set.


2. Measure:

- clutch plate warpage


(with a surface plate and thickness gauge

①)

Out of specification → Replace the clutch plates as a set.

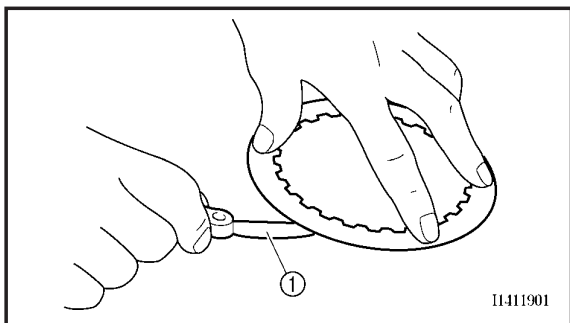**Clutch plate warpage limit**

0.05 mm (0.0020 in)

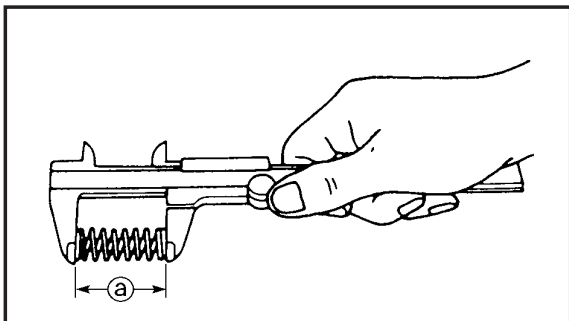


EAS00282

CHECKING THE CLUTCH SPRINGS

The following procedure applies to all of the clutch springs.

1. Check:
 - clutch spring
Damage → Replace the clutch springs as a set.
2. Measure:
 - clutch spring free length (a)
Out of specification → Replace the clutch springs as a set.

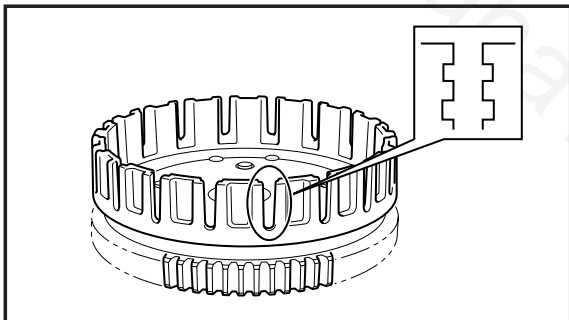**Clutch spring free length****40.5 mm (1.59 in)****<Limit>: 38.5 mm (1.52 in)**


EAS00284

CHECKING THE CLUTCH HOUSING

1. Check:
 - clutch housing dogs
Damage/pitting/wear → Deburr the clutch housing dogs or replace the clutch housing.

NOTE:

Pitting on the clutch housing dogs will cause erratic clutch operation.

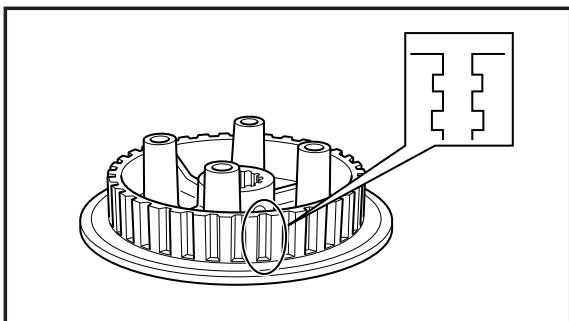


EAS00285

CHECKING THE CLUTCH BOSS

1. Check:
 - clutch boss splines
Damage/pitting/wear → Replace the clutch boss.

NOTE:


Pitting on the clutch boss splines will cause erratic clutch operation.

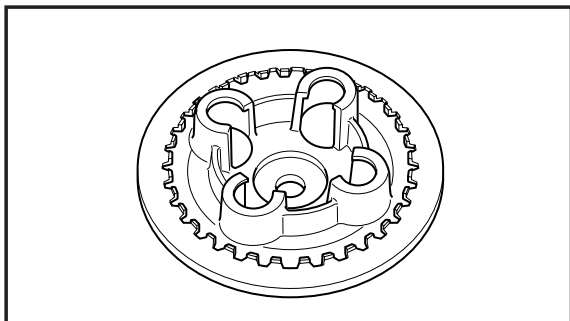

EAS00286

CHECKING THE CLUTCH PRESSURE PLATE

1. Check:
 - clutch pressure plate
Cracks/damage → Replace.

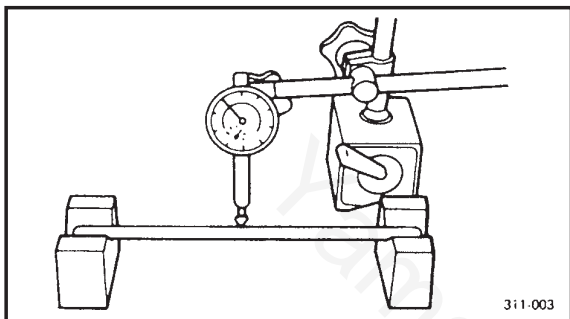


EAS00288

CHECKING THE CLUTCH PUSH RODS

1. Check:
 - clutch push rod #1
Cracks/damage/wear → Replace the clutch push rod #1.
 - clutch push rod #2
Cracks/damage/wear → Replace the clutch push rod #2.
2. Measure:
 - clutch push rods bending limit
Out of specification → Replace the clutch push rod.



Clutch push rods bending limit
0.5 mm (0.0197 in)

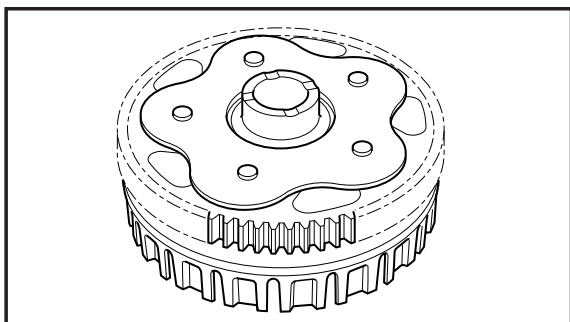

EAS00292


CHECKING THE PRIMARY DRIVEN GEAR

1. Check:
 - primary drive gear
(on the clutch shoe housing)
 - primary driven gear
(on the clutch housing)
- Damage/wear → Replace the clutch shoe housing and clutch housing as a set.
- Excessive noise during operation → Replace the clutch shoe housing and clutch housing as a set.



CHECKING THE CLUTCH SHOE HOUSING

1. Check:
 - clutch shoe housing
Damage/wear → Replace.

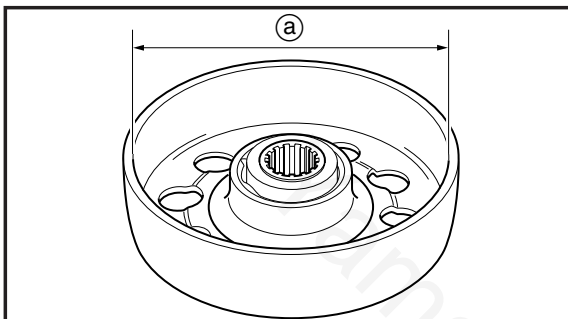

2. Measure:
 - clutch shoe housing inside diameter (a)
Out of specification → Replace.




Clutch shoe housing inside diameter

116 mm (4.57 in)

<Limit>: 117 mm (4.61 in)

CHECKING THE CLUTCH SHOE

1. Check:
 - clutch shoe
Scratches → Smooth using coarse sandpaper.
Damage/wear → Replace.

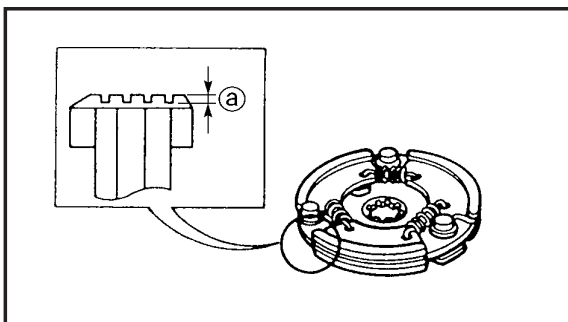


2. Measure:
 - clutch shoe groove depth (a)
Groove is worn away → Replace.



Clutch shoe groove depth


1.0 mm (0.04 in)

<Limit>: 0.1 mm (0.004 in)

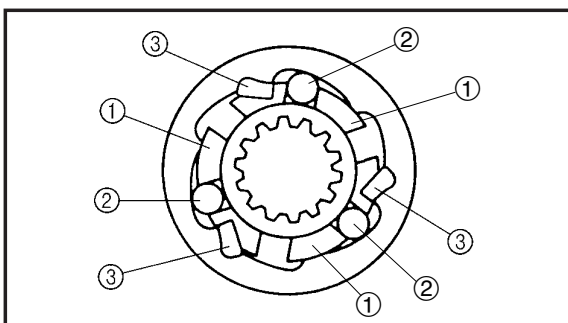

CHECKING THE CAGE


1. Check:
 - cage ①
Damage/wear/cracks → Replace.
 - rollers ②
Wear/bend → Replace.
 - cage springs ③
Wear → Replace.

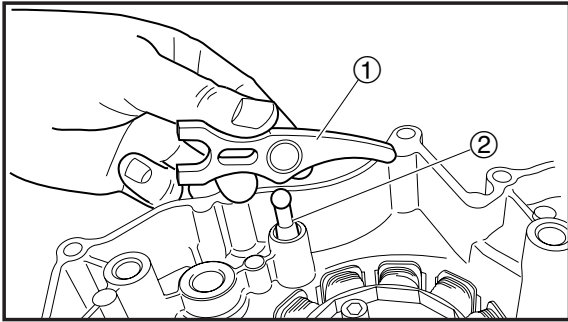

CHECKING THE CLUTCH RELEASE SHIFT ARM

1. Check:

- clutch release shift arm ①
Damage/wear → Replace.
- clutch release adjusting screw ②
Damage/wear → Replace.

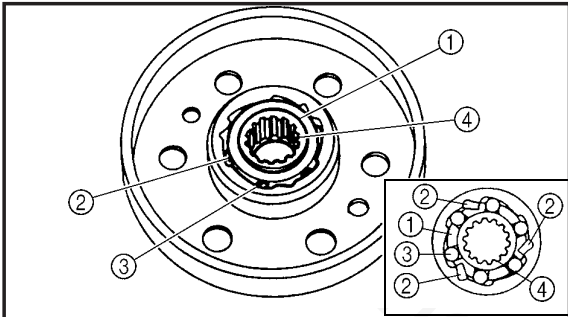

EAS00293


INSTALLING THE CLUTCH

1. Install:

- washer
- cage ①
- cage springs ②
- rollers ③
- clutch shoe housing boss ④

NOTE:

After installing the cage ①, cage springs ② and rollers ③, check that there are right position to turn the lateral direction. And then take care comes off to install them onto the crankshaft.

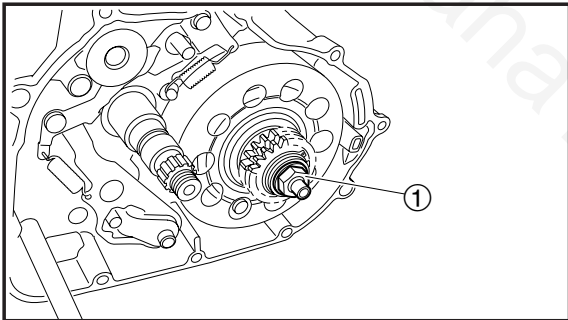


2. Tighten:

- clutch shoe housing nut ①

50 Nm (5.0 m•kg, 30 ft•lb)

NOTE:

- While holding the generator rotor ② with the sheave holder ③, tighten the clutch shoe housing nut.
- Do not allow the sheave holder to touch the projection on the generator rotor.

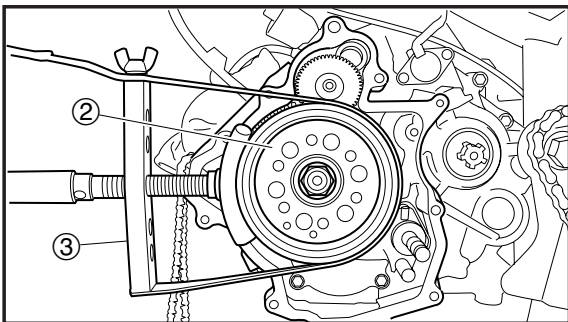


Sheave holder
90890-01701


3. Install:

- clutch push rod #2 ①
- spacer ②
- clutch housing ③
- washer ④
- clutch boss ⑤
- lock washer ⑥ **New**
- clutch boss nut ⑦

NOTE:

Face the press dropped side toward the clutch housing, and then install the washer ④.

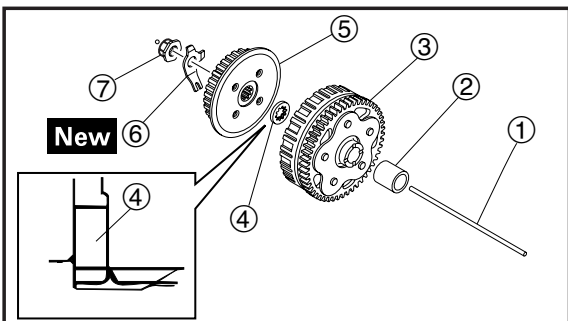

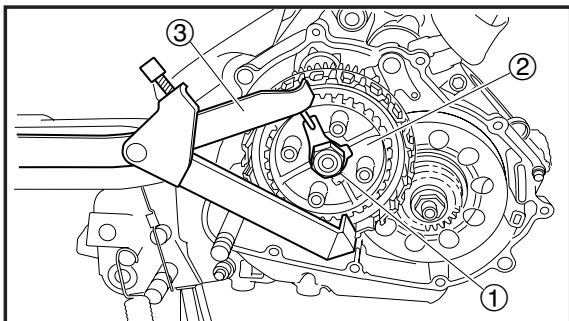

4. Tighten:

- clutch boss nut ①

70 Nm (7.0 m•kg, 50 ft•lb)

NOTE:

While holding the clutch boss ② with the universal clutch holder ③, tighten the clutch boss nut.



Universal clutch holder
90890-04086

5. Bend the lock washer tab along a flat side of the nut.


6. Lubricate:

- seat plate
- cushion ring
- friction plates #1
- friction plate #2
- clutch plates

(with the recommended lubricant)



Recommended lubricant
Engine oil

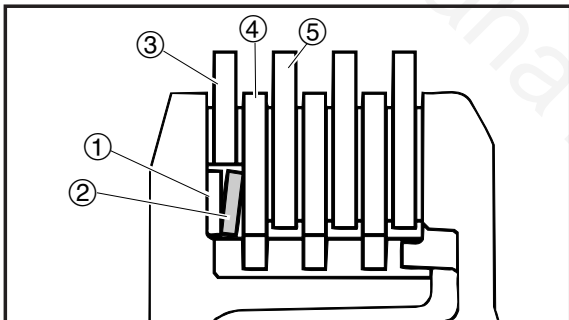


7. Install:

- seat plate ①
- cushion ring ②
- friction plate #2 ③
- clutch plates ④
- friction plates #1 ⑤

NOTE:

- Make sure to face the cushion ring ② toward as shown illustration, and then install it onto the clutch boss.
- First, install the seat plate, cushion ring and then alternate between a clutch plate and a friction plate.

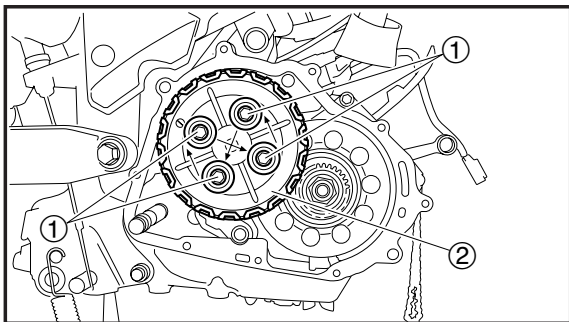


8. Install:

- clutch springs
- clutch pressure plate ①
- clutch pressure plate bolts ②

12 Nm (1.2 m•kg, 9.0 ft•lb)

NOTE:

- Align the punch mark (a) on the pressure plate with clutch housing mark (b).
- Tighten the clutch pressure plate bolts in stages and in a crisscross pattern.

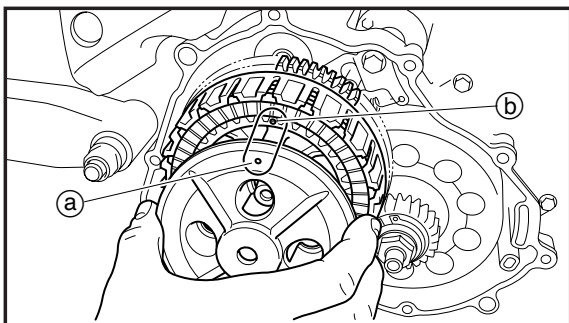

9. Adjust:

- clutch release system

Refer to "ADJUSTING THE CLUTCH RELEASE SYSTEM" in chapter 3.




EASF0032

SHIFT SHAFT




- | | | |
|------------------------|--------------------------|----------------------|
| ① Shift pedal | ⑧ Washer | ⑮ Collar |
| ② Washer | ⑨ Thrust bearing | ⑯ Plate |
| ③ Spring | ⑩ Dowel pin | ⑰ Shift drum segment |
| ④ Shift fork guide bar | ⑪ Shift shaft | |
| ⑤ Shift guide | ⑫ Shift lever assembly | |
| ⑥ Pawl holder | ⑬ Stopper lever spring | |
| ⑦ Guide | ⑭ Stopper lever assembly | |

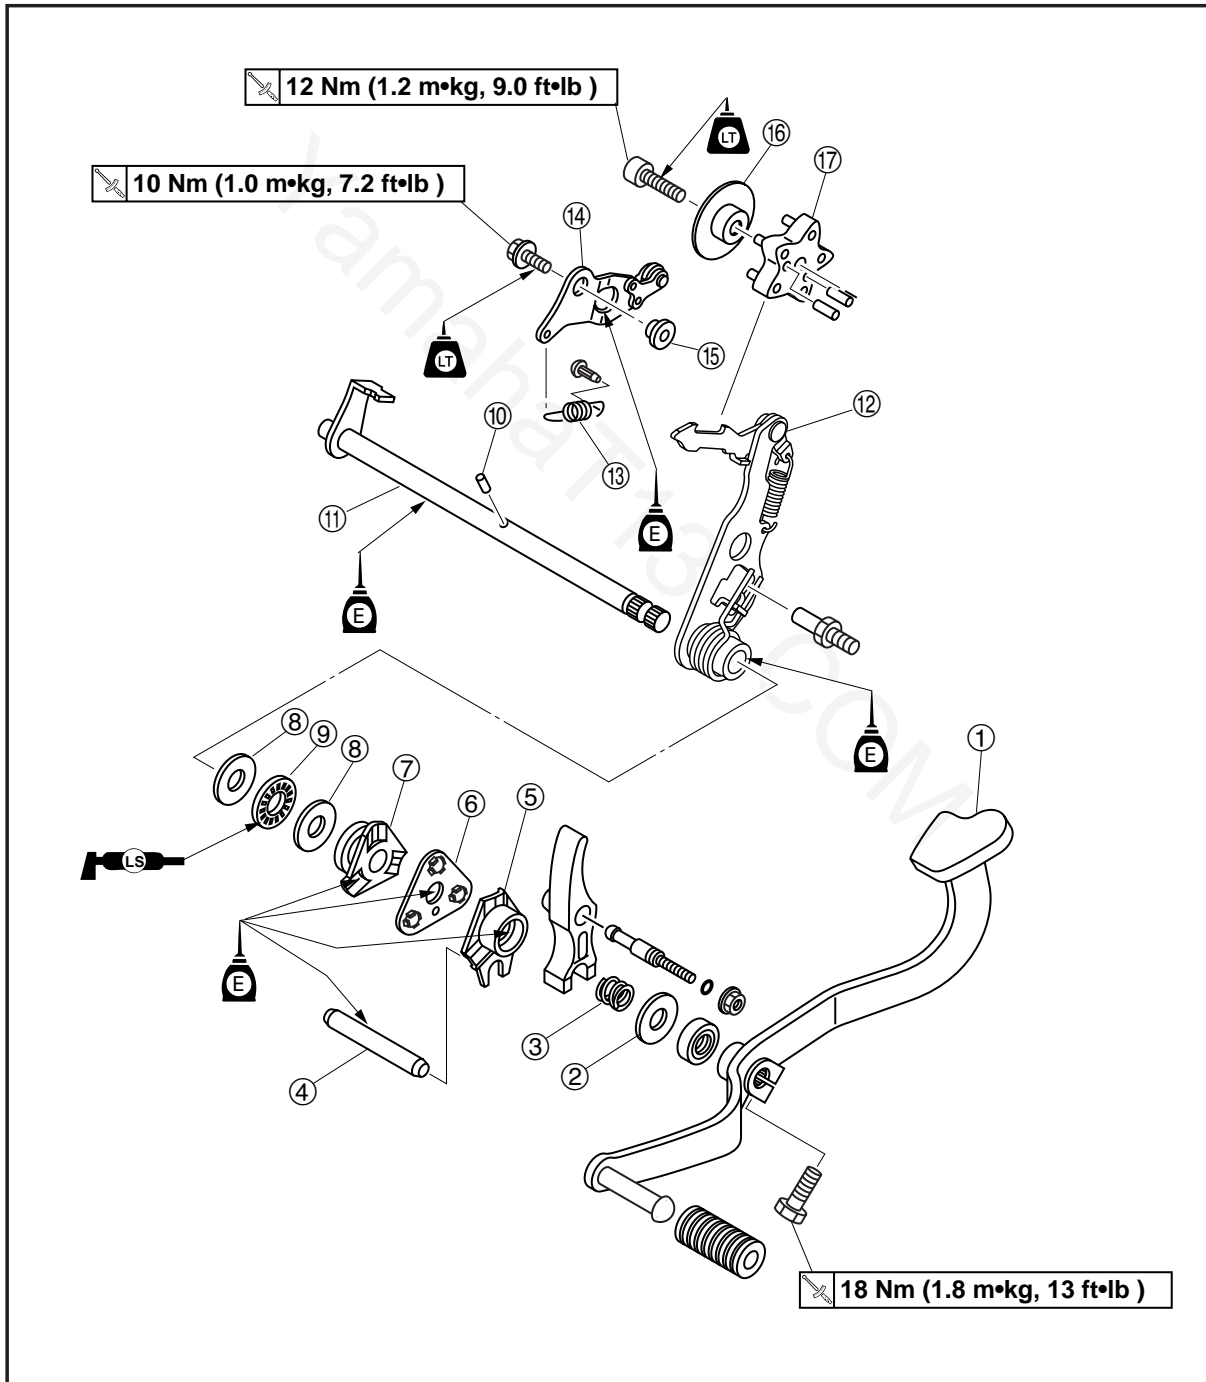


**REMOVING THE SHIFT SHAFT**


1. Drain:
 - engine oil
(completely from the crankcase)
Refer to "CHANGING THE ENGINE OIL" in chapter 3.
2. Remove:
 - clutch
Refer to "CLUTCH".
3. Remove:
 - shift pedal
 - crankcase cover bolts
 - crankcase cover (left)

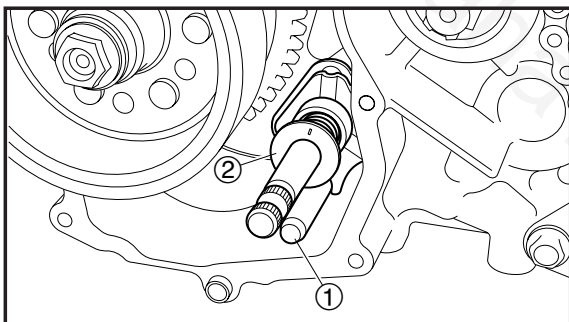


4. Remove:
 - shift fork guide bar ①
 - washer ②
 - shift guide spring

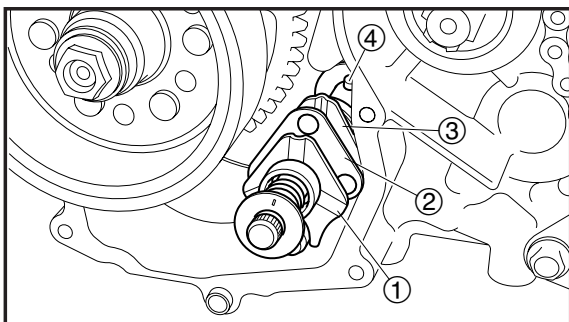

5. Remove:
 - shift guide ①
 - pawl holder ②
 - guide ③
 - dowel pin ④

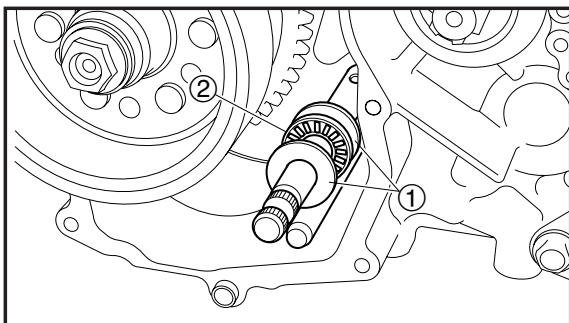


6. Remove:
 - washers ①
 - thrust bearing ②

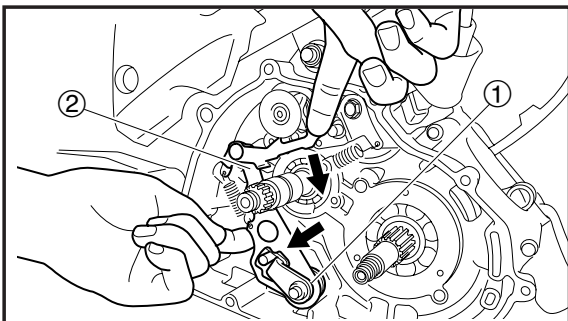


7. Remove:

- shift shaft assembly ①
- shift lever assembly ②

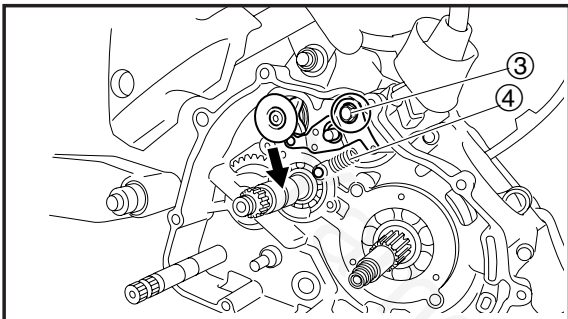


8. Remove:

- stopper lever assembly ③
- stopper lever spring ④
- collar

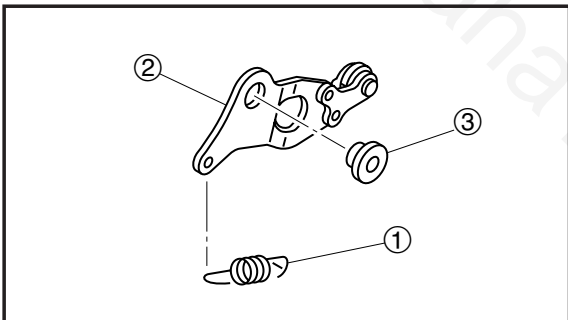


9. Remove:

- stopper lever spring ①
- stopper lever ②
- collar ③

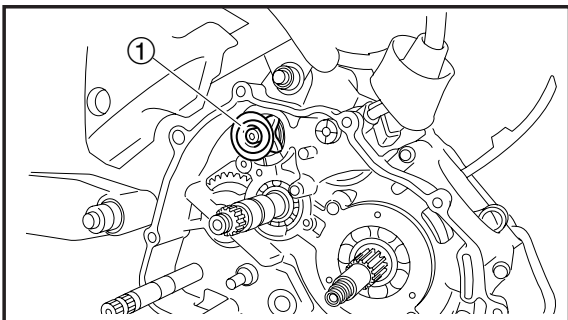

10. Remove:

- plate
- shift drum segment ①


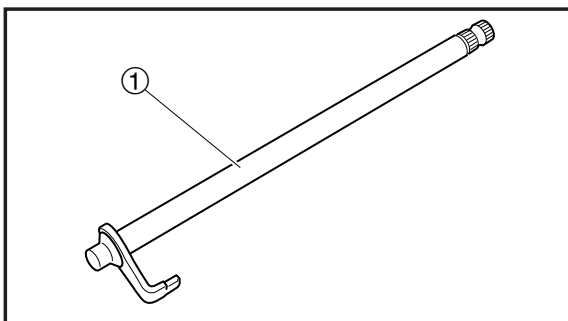


EAS00328

CHECKING THE SHIFT SHAFT

1. Check:

- shift shaft ①
- shift lever ②
- Bends/damage/wear → Replace.
- springs
- Damage/wear → Replace.

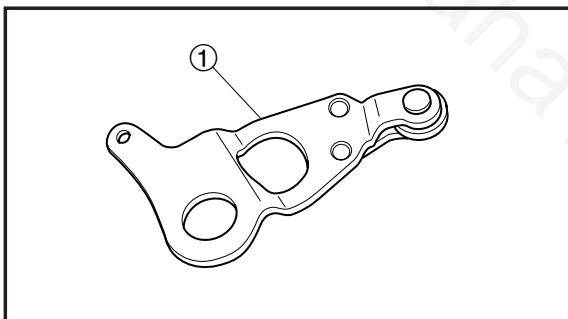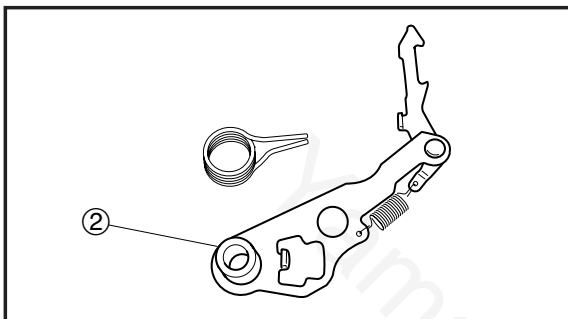


EAS00330

CHECKING THE STOPPER LEVER

1. Check:

- stopper lever ①
- Bends/damage → Replace.
- Roller turns roughly → Replace.
- stopper lever spring
- Damage/wear → Replace.

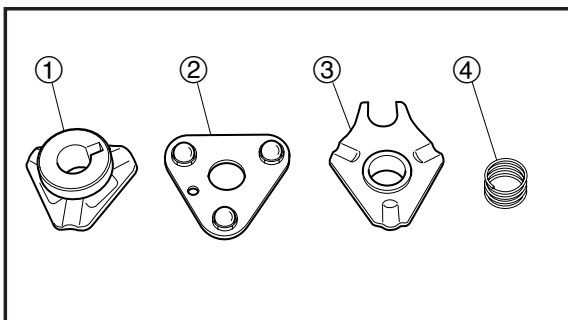**CHECKING THE SHIFT GUIDE**


1. Check:

- shift guide ①
- pawl holder ②
- guide ③
- Bends/damage → Replace.
- shift guide spring ④
- Damage/wear → Replace.

CHECKING THE OIL SEAL

1. Check:

- oil seal
- Damage/wear → Replace.

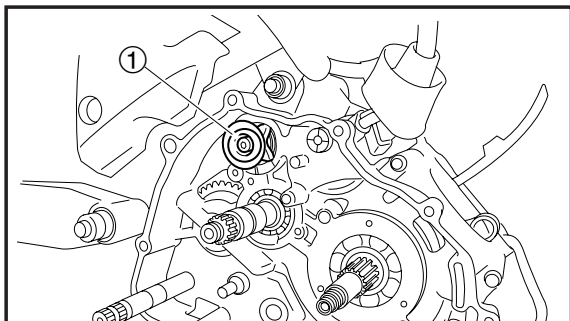

EAS00331


INSTALLING THE SHIFT SHAFT

1. Install:

- shift drum segment ①
- plate

12 Nm (1.2 m•kg, 9.0 ft•lb)
NOTE:

Apply locking agent (LOCTITE®) to the threads of shift drum segment screw.

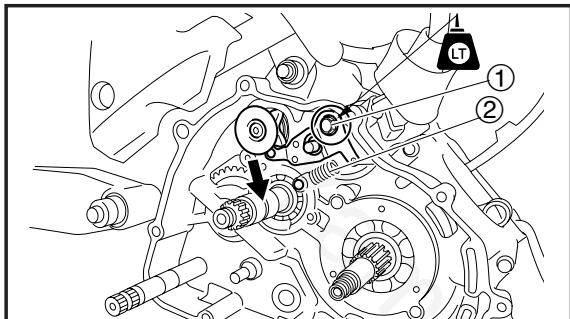


2. Install:

- collar
- stopper lever ①
- stopper lever spring ②

NOTE:

- Apply locking agent (LOCTITE®) to the stopper lever bolt.
- Hook the ends ③ of the stopper lever spring onto the stopper lever and the crankcase boss.
- Mesh the stopper lever with the shift drum segment assembly.

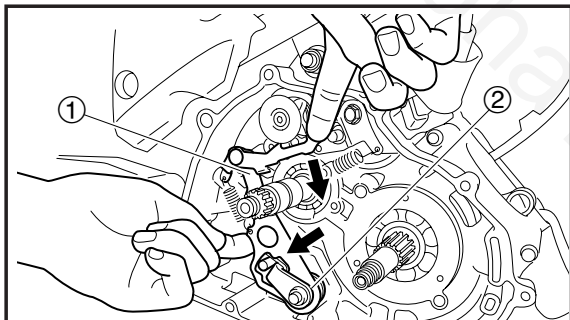

3. Install:


- shift lever assembly ①
- shift shaft assembly ②



EASF0037

CRANKCASE AND CRANKSHAFT

- ① Neutral switch
- ② Right crankcase
- ③ Dowel pin
- ④ Timing chain
- ⑤ Timing chain guide (intake side)
- ⑥ Crankshaft assembly
- ⑦ Left crankcase

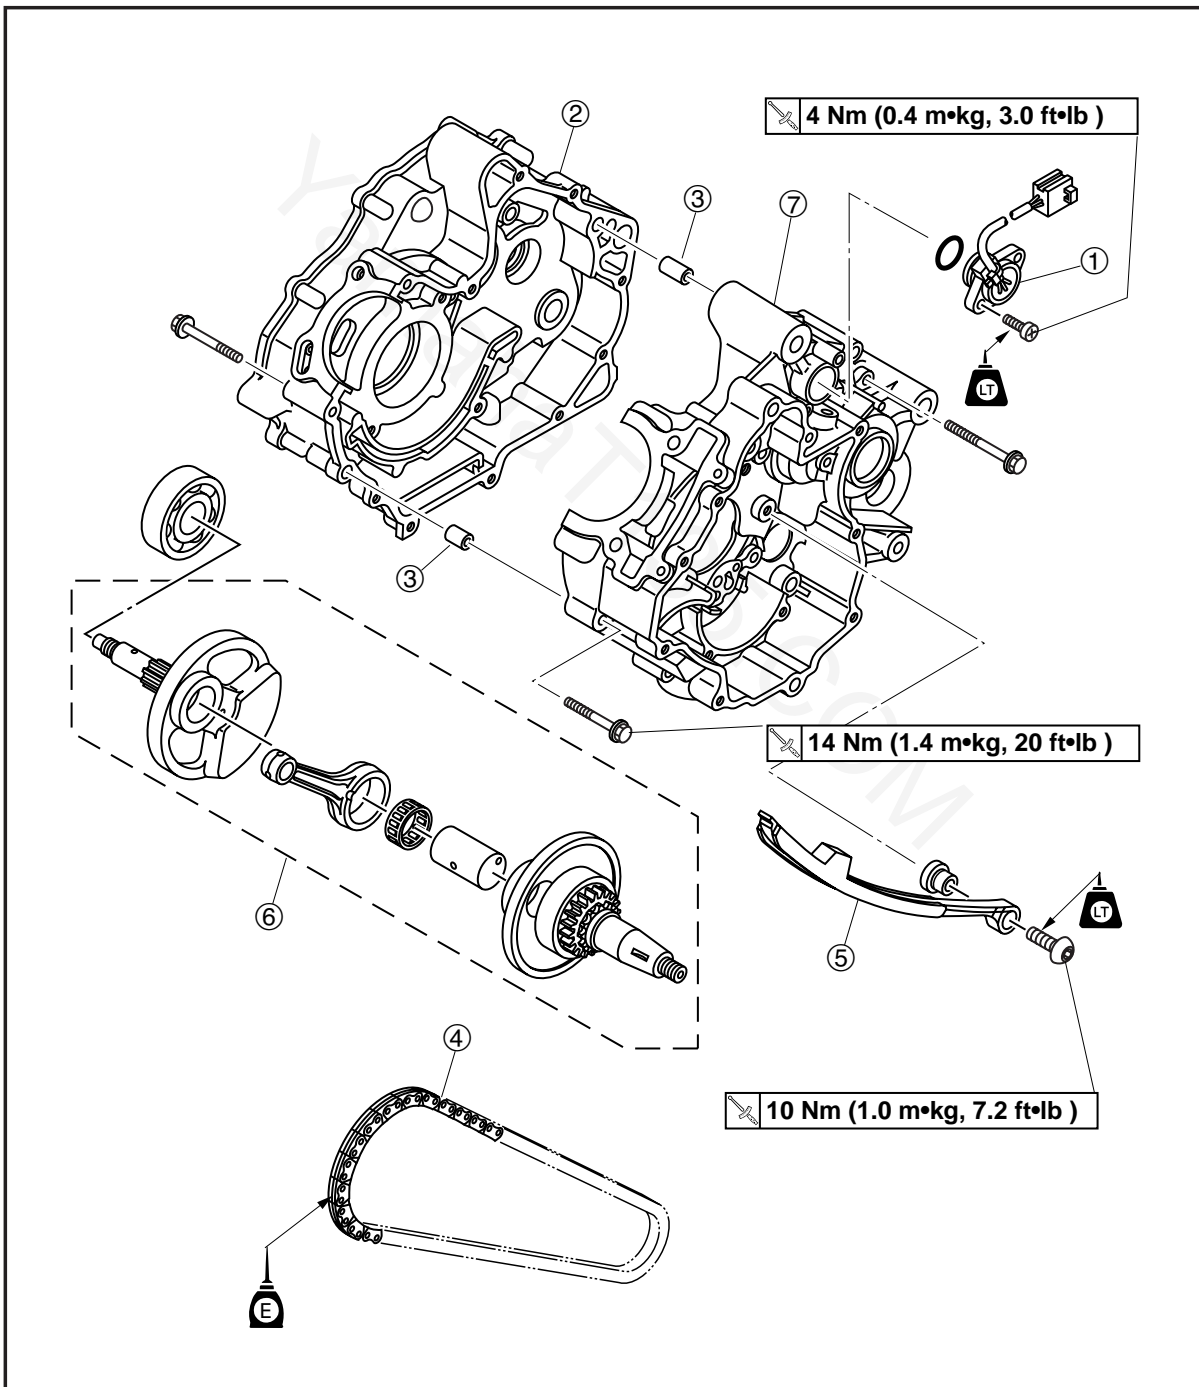



EAS00385

DISASSEMBLING THE CRANKCASE

1. Remove:

- engine

Refer to "REMOVING THE ENGINE".

2. Remove:

- starter motor lead (T135SE)
- starter motor (T135SE)

Refer to "STARTER MOTOR (T135SE)" in chapter 8.

3. Remove:



- cylinder head
Refer to "CYLINDER HEAD".
- cylinder
- piston
Refer to "CYLINDER AND PISTON".

- clutch
Refer to "CLUTCH".
- shift shaft
Refer to "SHIFT SHAFT".
- generator
- starter clutch
Refer to "GENERATOR AND STARTER CLUTCH".

- oil pump assembly
Refer to "OIL PUMP".

4. Remove:

- neutral switch ①
- timing chain guide (intake side) bolts
- timing chain guide (intake side) ②
- timing chain ③

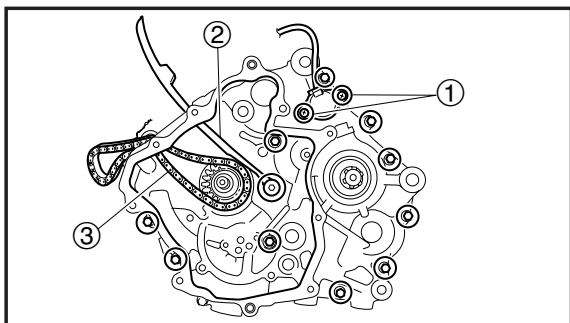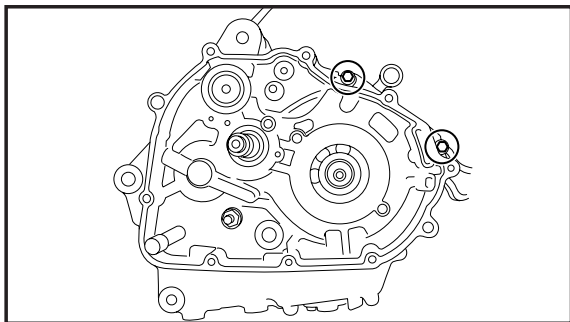



5. Remove:

- crankcase bolts

NOTE:


Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.

6. Remove:

- right crankcase
- dowel pins

CAUTION:

Tap on one side of the crankcase with a soft-face hammer. Tap only on reinforced portions of the crankcase, not on the crankcase mating surfaces. Work slowly and carefully and make sure the crankcase halves separate evenly.

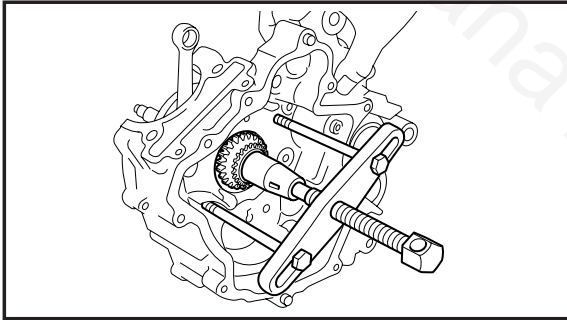

7. Remove:

- crankshaft assembly

NOTE:

Use the crankcase separating tool.



Crankcase separating tool:
90890-01135

WARNING

Never use the hammer to tapping and removing the crankshaft directory.

EAS00394

CHECKING THE CRANKSHAFT AND CONNECTING ROD


1. Measure:

- crankshaft runout

Out of specification → Replace the crankshaft, bearing or both.

NOTE:


Turn the crankshaft slowly.

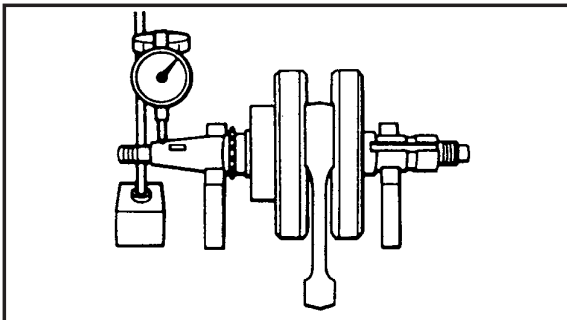

Maximum crankshaft runout
0.03 mm (0.0012 in)

CRANKCASE AND CRANKSHAFT

ENG

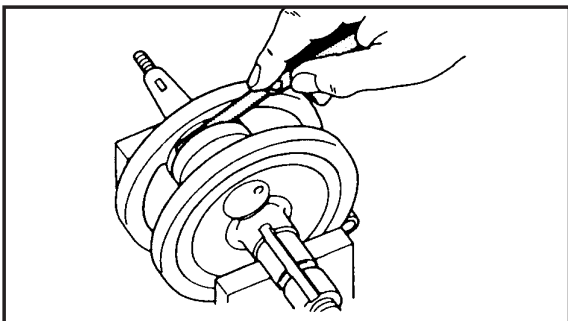

2. Measure:


- big end side clearance

Out of specification → Replace the crankshaft.

**Big end side clearance**

0.11 – 0.41 mm

(0.0043 – 0.0161 in)

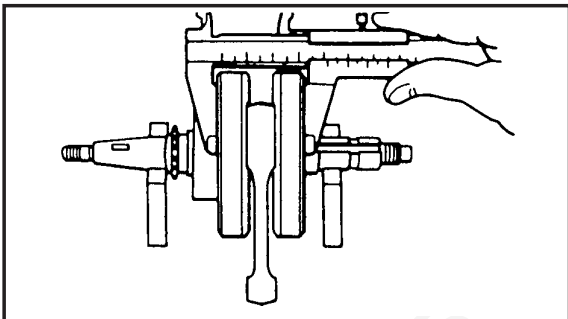

3. Measure:


- crankshaft width

Out of specification → Replace the crankshaft.

**Crankshaft width**

45.95 – 46.00 mm

(1.809 – 1.811 in)

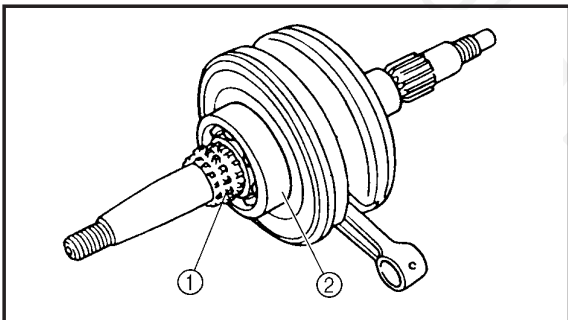

4. Check:

- crankshaft sprocket ①

Damage/wear → Replace the crankshaft.

- bearing ②

Cracks/damage/wear → Replace the crankshaft.

5. Check:

- crankshaft journal

Scratches/wear → Replace the crankshaft.



EAS00399


CHECKING THE CRANKCASE

1. Thoroughly wash the crankcase halves in a mild solvent.
2. Thoroughly clean all the gasket surfaces and crankcase mating surfaces.
3. Check:
 - crankcase
Cracks/damage → Replace.
 - oil delivery passages
Obstructions → Blow out with compressed air.


EAS00401

CHECKING THE BEARINGS

1. Check:
 - bearings
Clean and lubricate the bearings, then rotate the inner race with your finger.
Rough movement → Replace.

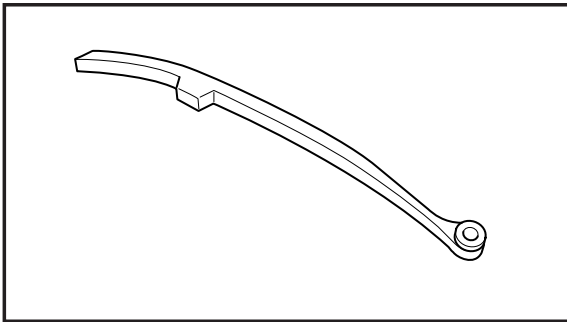**CHECKING THE TIMING CHAIN GUIDE**


1. Check:
 - timing chain guide (intake side)
Damage/wear → Replace.

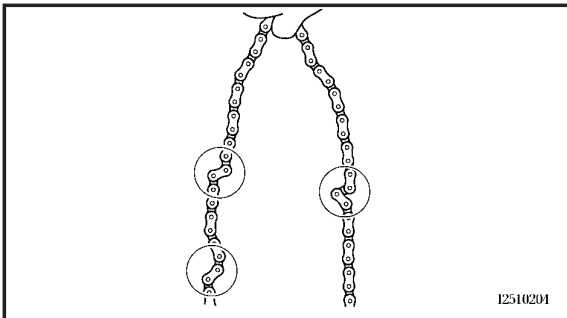**CHECKING THE TIMING CHAIN**

1. Check:
 - timing chain
Damage/stiffness → Replace the timing chain and camshaft sprocket as a set.

CRANKCASE AND CRANKSHAFT

ENG

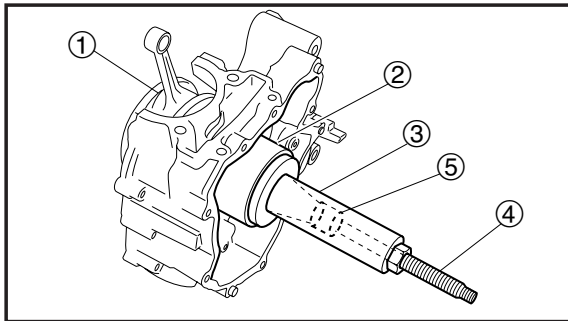

EAS00408

INSTALLING THE CRANKSHAFT

1. Install:
 - crankshaft assembly (1)

NOTE:

Use the crankshaft installing tool (spacer (2), installer pot (3), installer bolt (4), adaptor (5)) to install the crankcase (left).

CAUTION:

To avoid scratching the crankshaft and to ease the installation procedure, lubricate the oil seal lips with lithium-soap-based grease and each bearing with engine oil.

WARNING

- Hold the connecting rod at top dead center with one hand while turning the nut of the installing tool with the other.
- Operate the installing tool until the crankshaft bottoms against the bearing.



Crank pot spacer (2) :
90890-04081

Crank shaft installer pot (3) :
90890-01274

Crank shaft installer bolt (4) :
90890-01275

Adaptor (5):
90890-01278

EAS00416

ASSEMBLING THE CRANKCASE


1. Apply:
 - sealant
(onto the crankcase mating surfaces)



Yamaha bond No. 1215
90890-85505

NOTE:

Do not allow any sealant to come into contact with the oil gallery (1).

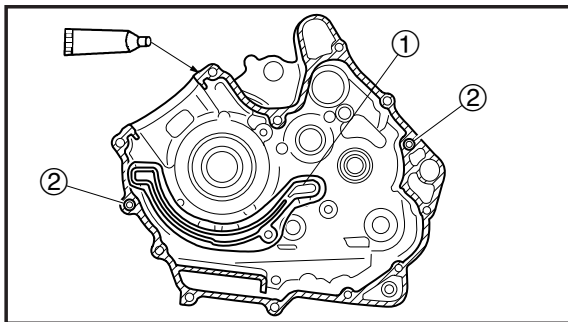



2. Install:
 - dowel pins (2)
3. Install:
 - right crankcase
(onto the left crankcase)

NOTE:



Tap lightly on the right crankcase with a soft face hammer.

CRANKCASE AND CRANKSHAFT

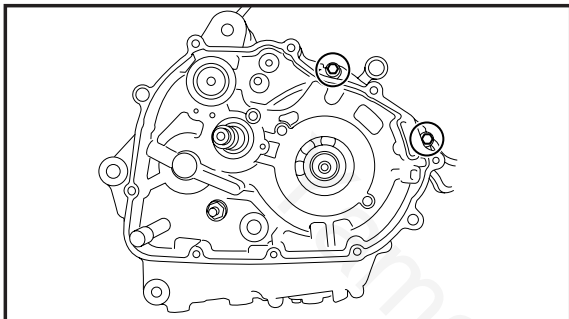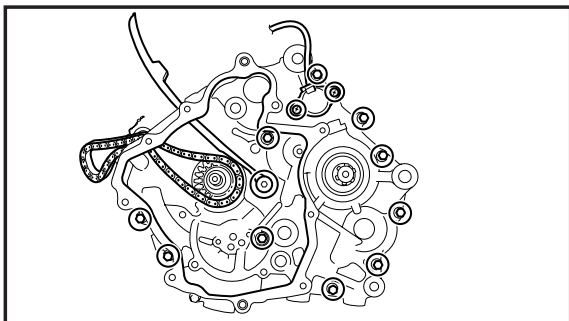ENG



4. Install:

- neutral switch  **4 Nm (0.4 m•kg, 3.0 ft•lb)**
- crankcase bolts  **10 Nm (1.0 m•kg, 7.2 ft•lb)**

5. Apply:


- engine oil
(onto the crankshaft bearings and oil delivery holes)

6. Check:

- crankshaft and transmission operation
Rough movement → Repair.

7. Install:

- timing chain
- timing chain guide (intake side)
- timing chain guide (intake side) bolts

 **10 Nm (1.0 m•kg, 7.2 ft•lb)****NOTE:**

Apply locking agent (LOCTITE®) to the threads of timing chain guide (intake side) bolts.




EASF0033

KICKSTARTER

- ① Oil level plug
- ② Kickstarter lever
- ③ Crankcase cover (right)
- ④ Gasket
- ⑤ Washer
- ⑥ Kickstarter gear
- ⑦ Guide stopper

- ⑧ Collar
- ⑨ Kickstarter spring
- ⑩ Washer
- ⑪ Spring
- ⑫ Kickstarter ratchet gear
- ⑬ Kickstarter shaft

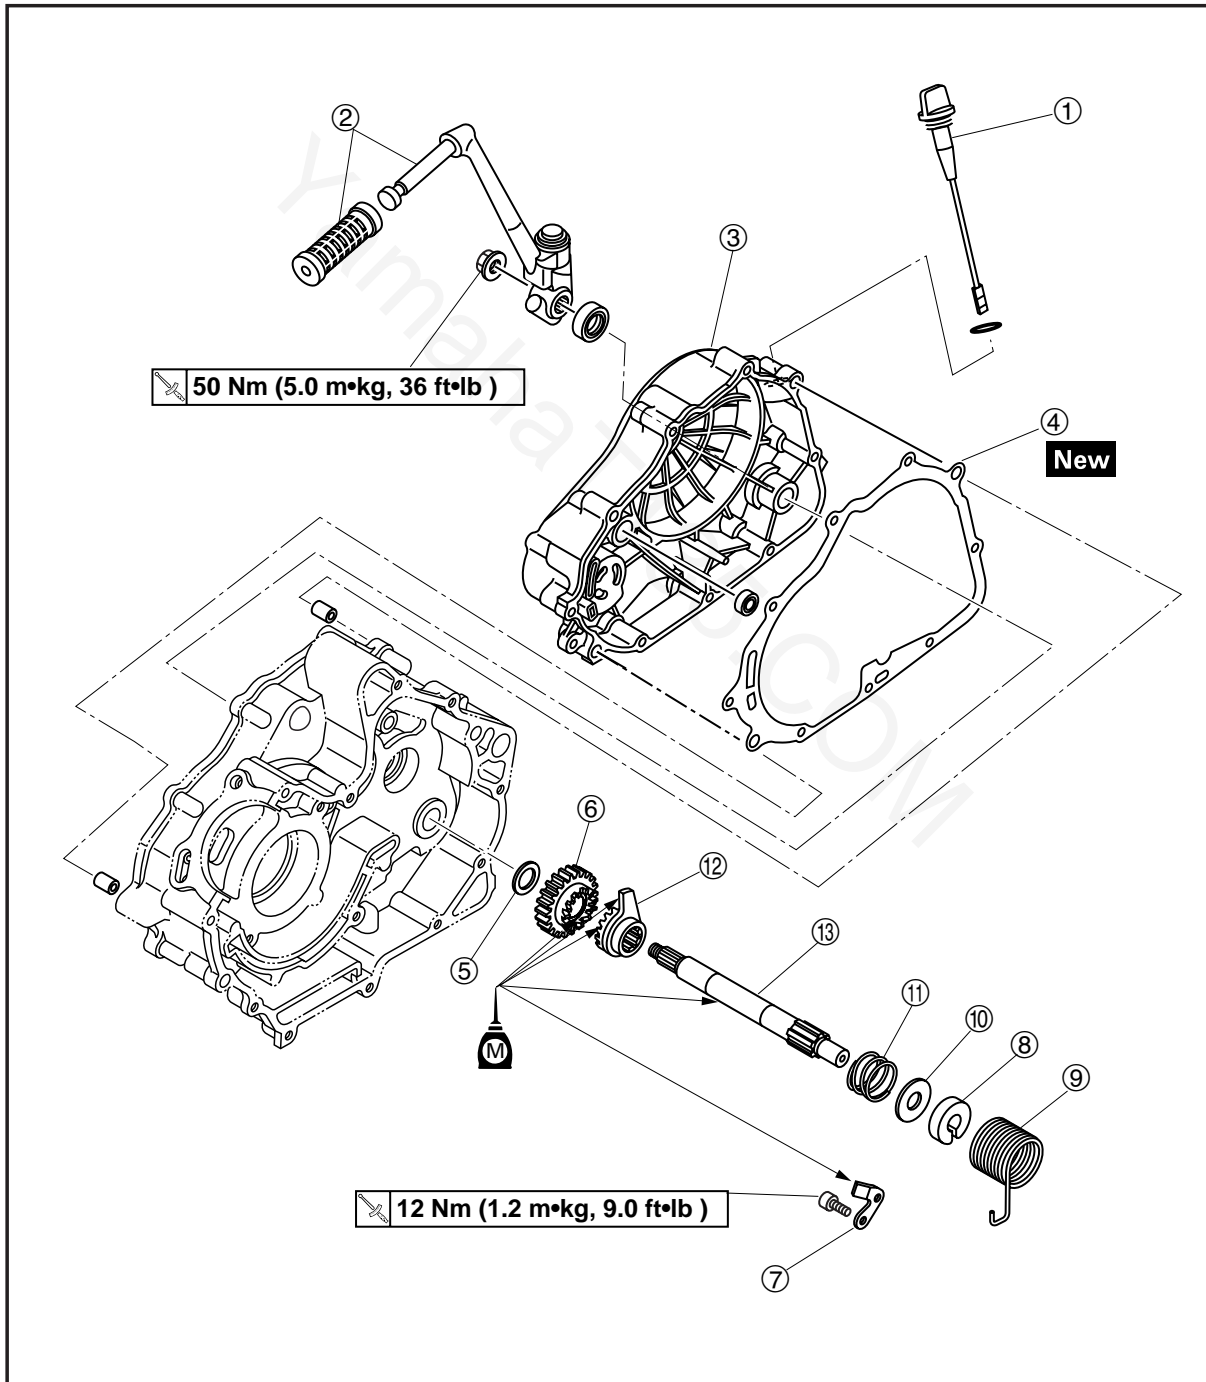

**REMOVING THE KICKSTARTER**

1. Drain:

- engine oil
(completely from the crankcase)
Refer to "CHANGING THE ENGINE OIL" in chapter 3.
- coolant
(completely from the water jacket)
Refer to "CHANGING THE COOLANT" in chapter 3.

2. Remove:


- side cowlings (left and right)
- front cowling
- center panels (upper and lower)
- rear cowlings (left and right)
Refer to "COVERS" in chapter 3.
- carburetor assembly
Refer to "CARBURETOR" in chapter 6.
- muffler
- footrest
- Brake pedal
Refer to "REMOVING THE ENGINE".

3. Remove:

- cylinder head
Refer to "CYLINDER HEAD".
- cylinder
- piston
Refer to "CYLINDER AND PISTON".

4. Remove:

- kickstarter nut ①
- kickstarter lever ②

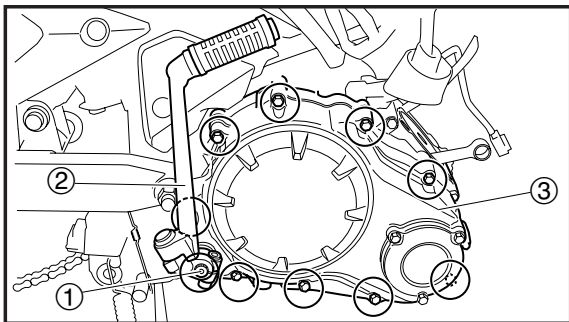

5. Remove:


- oil level plug
- crankcase cover bolts
- crankcase cover (right) ③
- gasket
- dowel pins

NOTE:

Be sure to remove the oil level plug first when remove the crankcase (right).




6. Remove:
 - clutch
Refer to "CLUTCH".
 - shift shaft
Refer to "SHIFT SHAFT".
 - oil pump assembly
Refer to "SOIL PUMP".
 - generator
 - starter clutch
Refer to "GENERATOR AND STARTER CLUTCH".
7. Remove:
 - starter motor (T135SE)
Refer to "STARTER MOTOR" in chapter 8.
8. Remove:
 - engine
Refer to "REMOVING THE ENGINE".
9. Separate:
 - crankcase
Refer to "CRANKCASE".
10. Remove:
 - guide stopper
 - kickstarter shaft assembly

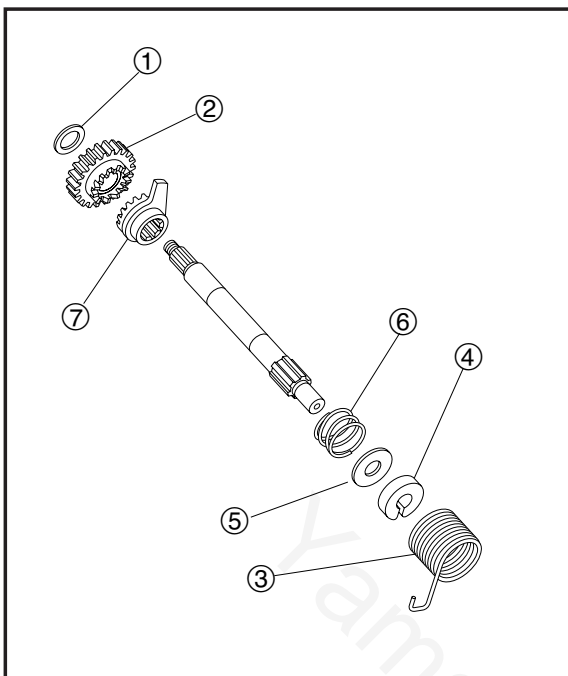

11. Remove:

- washer ①
- kickstarter gear ②
- kickstarter spring ③
- collar ④
- washer ⑤
- spring ⑥
- kickstarter ratchet gear ⑦
- kickstarter shaft

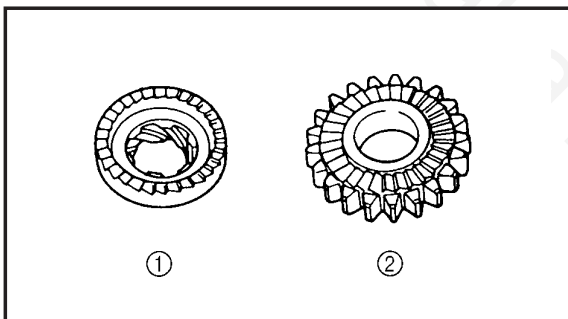

EAS00339


CHECKING THE KICKSTARTER



1. Check:

- kickstarter ratchet gear ①
 - kickstarter gear ②
- Damage/wear → Replace.

2. Check:

- kickstarter spring
- Damage/wear → Replace.

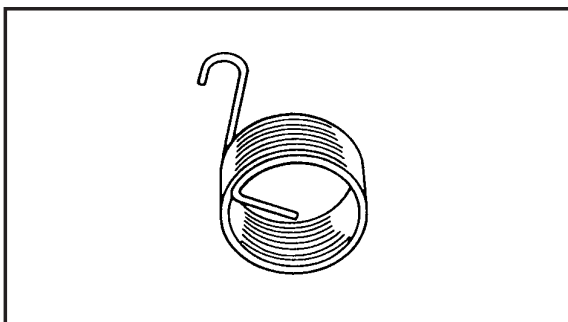

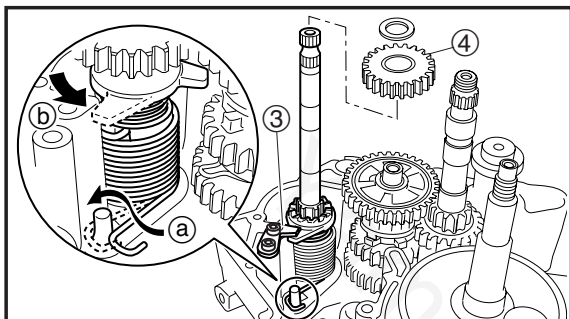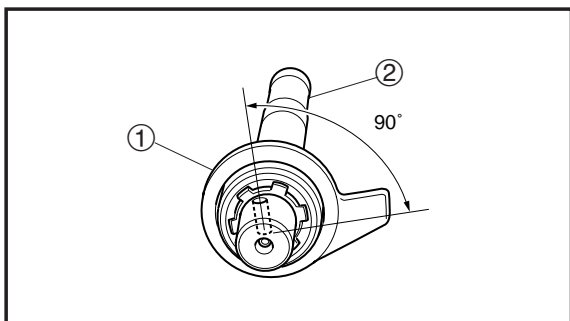

INSTALLING THE KICKSTARTER

1. Install:

- kickstarter ratchet gear ①
(on to the kickstarter shaft)
- kickstarter shaft ②
- kickstarter spring

NOTE:

- Offset the kickstarter ratchet gear as shown, and then align the spline to install the kickstarter ratchet gear.
- Hook the kickstarter spring end onto the pin (a) in the crankcase, and then turn the kickstarter shaft counter-clockwise to 3/4 turns (b).

2. Install:

- guide stopper ③
- guide stopper bolts

12 Nm (1.2 m•kg, 9.0 ft•lb)

- kickstarter gear ④

3. Install:

- crankcase
Refer to "CRANKCASE".

4. Install:

- engine
Refer to "REMOVING THE ENGINE".

5. Install:

- starter motor (T135SE)
Refer to "STARTER MOTOR (T135SE)" in chapter 8.

6. Install:

- oil pump assembly
Refer to "OIL PUMP".
- generator
Refer to "GENERATOR AND STARTER CLUTCH".
- shift shaft
Refer to "SHIFT SHAFT".
- clutch
Refer to "CLUTCH".

7. Install:

- gasket
- dowel pins
- crankcase cover bolts
- crankcase cover (right)
- oil level plug

8. Install:

- kickstarter lever
- kickstarter lever nut



9. Install:

- piston
Refer to "CYLINDER AND PISTON".
- cylinder
Refer to "CYLINDER HEAD".
- cylinder head
Refer to "CYLINDER HEAD".
- radiator assembly
Refer to "RADIATOR" in chapter 5.
- cylinder head
Refer to "CYLINDER HEAD".

10. Install:

- muffler
- footrest
- brake pedal
Refer to "REMOVING THE ENGINE".
- inner panel
- center panels (left and right)
- front cowling
- side cowlings (left and right)
Refer to "COVERS" in chapter 3.

11. Fill:

- coolant
(completely from the water jacket)
Refer to "CHANGING THE COOLANT" in chapter 3.
- engine oil
(completely from the crankcase)
Refer to "CHANGING THE ENGINE OIL" in chapter 3.





EASF0041

TRANSMISSION

- ① Shift fork guide bar
- ② Shift fork "R"
- ③ Shift fork "L"
- ④ Shift drum
- ⑤ 2nd pinion gear
- ⑥ 3rd pinion gear
- ⑦ 4th pinion gear
- ⑧ Main axle/1st pinion gear

- ⑨ 1st wheel gear
- ⑩ 4th wheel gear
- ⑪ 3rd wheel gear
- ⑫ 2nd wheel gear
- ⑬ Side plate spring
- ⑭ Side plate
- ⑮ Washer
- ⑯ Drive axle

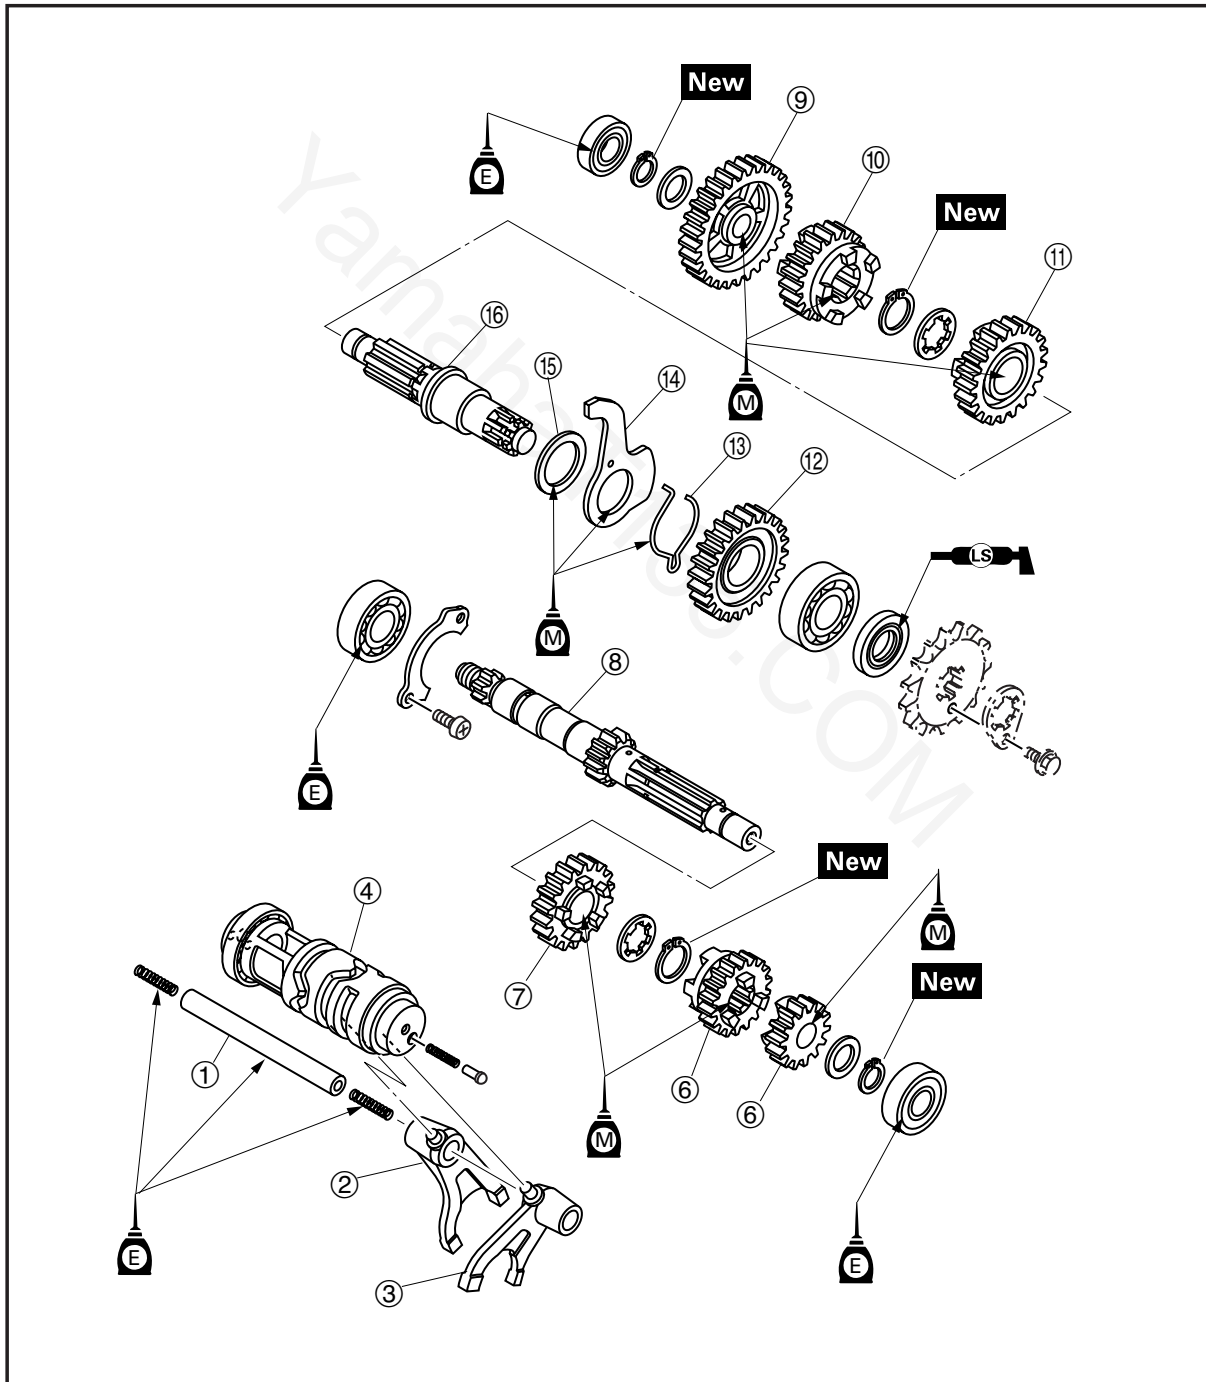

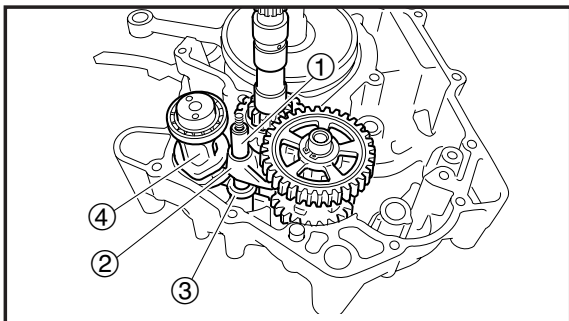

EASF0042

REMOVING THE TRANSMISSION**NOTE:**


Prior to removing the transmission, separate the crankcase.

1. Remove:

- shift fork guide bar ①
- shift fork guide bar springs
- shift fork "R" ②
- shift fork "L" ③
- shift drum ④


NOTE:

Note the position of each part. Pay particular attention to location and direction of shift forks.

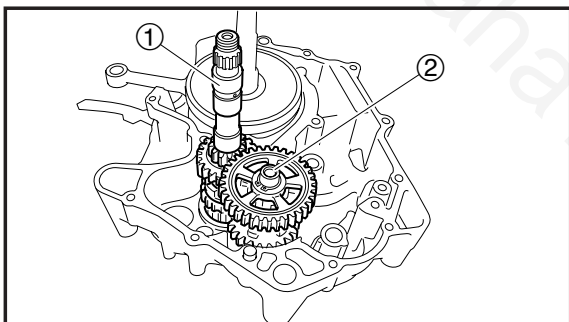


2. Remove:

- main axle assembly ①
- drive axle assembly ②

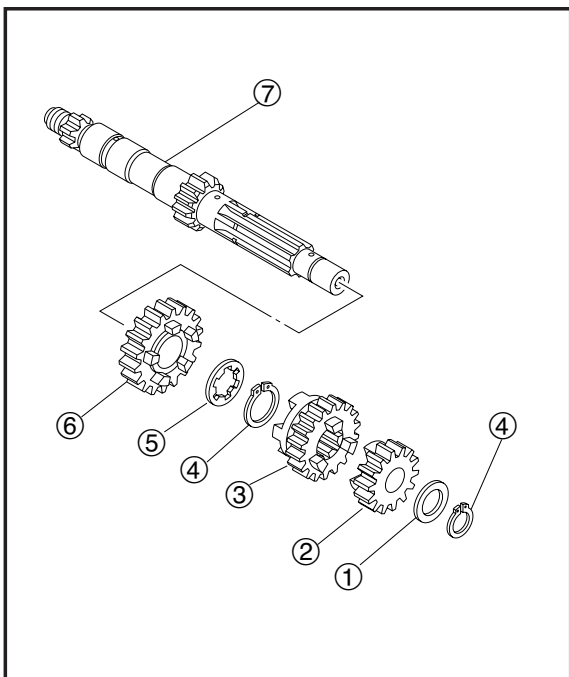**DISASSEMBLING THE TRANSMISSION**


1. Remove:

- washer ①
- 2nd pinion gear ②
- 3rd pinion gear ③
- circlip ④
- washer ⑤
- 4th pinion gear ⑥
- main axle/1st pinion gear ⑦

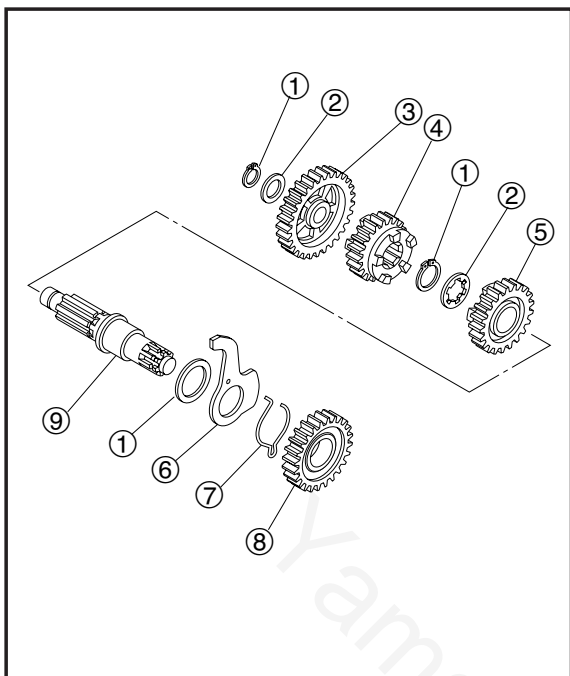

2. Remove:

- circlips ①
- washers ②
- 1st wheel gear ③
- 4th wheel gear ④
- 3rd wheel gear ⑤
- side plate ⑥
- side plate spring ⑦
- 2nd wheel gear ⑧
- drive axle ⑨

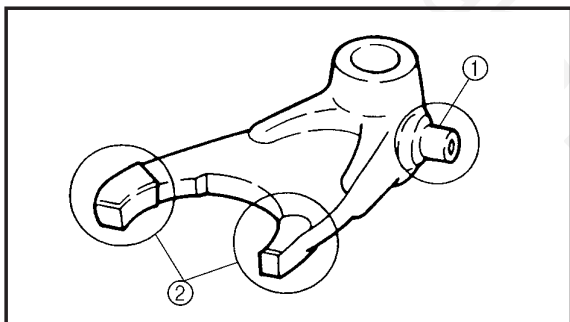

EAS00421

CHECKING THE SHIFT FORKS

The following procedure applies to both of the shift forks.

1. Check:

- shift fork cam follower ①
- shift fork pawl ②


Bends/damage/scoring/wear → Replace the shift fork.

2. Check:

- shift fork guide bar

Roll the shift fork guide bar on a flat surface.

Bends → Replace.

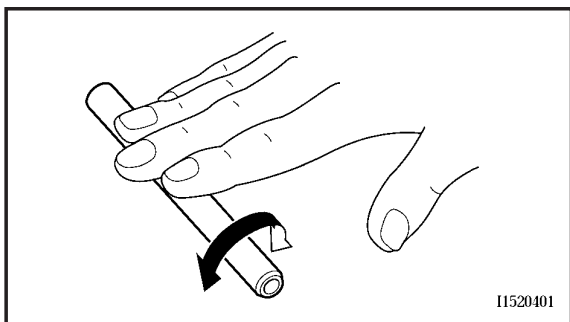

I1520401


⚠ WARNING

Do not attempt to straighten a bent shift fork guide bar.


3. Check:

- shift fork movement
(along the shift fork guide bar)

Rough movement → Replace the shift forks and shift fork guide bar as a set.

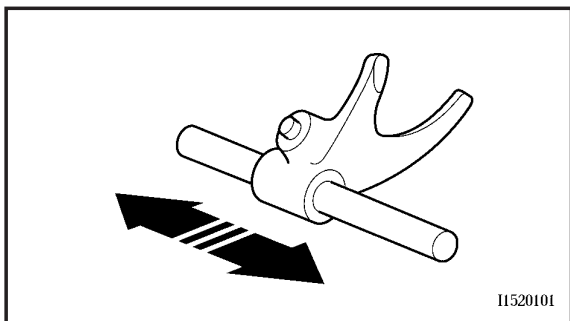

I1520101

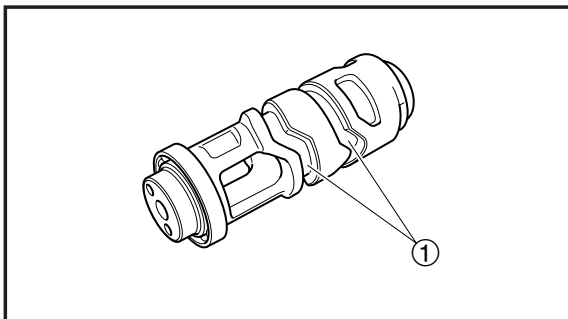


EAS00422

CHECKING THE SHIFT DRUM ASSEMBLY

1. Check:

- shift drum grooves ①
Damage/scratches/wear → Replace the shift drum assembly.
- shift drum bearing
Damage/pitting → Replace the shift drum assembly.

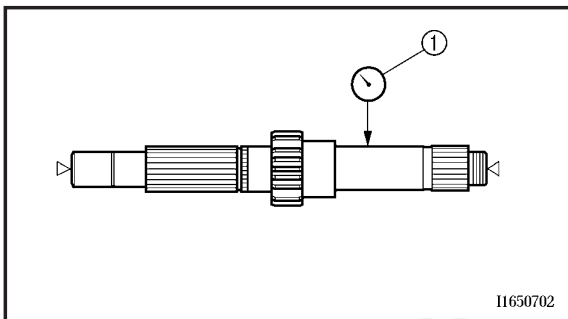

11650702

EAS00424


CHECKING THE TRANSMISSION

1. Measure:

- main axle runout
(with a centring device and dial gauge ①)
Out of specification → Replace the main axle.



Main axle runout limit
0.03 mm (0.0012 in)

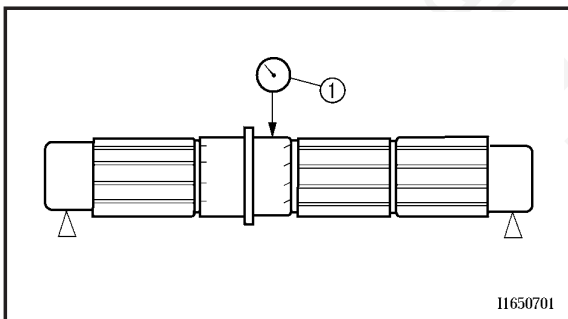


11650701

2. Measure:

- drive axle runout
(with a centring device and dial gauge ①)
Out of specification → Replace the drive axle.




Drive axle runout limit
0.03 mm (0.0012 in)

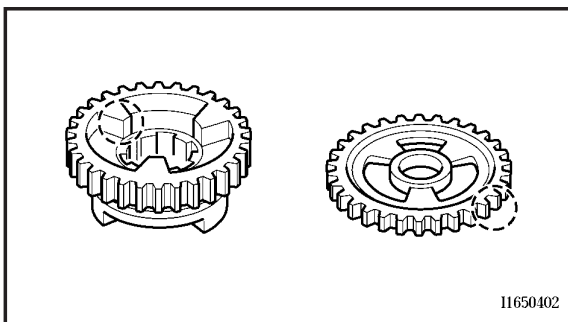


11650402

3. Check:

- transmission gears
Blue discoloration/pitting/wear → Replace the defective gear(s).
- transmission gear dogs
Cracks/damage/rounded edges → Replace the defective gear(s).

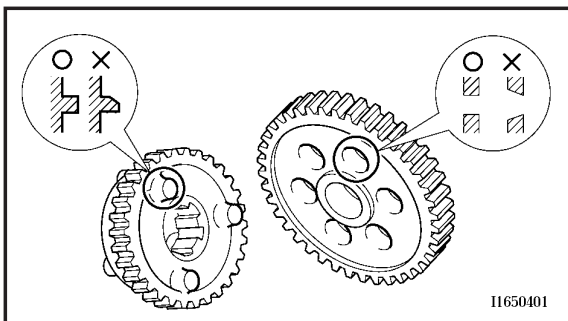

11650401

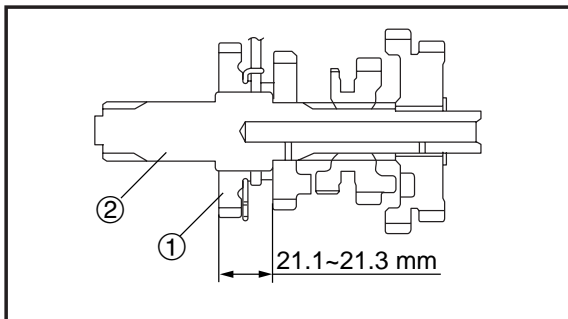

4. Check:

- transmission gear engagement
(each pinion gear to its respective wheel gear)
Incorrect → Reassemble the transmission axle assemblies.

NOTE:


When reassembling the drive axle, press the 2nd wheel gear ① onto the drive axle ② as shown.

5. Check:

- transmission gear movement
Rough movement → Replace the defective part(s).

6. Check:

- circlips
Bends/damage/looseness → Replace.

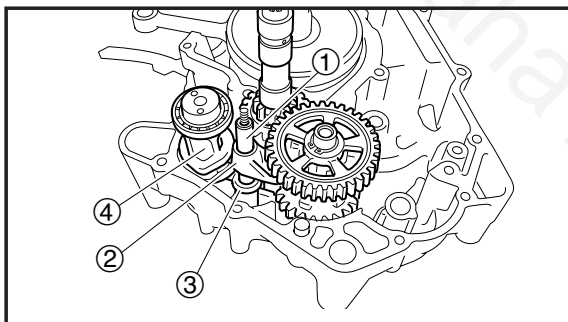

EAS00426


INSTALLING THE TRANSMISSION

1. Install:

- shift fork guide bar ①
- shift fork "R" ②
- shift fork "L" ③
- shift drum ④

NOTE:

- The embossed marks on the shift forks should face towards the right side of the engine and be in the following sequence : "R", "L".
- Be sure install the side plate into the slot on the shift drum.

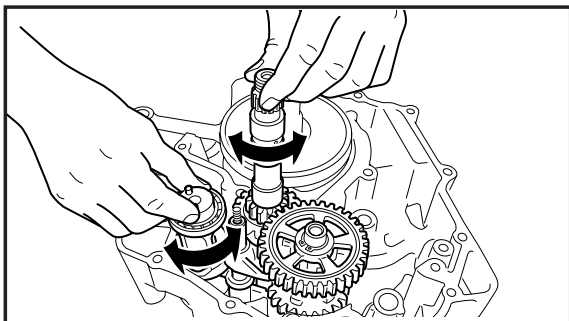

2. Check:

- transmission
- shift drum
- shift forks

Rough movement → Repair.

NOTE:

- Oil each gear, shaft, and bearing thoroughly.
- Before assembling the crankcase, be sure that the transmission is in neutral and that the gears turn freely.



YamahaT135.COM



CHAPTER 5
COOLING SYSTEM

RADIATOR 5-1

WATER PUMP 5-2

 REMOVING THE RADIATOR 5-3

 CHECKING THE RADIATOR 5-4

 CHECKING THE THERMOSTAT 5-6

 DISASSEMBLING THE WATER PUMP 5-6

 CHECKING THE WATER PUMP 5-7

 ASSEMBLING THE WATER PUMP 5-8

 INSTALLING THE THERMOSTAT 5-8

 INSTALLING THE WATER PUMP 5-9

 INSTALLING THE RADIATOR 5-9



YamahaT135.COM




EAS00454

COOLING SYSTEM

RADIATOR

- ① Radiator cap
- ② Bracket
- ③ Water pump inlet hose
- ④ Radiator outlet hose
- ⑤ Radiator inlet hose
- ⑥ Bracket
- ⑦ Thermostat housing cover
- ⑧ Thermostat
- ⑨ Radiator assembly
- ⑩ Fan motor assembly

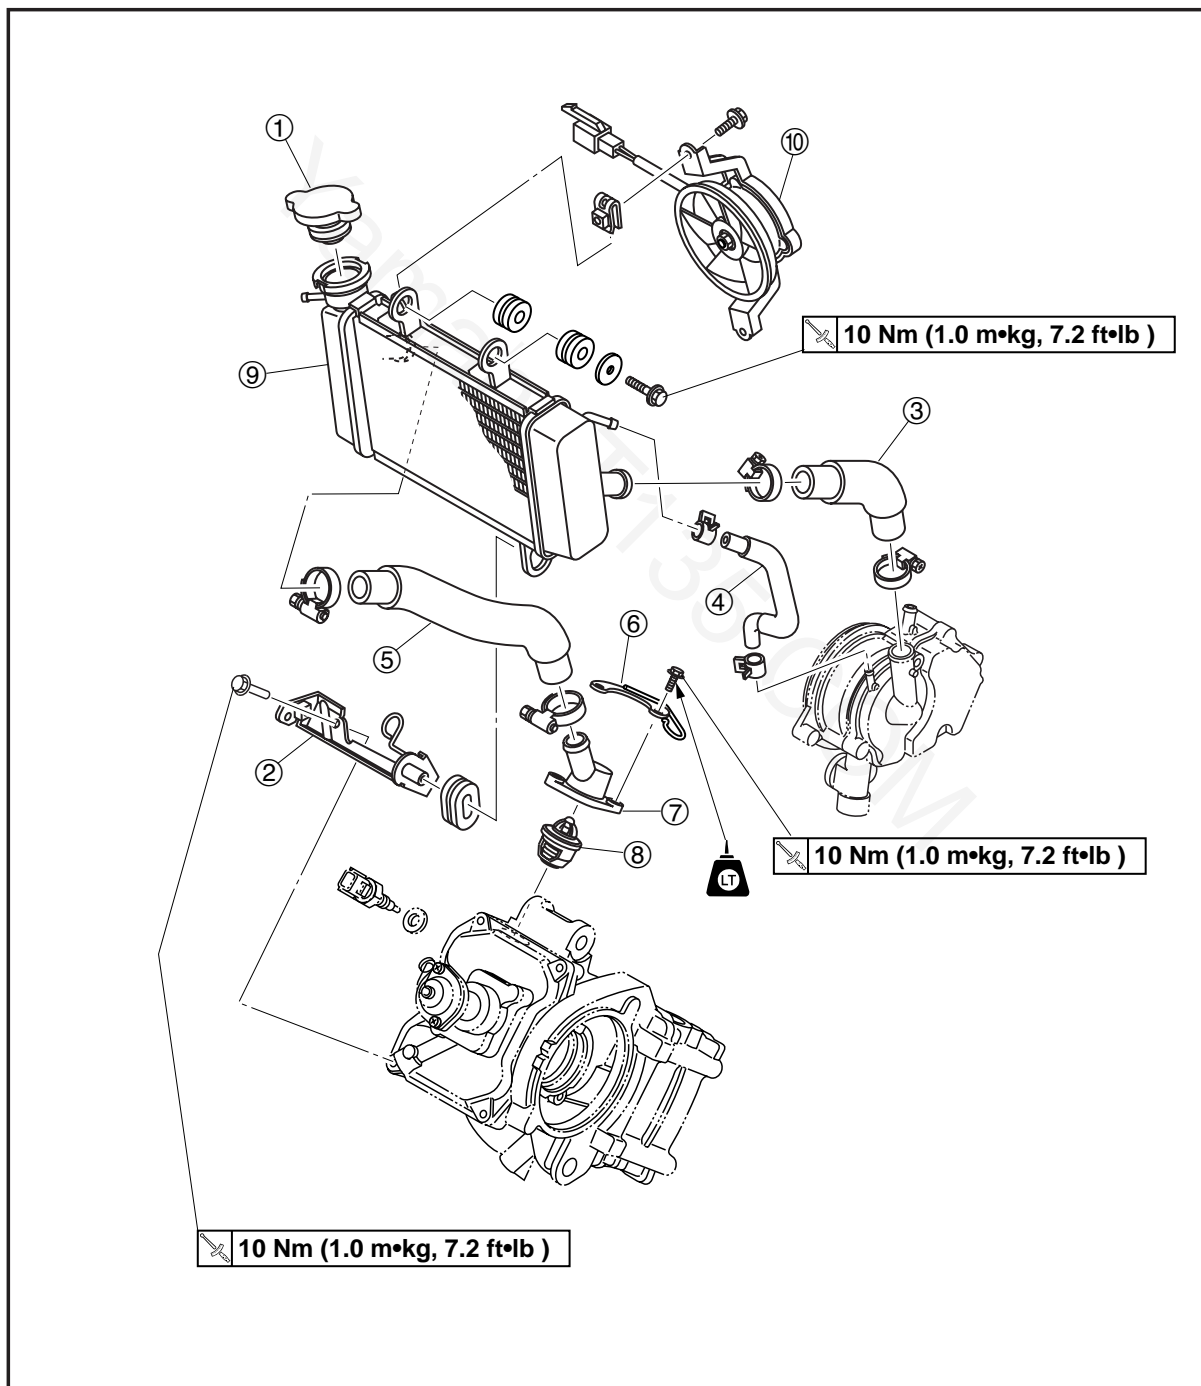




EAS00468

WATER PUMP

- ① O-ring
- ② O-ring
- ③ Water pump cover
- ④ Gasket
- ⑤ Plate
- ⑥ Impeller
- ⑦ Plate
- ⑧ Housing cover gasket
- ⑨ Bearing
- ⑩ Water pump seal
- ⑪ Water pump housing

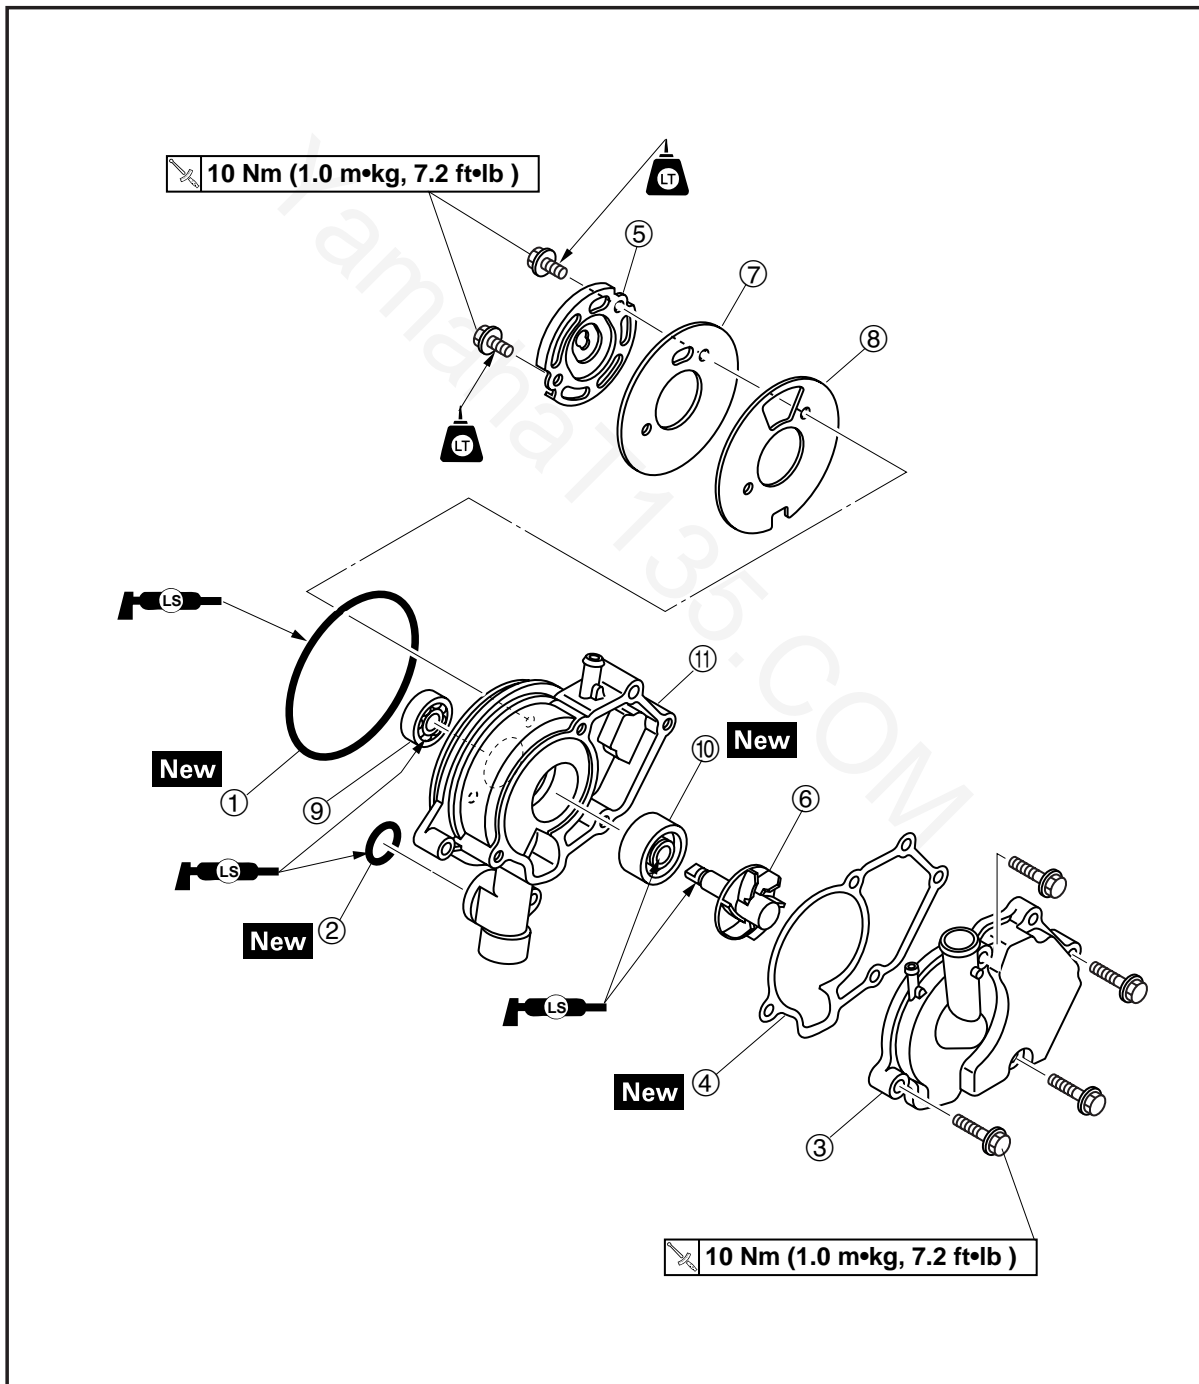



REMOVING THE RADIATOR

⚠ WARNING

A hot radiator is under pressure. Therefore, do not remove the radiator cap when the engine is hot. Scalding hot fluid and steam may be blown out, which could cause serious injury. When the engine has cooled, open the radiator cap as follows: Place a thick rag or a towel over the radiator cap and slowly turn the radiator cap counterclockwise toward the detent to allow any residual pressure to escape.

When the hissing sound has stopped, press down on the radiator cap and turn it counterclockwise to remove.

1. Remove:

- side cowlings (left and right)
- front cowling
- center panels
- seat assembly with battery box
- inner panel

Refer to "REMOVING THE FRONT COWLINGS" in chapter 3.



2. Drain:

- cooling water

Refer to "CHANGING THE COOLANT" in chapter 3.


3. Disconnect:

- radiator inlet hose
- radiator outlet hose
- radiator outlet pipe
- fan motor coupler ①

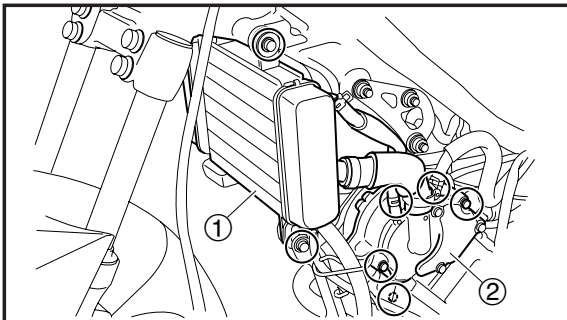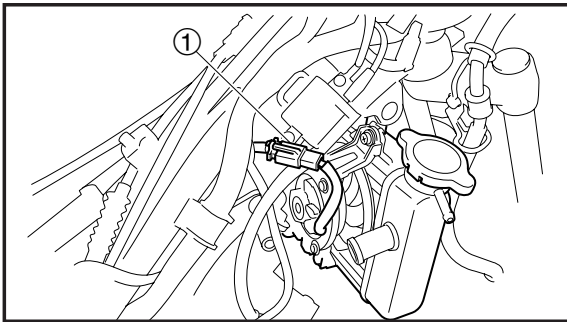


4. Remove:


- radiator assembly ①
- water pump assembly ②
- O-rings

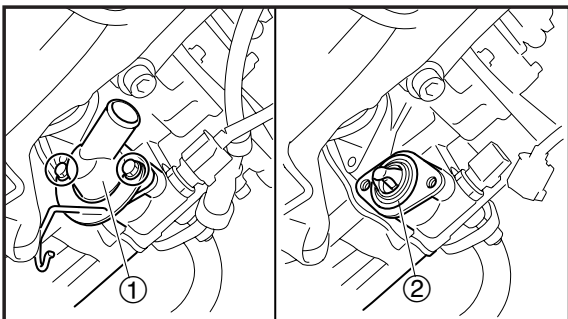

5. Remove:
- bracket
 - thermostat cover ①
 - thermostat ②

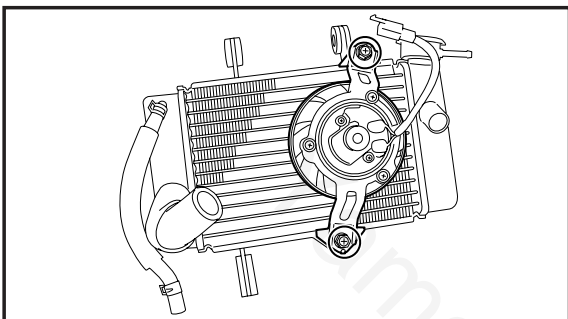

6. Remove:
- fan motor

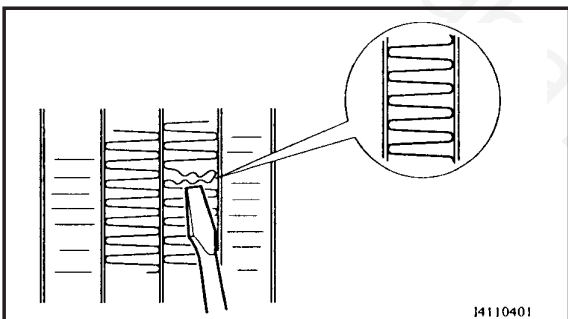

EAS00455


CHECKING THE RADIATOR

1. Check:
- radiator fins
- Obstruction → Clean.
Apply compressed air to the rear of the radiator.
- Damage → Repair or replace.

NOTE:

Straighten any flattened fins with a thin, flat-head screwdriver.

2. Check:
- radiator hoses
 - radiator pipes
- Cracks/damage → Replace.

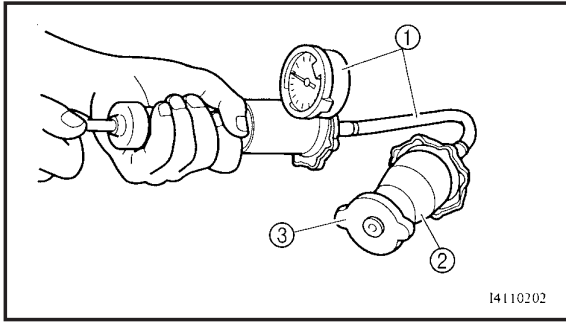

3. Measure:

- radiator cap opening pressure

Below the specified pressure → Replace the radiator cap.

**Radiator cap opening pressure**

93.2 – 122.6 kPa

(0.93 – 1.23 kg/cm², 13.5 – 17.8 psi)



- a. Install the radiator cap tester ① and radiator cap tester adapter ② to the radiator cap ③.

**Radiator cap tester ①**

90890-01325

Radiator cap tester adapter ②

90890-01352

- b. Apply the specified pressure for ten seconds and make sure there is no drop in pressure.




4. Check:




- radiator fan motor

Damage → Replace.

Malfunction → Check and repair.

Refer to "COOLING SYSTEM" in chapter 8.

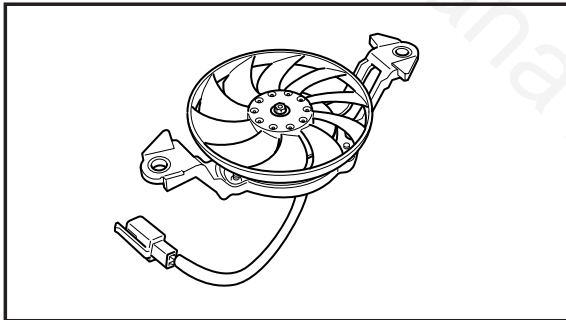

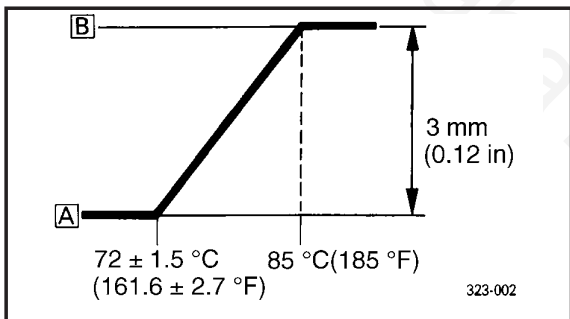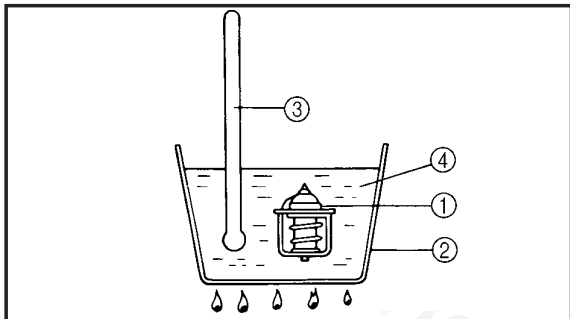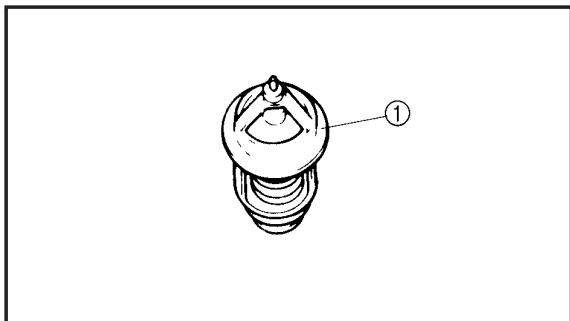

EAS00462

CHECKING THE THERMOSTAT

1. Check:

- thermostat ①

Does not open at 80.5 – 83.5°C (176.9 – 182.3°F) → Replace.



- Suspend the thermostat in a container filled with water.
- Slowly heat the water.
- Place a thermometer in the water.
- While stirring the water, observe the thermostat and thermometer's indicated temperature.



- ① Thermometer
- ② Water
- ③ Thermostat
- ④ Container

A Fully closed


B Fully open

NOTE:

If the accuracy of the thermostat is in doubt, replace it. A faulty thermostat could cause serious overheating or overcooling.

2. Check:

- thermostat housing cover
 - thermostat housing
- Cracks/damage → Replace.

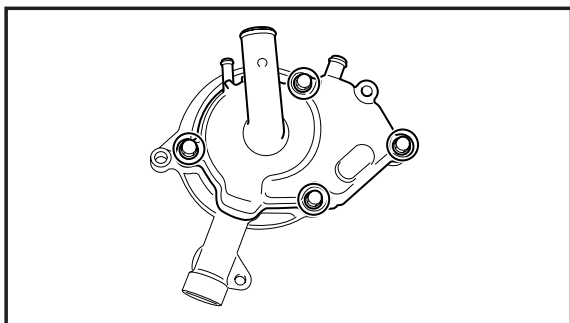


EAS00470

DISASSEMBLING THE WATER PUMP

1. Remove:

- water pump cover
- gasket
- O-ring

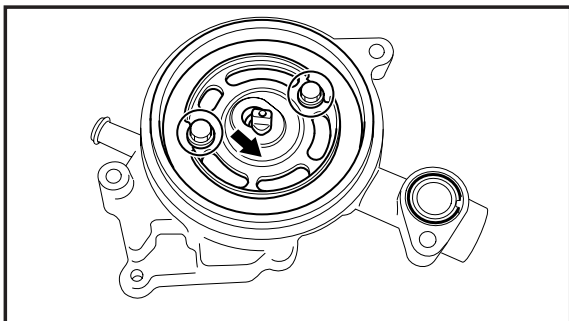


2. Remove:

- plate

NOTE:

Slide the plate as shown, and then remove the plate from the water pump housing.

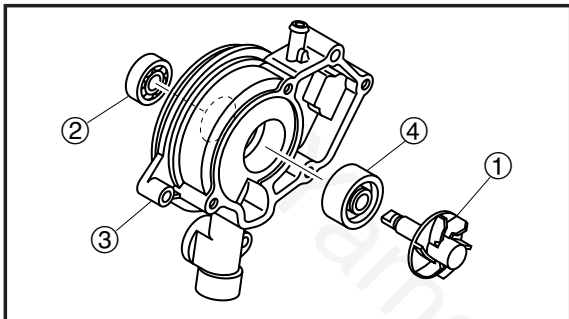

3. Remove:

- impeller ①
- bearing ②

NOTE:

Remove the bearing from the outside of the water pump housing.

③ Water pump housing

4. Remove:

- water pump seal ④

NOTE:

Remove the water pump seal from the inside of the water pump housing.

EAS00473


CHECKING THE WATER PUMP

1. Check:

- water pump housing cover
 - water pump housing
 - impeller
 - rubber damper
 - rubber damper holder
 - water pump seal
 - oil seal
- Cracks/damage/wear → Replace.

2. Check:

- bearing
- Rough movement → Replace.

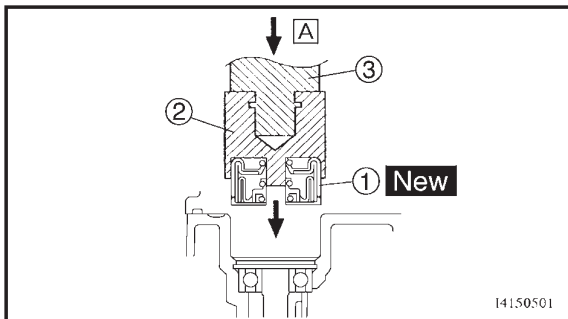

EAS00475

ASSEMBLING THE WATER PUMP

1. Install:

- water pump seal ① **New**

NOTE:

Install the water pump seal with the special tools.

**Mechanical seal installer**

90890-04145 ②

Middle driven shaft bearing driver

90890-04058 ③

A Push down.

2. Lubricate:

- water pump seal ①



**Recommended lubricant****Lithium soap base grease**

3. Install:

- impeller
- plate

**10 Nm (1.0 m•kg, 7.2 ft•lb)****NOTE:**

- Align the slit in the impeller shaft with the slot of the plate.
- After installation, check that the impeller shaft rotates smoothly.

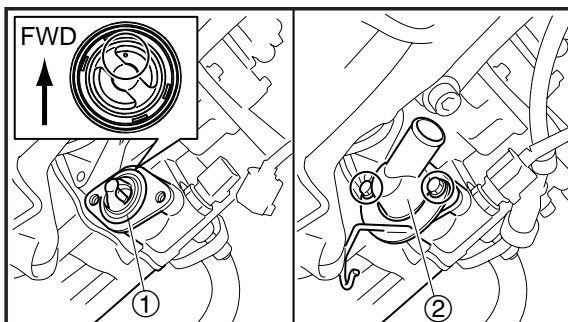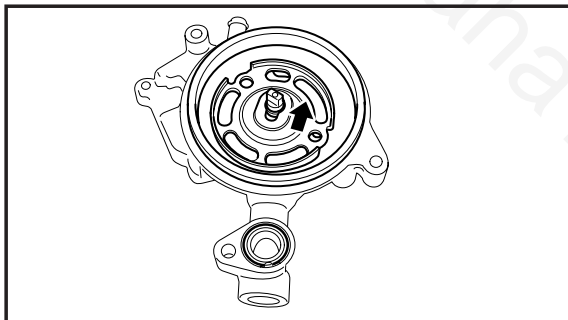

EAS00467


INSTALLING THE THERMOSTAT

1. Install:

- thermostat ①
- thermostat cover ②
- bracket

**10 Nm (1.0 m•kg, 7.2 ft•lb)****NOTE:**

Face the hole toward to the forward to install.

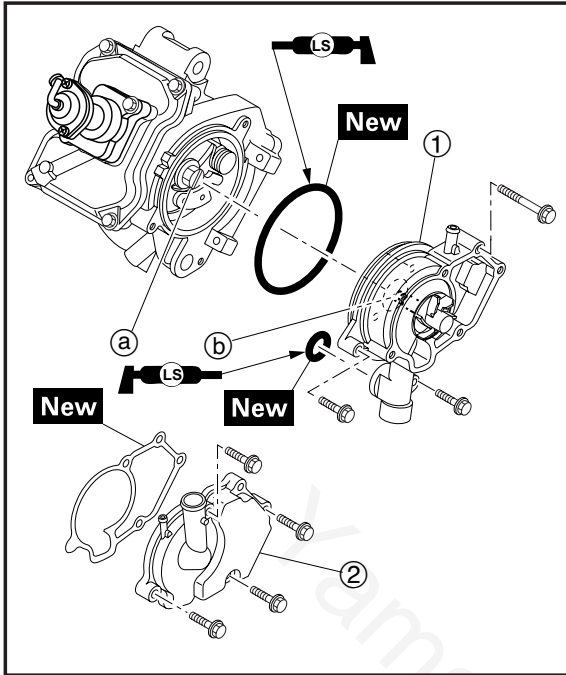

EAS00478

INSTALLING THE WATER PUMP

1. Install:

- O-rings **New**
- water pump housing ①

10 Nm (1.0 m•kg, 7.2 ft•lb)
⚠ WARNING

Always use a new O-ring.

NOTE:

- Align the projection (a) on the impeller shaft with the slit (b) on the camshaft.
- Lubricate the O-ring with a thin coat of lithium-soap-based grease.

2. Install:

- water pump housing cover ②

10 Nm (1.0 m•kg, 7.2 ft•lb)

- water pump inlet hose
- water pump outlet hose

EAS00456

INSTALLING THE RADIATOR

1. Install:

- radiator assembly

10 Nm (1.0 m•kg, 7.2 ft•lb)

2. Connect:


- fan motor coupler
- radiator outlet pipe
- radiator outlet hose
- radiator inlet hose

3. Fill:

- cooling system
(with the specified amount of the recommended coolant)
Refer to "CHANGING THE COOLANT" in chapter 3.

COOLING SYSTEM

COOL

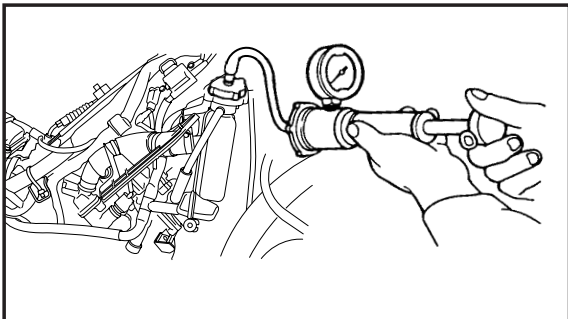

4. Check:

- cooling system

Leaks → Repair or replace any faulty part.



- Attach the radiator cap tester 1 to the radiator.



Radiator cap tester

90890-01325

Radiator cap tester adapter

90890-01352

- Apply 100 kPa (1.0 kg/cm² , 14.22 psi) of pressure.

- Measure the indicated pressure with the gauge.



5. Measure:

- radiator cap opening pressure

Below the specified pressure → Replace the radiator cap.

Refer to "CHECKING THE RADIATOR".

6. Install:

- inner panel
- seat assembly with battery box
- center panels
- front cowling
- side cowlings (left and right)

Refer to "REMOVING THE FRONT COWLINGS" in chapter 3.



CHAPTER 6 CARBURETOR

CARBURETOR	6-1
REMOVING THE CARBURETOR	6-2
DISASSEMBLING THE CARBURETOR	6-5
CHECKING THE CARBURETOR.....	6-6
ASSEMBLING THE CARBURETOR	6-9
INSTALLING THE CARBURETOR	6-10
CHECKING AND ADJUSTING THE THROTTLE POSITION SENSOR.....	6-11
CHECKING THE FUEL COCK OPERATION	6-13
 AIR INDUCTION SYSTEM.....	 6-14
AIR INJECTION	6-14
AIR CUT-OFF VALVE	6-14
AIR INDUCTION SYSTEM DIAGRAMS.....	6-15
REMOVING THE AIR INDUCTION SYSTEM.....	6-16
CHECKING THE AIR INDUCTION SYSTEM	6-16
INSTALLING THE AIR INDUCTION SYSTEM	6-16



YamahaT135.COM





EASF0043

CARBURETOR

CARBURETOR

- | | |
|------------------------------|-------------------------------|
| ① Coasting enricher assembly | ⑫ Float chamber rubber gasket |
| ② Carburetor top cover | ⑬ Float pivot pin |
| ③ Throttle valve spring | ⑭ Float chamber |
| ④ Needle set | ⑮ Fuel drain screw |
| ⑤ Throttle valve | ⑯ Carburetor overflow hose |
| ⑥ Throttle stop screw set | ⑰ Throttle position sensor |
| ⑦ Pilot air screw set | |
| ⑧ Needle jet | |
| ⑨ Main jet | |
| ⑩ Needle valve assembly | |
| ⑪ Float | |

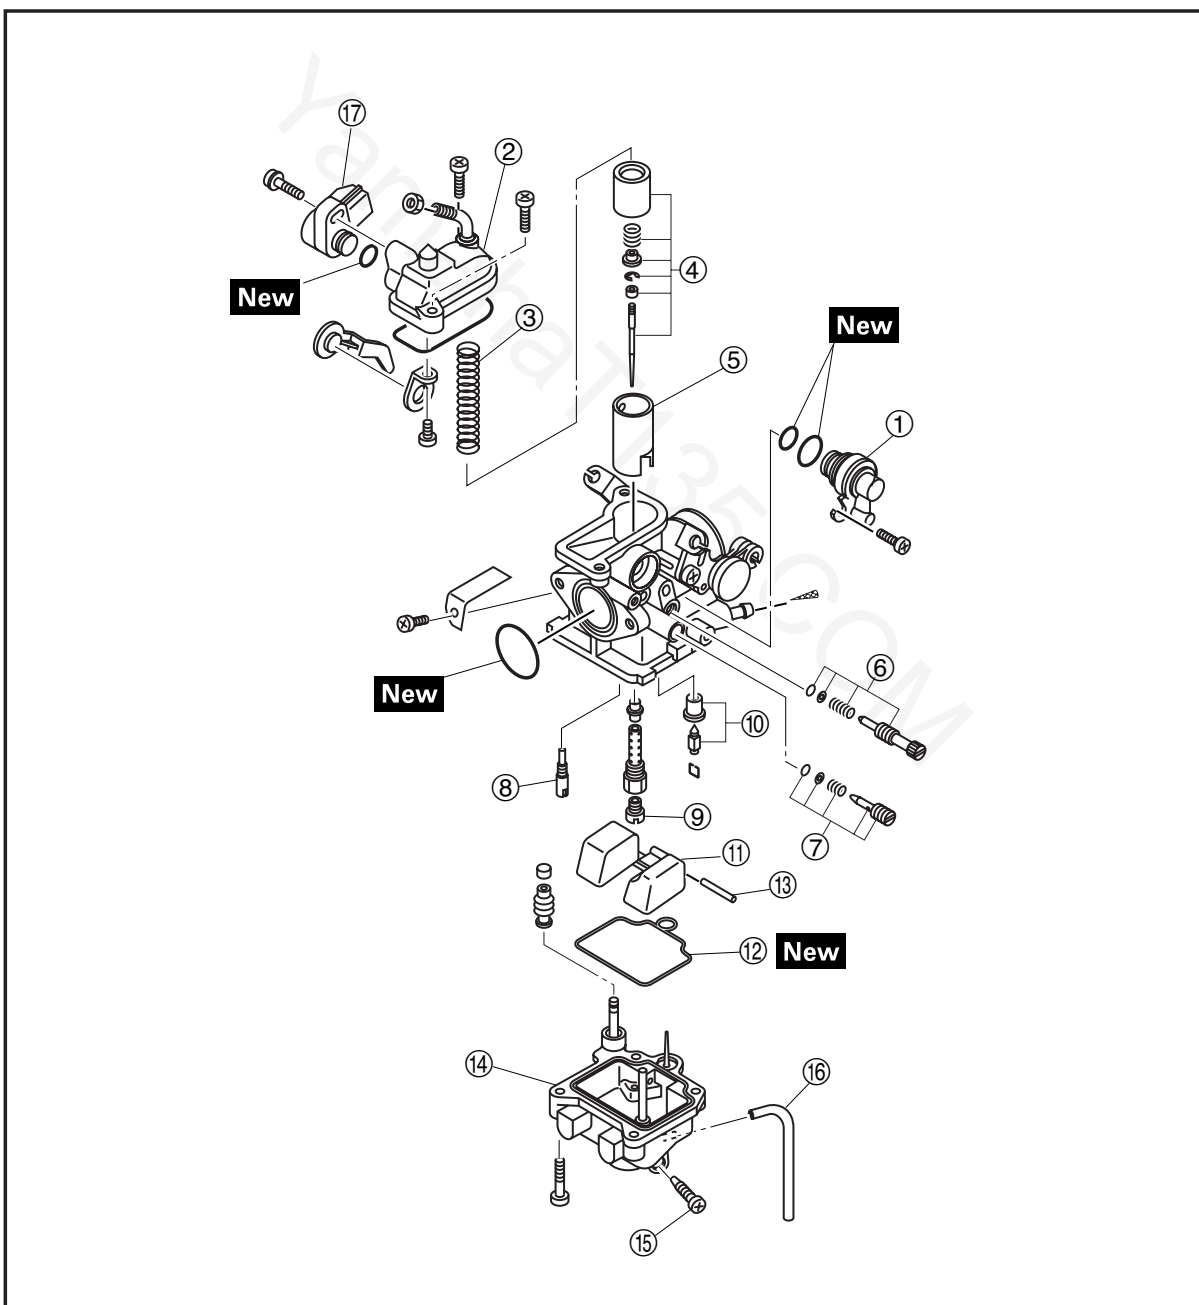


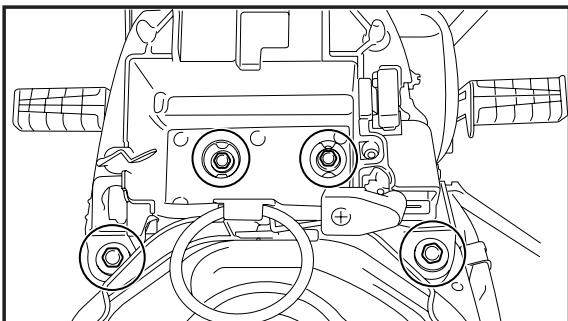

REMOVING THE CARBURETOR


⚠ WARNING

Gasoline is highly flammable.
Avoid spilling fuel on the hot engine.

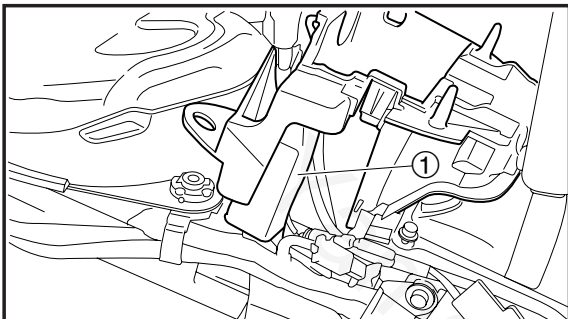


1. Remove:
 - battery
 - seat assembly with battery box

2. Remove:
 - starter relay ① (T135SE)

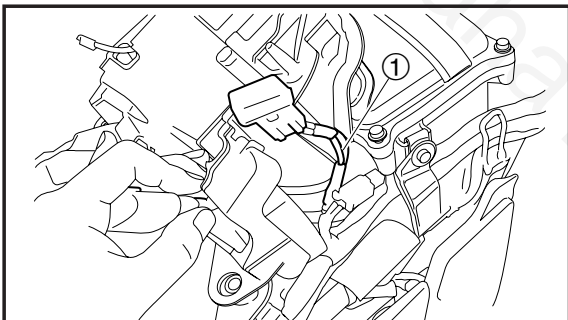


3. Remove:
 - positive lead ①
(from the battery box)

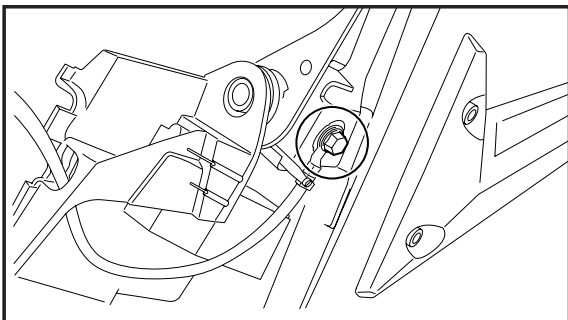


4. Remove:
 - negative lead
(from the frame)


5. Loosen:
 - rear cowl (left)
Refer to "REMOVING THE REAR COWL-
INGS" in chapter 3.

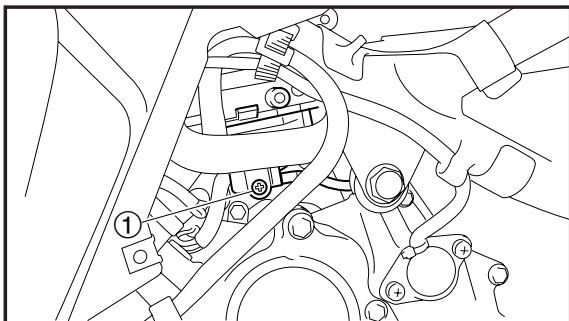


6. Loosen:
 - fuel drain screw ①
7. Drain:
 - fuel (from float chamber)

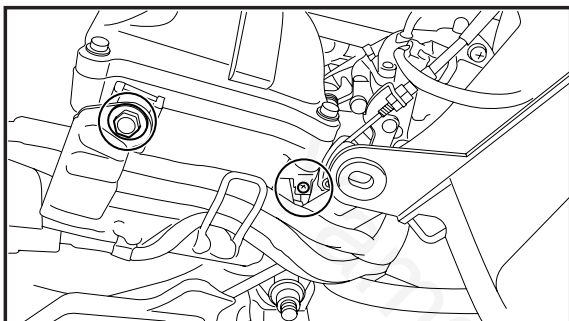


8. Loosen:
 - clamp screw
 - air filter assembly bolt

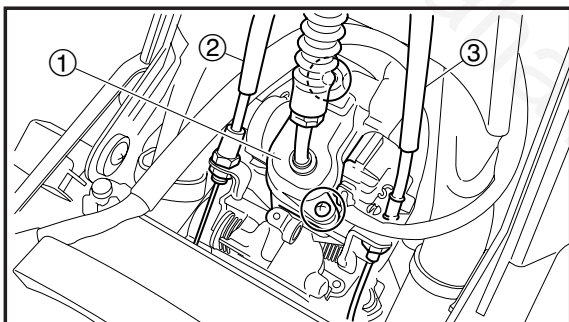

9. Remove:
 - carburetor top cover ①
 - o-ring
 - choke cable ②
 - accelerator pump cable ③

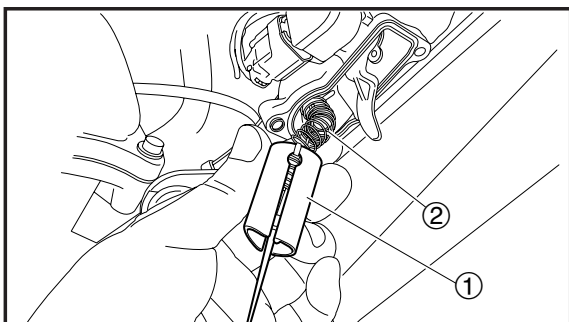


10. Remove:
 - throttle valve assembly ①
 - throttle valve spring ②

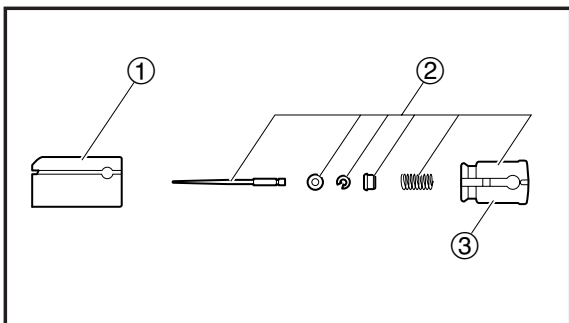

11. Remove:
 - throttle valve ①
 - jet needle set ②
 - holder ③

CAUTION:


Do not make a burr when remove the holder ③ from throttle valve ①.

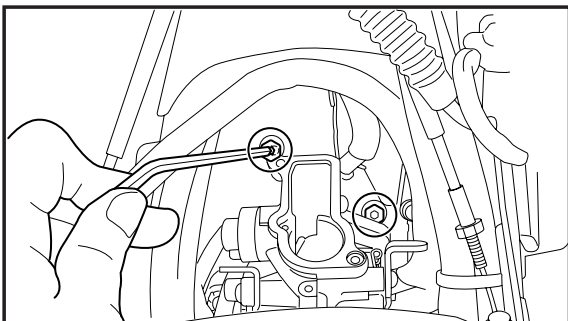

12. Remove:
- carburetor assembly


NOTE:

Use the ball point hexagon wrench to loosen the bolts.

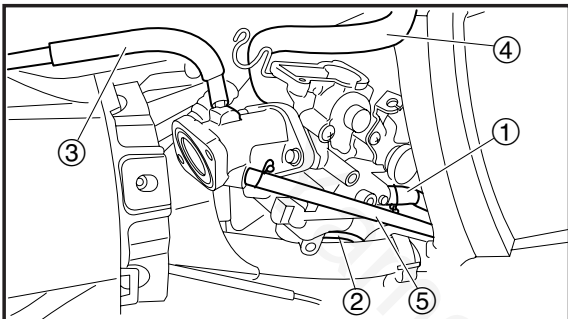

13. Disconnect:
- fuel hose ①
 - carburetor overflow hose ②
 - vacuum sensing hose ③
 - air vent hose ④
 - vacuum sensing hose ⑤

14. Remove:
- carburetor assembly

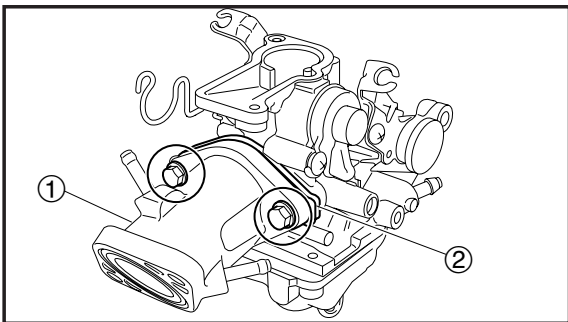

15. Remove:
- intake manifold bolt
 - intake manifold ①
 - joint ②

16. Move:
- air filter assembly




DISASSEMBLING THE CARBURETOR


NOTE:

The following parts can be cleaned and inspected without disassembly.


- Coasting enricher
- Throttle stop screw
- Pilot air screw

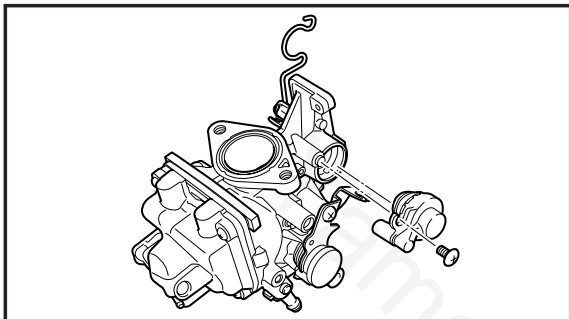


1. Remove:
 - coasting enricher assembly
 - o-ring

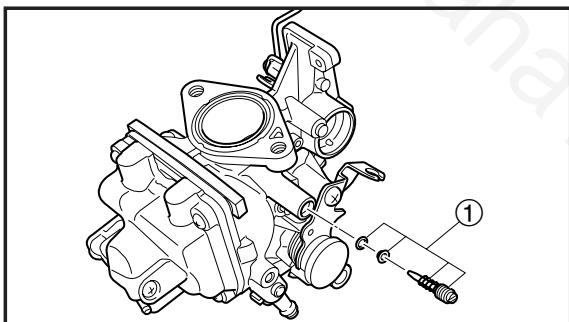


2. Remove:
 - pilot air screw set ①

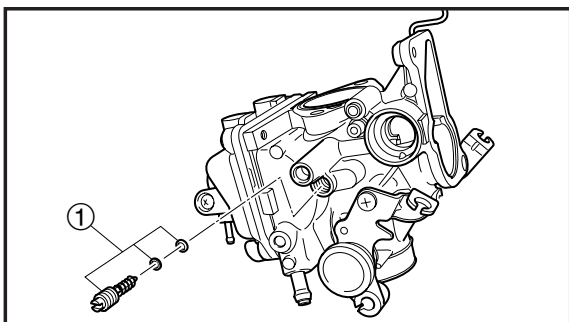


3. Remove:
 - throttle stop screw set ①

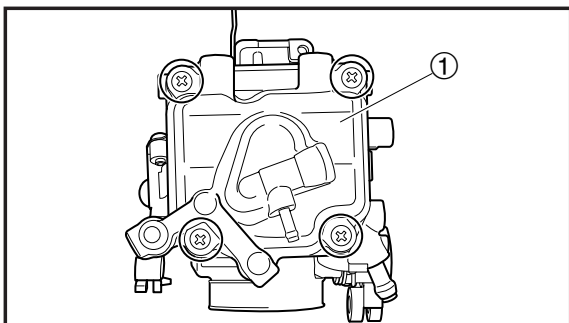


4. Remove:
 - float chamber ①
 - float chamber rubber gasket

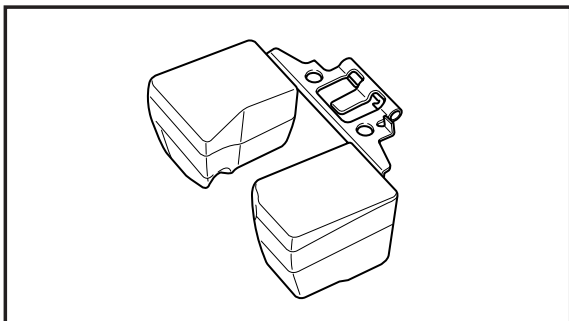


5. Check:
- float
- Damage → Replace.

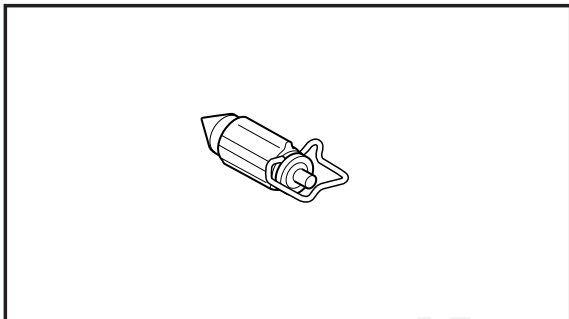


6. Check:
- needle valve
- Damage/wear → Replace.

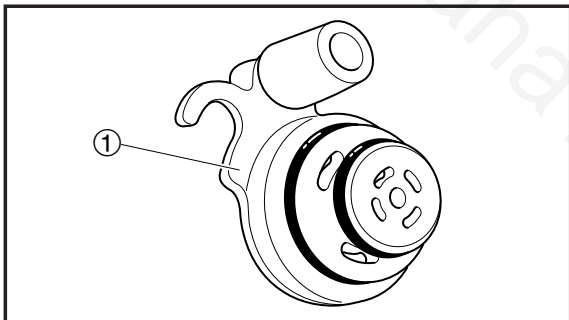


7. Check:
- coasting enricher assembly ①
- Cracks/damage → Replace.

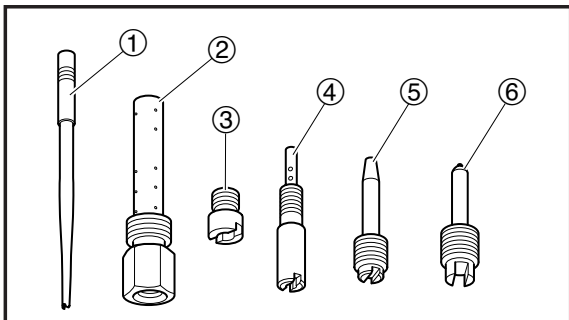

8. Check:
- jet needle ①
 - needle jet ②
 - main jet ③
 - pilot jet ④
 - pilot air screw ⑤
 - throttle stop screw ⑥
- Bends/damage/wear → Replace.
Obstruction → Clean.
Blow out the jets with compressed air.

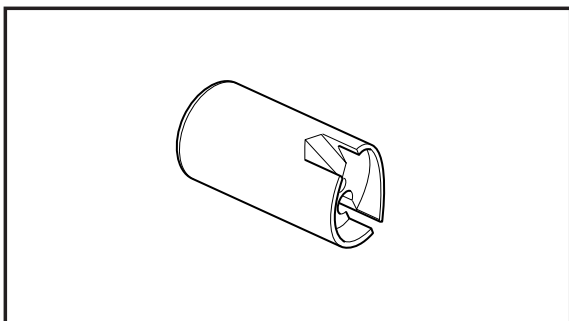

9. Check:
- throttle valve
- Damage/scratches/wear → Replace.

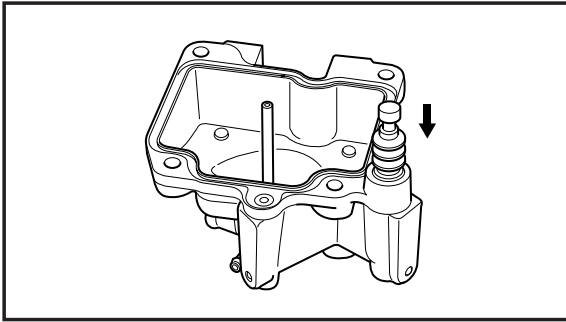

10. Check:

- accelerator pump
stuck or unsmooth operation → Replace
the float chamber.

11. Check:

- air vent hose
 - fuel hoses
- Cracks/damage/wear → Replace.
Obstructions → Clean.
Blow out the hoses with compressed air.




EAS00487

ASSEMBLING THE CARBURETOR

CAUTION:

- Before assembling the carburetor, wash all of the parts in a petroleum-based solvent.
- Always use a new gasket and new O-rings.

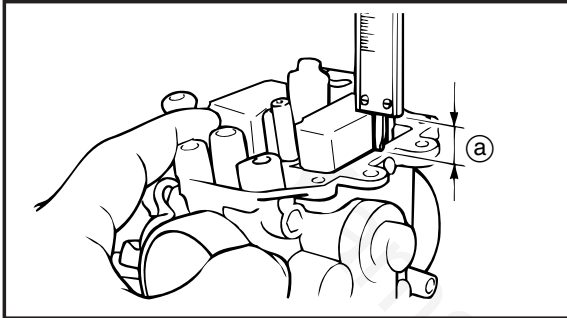

1. Measure:

- float height (a)


Out of specification → Adjust.

**Float height****9.2 mm (0.36 in)**

- Hold the carburetor upside down.
- Measure the distance from the mating surface of the float chamber (with the gasket removed) to the top of the float.

NOTE:

The float arm should rest on the needle valve without depressing it.

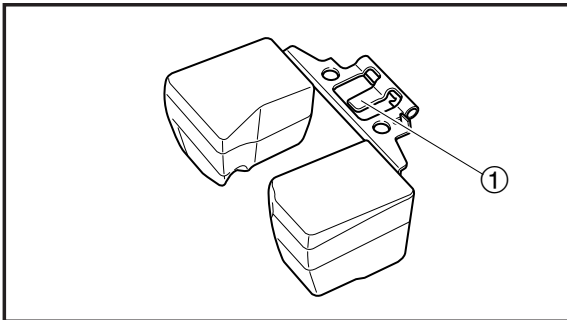


- If the float height is not within specification, check the needle valve seat and needle valve.
- If either the needle valve seat or needle valve is worn, replace them both.
- If both the needle valve seat and needle valve are fine, adjust the float height by bending the float tang ①.
- Check the float height again.



2. Install:


- coasting enricher assembly
- o-ring

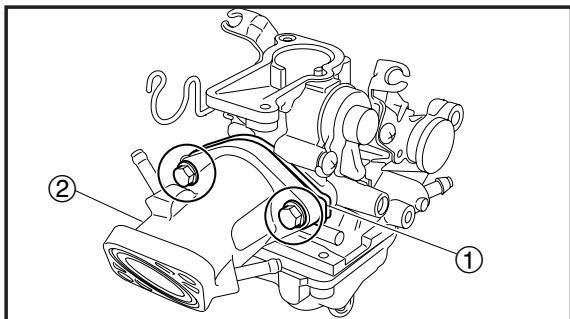


EAS00492

INSTALLING THE CARBURETOR

1. Install:
 - needle set
2. Install:
 - joint ①
 - intake manifold ②

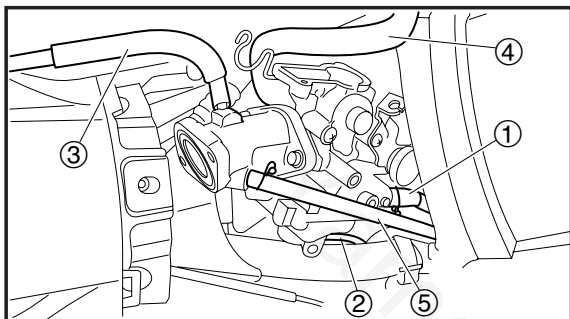10 Nm (1.0 m·kg, 7.2 ft·lb)


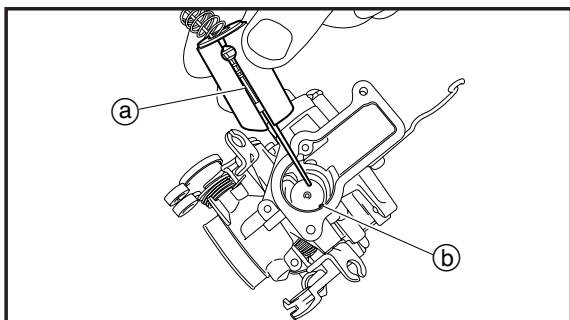
3. Connect:
 - fuel hose ①
 - carburetor overflow hose ②
 - vacuum sensing hose ③
 - air vent hose ④
 - vacuum sensing hose ⑤

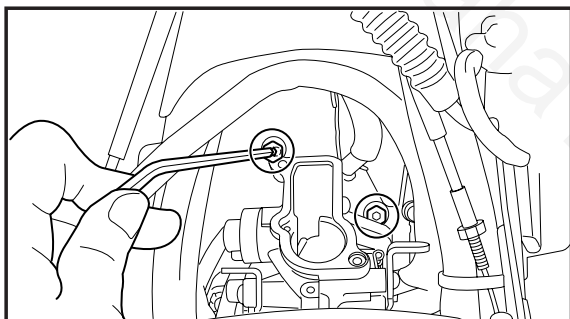

4. Install:
 - carburetor assembly
 - intake manifold bolts

10 Nm (1.0 m·kg, 7.2 ft·lb)


- clamp screw



5. Install:
 - throttle valve assembly

NOTE:

- Align the slit (a) of the throttle valve with the tab (b) of the carburetor body.
- Be careful to fall off the O-ring on the carburetor top cover when installing the throttle valve assembly.

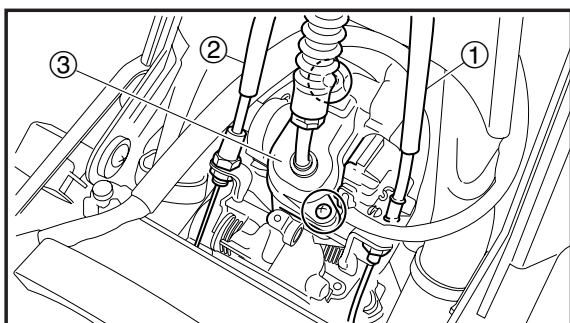

6. Install:
 - accelerator pump cable ①
 - choke cable ②
 - o-ring
 - carburetor top cover ③



7. Adjust:
- engine idling speed

Engine idling speed
1,300–1,500 r/min

Refer to “ADJUSTING THE ENGINE IDLING SPEED” in chapter 3.

8. Adjust:
- throttle cable free play

Throttle cable free play (at the flange of the throttle grip)
3–7 mm (0.12–0.18 in)

Refer to “ADJUSTING THE THROTTLE CABLE FREE PLAY” in chapter 3.

EAS00916

CHECKING AND ADJUSTING THE THROTTLE POSITION SENSOR

NOTE:

- Before adjusting the throttle position sensor, the engine idling speed should be properly adjusted.
- Be sure to adjust the angle when removed the throttle position sensor.

1. Check:
- throttle position sensor




- a. Connect the pocket tester ($\Omega \times 1k$) to the terminals of the throttle position sensor.

Positive (+) pocket tester probe →
blue terminal ①




Negative (-) pocket tester probe →
black/blue terminal ②

- b. Measure the throttle position sensor resistance.
- Out of specification → Replace the throttle position sensor.

Maximum throttle position sensor resistance
3–7 k Ω at 20 °C
(blue-black/blue)

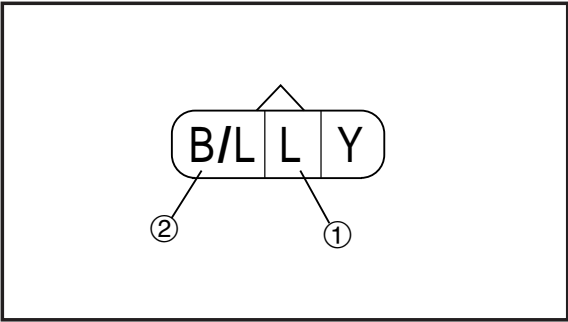

CARBURETOR

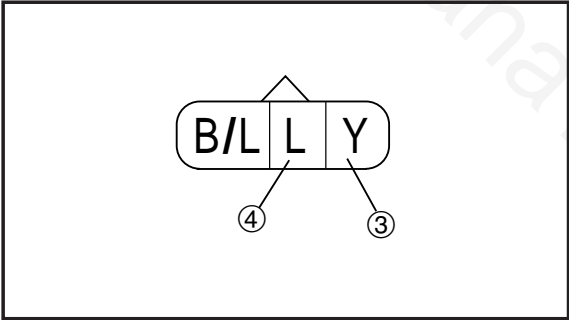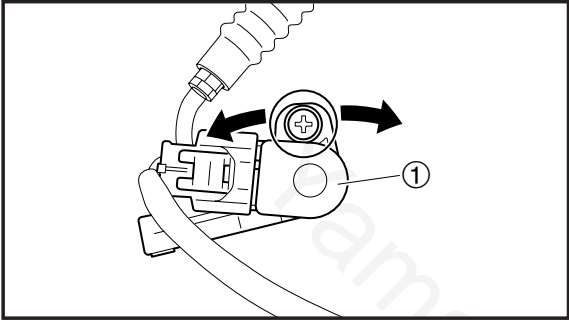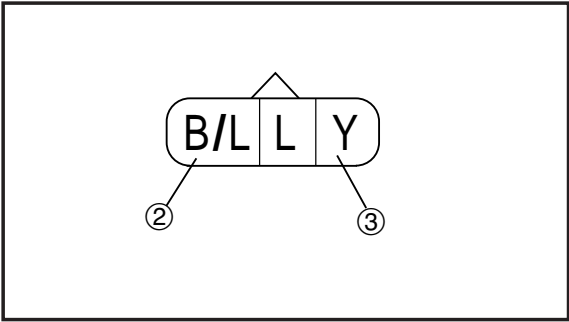

c. Connect the pocket tester (DC20V) to the terminals of the throttle position sensor.

Positive (+) pocket tester probe → yellow terminal ③

Negative (-) pocket tester probe → black/blue terminal ②



Throttle position sensor input voltage
5V at 20 °C
(yellow-black/blue)



2. Adjust:
•throttle position sensor angle



a. Connect the digital circuit tester to the throttle position sensor ①.

Positive (+) digital circuit tester probe → blue terminal ④

Negative (-) digital circuit tester probe → yellow terminal ③



Digital circuit tester
90890-03174



b. Measure the throttle position sensor voltage.
c. Adjust the throttle position sensor angle so that the voltage is within the specified range.



Throttle position sensor voltage
0.5 V (blue-yellow)

d. After adjusting the throttle position sensor angle, tighten the throttle position sensor screws.



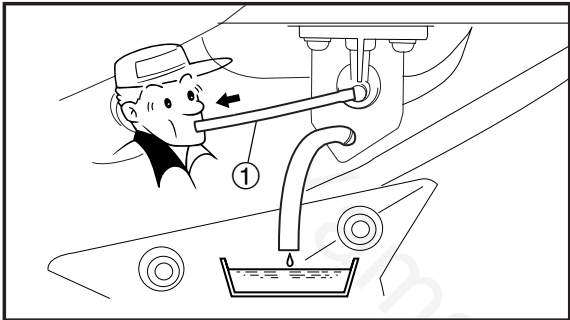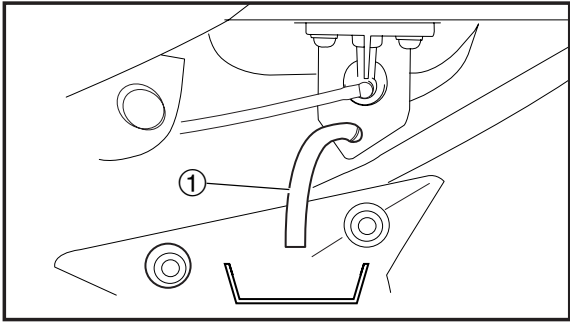

EAS00506

CHECKING THE FUEL COCK OPERATION

1. Remove:
 - rear cowling (left)
Refer to “REMOVING THE REAR COWLINGS” in chapter 3.
2. Place a container under the end of the fuel hose ①.

3. Check:
 - fuel cock operation



- a. Suck on the end of the vacuum hose ①.

Fuel flows.	Fuel cock is OK.
Fuel does not flow.	Replace the fuel cock.




4. Install:
 - rear cowling (left)
Refer to “INSTALLING THE REAR COWLINGS” in chapter 3.

**AIR INDUCTION SYSTEM****AIR INJECTION**

The air induction system burns unburned exhaust gases by injecting fresh air (secondary air) into the exhaust port, reducing the emission of hydrocarbons.

When there is negative pressure at the exhaust port, the reed valve opens, allowing secondary air to flow into the exhaust port. The required temperature for burning the unburned exhaust gases is approximately 600 to 700 °C.

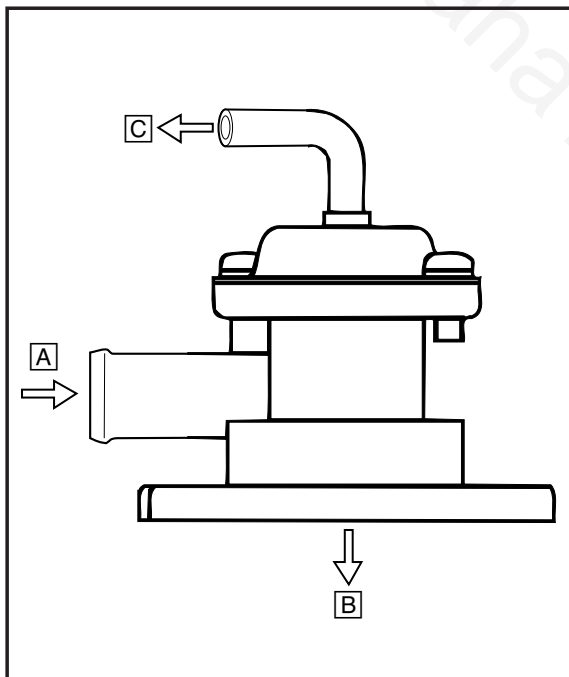
**AIR CUT-OFF VALVE**


The air cutoff valve is operated by the intake gas pressure through the piston valve diaphragm. Normally, the air cut-off valve is open to allow fresh air to flow into the exhaust port (A to B). During sudden deceleration (the throttle valve suddenly closes), negative pressure (C) is generated and the air cutoff valve is closed in order to prevent after-burning. Additionally, at high engine speeds and when the pressure decreases, the air cut-off valve automatically closes to guard against a loss of performance.

- A From the air filter
- B To the cylinder head
- C To the intake manifold

**AIR INDUCTION SYSTEM DIAGRAMS**

- ① Bend hose (air filter case to air cut-off valve)
- ② Air cut-off valve
- ③ AIS resonator
- ④ Vacuum sensing hose

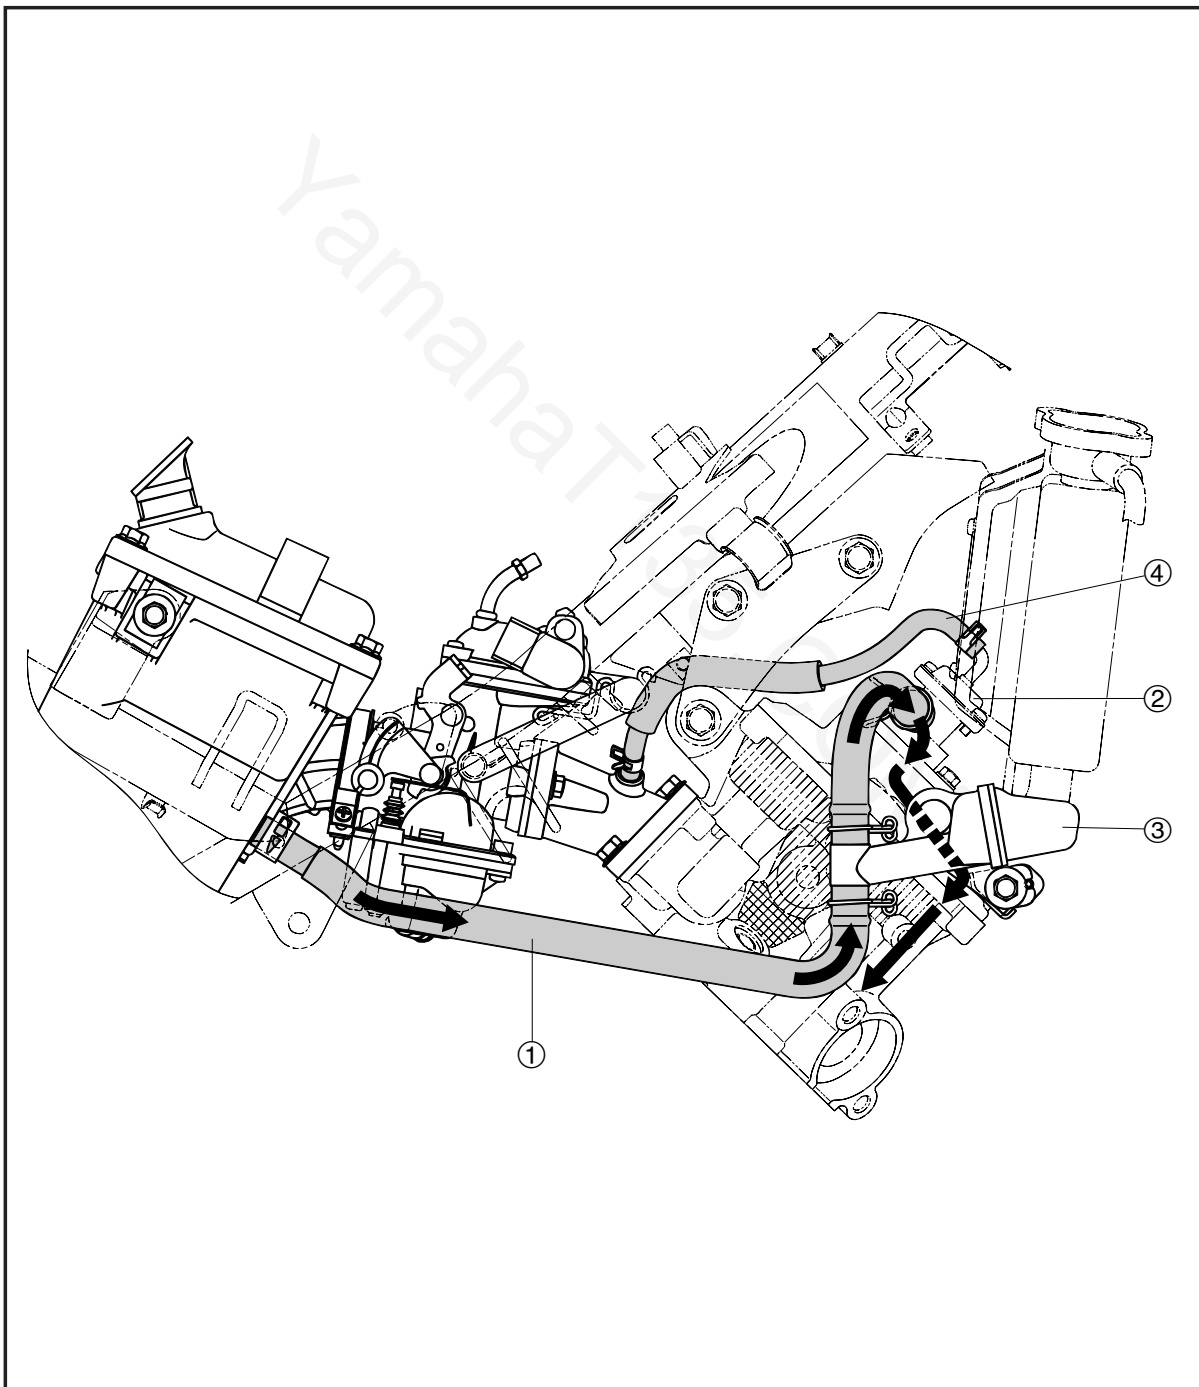


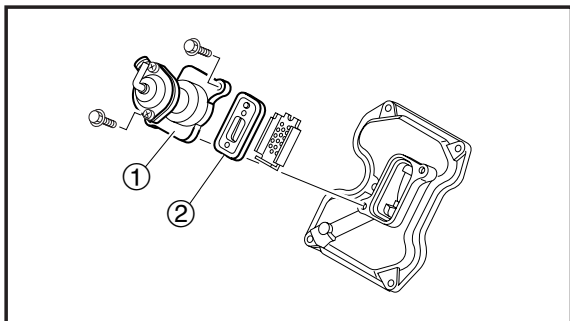


REMOVING THE AIR INDUCTION SYSTEM

1. Disconnect:
 - vacuum sensing hose
 - bend hose
2. Remove:
 - air cut cut-off valve assembly ①
 - reed valve assembly ②

CHECKING THE AIR INDUCTION SYSTEM

1. Check:
 - hoses
 - Loose connections → Connect properly.
 - Cracks/damage → Replace.
 - pipes
 - Cracks/damage → Replace.
2. Check:
 - reed valve
 - reed valve stopper
 - reed valve seat
 - Cracks/damage → Replace the reed valve.
3. Check:
 - air cut-off valve
 - Cracks/damage → Replace.

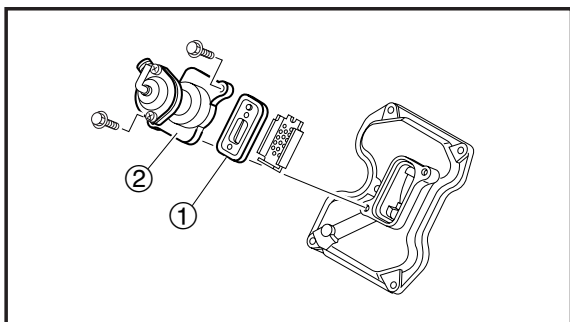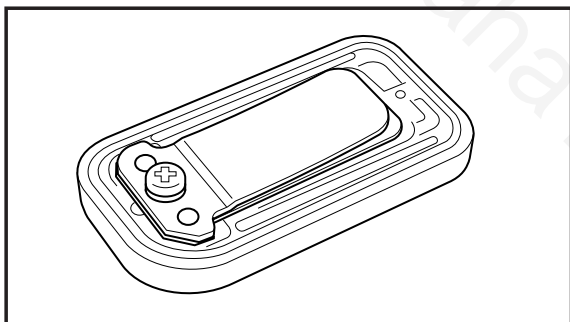

INSTALLING THE AIR INDUCTION SYSTEM

1. Install:
 - reed valve assembly ①
 - air cut cut-off valve assembly ②

10 Nm (1.0 m·kg, 7.2 ft·lb)

2. Connect:
 - vacuum sensing hose
 - bend hose



CHAPTER 7

CHASSIS

FRONT WHEEL AND BRAKE DISC	7-1
REMOVING THE FRONT WHEEL	7-2
CHECKING THE FRONT WHEEL	7-3
CHECKING THE BRAKE DISC	7-5
CHECKING THE SPEEDOMETER GEAR UNIT	7-6
INSTALLING THE FRONT WHEEL	7-7
 REAR WHEEL AND BRAKE	 7-8
REMOVING THE REAR WHEEL	7-9
DISASSEMBLING THE BRAKE SHOE PLATE	7-11
CHECKING THE REAR WHEEL	7-11
CHECKING THE REAR WHEEL DRIVE HUB	7-12
CHECKING THE BRAKE	7-13
ASSEMBLING THE BRAKE SHOE PLATE	7-14
INSTALLING THE REAR WHEEL	7-14
 FRONT BRAKE	 7-16
FRONT BRAKE CALIPER	7-16
REPLACING THE FRONT BRAKE PADS	7-17
DISASSEMBLING THE FRONT BRAKE CALIPER	7-19
CHECKING THE FRONT BRAKE CALIPER	7-21
ASSEMBLING AND INSTALLING THE FRONT BRAKE CALIPER	7-22
FRONT BRAKE MASTER CYLINDER	7-24
DISASSEMBLING THE FRONT BRAKE MASTER CYLINDER	7-25
CHECKING THE FRONT BRAKE MASTER CYLINDER	7-26
ASSEMBLING AND INSTALLING THE FRONT BRAKE MASTER CYLINDER	7-27
 FRONT FORK	 7-30
REMOVING THE FRONT FORK LEGS	7-31
DISASSEMBLING THE FRONT FORK LEGS	7-32
CHECKING THE FRONT FORK LEGS	7-34
ASSEMBLING THE FRONT FORK LEGS	7-35
INSTALLING THE FRONT FORK LEGS	7-37
 HANDLEBAR	 7-39
REMOVING THE HANDLEBAR	7-40
CHECKING THE HANDLEBAR	7-42
INSTALLING THE HANDLEBAR	7-42
 STEERING HEAD	 7-45
REMOVING THE LOWER BRACKET	7-46
CHECKING THE STEERING HEAD	7-46
INSTALLING THE STEERING HEAD	7-48



REAR SHOCK ABSORBER ASSEMBLY AND SWINGARM.....	7-49
REMOVING THE REAR SHOCK ABSORBER ASSEMBLIES AND SWINGARM	7-50
CHECKING THE REAR SHOCK ABSORBER ASSEMBLIES.....	7-52
CHECKING THE SWINGARM.....	7-53
INSTALLING THE REAR SHOCK ABSORBER ASSEMBLIES AND SWINGARM	7-53
 DRIVE CHAIN AND SPROCKETS	 7-55
REMOVING THE DRIVE CHAIN AND SPROCKETS	7-56
CHECKING THE DRIVE CHAIN.....	7-57
INSTALLING THE DRIVE CHAIN AND SPROCKETS	7-58

YamahaT135.COM




EASF0044

CHASSIS

FRONT WHEEL AND BRAKE DISC

- ① Front wheel axle
- ② Brake disc
- ③ Spacer
- ④ Oil seal
- ⑤ Bearing
- ⑥ Spacer
- ⑦ Speedometer gear unit

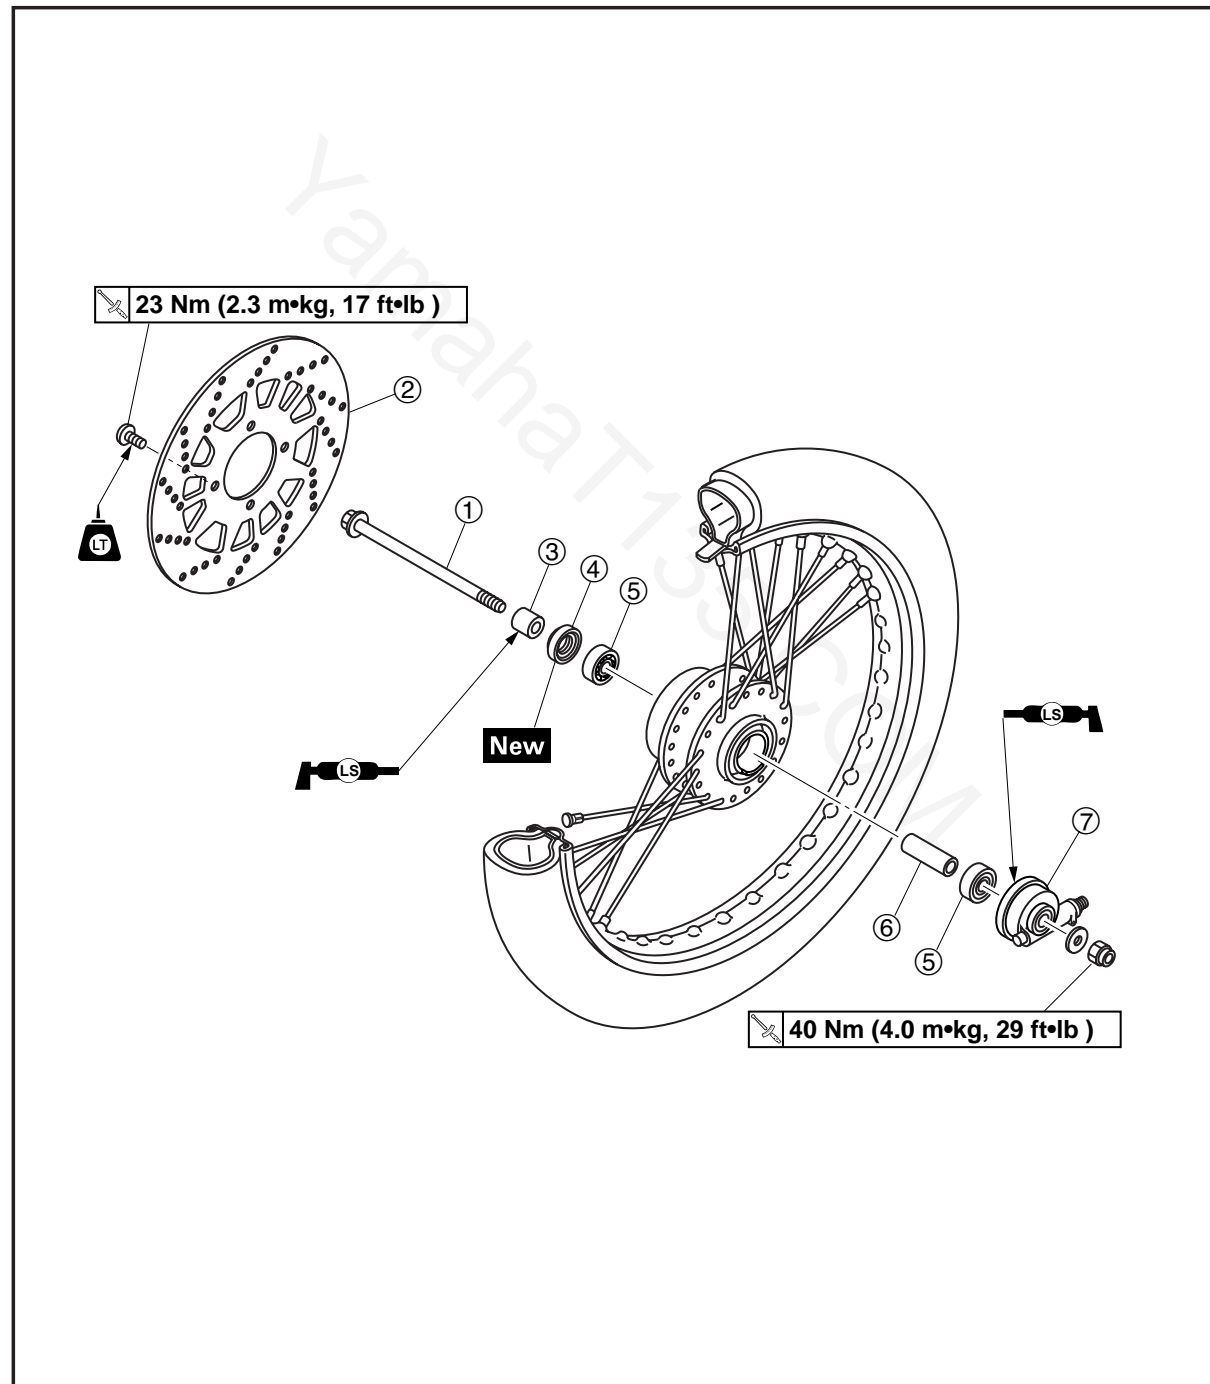




EAS00519

REMOVING THE FRONT WHEEL

1. Stand the vehicle on a level surface.

⚠ WARNING

Securely support the vehicle so that there is no danger of it falling over.

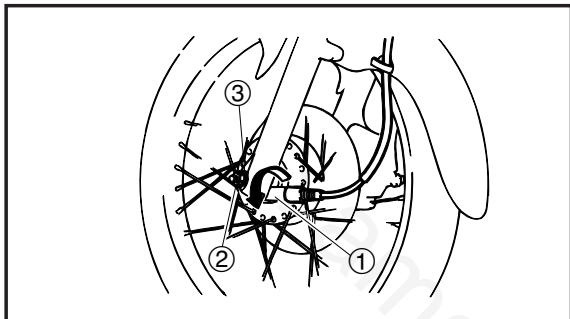


2. Remove:
 - speedometer cable ①
 - axle nut ②
 - washer ③


3. Elevate:
 - front wheel

NOTE:


Place the vehicle on a suitable stand so that the front wheel is elevated.

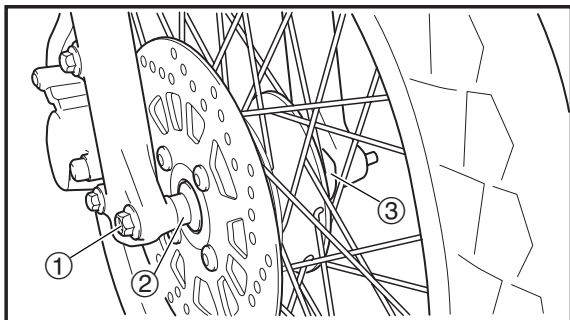

4. Remove:
 - front wheel axle ①
 - spacer ②
 - speedometer gear unit ③
 - front wheel

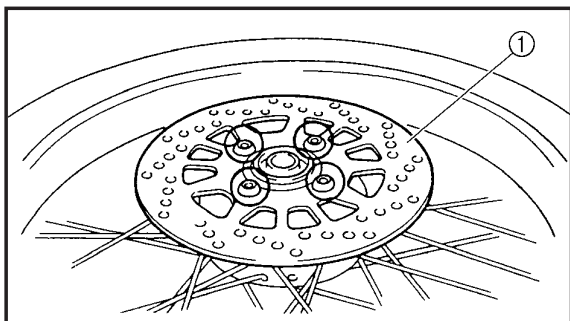

5. Remove:
 - brake disc ①

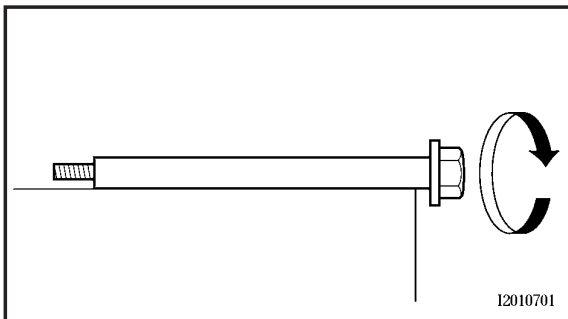

EAS00526

CHECKING THE FRONT WHEEL

1. Check:

- wheel axle

Roll the wheel axle on a flat surface.

Bends → Replace.

⚠ WARNING

Do not attempt to straighten a bent wheel axle.

2. Check:

- tire

Damage/wear → Replace.

Refer to "CHECKING THE TIRES" in chapter 3.

3. Check:


- spokes

Bends/damage → Replace.

Loose → Tighten.

Tap the spokes with a screwdriver.

Refer to "CHECKING AND TIGHTENING THE SPOKES" in chapter 3.

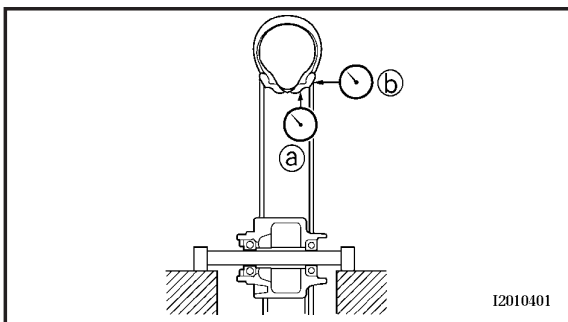

4. Measure:

- front wheel radial runout (a)

- front wheel lateral runout (b)

Over the specified limits → Replace.




Front wheel radial runout limit

1.0 mm (0.04 in)

Front wheel lateral runout limit


0.5 mm (0.02 in)

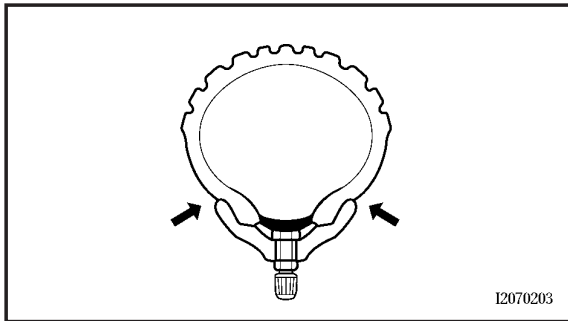


5. Check:
- spacers
- Damage/wear → Replace.

⚠ WARNING

- After mounting a new tire, ride conservatively for a while to become accustomed to the “feel” of the new tire and to allow the tire to seat itself properly in the rim. Failure to do so could lead to an accident with possible injury to the rider or damage to the vehicle.
- After a tire has been repaired or replaced, be sure to tighten the tire air valve stem locknut ① properly.

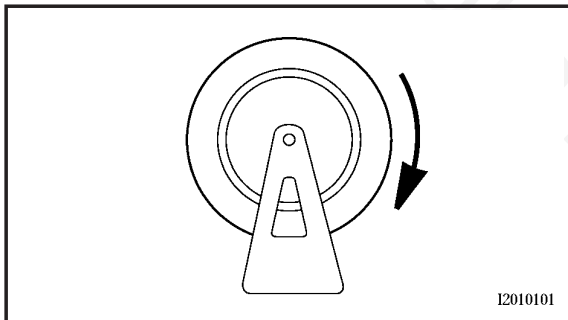

6. Check:
- wheel bearings
- Front wheel turns roughly or is loose → Replace the wheel bearings.
- oil seals
- Damage/wear → Replace.

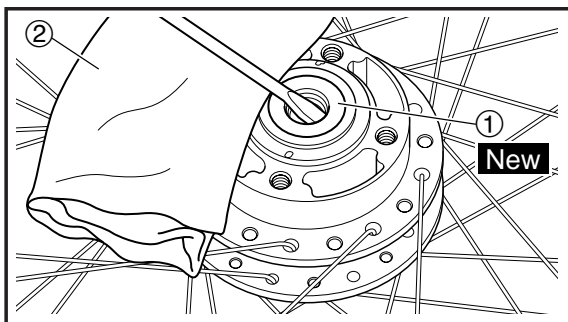


7. Replace:
- wheel bearings **New**
 - oil seals **New**


- a. Clean the outside of the front wheel hub.
- b. Remove the oil seals ① with a flat-head screwdriver.

NOTE:

To prevent damaging the wheel, place a rag ② between the screwdriver and the wheel surface.

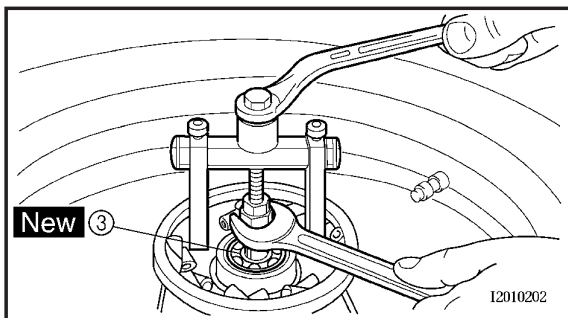

- c. Remove the wheel bearings ③ with a general bearing puller.

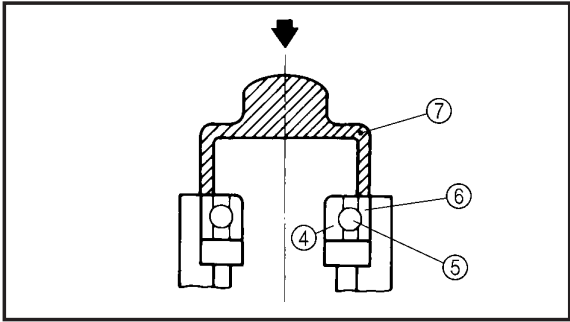


d. Install the new wheel bearings and oil seals in the reverse order of disassembly.

CAUTION:

Do not contact the wheel bearing inner race ④ or balls ⑤. Contact should be made only with the outer race ⑥.

NOTE:

Use a socket ⑦ that matches the diameter of the wheel bearing outer race and oil seal.

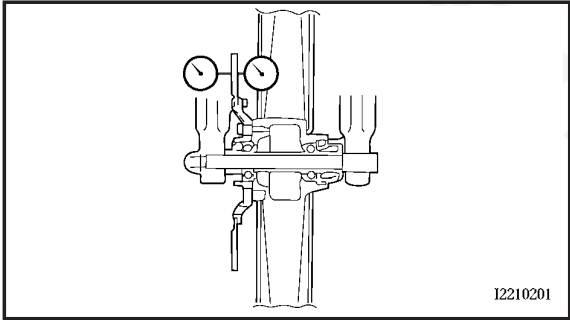

EAS00527

CHECKING THE BRAKE DISC

1. Check:
 - brake discDamage/galling → Replace.
2. Measure:
 - brake disc deflectionOut of specification → Correct the brake disc deflection or replace the brake disc.



Brake disc deflection limit (maximum)
0.15 mm (0.0059 in)





- a. Place the vehicle on a suitable stand so that the front wheel is elevated.
- b. Before measuring the front brake disc deflection, turn the handlebar to the left or right to ensure that the front wheel is stationary.
- c. Remove the brake caliper.
- d. Hold the dial gauge at a right angle against the brake disc surface.
- e. Measure the deflection 5–10 mm below the edge of the brake disc.



FRONT WHEEL AND BRAKE DISC

CHAS

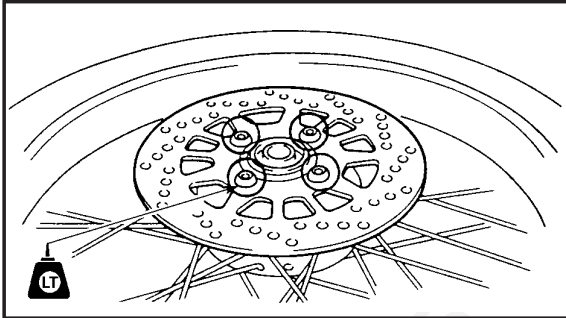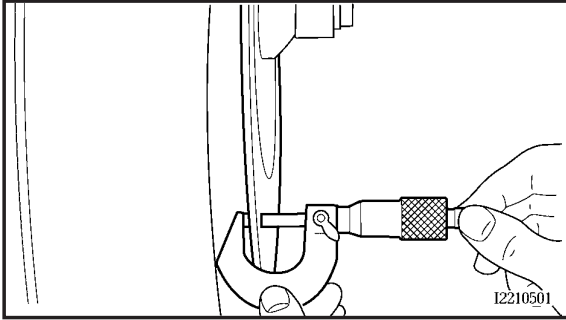

3. Measure:

- brake disc thickness

Measure the brake disc thickness at a few different locations.

Out of specification → Replace.



Brake disc thickness limit (minimum)

3.0 mm (0.12 in)

4. Adjust:

- brake disc deflection



- Remove the brake disc.
- Rotate the brake disc by one bolt hole.
- Install the brake disc.

NOTE:

Tighten the brake disc bolts in stages and in a crisscross pattern.



Brake disc bolt

23 Nm (2.3 m·kg, 17 ft·lb)

LOCTITE®

- Measure the brake disc deflection.
- If out of specification, repeat the adjustment steps until the brake disc deflection is within specification.
- If the brake disc deflection cannot be brought within specification, replace the brake disc.




EAS00535

CHECKING THE SPEEDOMETER GEAR UNIT

1. Check:

- speedometer clutch

Bends/damage/wear → Replace.




EAS00542

INSTALLING THE FRONT WHEEL

1. Lubricate:

- wheel axle
- wheel bearings
- oil seal lips
- speedometer gear unit

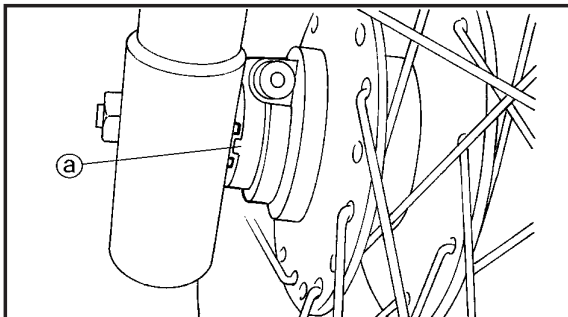**Recommended lubricant****Lithium-soap-based grease**

2. Install:

- brake disc
- front wheel

Refer to "CHECKING THE BRAKE DISC".

NOTE:

Make sure the projection (a) on the speedometer gear unit fits between the projections on the outer tube.

3. Tighten:


- wheel axle nut **40 Nm (4.0 m·kg, 29 ft·lb)**

4. Connect:

- speedometer cable ①

NOTE:

Be sure that slit (a) on the speedometer cable meshes with the projection (b) on the speedometer gear unit ②.

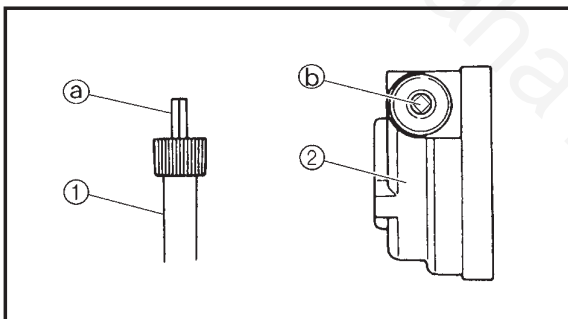**⚠ WARNING**

Make sure the brake cable is routed properly.

CAUTION:


Before tightening the wheel axle nut, push down hard on the handlebar several times and check if the front fork rebounds smoothly.



EASF0049

REAR WHEEL AND BRAKE

- | | |
|------------------------------|-------------------------------|
| ① Collar | ⑩ Cotter pin |
| ② Brake camshaft lever | ⑪ Brake torque rod |
| ③ Pin | ⑫ Rear wheel drive hub damper |
| ④ Drive chain puller (right) | ⑬ Rear wheel drive hub |
| ⑤ Brake shoe wear indicator | ⑭ Drive chain puller (left) |
| ⑥ Brake shoe plate | ⑮ Rear wheel axle |
| ⑦ Brake camshaft | ⑯ Brake rod |
| ⑧ Brake shoe | |
| ⑨ Rear wheel | |

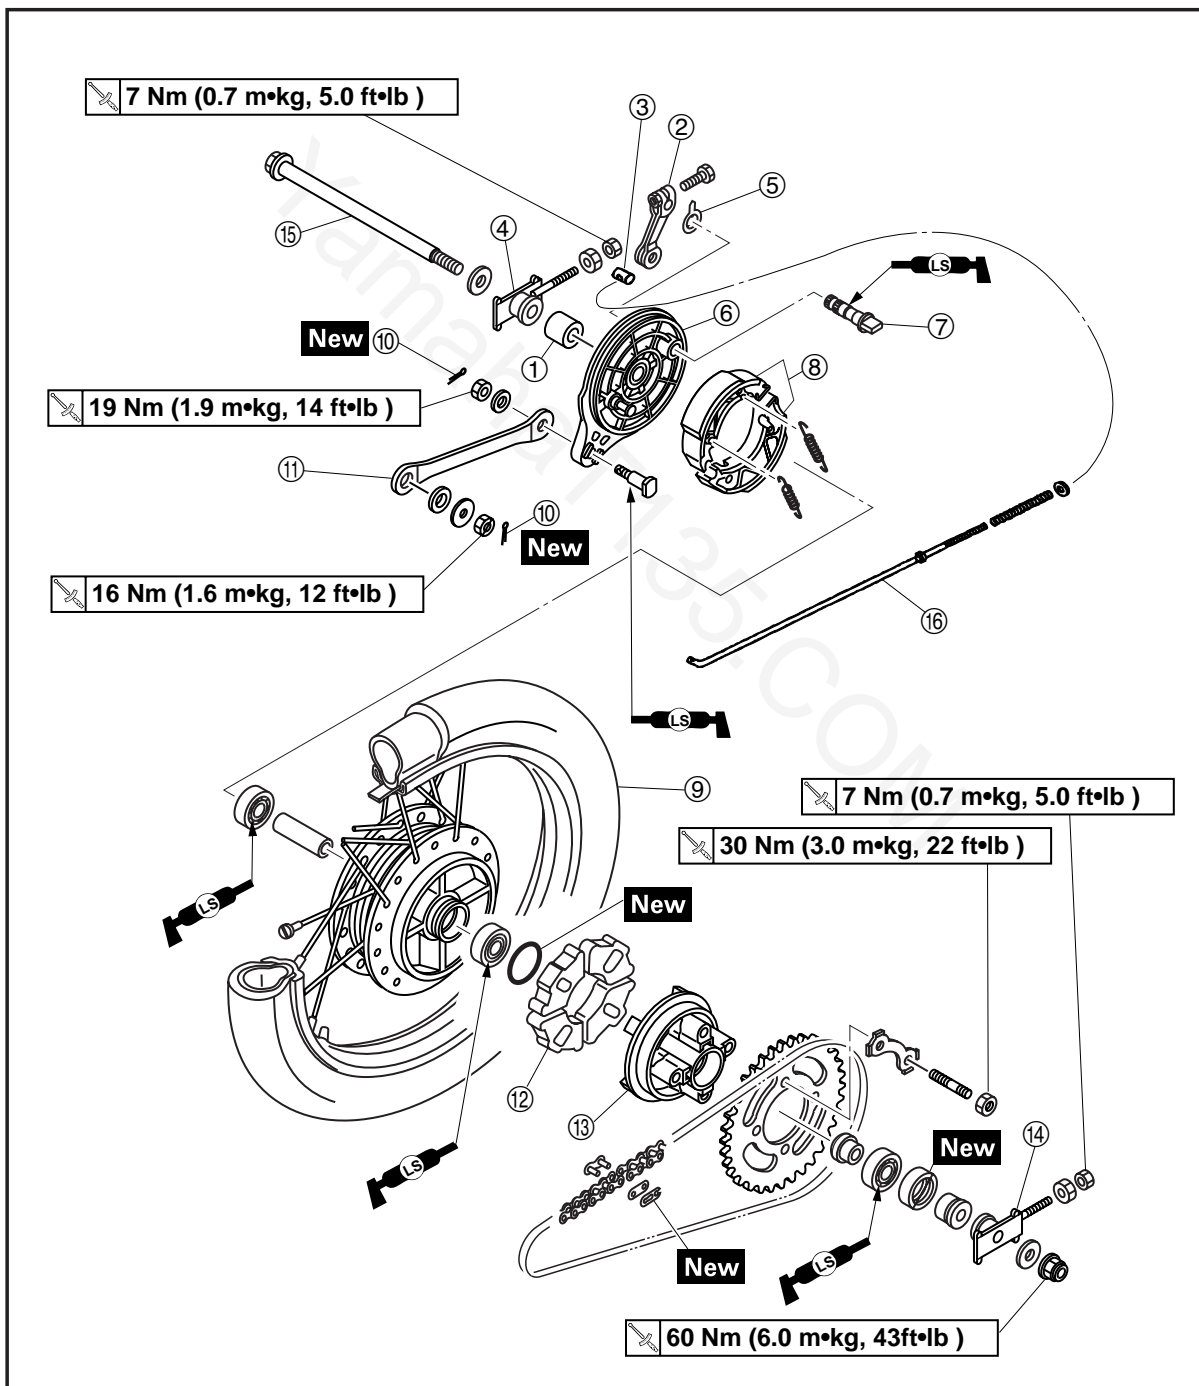



EAS00563

REMOVING THE REAR WHEEL


1. Stand the vehicle on a level surface.

⚠ WARNING

Securely support the vehicle so that there is no danger of it falling over.

NOTE:


Place the vehicle on a suitable stand so that the rear wheel is elevated.

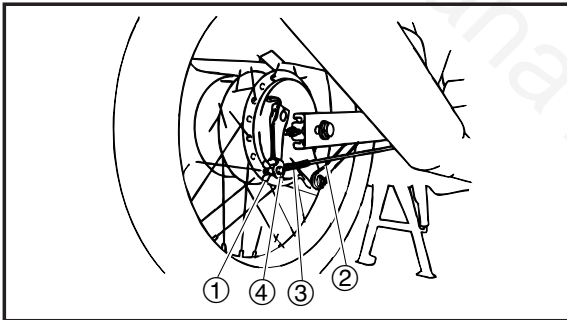


2. Remove:
 - brake rod adjusting nut ①
 - brake rod ②
 - compression spring ③
 - washer
 - pin ④

NOTE:


Press down on the brake pedal to remove the pin from the brake rod.

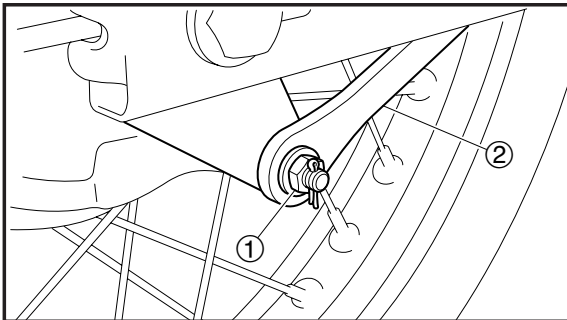


3. Remove:
 - cotter pin
 - brake torque rod nut ①
 - washer
 - brake torque rod bolt
 - brake torque rod ②

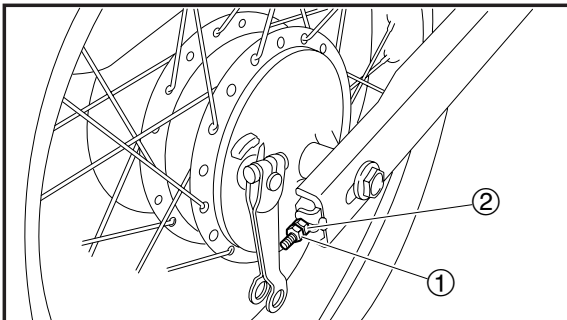

4. Loosen:
 - chain puller locknuts (left and right) ①
 - chain puller adjusting nuts (left and right) ②

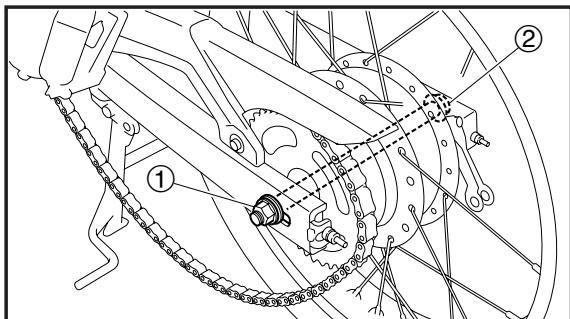


5. Remove:
- rear wheel axle nut ①
 - washer
 - rear wheel axle ②
 - washer
 - collar

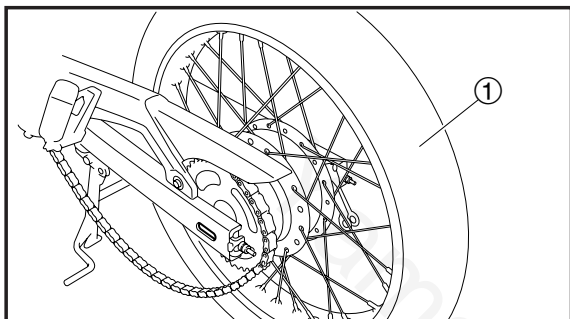


6. Remove:
- rear wheel assembly ①

NOTE:


Push the rear wheel forward and remove the drive chain from the driven sprocket.

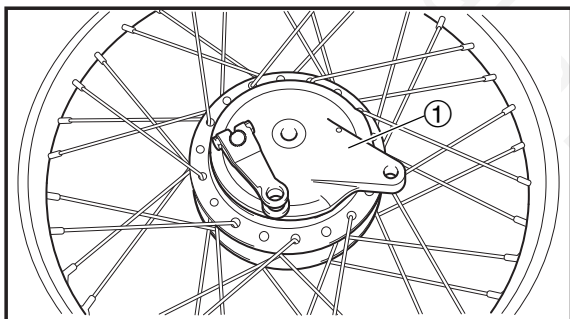


7. Remove:
- brake shoe plate assembly ①

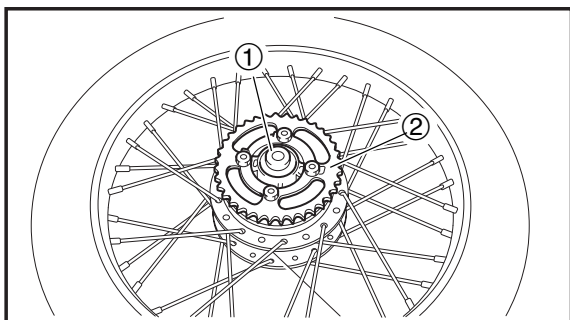

8. Remove:
- collar ①
 - rear wheel drive hub assembly ②

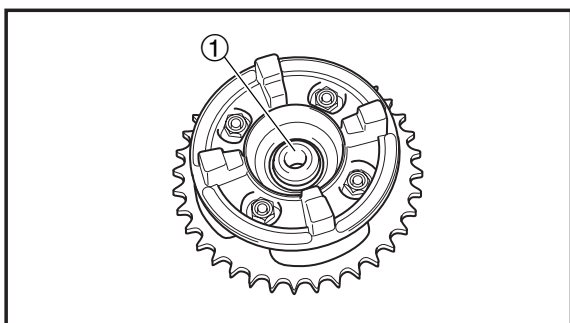


9. Remove:
- spacer ①

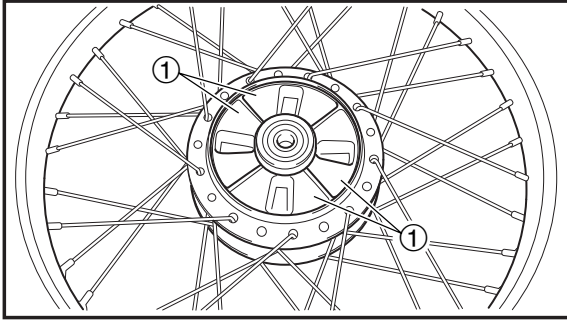

10. Remove:


- O-ring
- rear wheel drive hub dampers ①

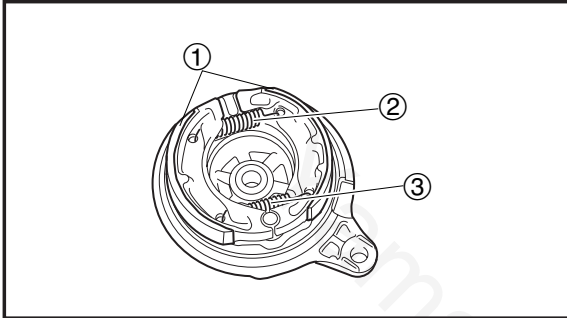

DISASSEMBLING THE BRAKE SHOE PLATE

1. Remove:

- brake shoes ①
- brake shoe springs ② (48 mm, 1.89 in)
- brake shoe springs ③ (52 mm, 2.01 in)

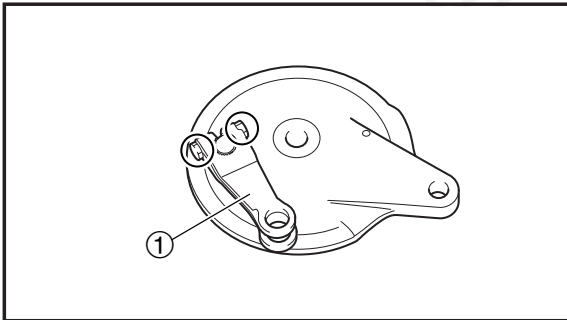

2. Remove:

- brake camshaft lever nut
- brake camshaft lever bolt
- brake camshaft lever ①
- brake shoe wear indicator
- brake camshaft

NOTE:

When removing the brake camshaft lever, mark the position on the brake camshaft lever where it is aligned with the punch mark in the brake camshaft.

EAS00566

CHECKING THE REAR WHEEL

1. Check:

- wheel axle
- rear wheel
- wheel bearings
- oil seals

Refer to "FRONT WHEEL AND BRAKE DISC".

2. Check:

- tire



Damage/wear → Replace.

Refer to “CHECKING THE TIRES” in chapter 3.

3. Measure:

- radial wheel runout
- lateral wheel runout

Refer to “FRONT WHEEL AND BRAKE DISC”.

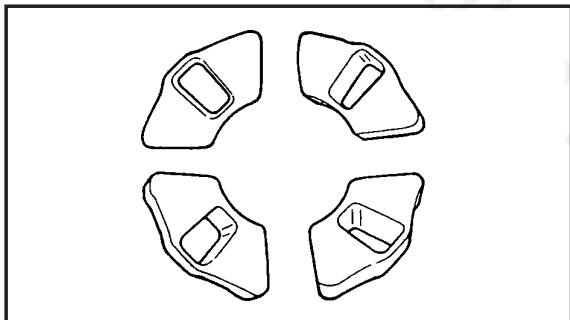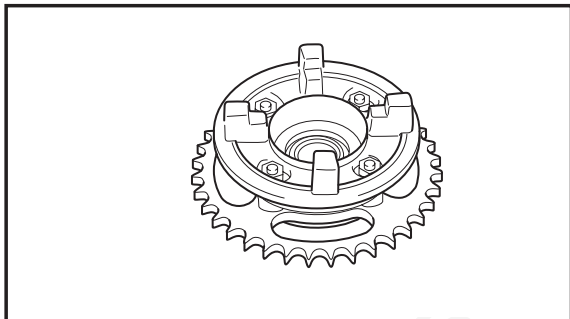

EAS00567


CHECKING THE REAR WHEEL DRIVE HUB

1. Check:


- rear wheel drive hub

Cracks/damage → Replace.

- rear wheel drive hub dampers
- Damage/wear → Replace.

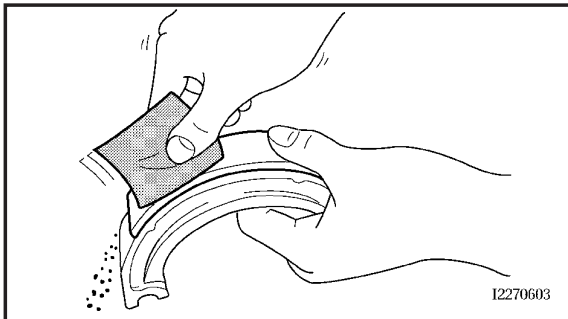

I2270603

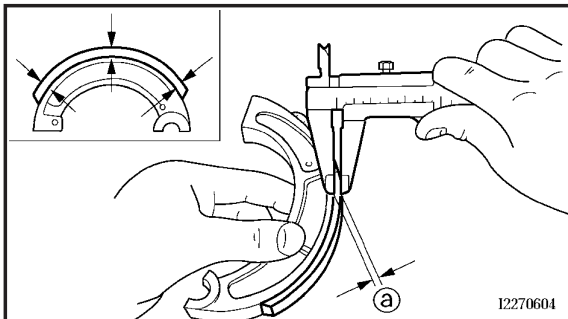

I2270604

EAS00539

CHECKING THE BRAKE

The following procedure applies to all of the brake shoes.

1. Check:
 - brake shoe lining
 - Glazed areas → Repair.
 - Sand the glazed areas with course sandpaper.

NOTE:

After sanding the glazed areas, clean the brake shoe with a cloth.

2. Measure:
 - brake shoe lining thickness (a)
 - Out of specification → Replace.





**Brake shoe lining thickness limit
(minimum)**
2.0 mm (0.08 in)

⚠ WARNING

Do not allow oil or grease to contact the brake shoes.

NOTE:

Replace the brake shoes as a set, if either is worn to the wear limit.

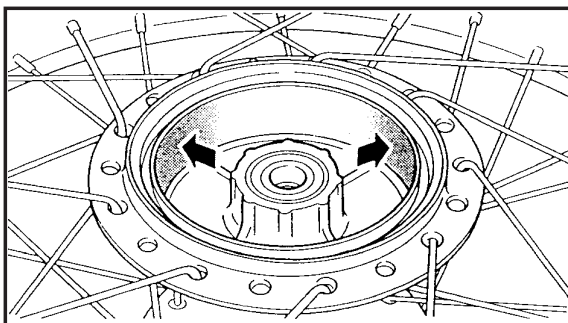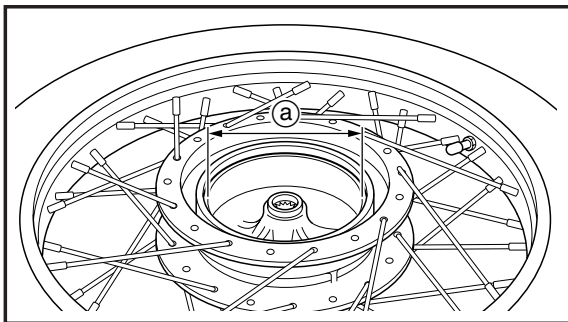


3. Measure:
 - brake drum inside diameter (a)
 - Out of specification → Replace the wheel.



**Brake drum inside diameter limit
(maximum)**
131 mm (5.16 in)

4. Check:
 - brake drum inner surface
 - Oil deposits → Clean.
 - Remove the oil with a rag soaked in lacquer thinner or solvent.
 - Scratches → Repair.
 - Lightly and evenly polish the scratches with an emery cloth.
5. Check:
 - brake camshaft
 - Damage/wear → Replace.

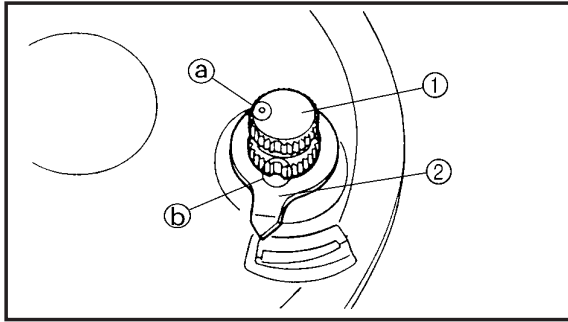

EAS00570

ASSEMBLING THE BRAKE SHOE PLATE

1. Install:

- brake camshaft ①
- brake shoe wear indicator ②
- brake camshaft lever

7 Nm (0.7 m·kg, 5.0 ft·lb)



- Install the brake camshaft so its punch mark (a) is positioned as shown.
- Align the projection (b) on the brake shoe wear indicator with the notch in the brake camshaft.
- Align the punch mark in the brake camshaft with the mark on the brake camshaft lever.
- Check that the brake shoes are properly positioned.



EAS00571

INSTALLING THE REAR WHEEL

1. Lubricate:

- spacer
- collar
- wheel axle ①
- wheel bearings
- rear brake camshaft
- brake torque rod bolt
- oil seal lips

Recommended lubricant
Lithium-soap-based grease

2. Install:

- brake torque rod (to brake shoe plate)

19 Nm (1.9 m·kg, 14 ft·lb)


- washer
- cotter pin **New**

3. Install:

- pin
- washer
- compression spring
- brake rod
- brake rod adjusting nut

NOTE:

Press down on the brake pedal to install the brake rod.

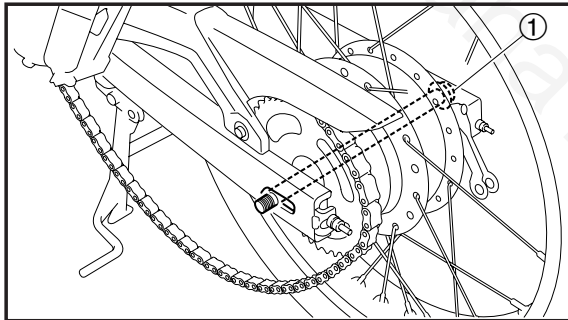



4. Adjust:

- drive chain slack



Drive chain slack

25–35 mm (0.98–1.38 in)

Refer to “ADJUSTING THE DRIVE CHAIN SLACK” in chapter 3.

5. Tighten:

- wheel axle nut



60 Nm (6.0 m·kg, 43 ft·lb)

CAUTION:

Do not loosen the wheel axle nut after tightening it to the specified torque.




FRONT BRAKE

EASF0052

FRONT BRAKE CALIPER

- ① Brake pad retaining pin
- ② Air bleed screw
- ③ Brake caliper
- ④ Brake caliper bracket
- ⑤ Lower brake caliper retaining bolt
- ⑥ Brake caliper piston
- ⑦ Brake caliper dust seal
- ⑧ Brake caliper piston seal
- ⑨ Brake pad
- ⑩ Brake pad spring

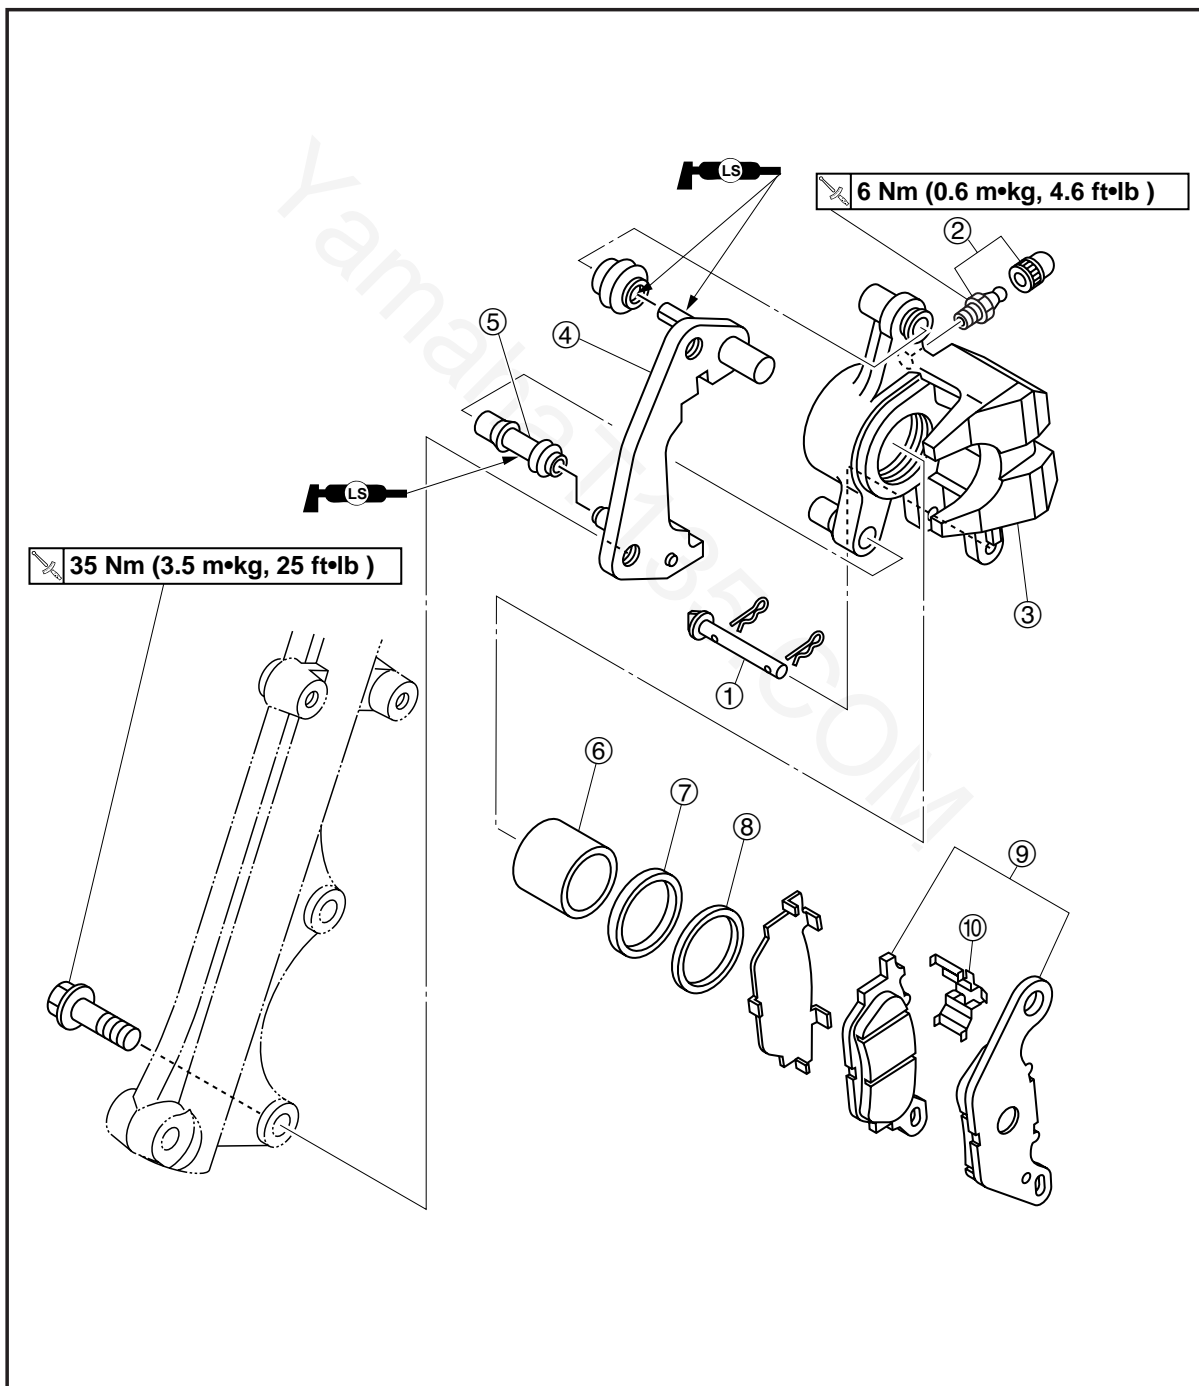

EAS00579

CAUTION:

Disc brake components rarely require disassembly.

Therefore, always follow these preventive measures:

- Never disassemble brake components unless absolutely necessary.
- If any connection on the hydraulic brake system is disconnected, the entire brake system must be disassembled, drained, cleaned, properly filled, and bled after reassembly.
- Never use solvents on internal brake components.
- Use only clean or new brake fluid for cleaning brake components.
- Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.
- Avoid brake fluid coming into contact with the eyes as it can cause serious injury.


FIRST AID FOR BRAKE FLUID ENTERING THE EYES:

- Flush with water for 15 minutes and get immediate medical attention.


EAS00581

REPLACING THE FRONT BRAKE PADS**NOTE:**

When replacing the brake pads, it is not necessary to disconnect the brake hose or disassemble the brake caliper.

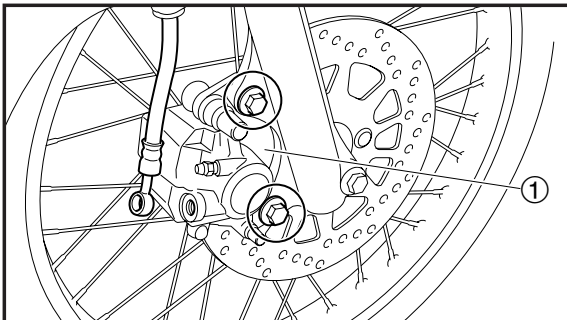
**1. Remove:**

- brake caliper bolts
- brake caliper ①

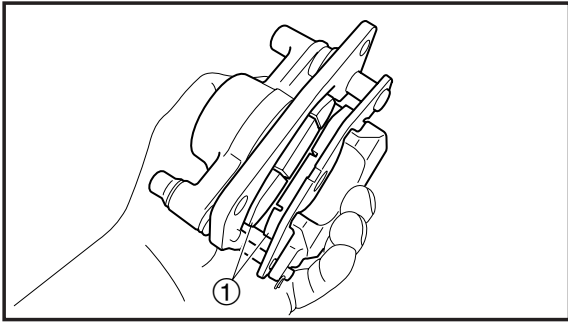

2. Remove:

- clips
- brake pad retaining pin
- brake pads ①
- brake pad spring

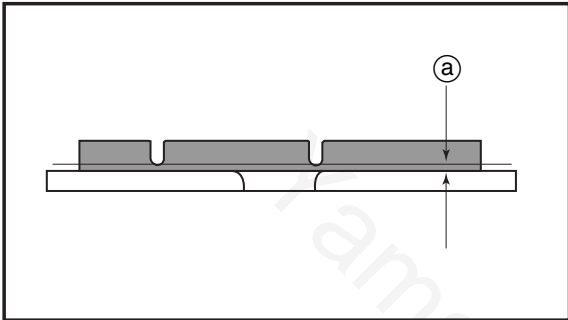


3. Measure:

- brake pad wear limit (a)

Out of specification → Replace the brake pads as a set.



Brake pad wear limit
0.8 mm (0.03 in)

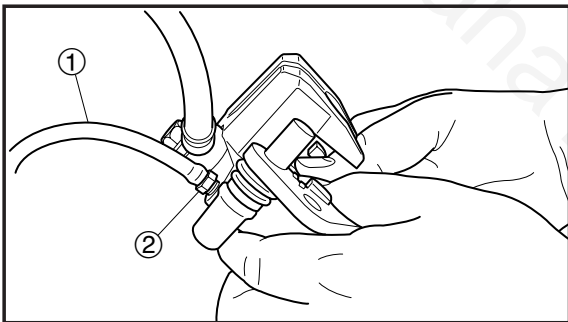

4. Install:

- brake pad spring
- brake pads

NOTE:

Always install new brake pads and a new brake pad spring as a set.



- Connect a clear plastic hose ① tightly to the bleed screw ②. Put the other end of the hose into an open container.
- Loosen the bleed screw and push the brake caliper pistons into the brake caliper with your finger.
- Tighten the bleed screw.



Bleed screw
6 Nm (0.6 m·kg, 4.3 ft·lb)

- Install new brake pads and a new brake pad spring.

NOTE:

Make sure the brake pad spring is installed correctly as shown.





5. Lubricate:

- brake pad retaining pin

**Recommended lubricant**

Lithium-soap-based grease

CAUTION:


- Do not allow grease to contact the brake pads.
- Remove any excess grease.

6. Install:

- brake caliper bolts



35 Nm (3.5 m·kg, 25 ft·lb)

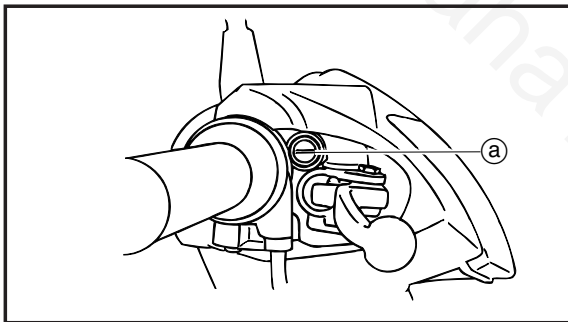

7. Check:

- brake fluid level

Below the minimum level mark (a) → Add the recommended brake fluid to the proper level.

Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.

8. Check:

- brake lever operation

Soft or spongy feeling → Bleed the brake system.

Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.

EAS00619

DISASSEMBLING THE FRONT BRAKE CALIPER


NOTE:

Before disassembling the brake caliper, drain the brake fluid from the entire brake system.

EAS00631

CHECKING THE FRONT BRAKE CALIPER


Recommended brake component replacement schedule	
Brake pads	If necessary
Piston seal	Every two years
Brake hose	Every four years
Brake fluid	Every two years and whenever the brake is disassembled

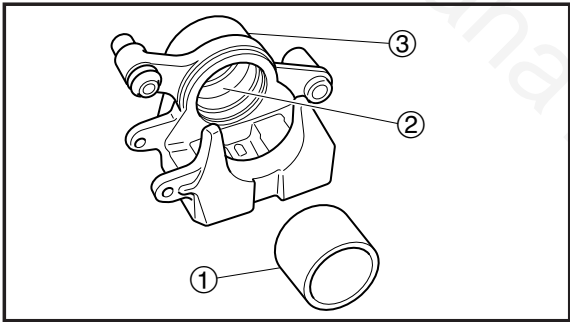

1. Check:
- brake caliper piston ①
Rust/scratches/wear → Replace the brake caliper pistons.
 - brake caliper cylinder ②
Scratches/wear → Replace the brake caliper assembly.
 - brake caliper body ③
Cracks/damage → Replace the brake caliper assembly.
 - brake fluid delivery passages (brake caliper body)
Obstructions → Blow out with compressed air.

⚠WARNING

Whenever a brake caliper is disassembled, replace the piston seals.

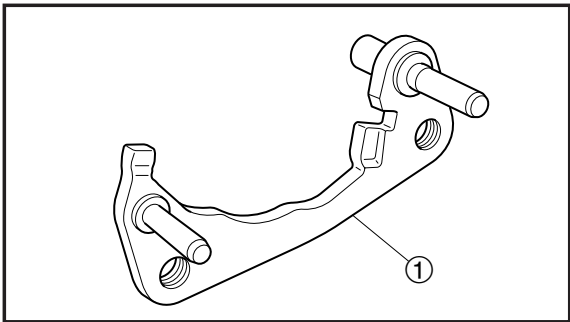

2. Check:
- brake caliper bracket ①
Cracks/damage → Replace.



EAS00634

ASSEMBLING AND INSTALLING THE FRONT BRAKE CALIPER

⚠ WARNING

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components as they will cause the piston seals to swell and distort.
- Whenever a brake caliper is disassembled, replace the brake caliper piston seals.




Recommended brake fluid
DOT 3 or 4

1. Install:

- brake caliper ①
(temporarily)
- copper washers **New**
- brake hose ②
- union bolt ③

26 Nm (2.6 m·kg, 19 ft·lb)

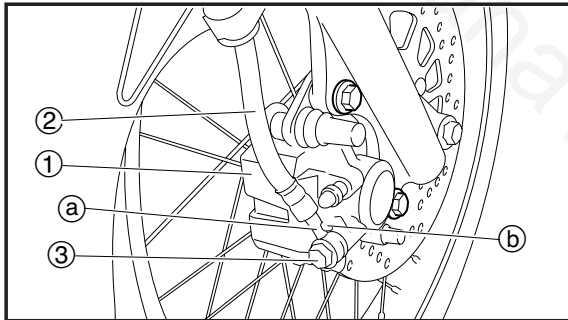

⚠ WARNING

Proper brake hose routing is essential to insure safe vehicle operation. Refer to "CABLE ROUTING".

CAUTION:

When installing the brake hose onto the brake caliper ①, make sure the brake pipe ② touches the projection ③ on the brake caliper.

2. Remove:

- brake caliper

3. Install:

- brake pad springs
- brake pads
- brake pad retaining pin

- brake caliper 35 Nm (3.5 m·kg, 25 ft·lb)

Refer to "REPLACING THE FRONT BRAKE PADS".

4. Remove:

- headlight assembly

Refer to "REMOVING THE HEADLIGHT ASSEMBLY" in chapter 3.



5. Fill:

- brake master cylinder reservoir
(with the specified amount of the recommended brake fluid)




Recommended brake fluid
DOT 3 or 4

WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake master cylinder reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

CAUTION:

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

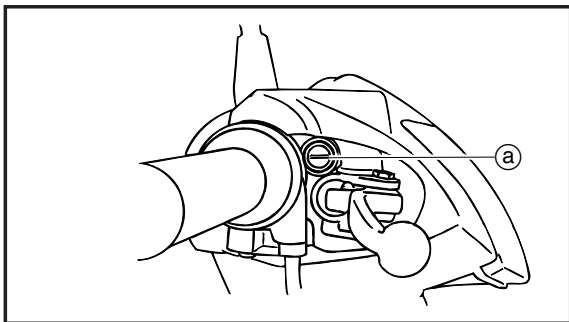

6. Bleed:

- brake system
Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.

7. Check:

- brake fluid level
Below the minimum level mark (a) → Add the recommended brake fluid to the proper level.
Refer to "CHECKING THE BRAKE FLUID LEVEL" in chapter 3.

8. Check:

- brake lever operation
Soft or spongy feeling → Bleed the brake system.
Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" in chapter 3.

9. Install:


- headlight assembly
Refer to "REMOVING THE HEADLIGHT ASSEMBLY" in chapter 3.



EASF0050

FRONT BRAKE MASTER CYLINDER

- ① Brake master cylinder kit
- ② Brake master cylinder reservoir cap
- ③ Brake master cylinder reservoir diaphragm
- ④ Brake master cylinder
- ⑤ Brake master cylinder holder
- ⑥ Brake hose
- ⑦ Brake lever
- ⑧ Front brake light switch

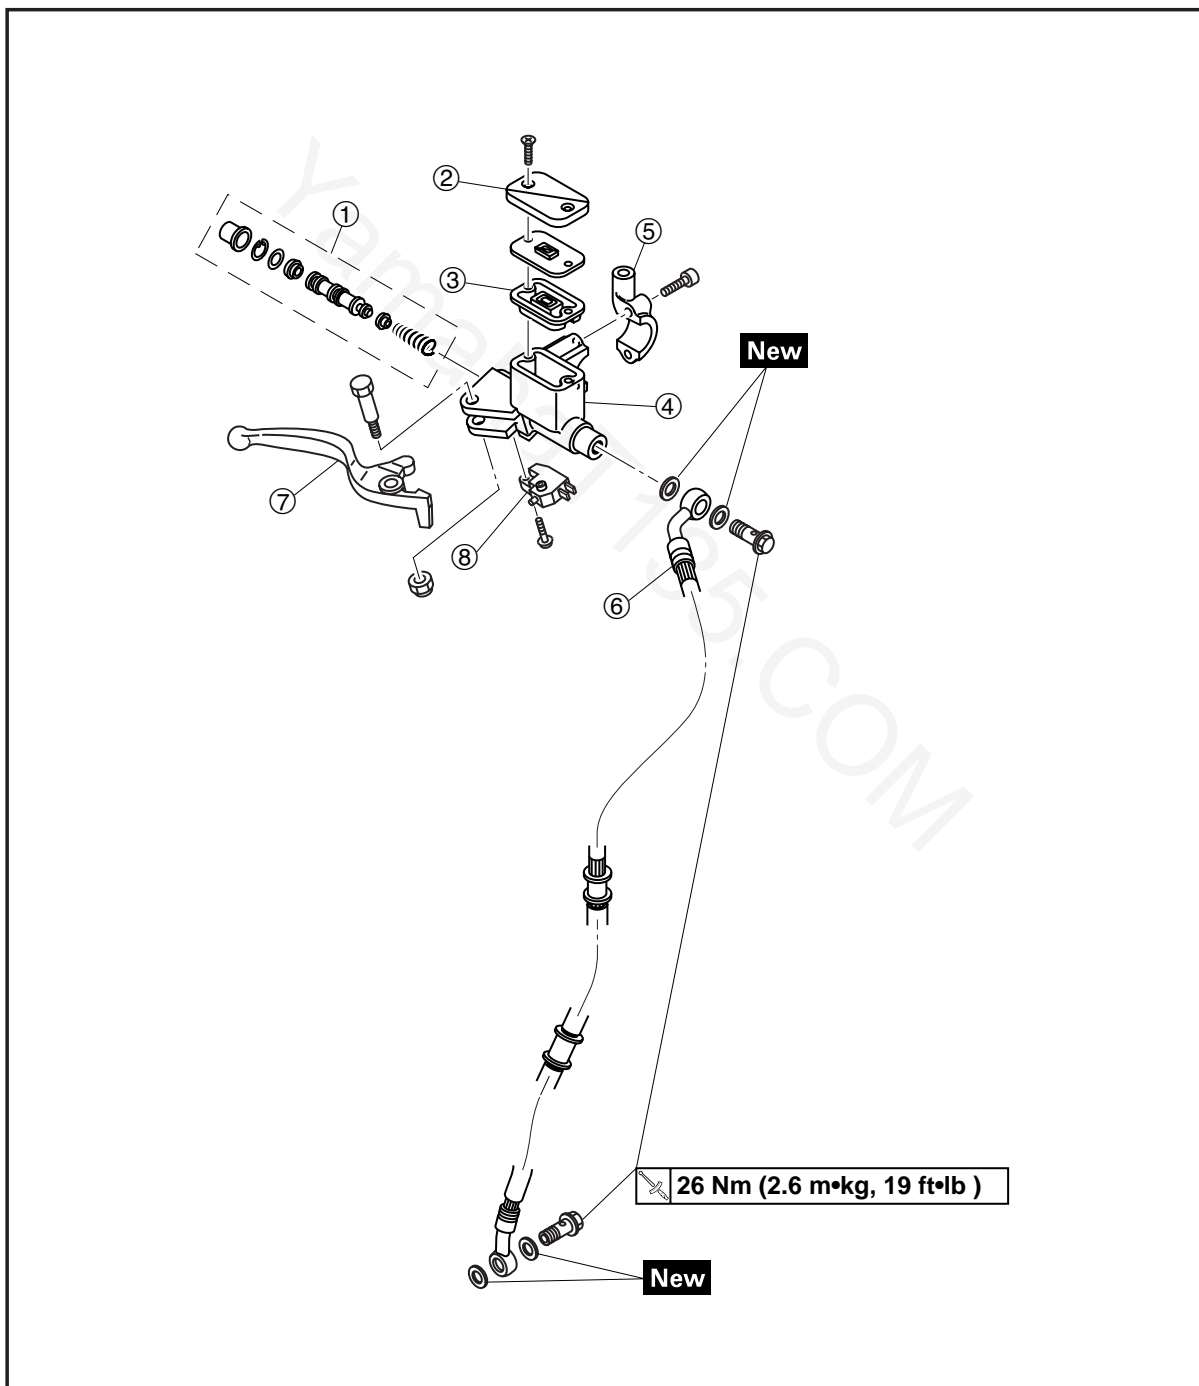



EAS00588

DISASSEMBLING THE FRONT BRAKE MASTER CYLINDER**NOTE:**

Before disassembling the front brake master cylinder, drain the brake fluid from the entire brake system.


1. Remove:

- side cowlings (left and right)
- front cowling

Refer to "REMOVING THE SIDE COWLINGS" and "REMOVING THE FRONT COWLING" in chapter 3.

- headlight assembly

Refer to "REMOVING THE HEADLIGHT ASSEMBLY" in chapter 3.

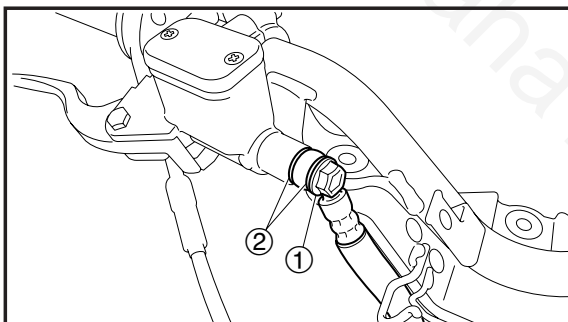


2. Remove:

- union bolt ①
- copper washers ②
- brake hose


NOTE:

To collect any remaining brake fluid, place a container under the master cylinder and the end of the brake hose.

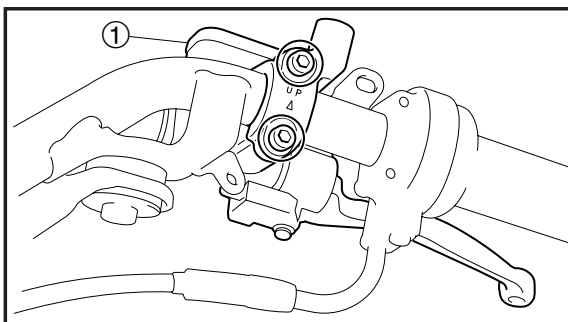


3. Remove:

- brake master cylinder assembly ①

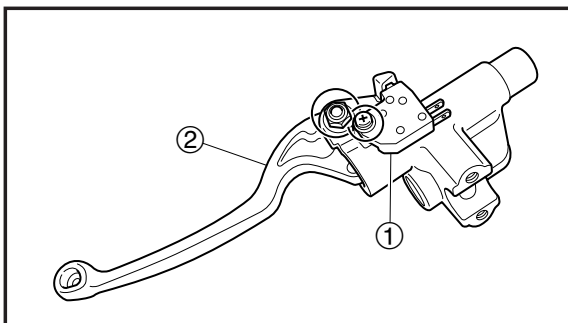


4. Remove:


- brake light switch ①
- brake lever ②

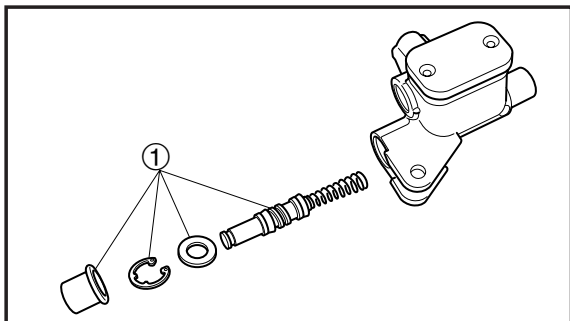


5. Remove:
- brake master cylinder kit ①

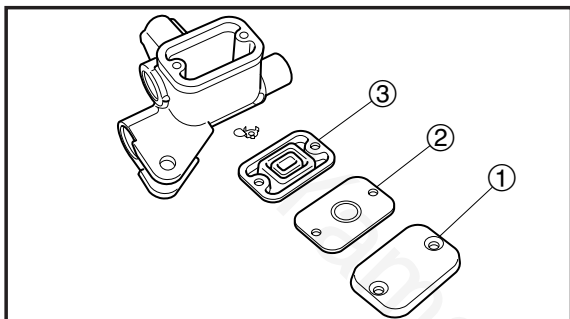

6. Remove:
- brake master cylinder reservoir cap ①
 - brake master cylinder reservoir diaphragm holder ②
 - brake master cylinder reservoir diaphragm ③

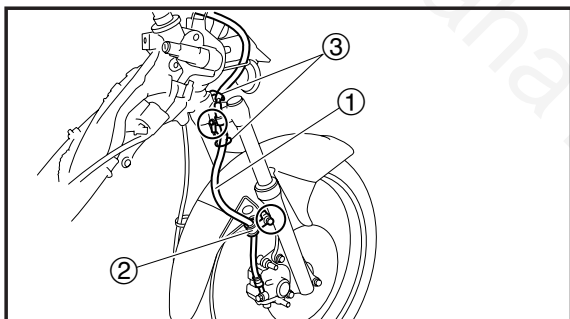


7. Remove:
- brake hose ①
 - brake hose clamp ②
 - brake hose holder ③


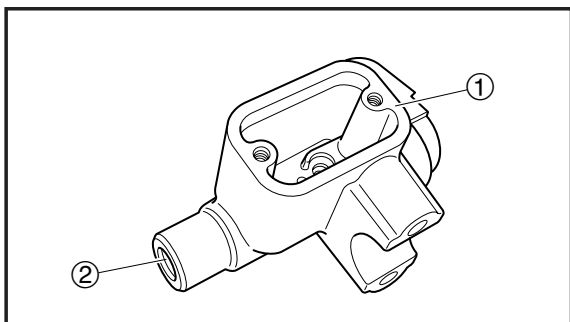


EAS00590

CHECKING THE FRONT BRAKE MASTER CYLINDER

1. Check:
- brake master cylinder ①
Damage/scratches/wear → Replace.
 - brake fluid delivery passages ②
(brake master cylinder body)
Obstructions → Blow out with compressed air.
2. Check:
- brake master cylinder kit
Damage/scratches/wear → Replace.

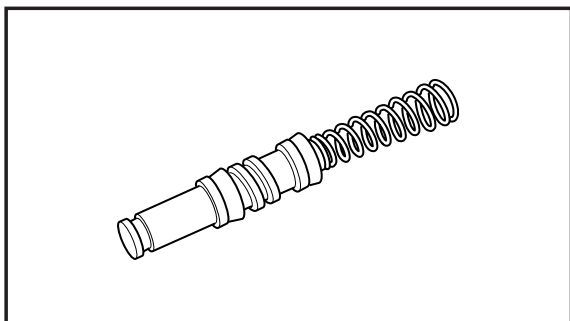

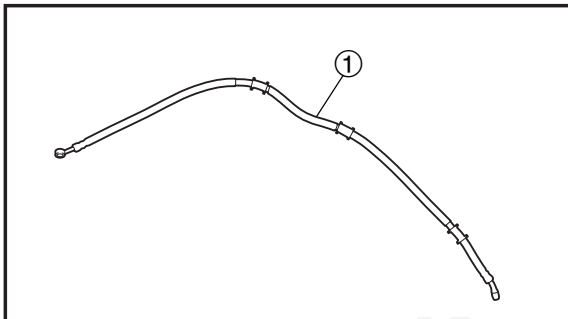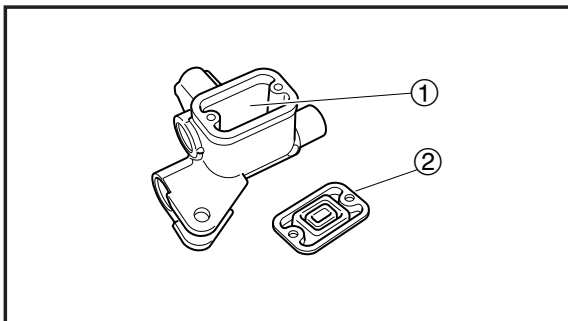

3. Check:

- brake master cylinder reservoir ①
Cracks/damage → Replace.
- brake master cylinder reservoir diaphragm ②
Damage/wear → Replace.

4. Check:


- brake hose ①
Cracks/damage/wear → Replace.

EAS00598

ASSEMBLING AND INSTALLING THE FRONT BRAKE MASTER CYLINDER

⚠ WARNING

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components.

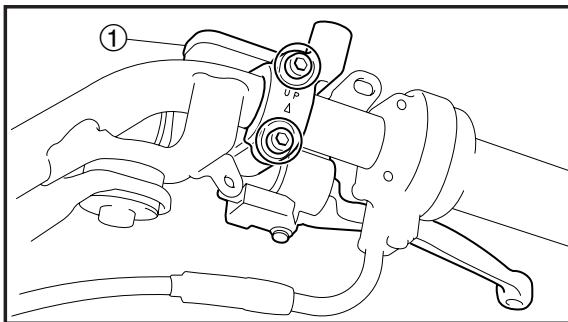

Recommended brake fluid
DOT 3 or 4

1. Install:

- brake master cylinder ①


11 Nm (1.1 m·kg, 8.0 ft·lb)

NOTE:

- Install the brake master cylinder holder with the mark facing up.
- Adjust the brake master cylinder to the proper angle.
- First, tighten the upper bolt, then the lower bolt.

FRONT BRAKE

CHAS

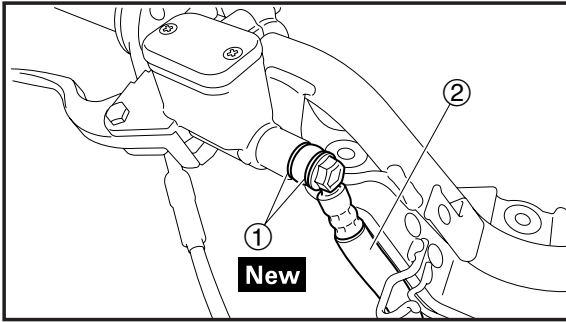

2. Install:

- copper washers ① **New**
- brake hose ②
- union bolt

26 Nm (2.6 m·kg, 19 ft·lb)

⚠ WARNING

Proper brake hose routing is essential to insure safe vehicle operation. Refer to "CABLE ROUTING".

NOTE:

Turn the handlebar to the left and right to make sure the brake hose does not touch other parts (e.g., wire harness, cables, leads). Correct if necessary.

3. Fill:

- brake master cylinder reservoir
(with the specified amount of the recommended brake fluid)




Recommended brake fluid
DOT 3 or 4

⚠ WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake master cylinder reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

CAUTION:

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

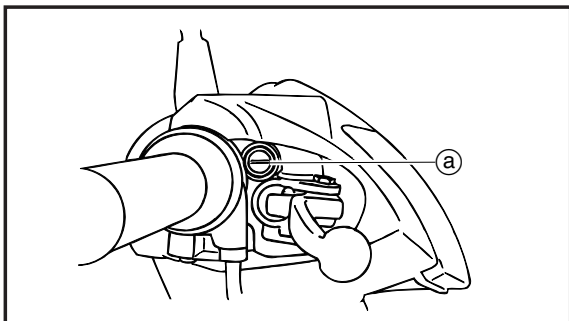



4. Bleed:
 - brake system
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.
5. Check:
 - brake fluid level
Below the minimum level mark (a) → Add the recommended brake fluid to the proper level.
Refer to “CHECKING THE BRAKE FLUID LEVEL” in chapter 3.
6. Check:
 - brake lever operation
Soft or spongy feeling → Bleed the brake system.
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” in chapter 3.

EASF0054

FRONT FORK

- ① Front fork cap bolt
- ② Dust seal
- ③ Oil seal clip
- ④ Oil seal
- ⑤ Fork spring
- ⑥ Damper rod
- ⑦ Inner tube
- ⑧ Outer tube
- ⑨ Damper rod bolt

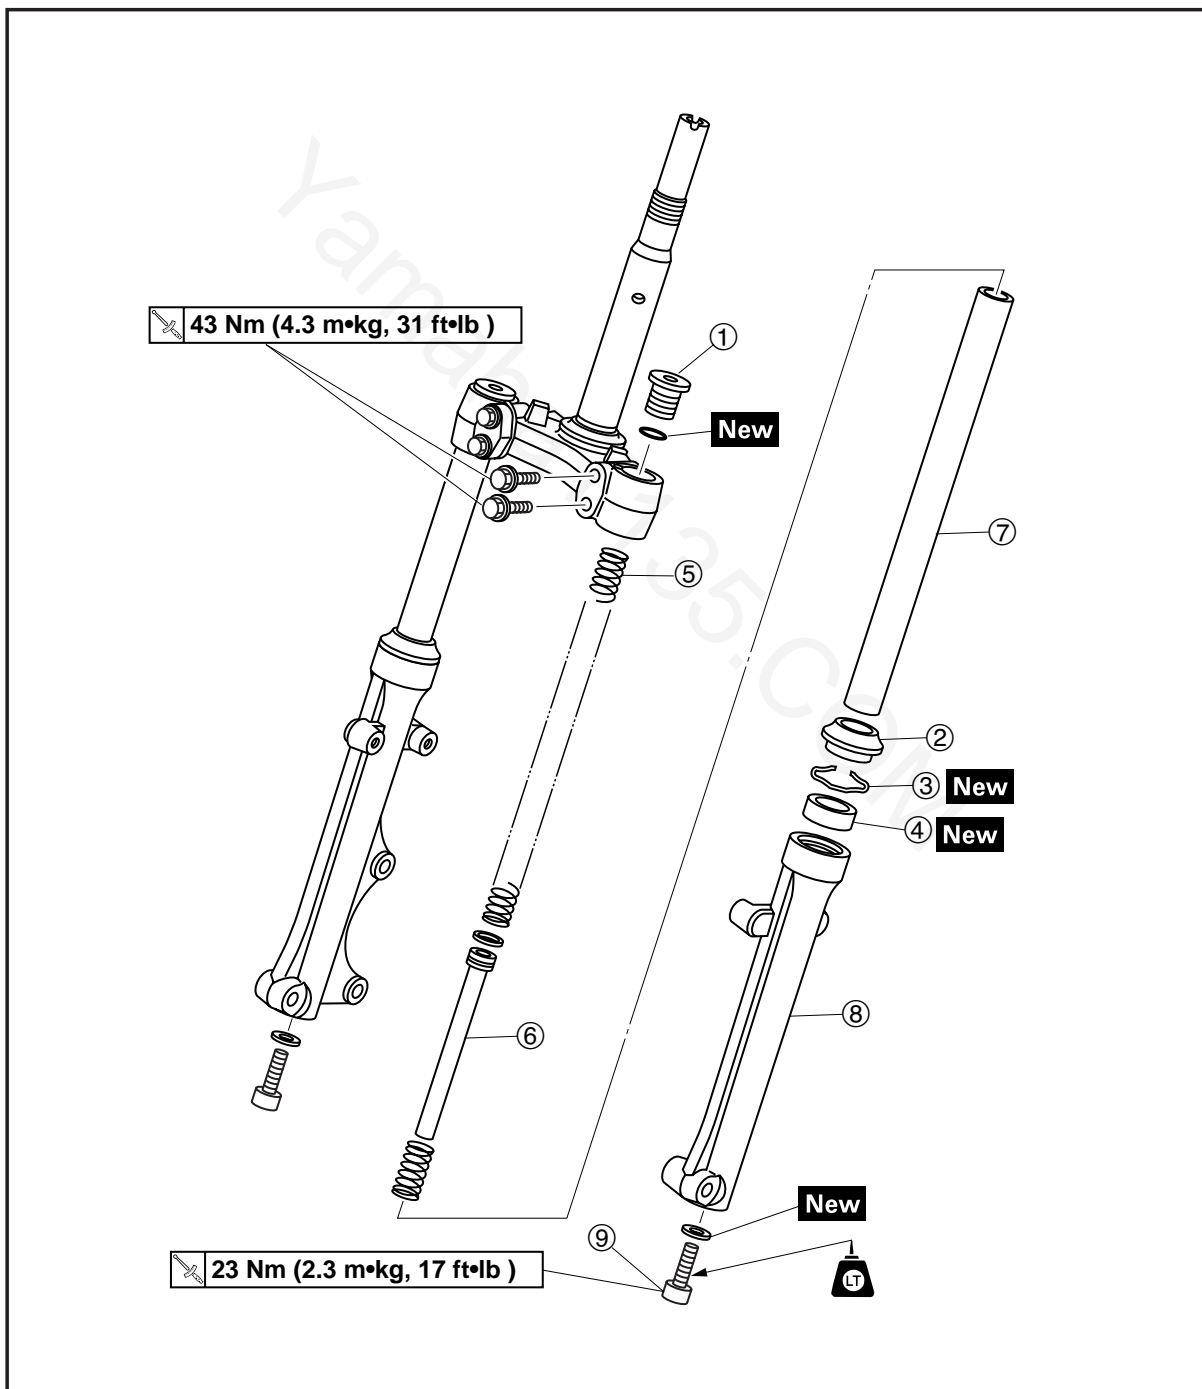



EAS00649

REMOVING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.

1. Stand the vehicle on a level surface.

⚠WARNING

Securely support the vehicle so that there is no danger of it falling over.

NOTE:

Place the vehicle on a suitable stand so that the front wheel is elevated.

2. Remove:

- side cowlings (left and right)
- front cowling
- center panels
- inner panel

Refer to "COVERS" in chapter 3.

3. Remove:

- brake caliper assembly
- brake hose clamp


Refer to "FRONT BRAKE".


- front wheel

Refer to "FRONT WHEEL AND BRAKE DISC".

4. Remove:

- front fender bolts
- washers
- collars
- front fender ①

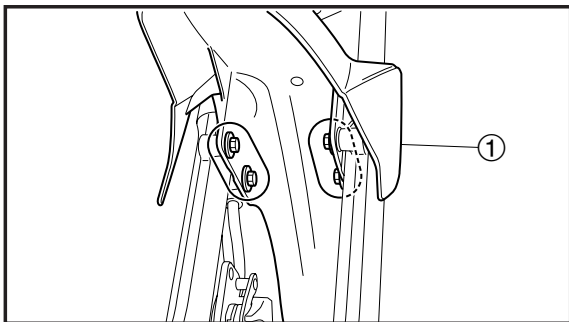

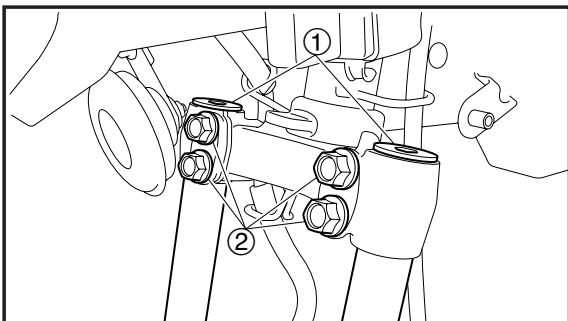

5. Remove:
 - front fork cap bolt ①
(with a 10-mm hexagonal wrench)
6. Loosen:
 - lower bracket pinch bolt ②

⚠ WARNING

Before loosening the lower bracket pinch bolt, support the front fork leg.


7. Remove:
 - front fork leg

EAS00655

DISASSEMBLING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.


1. Remove:
 - fork spring

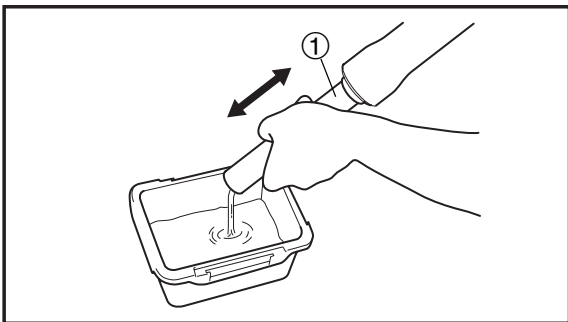

2. Drain:
 - fork oil

NOTE:


Stroke the inner tube ① several times while draining the fork oil.

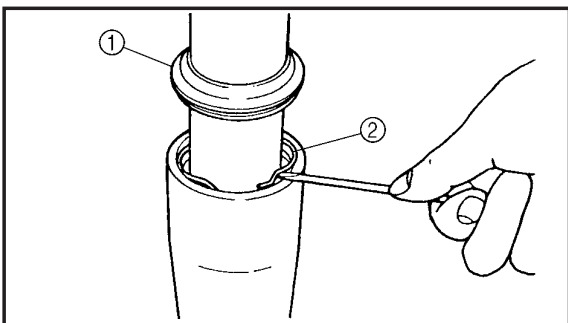

3. Remove:
 - dust seal ①
 - oil seal clip ②
(with a flat-head screwdriver)

CAUTION:

Do not scratch the inner tube.

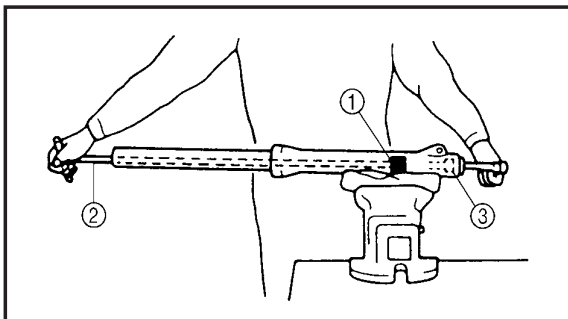

4. Remove:
- damper rod assembly bolt
 - copper washer

NOTE:

While holding the damper rod assembly with a 10 mm hexagon nut/socket wrench ① and the T-handle ②, loosen the damper rod assembly bolt ③.




T-handle
90890-01326


5. Remove:
- inner tube
 - rebound spring
 - damper rod

NOTE:

Pull out the inner tube and damper rod together.

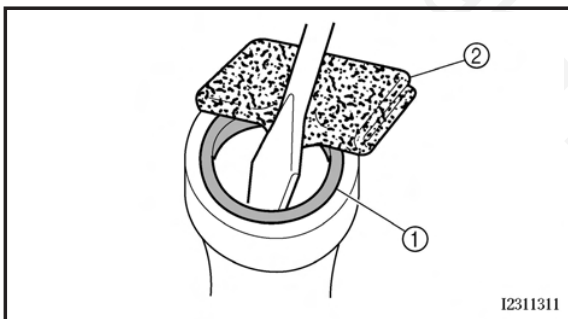

6. Remove:
- oil seal ①
- ② Rag

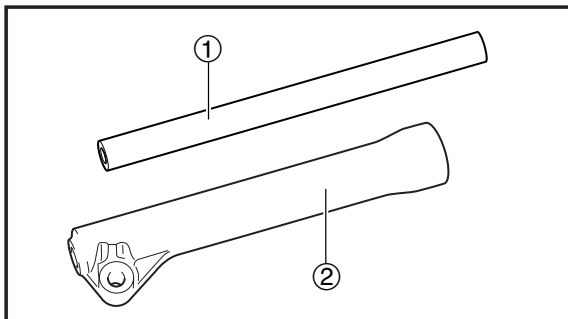

EAS00657

CHECKING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.


1. Check:

- inner tube ①
- outer tube ②

Bends/damage/scratches → Replace.

⚠ WARNING

Do not attempt to straighten a bent inner tube as this may dangerously weaken it.

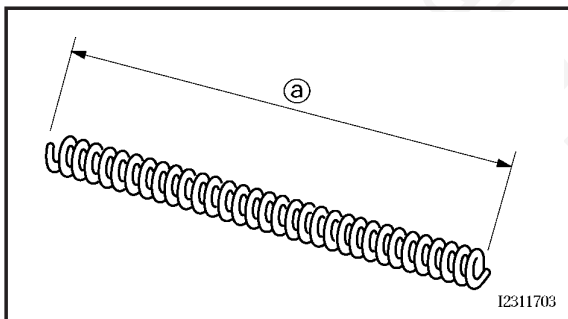

2.Measure:


- spring free length (a)

Out of specifications → Replace.

**Spring free length**

295.3 mm (11.63 in)

<Limit>: 289.4 mm (11.39 in)

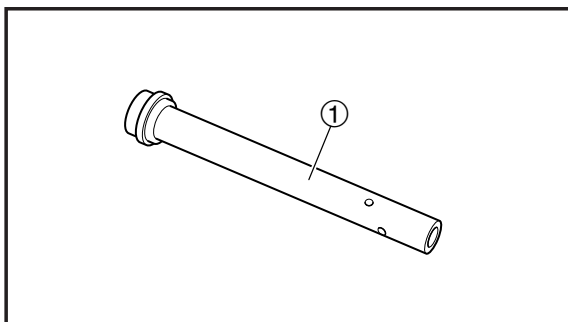

3. Check:

- damper rod ①

Damage/wear → Replace.

Obstructions → Blow out all of the oil passages with compressed air.

CAUTION:

- The front fork leg has a built-in damper adjusting rod and a very sophisticated internal construction, which are particularly sensitive to foreign material.
- When disassembling and assembling the front fork leg, do not allow any foreign material to enter the front fork.



EAS00659

ASSEMBLING THE FRONT FORK LEGS


The following procedure applies to both of the front fork legs.

⚠ WARNING

- Make sure the oil levels in both front fork legs are equal.
- Uneven oil levels can result in poor handling and a loss of stability.

NOTE:

- When assembling the front fork leg, be sure to replace the oil seal.
- Before assembling the front fork leg, make sure all of the components are clean.

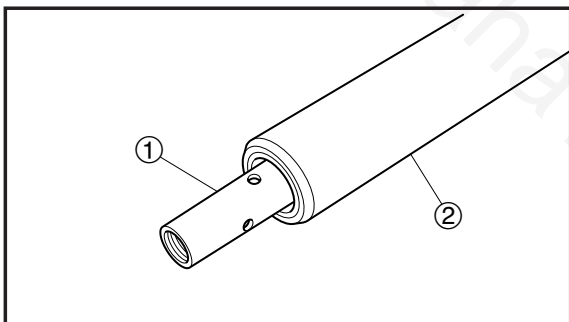

1. Install:

- damper rod ①
- rebound spring
- inner tube ②

CAUTION:


Allow the damper rod to slide slowly down the inner tube ② until it protrudes from the bottom of the inner tube. Be careful not to damage the inner tube.

2. Lubricate:

- inner tube outer surface



Recommended lubricant
Fork oil 10W or equivalent

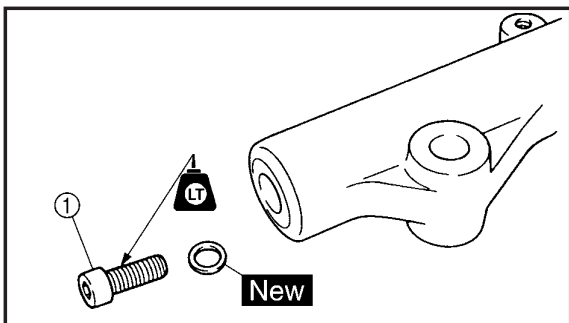


3. Tighten:


- damper rod assembly bolt ①



23 Nm (2.3 m·kg, 17 ft·lb)
LOCTITE®

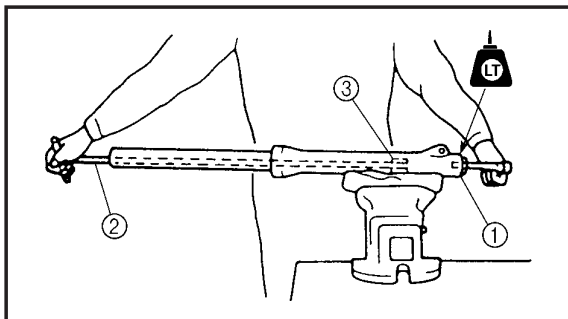
**NOTE:**

Tighten the damper rod assembly bolt ① while holding the damper rod with the T-handle ② and a 10 mm hexagon nut/socket wrench ③.

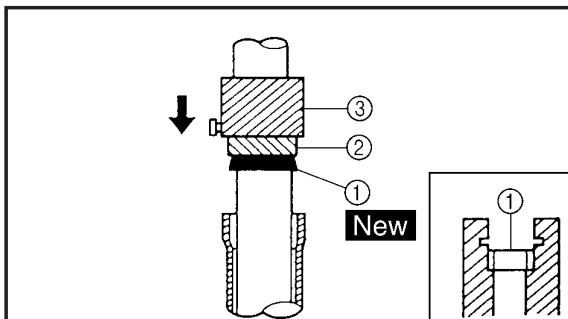**T-handle****90890-01326**

4. Install:


- oil seal ① **New**
(with the fork seal driver weight ② and fork seal driver attachment ③)

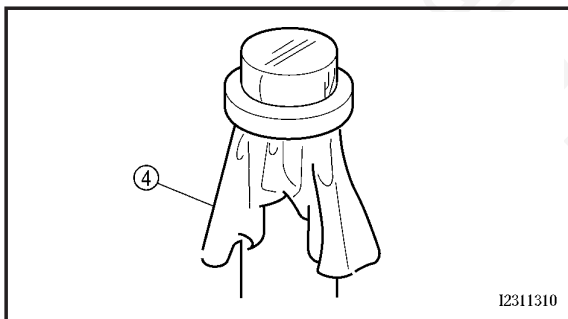**Fork seal driver weight****90890-01184****Fork seal driver attachment****90890-01186****CAUTION:**

Make sure the numbered side of the oil seal faces up.

NOTE:

- Before installing the oil seal, lubricate its lips with lithium-soap-based grease.
- Lubricate the outer surface of the inner tube with fork oil.
- Before installing the oil seal, cover the top of the front fork leg with a plastic bag ④ to protect the oil seal during installation.

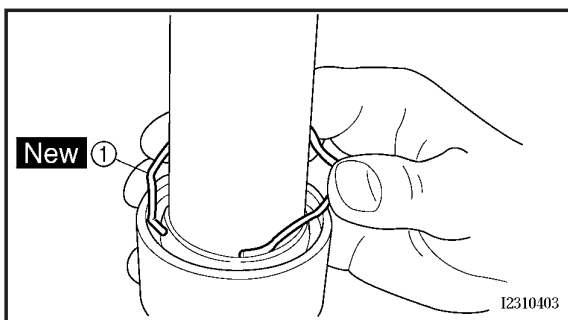

5. Install:

- oil seal clip ① **New**

NOTE:


Adjust the oil seal clip so that it fits into the outer tube's groove.

6. Fill:

- front fork leg
(with the specified amount of the recommended fork oil)




Quantity (each front fork leg)
0.064 L (2.26 Imp.oz, 2.16 US oz)
Recommended oil
Fork oil 10W or equivalent

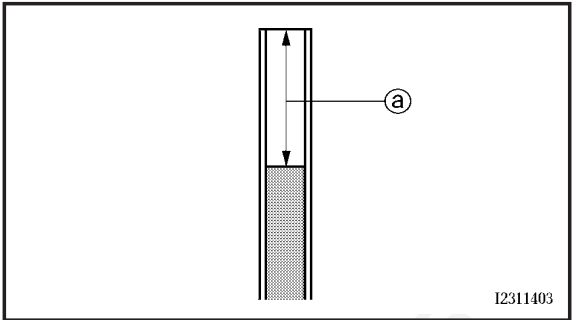

Front fork leg oil level ① (from the top of the inner tube, with the inner tube fully compressed and without the fork spring)
104.5 mm (4.11 in)

NOTE:

- While filling the front fork leg, keep it upright.
- After filling, slowly pump the front fork leg up and down to distribute the fork oil.

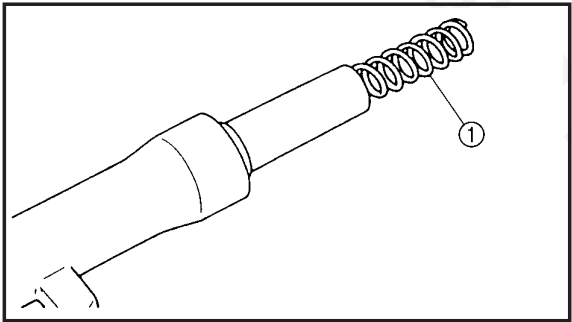


7. Install:

- fork spring ①

NOTE:

Install the fork spring with the smaller pitch facing up.

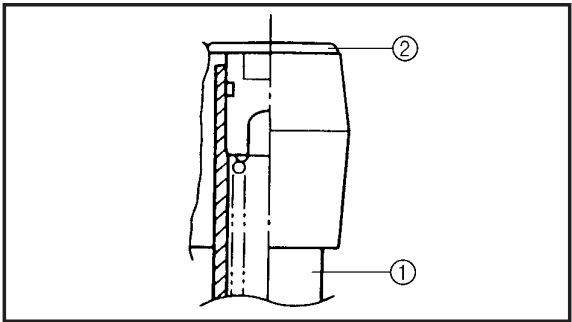

EAS00662

INSTALLING THE FRONT FORK LEGS

The following procedure applies to both of the front fork legs.

1. Install:

- front fork leg ①
- front fork cap bolt ②


Temporarily tighten the lower bracket pinch bolt.

NOTE:


Pull up the inner tube until it is stopped, then install the front fork cap bolt ②.


2. Tighten:

- lower bracket pinch bolt ①

 **43 Nm (4.3 m·kg, 31 ft·lb)**


- front fork cap bolt ②

 **50 Nm (5.0 m·kg, 36 ft·lb)**



3. Install:

- front fender



4. Install:

- front wheel

Refer to "FRONT WHEEL AND BRAKE DISC".

- brake hose clamp

- brake caliper assembly


Refer to "FRONT BRAKE".



EASF0055

HANDLEBAR

- ① Rear view mirror (left and right)
- ② Throttle grip
- ③ Throttle housing
- ④ Master cylinder
- ⑤ Handlebar
- ⑥ Left handlebar switch
- ⑦ Handlebar grip
- ⑧ Starter cable
- ⑨ Throttle cable
- ⑩ Handlebar bracket

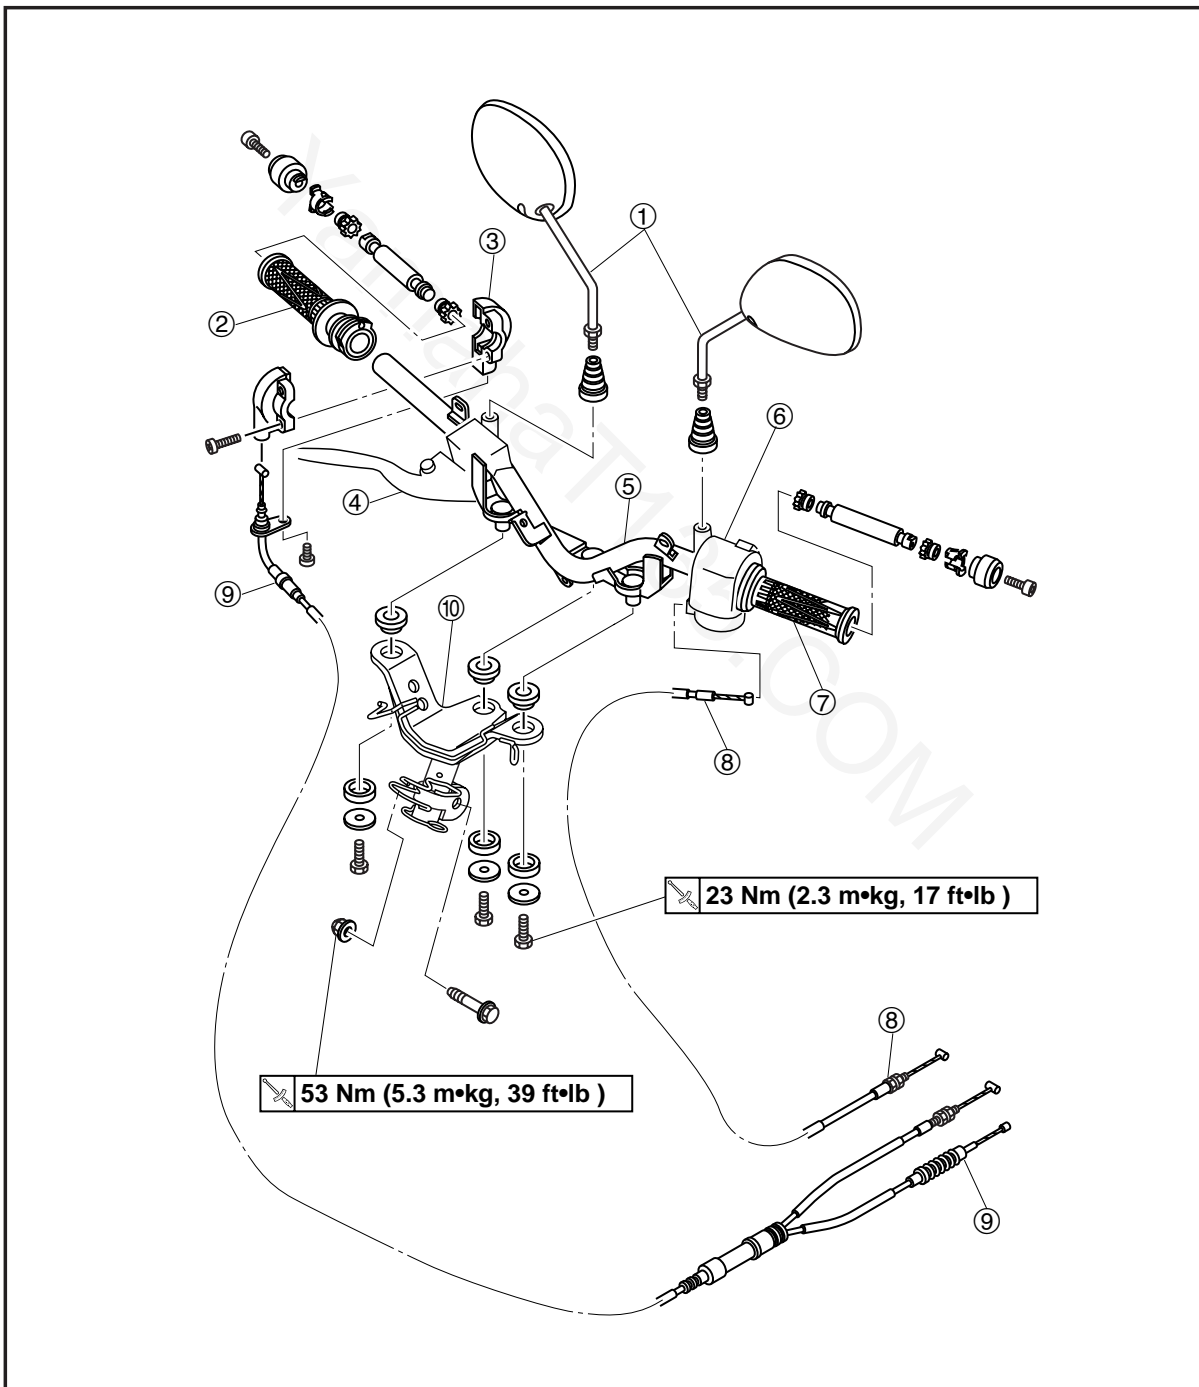



EAS00666

REMOVING THE HANDLEBAR

1. Stand the vehicle on a level surface.

⚠ WARNING

Securely support the vehicle so that there is no danger of it falling over.


2. Remove:

- side cowlings (left and right)
- front cowl
- center panels

Refer to "REMOVING THE FRONT COWLINGS" in chapter 3.


- headlight assembly

Refer to "REPLACING THE HEADLIGHT BULBS" in chapter 3.

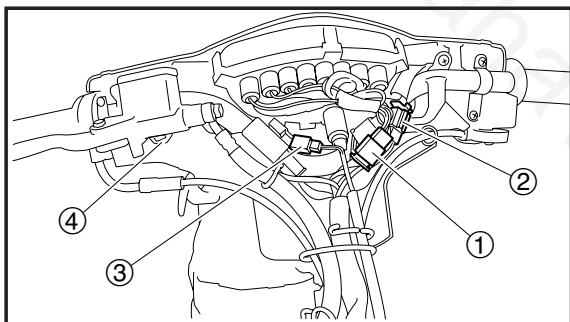

3. Disconnect:

- meter assembly couplers ①
- right handlebar switch coupler ②
- left handlebar switch coupler ③
- front brake light switch connectors ④

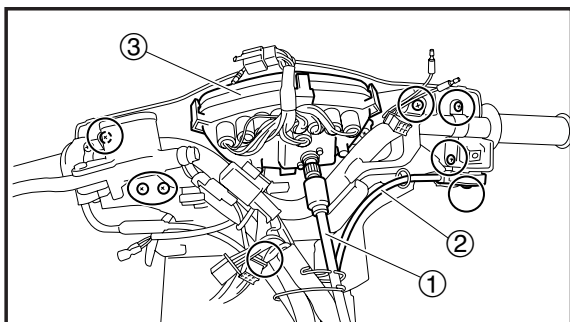


4. Disconnect:

- speedometer cable ①
- choke cable ②


5. Remove:

- speedometer assembly ③

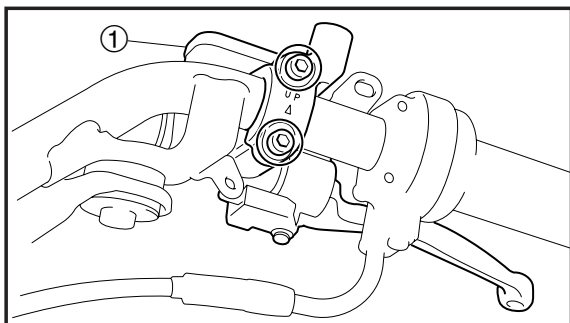


6. Remove:


- rear view mirrors (left and right)
- brake master cylinder ①
- throttle housing

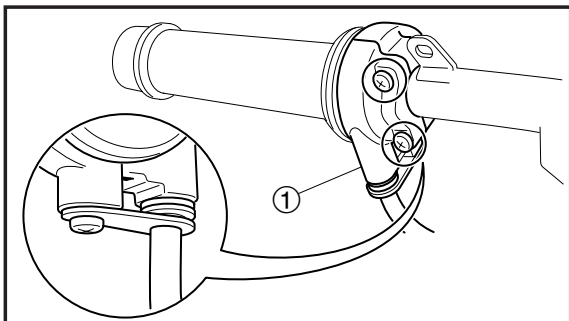


7. Remove:
- lever holder ①

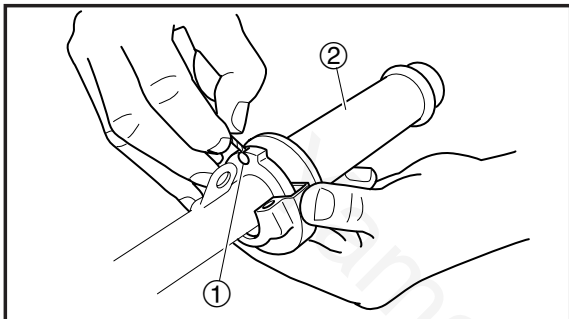

8. Remove:
- throttle cable ①
 - throttle grip ②

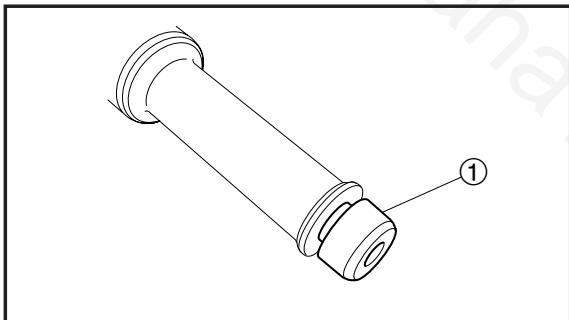


9. Remove:
- grip end ①

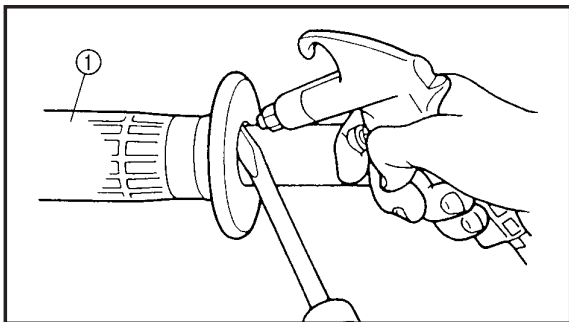


10. Remove:
- handlebar grip ①

NOTE:


Blow compressed air between the handlebar and the handlebar grip, and gradually push the grip off the handlebar.

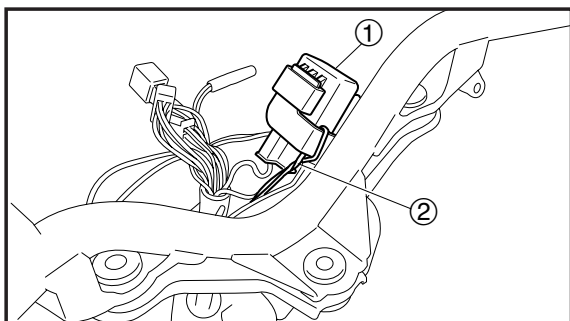

11. Remove:
- relay
 - wire harness strap ①

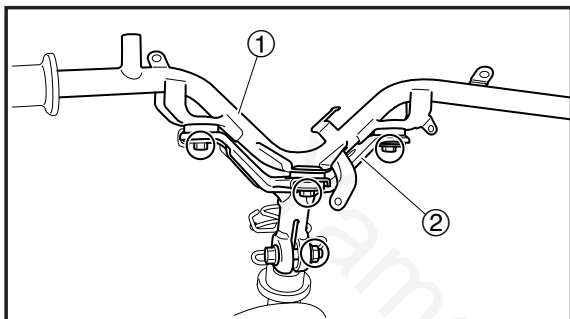

12. Remove:
- handlebar ①
 - washers
 - bushings
 - handlebar bracket ②

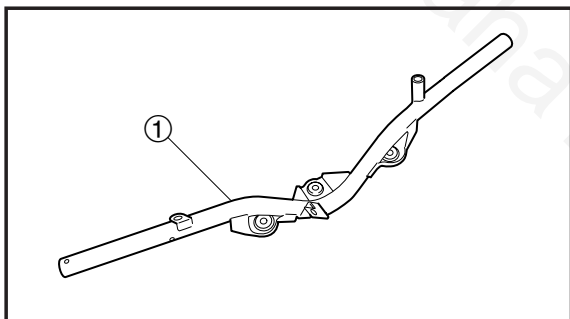

EAS00668

CHECKING THE HANDLEBAR

1. Check:
- handlebar ①
- Bends/cracks/damage → Replace.

⚠ WARNING

Do not attempt to straighten a bent handlebar as this may dangerously weaken it.


EAS00670

INSTALLING THE HANDLEBAR

1. Stand the vehicle on a level surface.

⚠ WARNING

Securely support the vehicle so that there is no danger of it falling over.

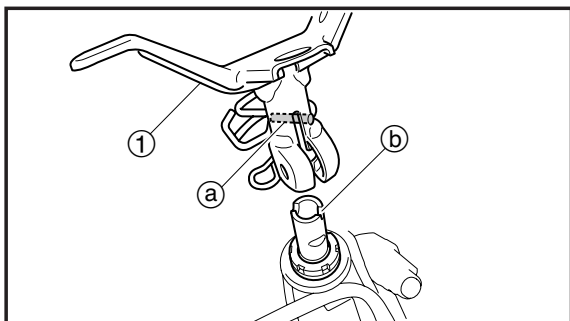

2. Install:
- handlebar bracket ①

53 Nm (5.3 m·kg, 38 ft·lb)

NOTE:

Align the projection (a) in the handlebar bracket with the slit (b) in the steering shaft.



3. Install:

- bushings
- washers
- handlebar

23 Nm (2.3 m·kg, 17 ft·lb)

- wire harness strap

Refer to "CABLE ROUTING" in chapter 2.

4. Install:


- handlebar grip



- Apply a thin coat of rubber adhesive onto the left end of the handlebar.
- Slide the handlebar grip over the left end of the handlebar.
- Wipe off any excess rubber adhesive with a clean rag.

⚠ WARNING

Do not touch the handlebar grip until the rubber adhesive has fully dried.

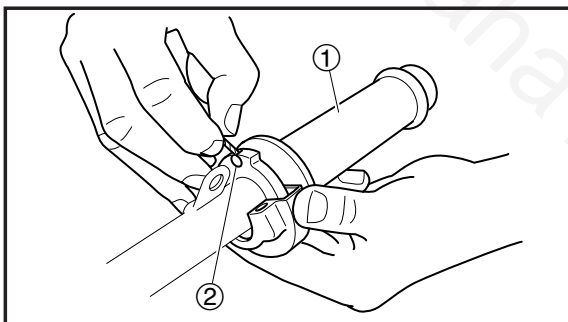


5. Install:

- throttle grip ①
- throttle cable ②
- throttle housing

NOTE:

Lubricate the inside of the throttle grip with a thin coat of lithium-soap-based grease and install it onto the handlebar.

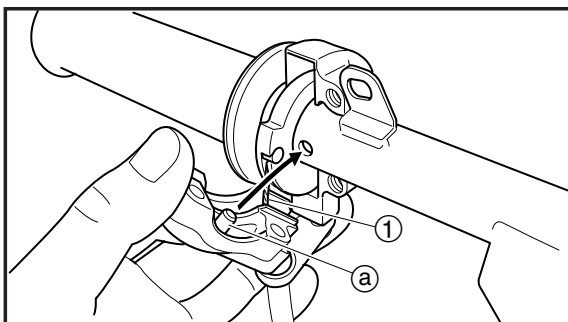

6. Install:

- lever holder ①

NOTE:

Align the projection (a) on the right handlebar switch with the hole in the handlebar.


⚠ WARNING

Make sure the throttle grip operates smoothly.



7. Install:

- brake master cylinder

 **11 Nm (1.1 m·kg, 8.0 ft·lb)**

Refer to "FRONT BRAKE".

8. Install:

- plastic locking ties

Refer to "CABLE ROUTING" in chapter 2.

9. Adjust:

- throttle cable free play


Refer to "ADJUSTING THE THROTTLE
CABLE FREE PLAY" in chapter 3.**Throttle cable free play (at the
flange of the throttle grip)
3–7 mm (0.12–0.28 in)**



EASF0057

STEERING HEAD

- ① Upper ring nut
- ② Lower ring nut
- ③ Ball race cover
- ④ Bearing inner race
- ⑤ Upper bearing
- ⑥ Bearing outer race
- ⑦ Lower bearing
- ⑧ Lower bracket

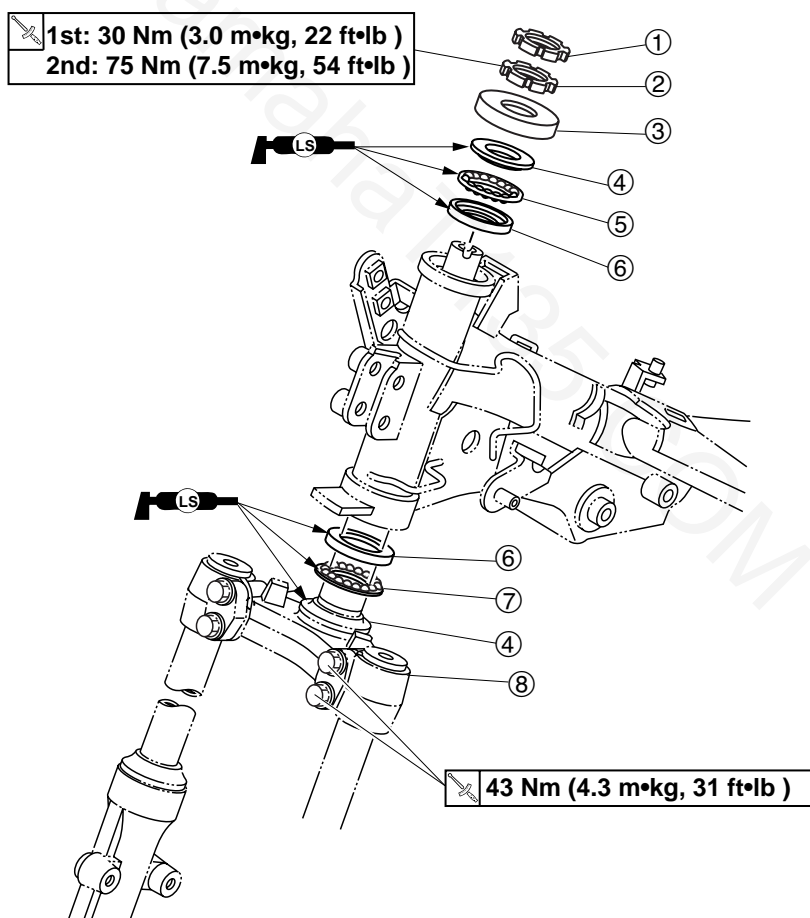



EAS00679

REMOVING THE LOWER BRACKET

1. Stand the vehicle on a level surface.

⚠ WARNING

Securely support the vehicle so that there is no danger of it falling over.

2. Remove:

- side cowlings (left and right)
- center panels
- inner panel


Refer to "REMOVING THE FRONT COWLINGS" in chapter 3.

- front fork

Refer to "FRONT FORK".

- handlebar

Refer to "HANDLEBAR".

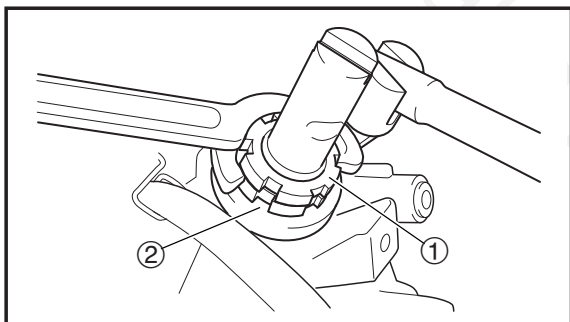

3. Remove:

- upper ring nut ①
- lower ring nut ②

NOTE:

Hold the lower ring nut with the steering nut wrench, and then remove the upper ring nut with the ring nut wrench.



Steering nut wrench

90890-01403

Ring nut wrench

90890-01268

⚠ WARNING

Securely support the lower bracket so that there is no danger of it falling.

EAS00681

CHECKING THE STEERING HEAD


1. Wash:

- bearings
- bearing races




Recommended cleaning solvent

Kerosene

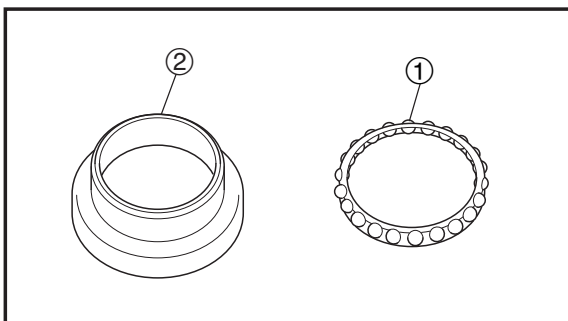

2. Check:

- bearings ①
 - bearing races ②
- Damage/pitting → Replace.

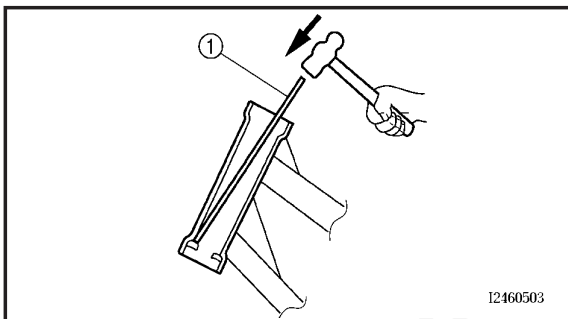

3. Replace:

- bearings
- bearing races





- Remove the bearing races from the steering head pipe with a long rod ① and hammer.
- Remove the bearing race from the lower bracket with a floor chisel ② and hammer.
- Install a new rubber seal and new bearing races.

CAUTION:

If the bearing race is not installed properly, the steering head pipe could be damaged.

NOTE:

- Always replace the bearings and bearing races as a set.
- Whenever the steering head is disassembled, replace the rubber seal.

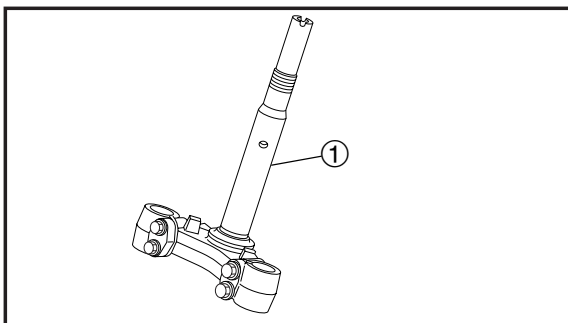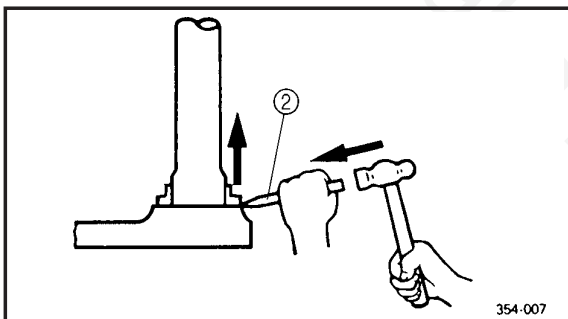

4. Check:

- lower bracket ①
(along with the steering stem)
- Bends/cracks/damage → Replace.



EAS00683

INSTALLING THE STEERING HEAD

1. Lubricate:

- upper bearing
- lower bearing
- bearing races



Recommended lubricant
Lithium-soap-based grease

2. Install:

- lower ring nut
- upper ring nut


Refer to "CHECKING AND ADJUSTING
THE STEERING HEAD" in chapter 3.

3. Install:

- front fork legs


Refer to "FRONT FORK".

REAR SHOCK ABSORBER ASSEMBLY AND SWINGARM



REAR SHOCK ABSORBER ASSEMBLY AND SWINGARM

- ① Rear shock absorber
- ② Brake torque rod
- ③ Swingarm
- ④ Bushing
- ⑤ Swingarm pivot shaft
- ⑥ Drive chain case

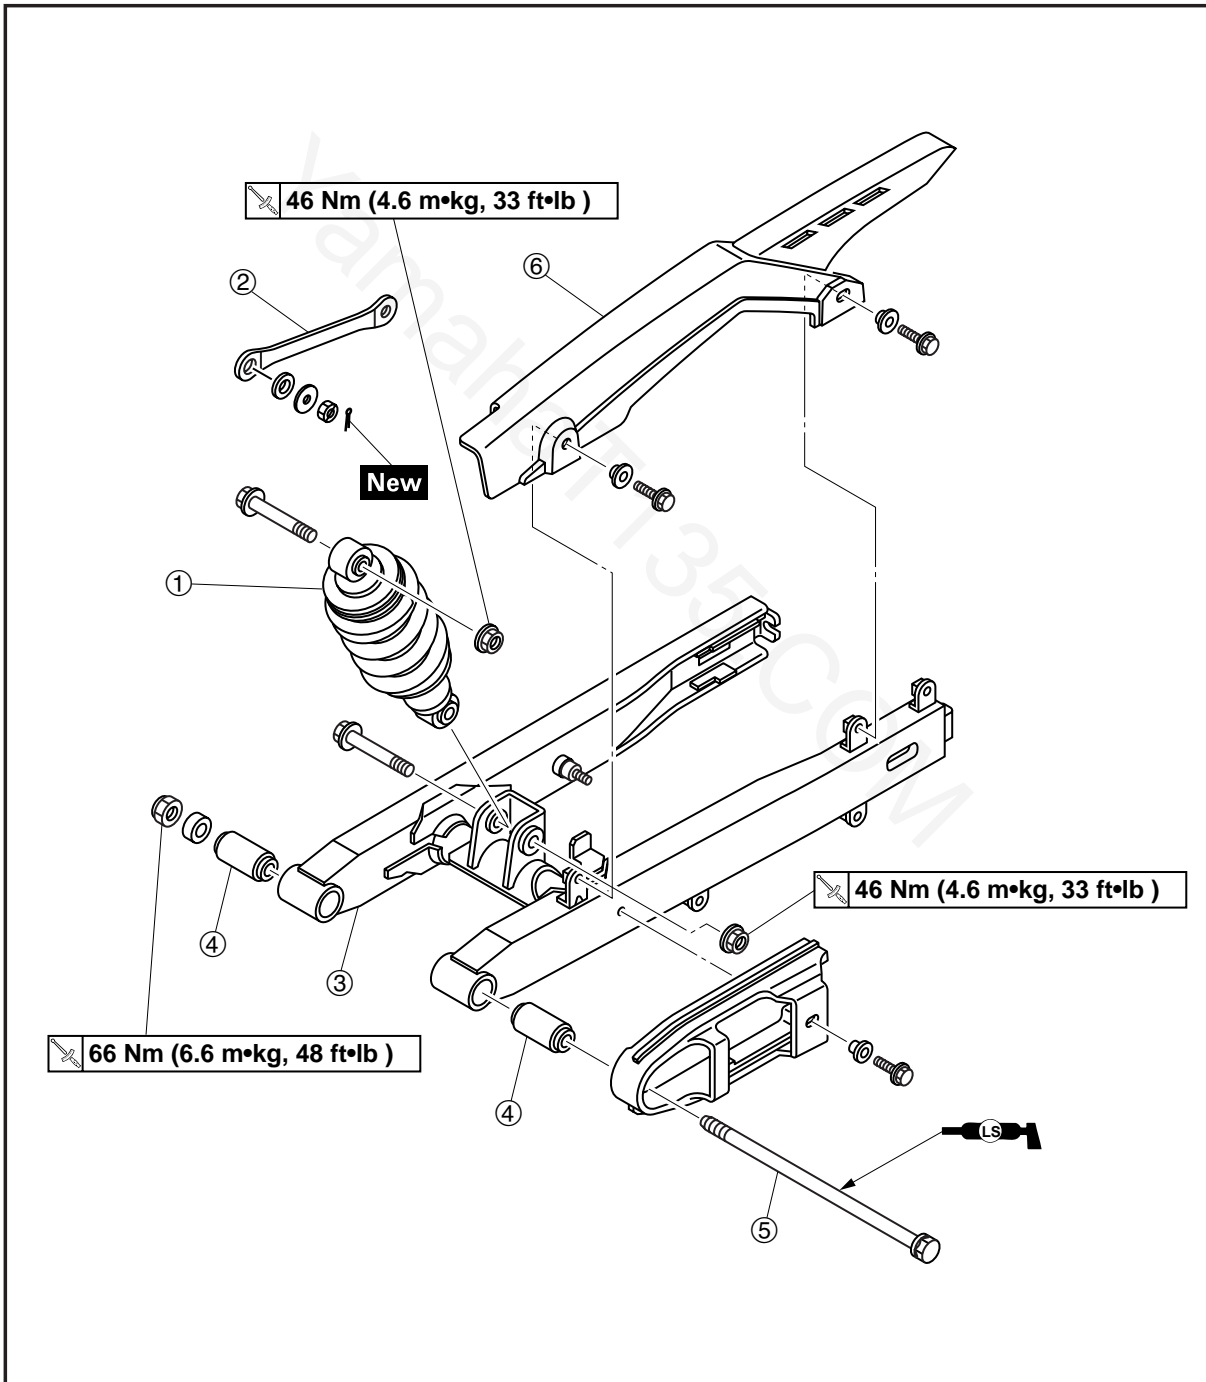



EAS00691/EAS00702

**REMOVING THE REAR SHOCK
ABSORBER ASSEMBLIES AND
SWINGARM**

1. Stand the vehicle on a level surface.

⚠WARNING


Securely support the vehicle so that there is no danger of it falling over.

NOTE:

Place the vehicle on a suitable stand so that the rear wheel is elevated.


2. Remove:

- center panel
- rear cowlings (left and right)
Refer to "REMOVING THE REAR COWLINGS" in chapter 3.
- muffler
Refer to "REMOVING THE ENGINE" in chapter 4.
- rear wheel
Refer to "REAR WHEEL AND BRAKE".

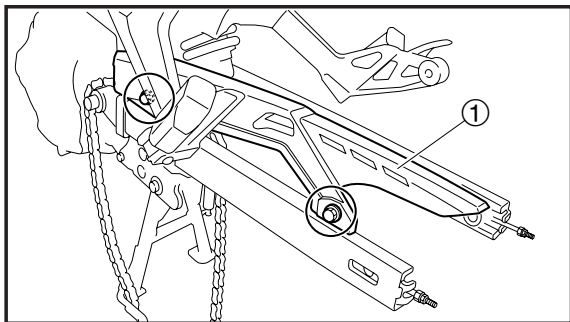

3. Remove:

- drive chain case bolts
- drive chain case ①

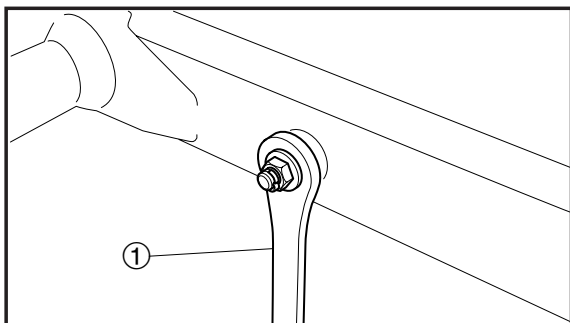


4. Remove:

- cotter pin
- washer
- brake torque rod ①


REAR SHOCK ABSORBER ASSEMBLY AND SWINGARM

CHAS

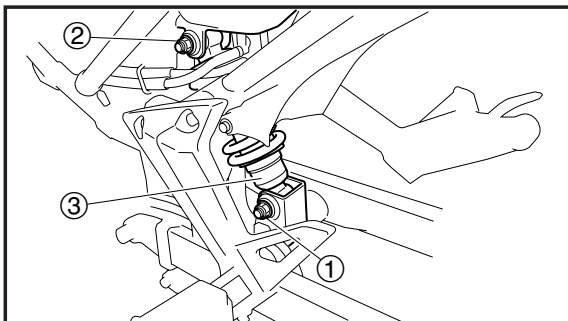

5. Remove:

- rear shock absorber bolt (upper and lower) ①
- washer
- rear shock absorber nut (upper and lower) ②
- washers
- rear shock absorber assembly ③

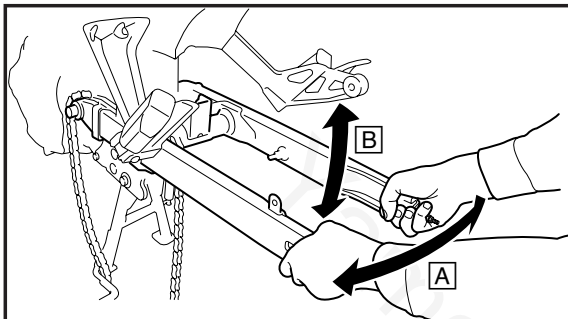

6. Measure:

- swingarm side play
- swingarm vertical movement



- a. Measure the tightening torque of the swingarm pivot shaft nut.



Pivot shaft nut
66 Nm (6.6 m·kg, 43 ft·lb)

- b. Measure the swingarm side play [A] by moving the swingarm from side to side.
- c. If the swingarm side play is out of specification, check the spacers and bearings.




Swingarm side play (at the end of the swingarm)
1 mm (0.04 in)

- d. Check the swingarm vertical movement [B] by moving the swingarm up and down.
- If swingarm vertical movement is not smooth or if there is binding, check the washer and bushings.




REAR SHOCK ABSORBER ASSEMBLY AND SWINGARM

CHAS

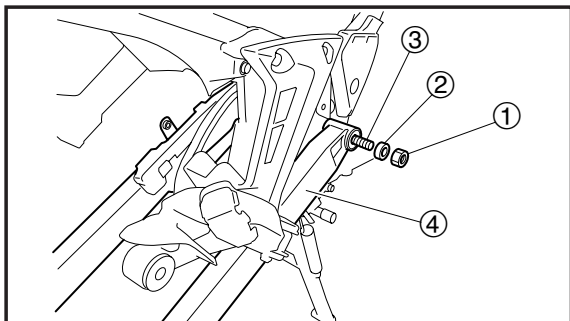

7. Remove:

- swingarm pivot shaft nut ①
- washer ②
- swingarm pivot shaft ③
- swingarm ④

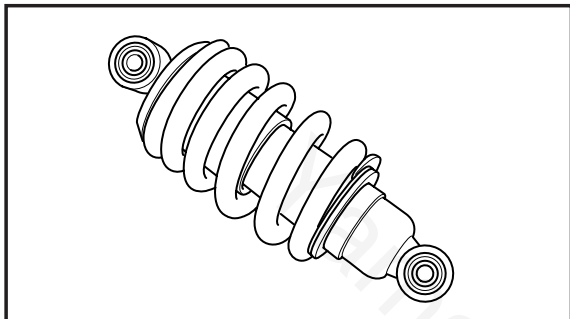

EAS00695




CHECKING THE REAR SHOCK ABSORBER ASSEMBLIES

The following procedure applies to both rear shock absorber assemblies.

1. Check:

- rear shock absorber rod
Bends/damage → Replace the rear shock absorber assembly.
- rear shock absorber
Oil leaks → Replace the rear shock absorber assembly.
- spring
Damage/wear → Replace the rear shock absorber assembly.
- bushings
Damage/wear → Replace.
- bolts
Bends/damage/wear → Replace.

REAR SHOCK ABSORBER ASSEMBLY AND SWINGARM

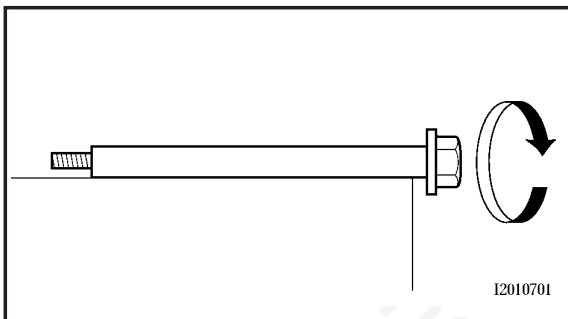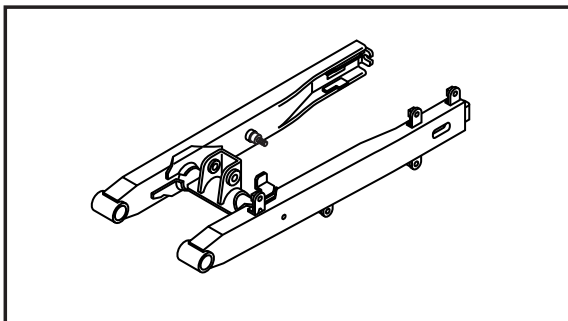

EAS00707

CHECKING THE SWINGARM

1. Check:
 - swingarm
Bends/cracks/damage → Replace.

2. Check:
 - swingarm pivot shaft
Roll the pivot shaft on a flat surface.
Bends → Replace.

⚠ WARNING

Do not attempt to straighten a bent pivot shaft.

3. Wash:
 - swingarm pivot shaft
 - washer
 - bushings



Recommended cleaning solvent
Kerosene

4. Check:
 - washer
Damage/wear → Replace.
 - bushings
Damage/wear → Replace.


EAS00711/EAS00699

INSTALLING THE REAR SHOCK ABSORBER ASSEMBLIES AND SWINGARM

1. Lubricate:
 - swingarm pivot shaft



Recommended lubricant
Lithium-soap-based grease

REAR SHOCK ABSORBER ASSEMBLY AND SWINGARM

2. Install:

- swingarm
- swingarm pivot shaft
- collar
- swingarm pivot shaft nut

66 Nm (6.6 m·kg, 48 ft·lb)

3. Install:

- rear shock absorber assemblies
- rear shock absorber nuts
- rear shock absorber bolts

46 Nm (4.6 m·kg, 33 ft·lb)

4. Install:

- brake torque rod (to swingarm)

16 Nm (1.6 m·kg, 12 ft·lb)

5. Install:

- drive chain case

10 Nm (1.0 m·kg, 7.2 ft·lb)


6. Install:

- rear wheel
Refer to "REAR WHEEL AND BRAKE".
- muffler
Refer to "REMOVING THE ENGINE" in chapter 4.
- rear cowlings (left and right)
Refer to "INSTALLING THE REAR COWLINGS" in chapter 3.



DRIVE CHAIN AND SPROCKETS

- ① Rear wheel drive hub
- ② Driven sprocket
- ③ Lock washer
- ④ Collar
- ⑤ Oil seal
- ⑥ Bearing
- ⑦ Master link
- ⑧ Drive chain
- ⑨ Drive sprocket
- ⑩ Circlip
- ⑪ Drive sprocket cover

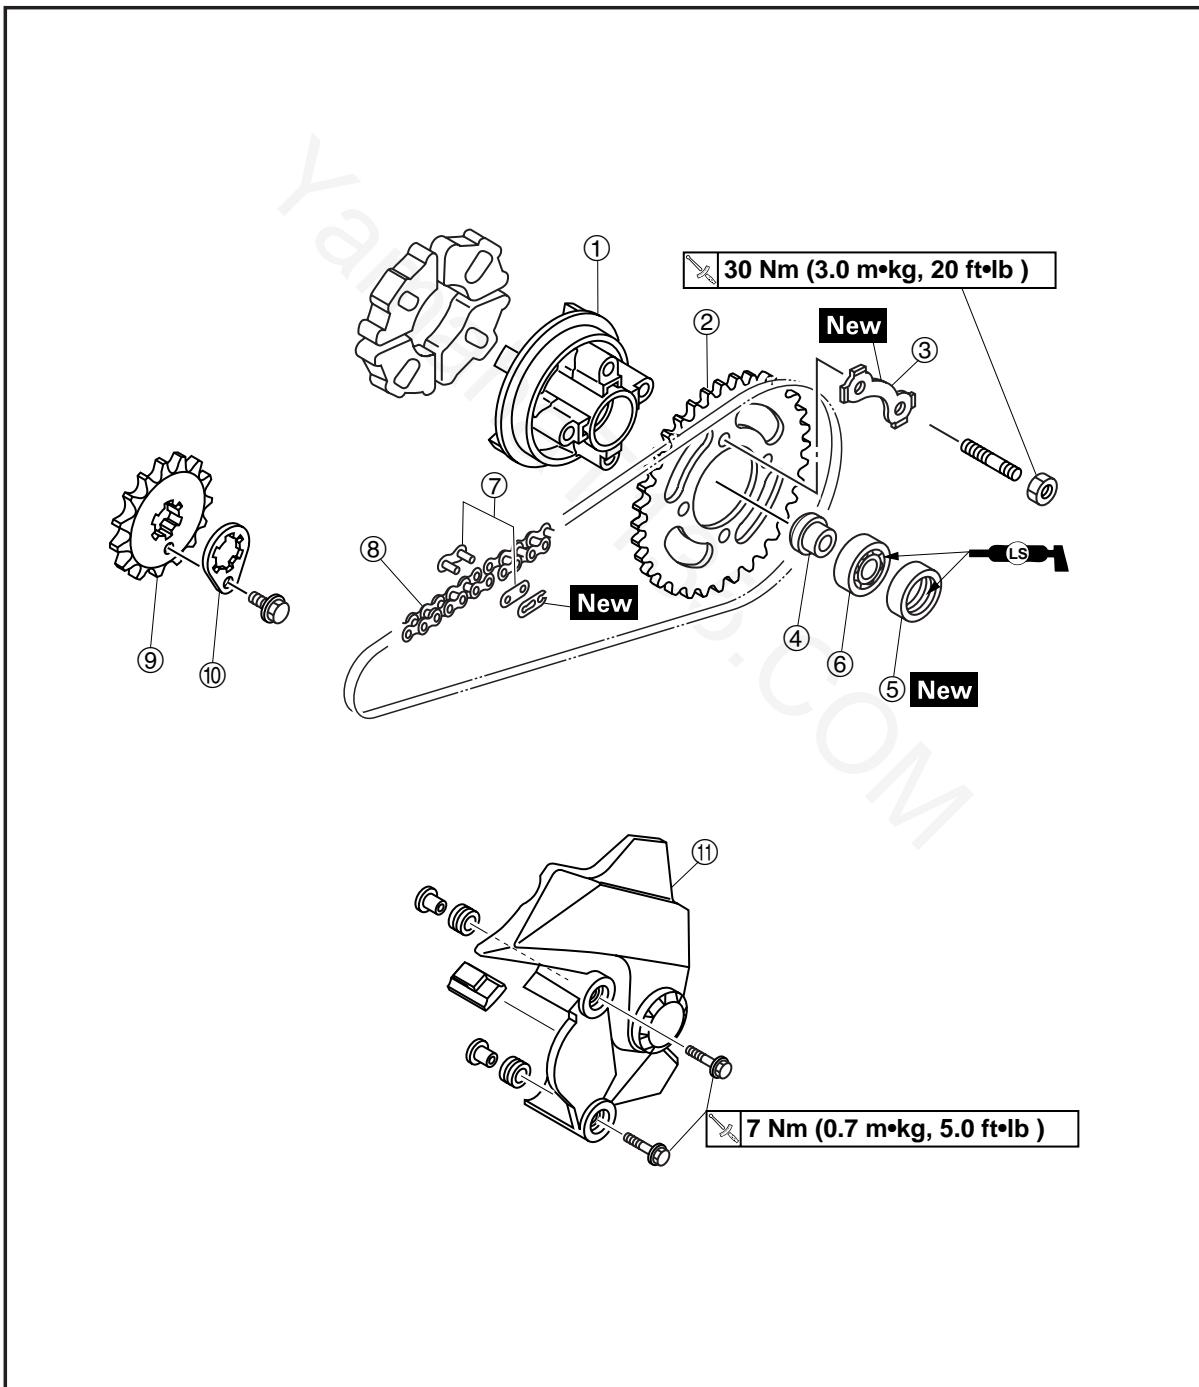

EAS00706

REMOVING THE DRIVE CHAIN AND SPROCKETS

1. Stand the vehicle on a level surface.

⚠ WARNING


Securely support the vehicle so that there is no danger of it falling over.

NOTE:

Place the vehicle on a suitable stand so that the rear wheel is elevated.


2. Remove:

- rear wheel
 - rear wheel drive hub assembly
- Refer to "REAR WHEEL AND BRAKE".

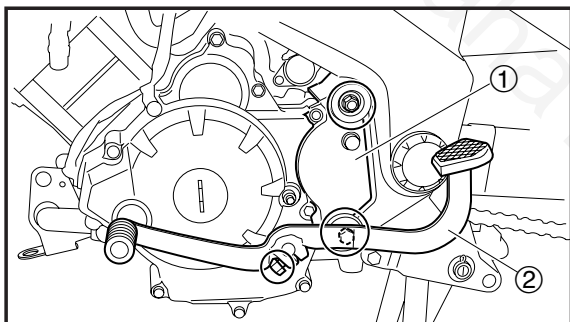

3. Remove:

- shift pedal bolt
- shift pedal (1)
- drive sprocket cover bolts
- drive sprocket cover (2)

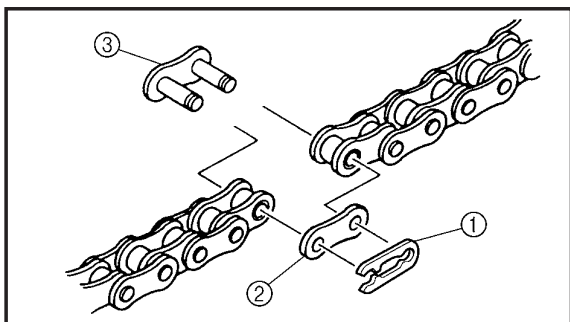


4. Remove:

- master link clip (1)
- master link plate (2)
- master link body (3)


5. Remove:

- drive chain

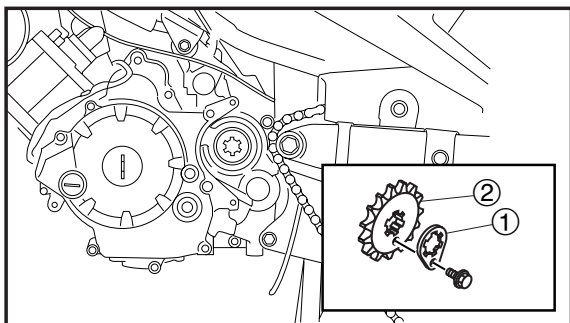

6. Remove:




- sprocket holder bolt
- drive sprocket holder (1)
- drive sprocket (2)

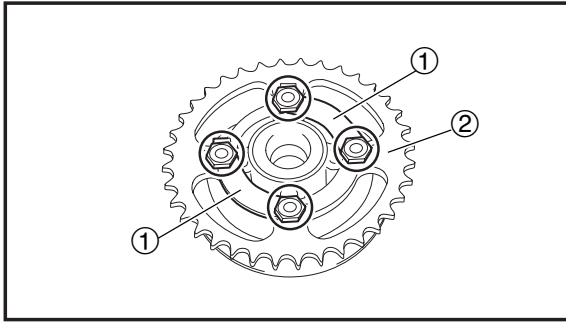


7. Straighten the lock washer tabs.

8. Remove:

- driven sprocket nuts
- driven sprocket bolts
- lock washers ①
- driven sprocket ②

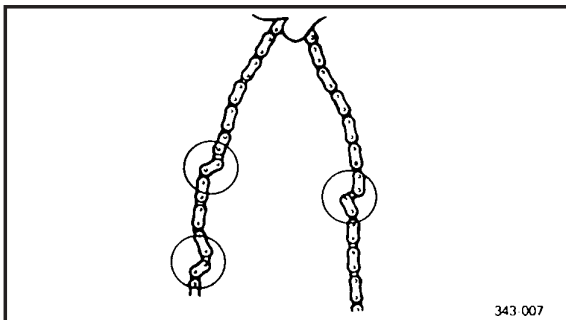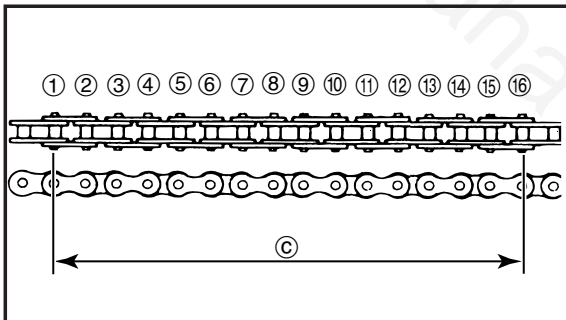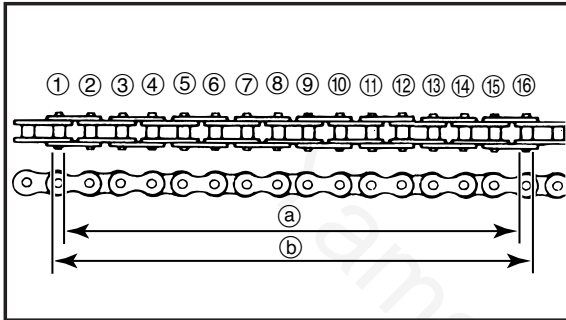

343-007

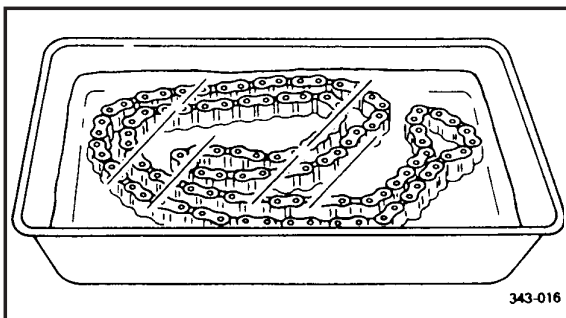

343-016

EAS00710

CHECKING THE DRIVE CHAIN

1. Measure:

- Measure the length of 15 links on the inner side (a) and outer side (b) of the pin and calculate the length between pin centers.
- Length (c) between pin centers = (inner dimension (a) + outer dimension (b))/2
- 15-Link section c of the drive chain
Out of specification → Replace the drive chain, drive sprocket and rear wheel sprocket as a set.



**15-link drive chain section limit
(maximum)**
194.3 mm (7.65 in)

NOTE:

- While measuring the 15-link section, push down on the drive chain to increase its tension.
- Perform this measurement at two or three different places.

2. Check:

- drive chain
Stiffness → Clean and lubricate or replace.

3. Clean:

- drive chain




- Wipe the drive chain with a clean cloth.
- Put the drive chain in kerosene and remove any remaining dirt.
- Remove the drive chain from the kerosene and completely dry it.



DRIVE CHAIN AND SPROCKETS

CHAS

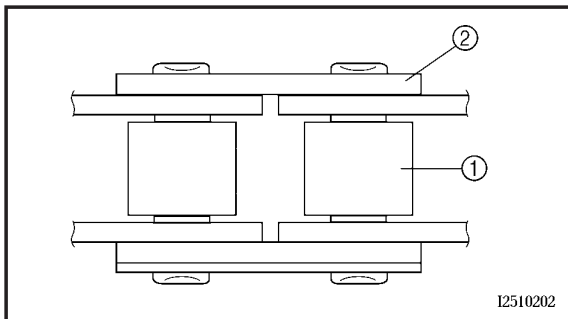

4. Check:

- drive chain rollers ①
Damage/wear → Replace the drive chain.
- drive chain side plates ②
Cracks/damage/wear → Replace the drive chain.


5. Lubricate:

- drive chain



Recommended lubricant

Engine oil or chain lubricant
suitable for non-O-ring chains

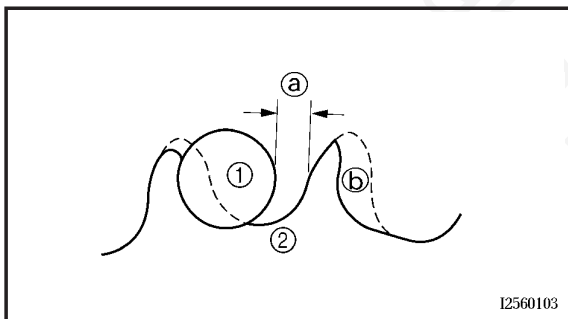

6. Check:

- drive sprocket
- driven sprocket
Worn more than 1/4 tooth (a) → Replace the drive chain and sprockets as a set.
Bent teeth → Replace the drive chain and sprockets as a set.

(b) Correct

① Drive chain roller

② Drive chain sprocket

EAS00714

INSTALLING THE DRIVE CHAIN AND SPROCKETS

1. Install:

- driven sprocket ②

30 Nm (3.0 m·kg, 22 ft·lb)

- lock washers ① **New**
- driven sprocket bolts
- driven sprocket nuts

NOTE:


Tighten the bolts in a crisscross pattern.


2. Bend:

- lock washer tab ①

NOTE:

Bend the lock washer tabs along a flat side of each bolt.

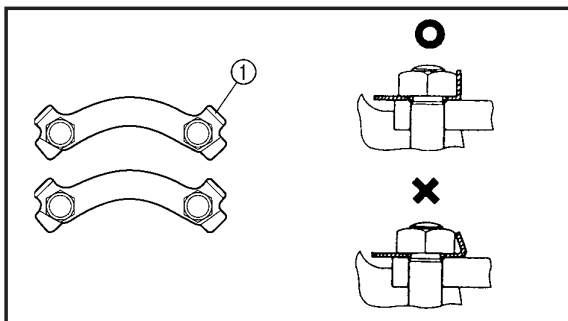

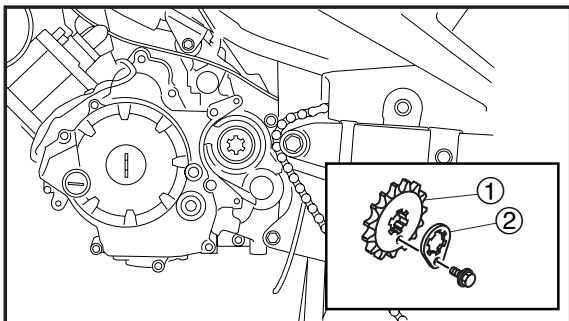


3. Install:
- drive sprocket ①
 - sprocket holder ②
 - Sprocket holder bolt

4. Lubricate:
- drive chain
 - master link **New**



Recommended lubricant
Engine oil or chain lubricant
suitable for non-O-ring chains

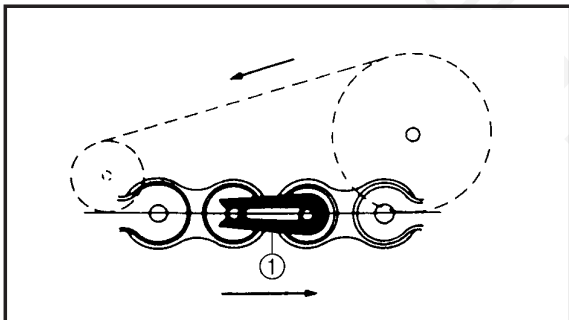

5. Install:
- master link body
 - master link plate
6. Install:
- master link clip ①

CAUTION:

- The closed end of the master link clip must face in the direction of drive chain rotation.
- Never install a new drive chain onto worn drive chain sprockets; this will dramatically shorten the drive chains life.

7. Adjust:
- drive chain slack
- Refer to "ADJUSTING THE DRIVE CHAIN SLACK" in chapter 3.




Drive chain slack
25–35 mm (0.98–1.38 in)

CAUTION:

A drive chain that is too tight will overload the engine and other vital parts, and one that is too loose can skip and damage the swingarm or cause an accident. Therefore, keep the drive chain slack within the specified limits.



YamahaT135.COM



CHAPTER 8

ELECTRICAL SYSTEM

ELECTRICAL COMPONENTS	8-1
CHECKING SWITCH CONTINUITY	8-3
CHECKING THE SWITCHES	8-5
CHECKING THE BULBS AND BULB SOCKETS	8-7
TYPES OF BULBS	8-7
CHECKING THE CONDITION OF THE BULBS	8-8
CHECKING THE CONDITION OF THE BULB SOCKETS	8-9
IGNITION SYSTEM	8-10
CIRCUIT DIAGRAM	8-10
TROUBLESHOOTING	8-11
ELECTRIC STARTING SYSTEM (T135SE)	8-15
CIRCUIT DIAGRAM	8-15
TROUBLESHOOTING	8-16
STARTER MOTOR (T135SE)	8-18
REMOVING THE STARTER MOTOR	8-19
DISASSEMBLING THE STARTER MOTOR	8-19
CHECKING THE STARTER MOTOR	8-19
ASSEMBLING THE STARTER MOTOR	8-21
INSTALLING THE STARTER MOTOR	8-21
CHARGING SYSTEM	8-22
CIRCUIT DIAGRAM	8-22
TROUBLESHOOTING	8-23
LIGHTING SYSTEM	8-25
CIRCUIT DIAGRAM	8-25
TROUBLESHOOTING	8-26
CHECKING THE LIGHTING SYSTEM	8-27
SIGNALING SYSTEM	8-30
CIRCUIT DIAGRAM	8-30
TROUBLESHOOTING	8-32
CHECKING THE SIGNALING SYSTEM	8-33
COOLING SYSTEM	8-40
CIRCUIT DIAGRAM	8-40
TROUBLESHOOTING	8-41
SELF-DIAGNOSIS	8-44
TROUBLESHOOTING	8-46



YamahaT135.COM





EAS00729

ELECTRICAL SYSTEM


ELECTRICAL COMPONENTS

- ① Ignition coil
- ② Main switch
- ③ Rear brake light switch
- ④ Negative battery lead
- ⑤ Battery
- ⑥ Positive battery lead (T135SE)
- ⑦ Positive battery lead (T135S)
- ⑧ Fuse
- ⑨ Wire harness

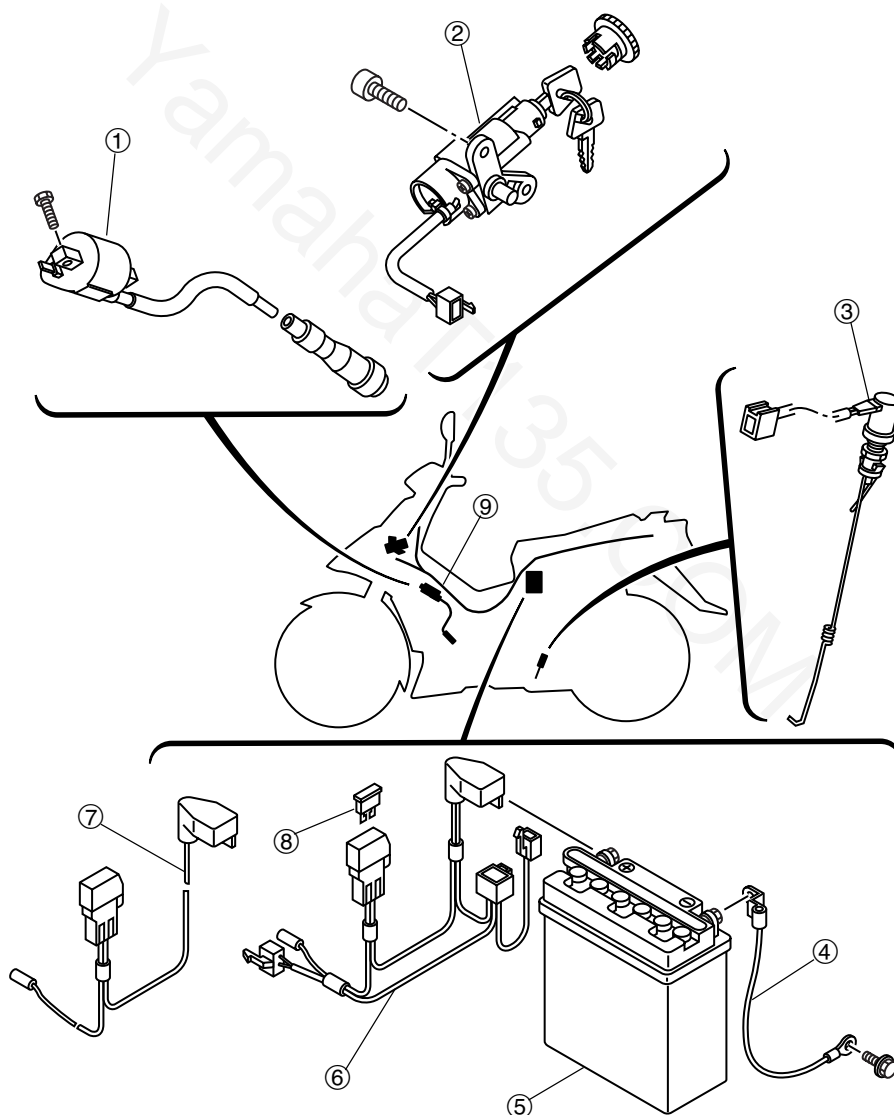





- ① Horn
- ② Turn signal relay
- ③ Starter relay (T135SE)
- ④ Fuel gauge
- ⑤ Rectifier/regulator
- ⑥ Fan motor relay
- ⑦ Neutral switch
- ⑧ Thermo sensor
- ⑨ C.D.I. unit

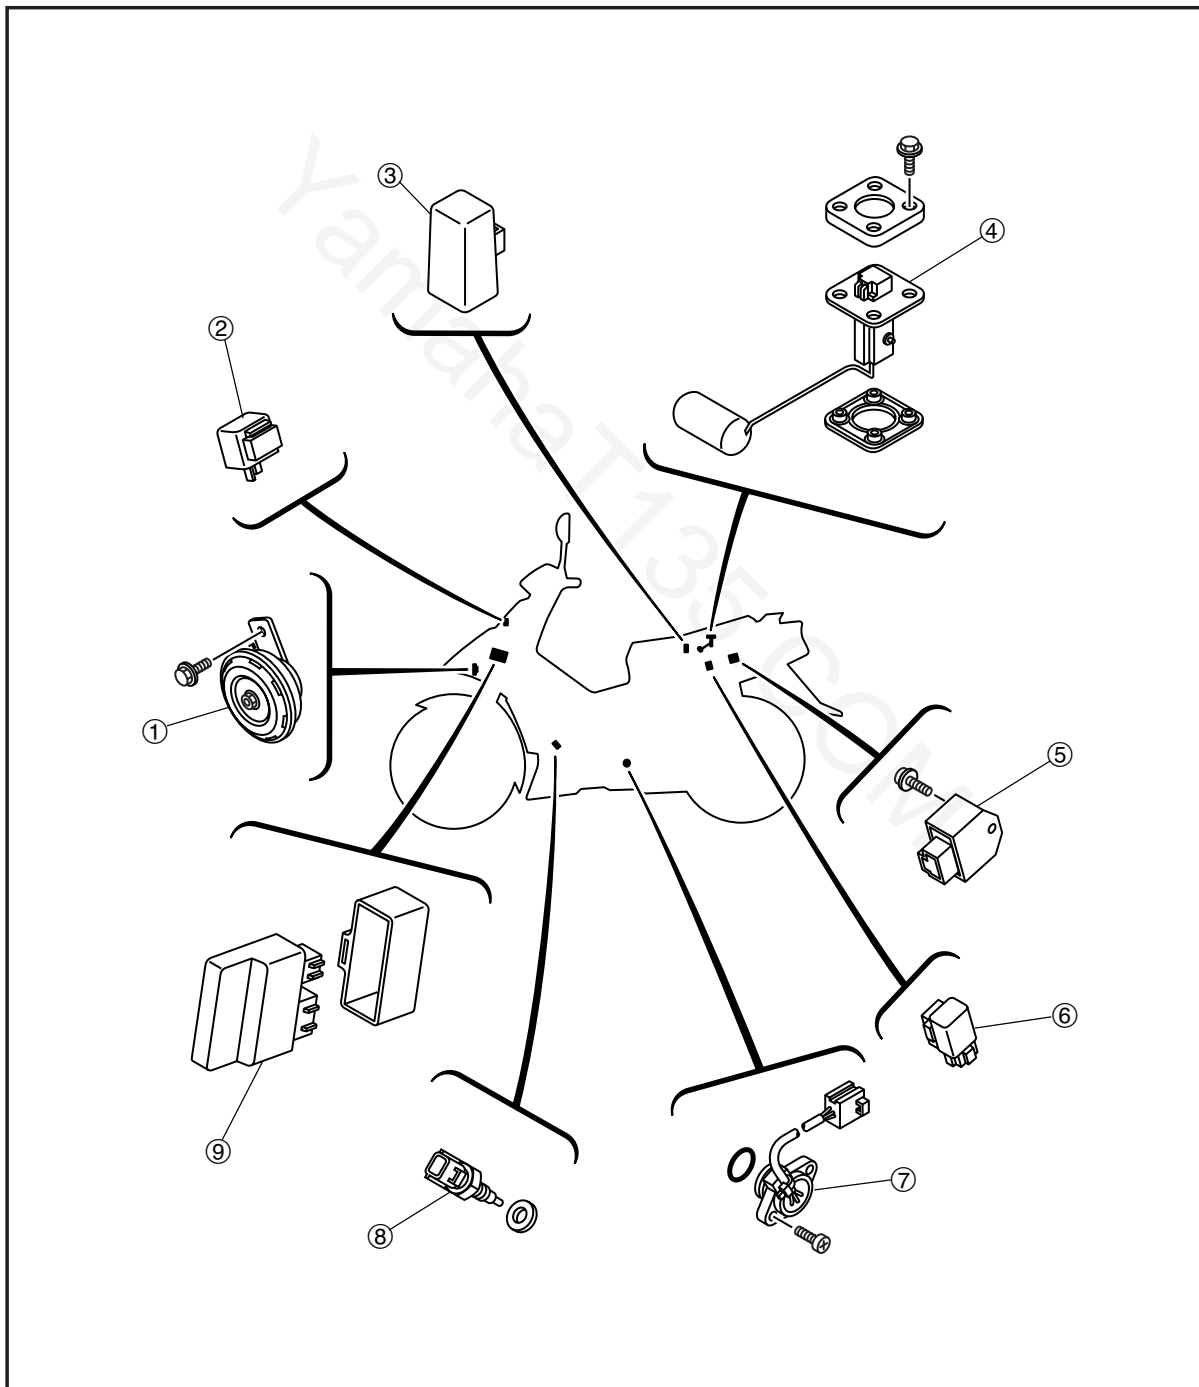

CHECKING SWITCH CONTINUITY

ELEC

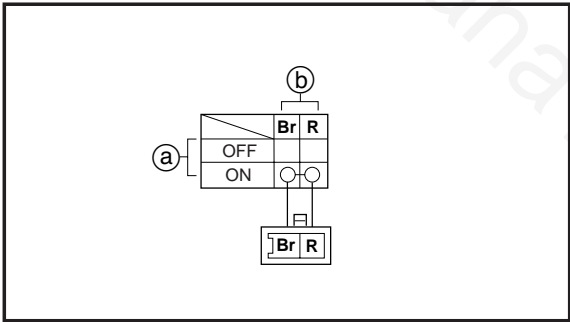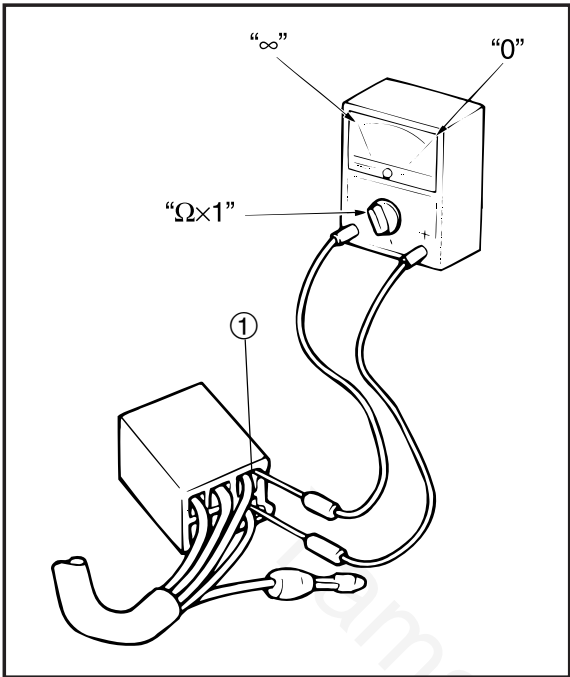

EAS00730

CHECKING SWITCH CONTINUITY

Check each switch for continuity with the pocket tester. If the continuity reading is incorrect, check the wiring connections and if necessary, replace the switch.

CAUTION:

Never insert the tester probes into the coupler terminal slots ①. Always insert the probes from the opposite end of the coupler, taking care not to loosen or damage the leads.



Pocket tester
90890-03112

NOTE:

- Before checking for continuity, set the pocket tester to "0" and to the " $\Omega \times 1$ " range.
- When checking for continuity, switch back and forth between the switch positions a few times.

The terminal connections for switches (e.g., main switch, engine stop switch) are shown in an illustration similar to the one on the left.

The switch positions ① are shown in the far left column and the switch lead colors ② are shown in the top row in the switch illustration.

NOTE:

"○—○" indicates a continuity of electricity between switch terminals (i.e., a closed circuit at the respective switch position).

The example illustration on the left shows that:

There is continuity between red and brown when the switch is set to "ON".



YamahaT135.COM



EAS00731


CHECKING THE SWITCHES

Check each switch for damage or wear, proper connections, and also for continuity between the terminals. Refer to "CHECKING SWITCH CONTINUITY".


Damage/wear → Repair or replace.

Improperly connected → Properly connect.

Incorrect continuity reading → Replace the switch.

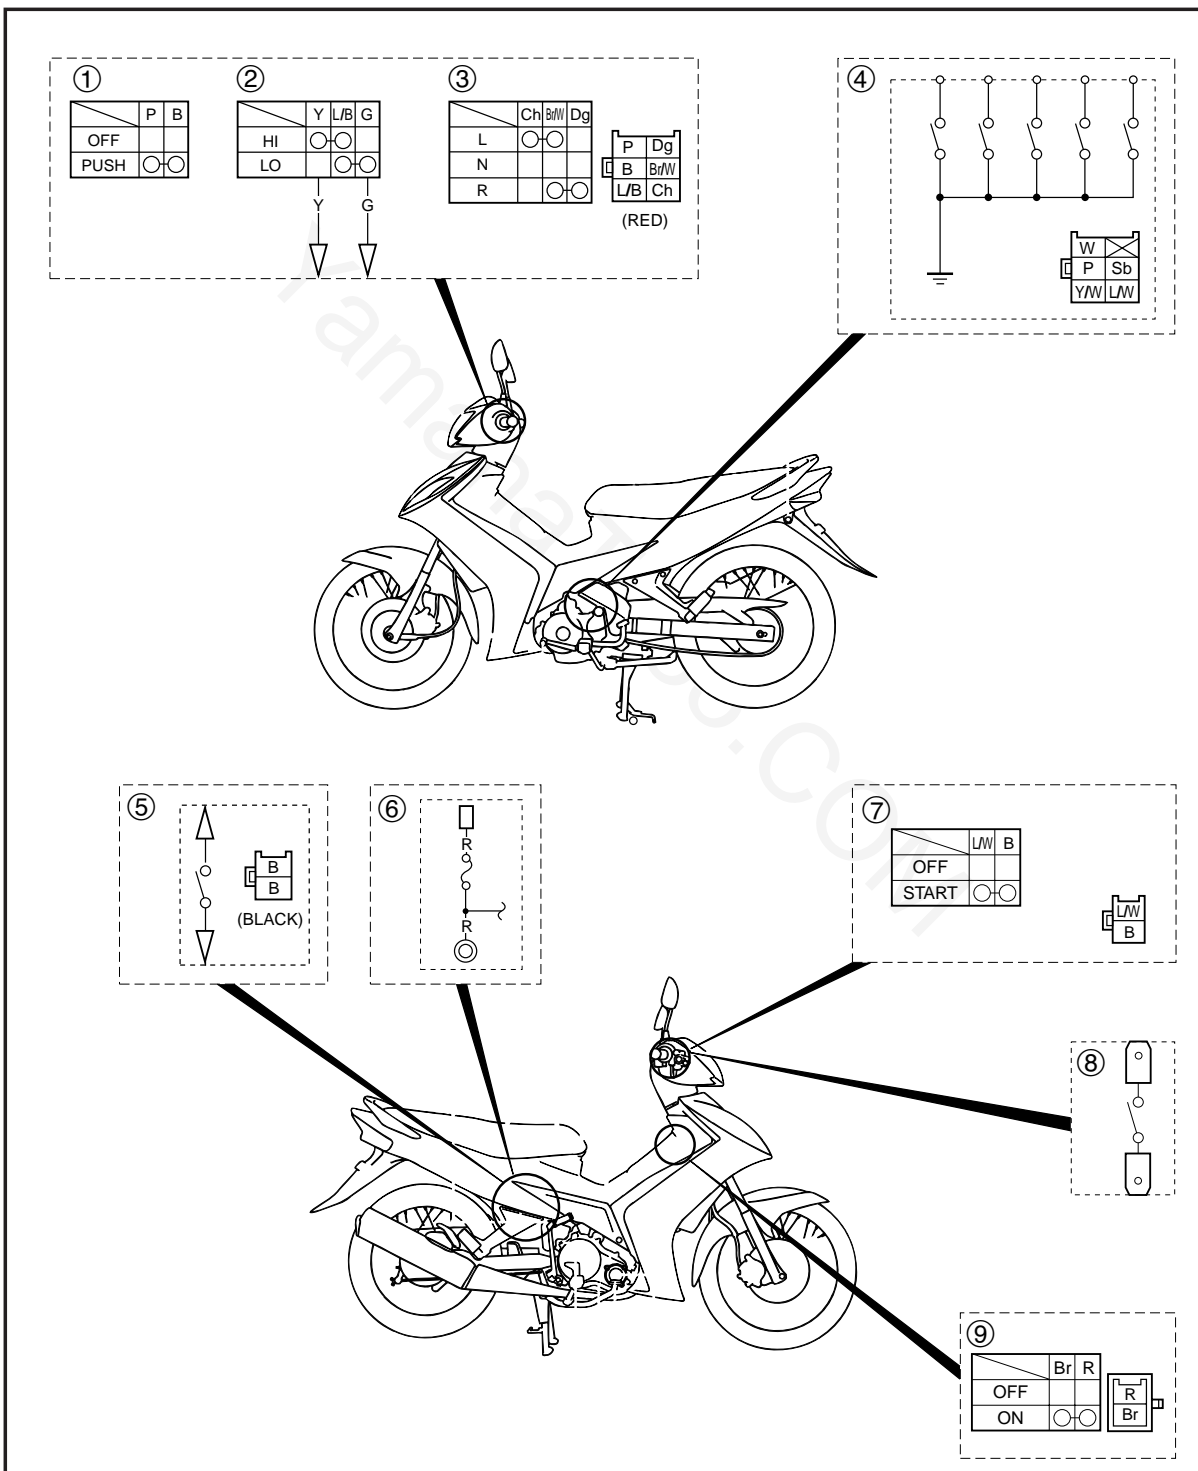


CHECKING THE SWITCHES

ELEC

- ① Horn switch
- ② Dimmer switch
- ③ Turn signal switch
- ④ Neutral switch
- ⑤ Rear brake light switch
- ⑥ Fuse
- ⑦ Start switch
- ⑧ Front brake light switch
- ⑨ Main switch

YamahaT135.COM



EAS00732



CHECKING THE BULBS AND BULB SOCKETS

Check each bulb and bulb socket for damage or wear, proper connections, and also for continuity between the terminals.

Damage/wear → Repair or replace the bulb, bulb socket or both.

Improperly connected → Properly connect.

No continuity → Repair or replace the bulb, bulb socket or both.

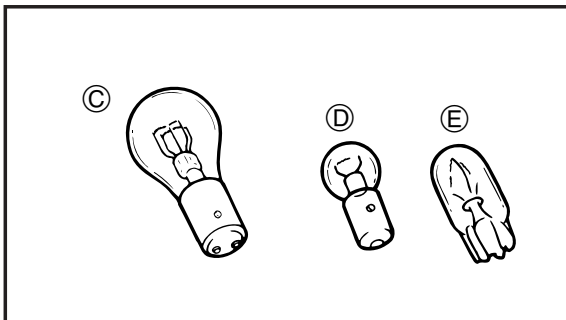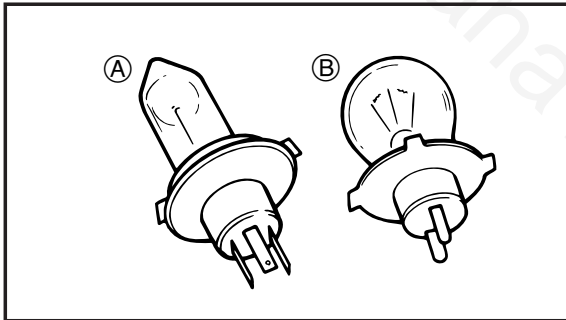

TYPES OF BULBS

The bulbs used on this vehicle are shown in the illustration on the left.

- Bulbs (A) and (B) are used for the headlights and usually use a bulb holder that must be detached before removing the bulb. The majority of these types of bulbs can be removed from their respective socket by turning them counterclockwise.
- Bulb (C) is used for turn signal and tail/brake lights and can be removed from the socket by pushing and turning the bulb counterclockwise.
- Bulbs (D) and (E) are used for meter and indicator lights and can be removed from their respective sockets by carefully pulling them out.



CHECKING THE CONDITION OF THE BULBS

The following procedure applies to all of the bulbs.

1. Remove:
 - bulb

⚠ WARNING

Since the headlight bulb gets extremely hot, keep flammable products and your hands away from the bulb until it has cooled down.

CAUTION:

- Be sure to hold the socket firmly when removing the bulb. Never pull the lead, otherwise it may be pulled out of the terminal in the coupler.
- Avoid touching the glass part of the headlight bulb to keep it free from oil, otherwise the transparency of the glass, the life of the bulb, and the luminous flux will be adversely affected. If the headlight bulb gets soiled, thoroughly clean it with a cloth moistened with alcohol or lacquer thinner.


2. Check:
- bulb (for continuity)
(with the pocket tester)
No continuity → Replace.




Pocket tester
90890-03112

NOTE:

Before checking for continuity, set the pocket tester to “0” and to the “ $\Omega \times 1$ ” range.

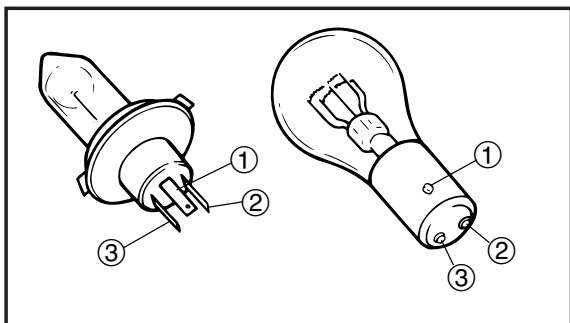

- Connect the positive tester probe to terminal ① and the negative tester probe to terminal ②, and check for continuity.
- Connect the positive tester probe to terminal ① and the negative tester probe to terminal ③, and check for continuity.
- If either of the readings indicate no continuity, replace the bulb.

CHECKING THE BULBS AND BULB SOCKETS**ELEC****CHECKING THE CONDITION OF THE BULB SOCKETS**

The following procedure applies to all of the bulb sockets.

1. Check:

- bulb socket (for continuity)
(with the pocket tester)

No continuity → Replace.



Pocket tester
90890-03112

NOTE:


Check each bulb socket for continuity in the same manner as described in the bulb section; however, note the following.



- a. Install a good bulb into the bulb socket.
- b. Connect the pocket tester probes to the respective leads of the bulb socket.
- c. Check the bulb socket for continuity. If any of the readings indicate no continuity, replace the bulb socket.



IGNITION SYSTEM CIRCUIT DIAGRAM

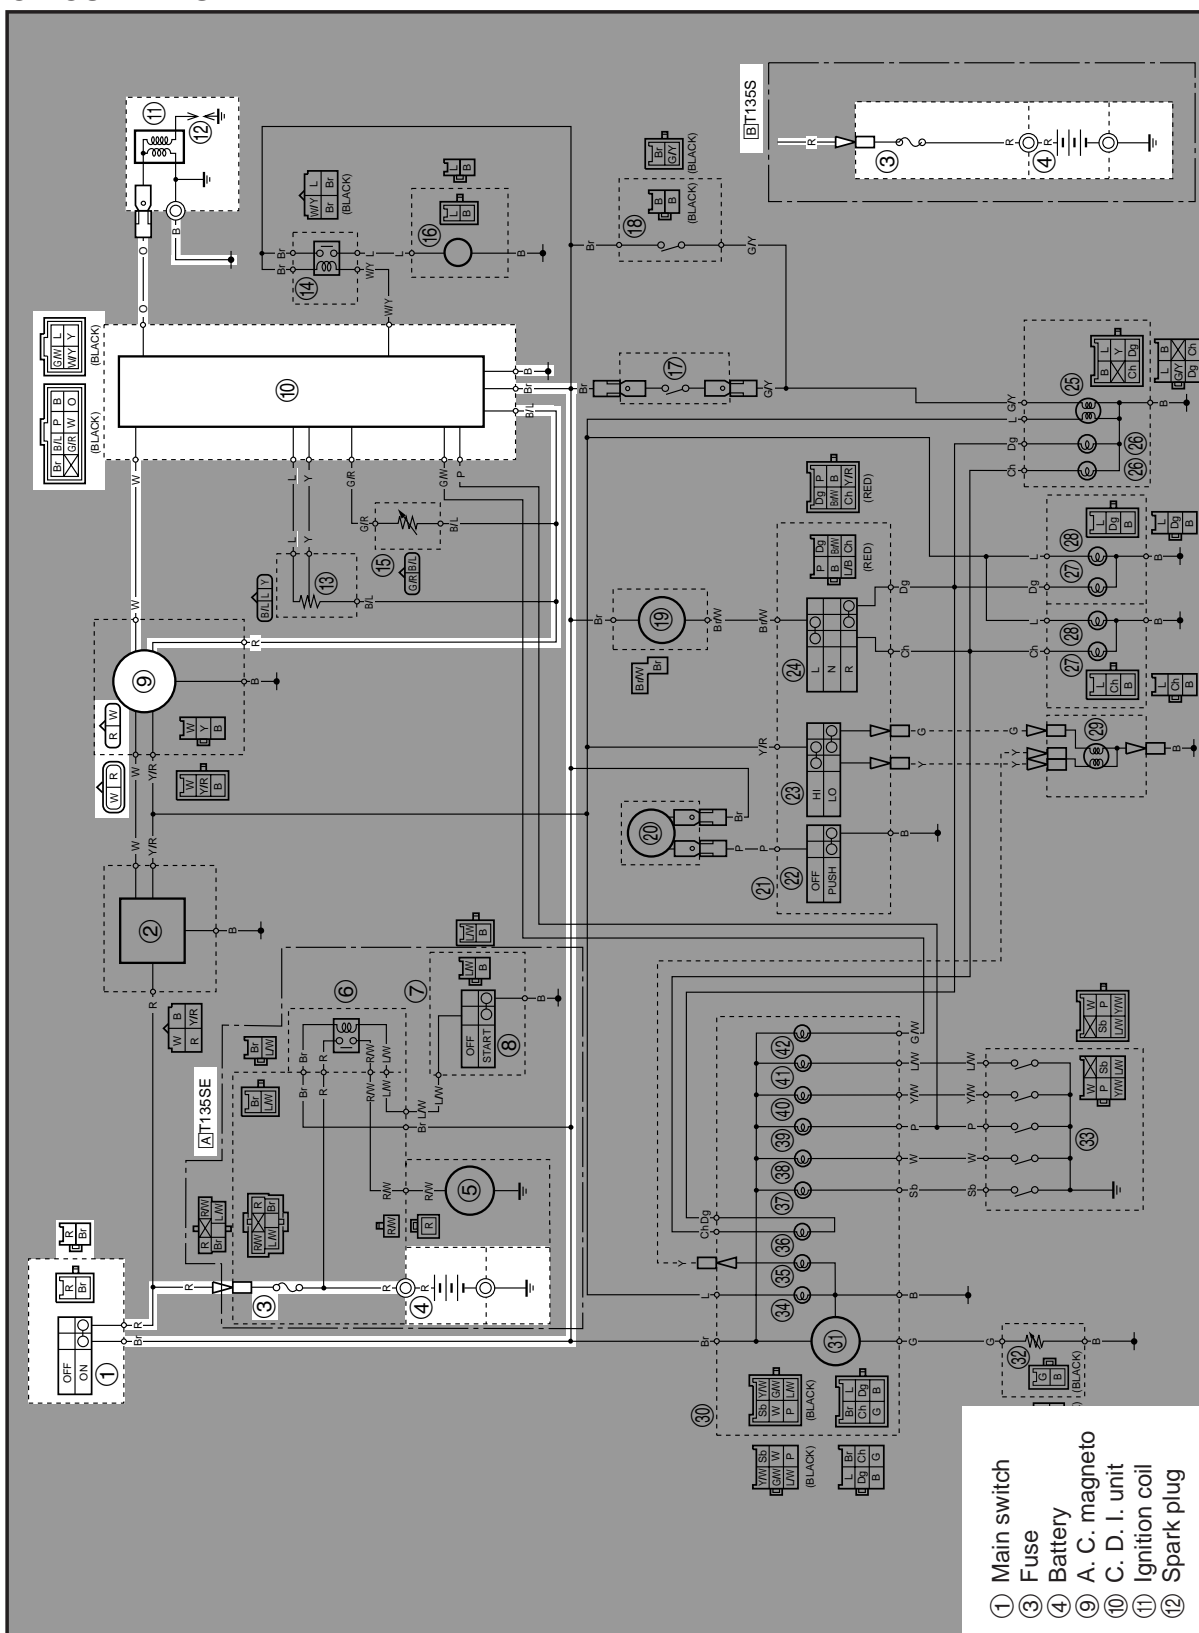



EAS00736

TROUBLESHOOTING

The ignition system fails to operate (no spark or intermittent spark).

Check:

1. fuse
2. battery
3. spark plug
4. ignition spark gap
5. spark plug cap resistance
6. ignition coil resistance
7. pickup coil resistance
8. main switch
9. wiring connections (of the entire ignition system)

NOTE:

- Before troubleshooting, remove the following part(s):
 1. side cowlings (left and right)
 2. front cowling
 3. center panels (upper and lower)
 4. rear cowlings (left and right)
 5. inner panel
- Troubleshoot with the following special tool(s).



Ignition checker
90890-06754
Pocket tester
90890-03112

EAS00738

1. Fuse

- Check the fuse for continuity.
Refer to "CHECKING THE FUSE" in chapter 3.
- Is the fuse OK?

↓ YES

↓ NO

Replace the fuse.

EAS00739

2. Battery

- Check the condition of the battery.
Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



Minimum open-circuit voltage
12.8 V or more at 20°C

- Is the battery OK?

↓ YES

↓ NO

- Clean the battery terminals.
- Recharge or replace the battery.

EAS00740

3. Spark plug

- Check the condition of the spark plug.
- Check the spark plug type.
- Measure the spark plug gap.
Refer to "CHECKING THE SPARK PLUG" in chapter 3.



Standard spark plug
CPR8EA-9 (NGK)
Spark plug gap
0.8–0.9 mm (0.031–0.035 in)

- Is the spark plug in good condition, is it of the correct type, and is its gap within specification?

↓ YES

↓ NO


Re-gap or replace the spark plug.



EAS00742

4. Ignition spark gap

- Disconnect the spark plug cap from the spark plug.
- Connect the ignition checker ① as shown.
- ② Spark plug cap
- Set the main switch to "ON".
- Crank the engine by pushing the start switch and gradually increase the spark gap until a misfire occurs.
- Measure the ignition spark gap ③.

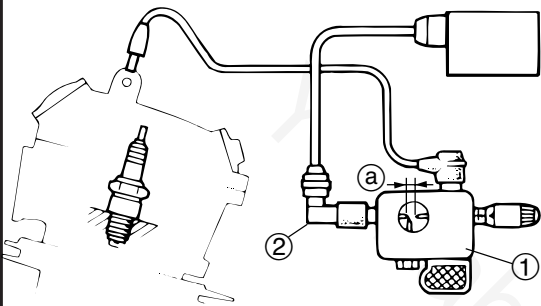

Minimum ignition spark gap
6 mm (0.24 in)

- Is there a spark and is the spark gap within specification?

↓ NO


↓ YES

The ignition system
is OK.

EAS00744

5. Spark plug cap resistance

- Remove the spark plug cap from the spark plug lead.
- Connect the pocket tester ("Ω × 1k" range) to the spark plug cap as shown.
- Measure the spark plug cap resistance.

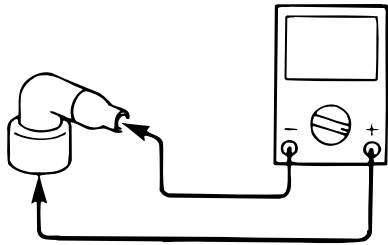

Spark plug cap resistance
5 kΩ at 20°C (68°F)

- Is the spark plug cap OK?

↓ YES

↓ NO

Replace the spark
plug cap.



EAS00746


6. Ignition coil resistance

- Disconnect the ignition coil connector from the ignition coil terminal.
- Connect the pocket tester ($\Omega \times 1$) to the ignition coil as shown.

Positive tester probe → terminal ①

Negative tester probe →

ignition coil base ②

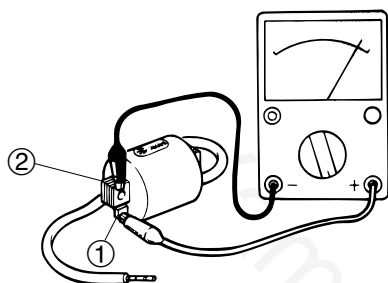

- Measure the primary coil resistance.




Primary coil resistance

0.32–0.48 Ω at 20°C (68°F)

- Connect the pocket tester ($\Omega \times 1k$) to the ignition coil as shown.

Negative tester probe → terminal ①

Positive tester probe → spark plug lead ②

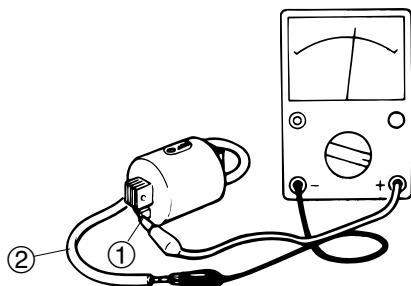

- Measure the secondary coil resistance.



Secondary coil resistance

5.68–8.52 k Ω at 20°C (68°F)

- Is the ignition coil OK?

↓ YES

↓ NO

Replace the ignition coil.



EAS00748

7. Pickup coil resistance

- Disconnect the pickup coil coupler from the wire harness.
- Connect the pocket tester ($\Omega \times 100$) to the pickup coil terminal as shown.

Positive tester probe → white ①

Negative tester probe → red ②

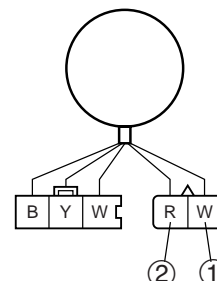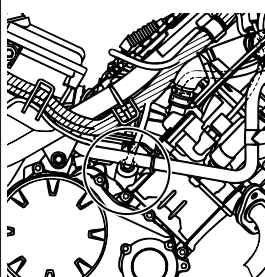

- Measure the pickup coil resistance.



Pickup coil resistance

248–372 Ω at 20°C (68°F)

(between white and red)

- Is the pickup coil OK?

↓ YES

↓ NO

Replace the stator coil/pickup coil assembly.

EAS00749


8. Main switch

- Check the main switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the main switch OK?

↓ YES

↓ NO

Replace the main switch.



EAS00754

9. Wiring

- Check the entire ignition system wiring. Refer to "CIRCUIT DIAGRAM".
- Is the ignition system wiring properly connected and without defects?




YES

Replace the C.D.I. unit.




NO

Properly connect or repair the ignition system wiring.




EAS00755

ELECTRIC STARTING SYSTEM (T135SE) CIRCUIT DIAGRAM

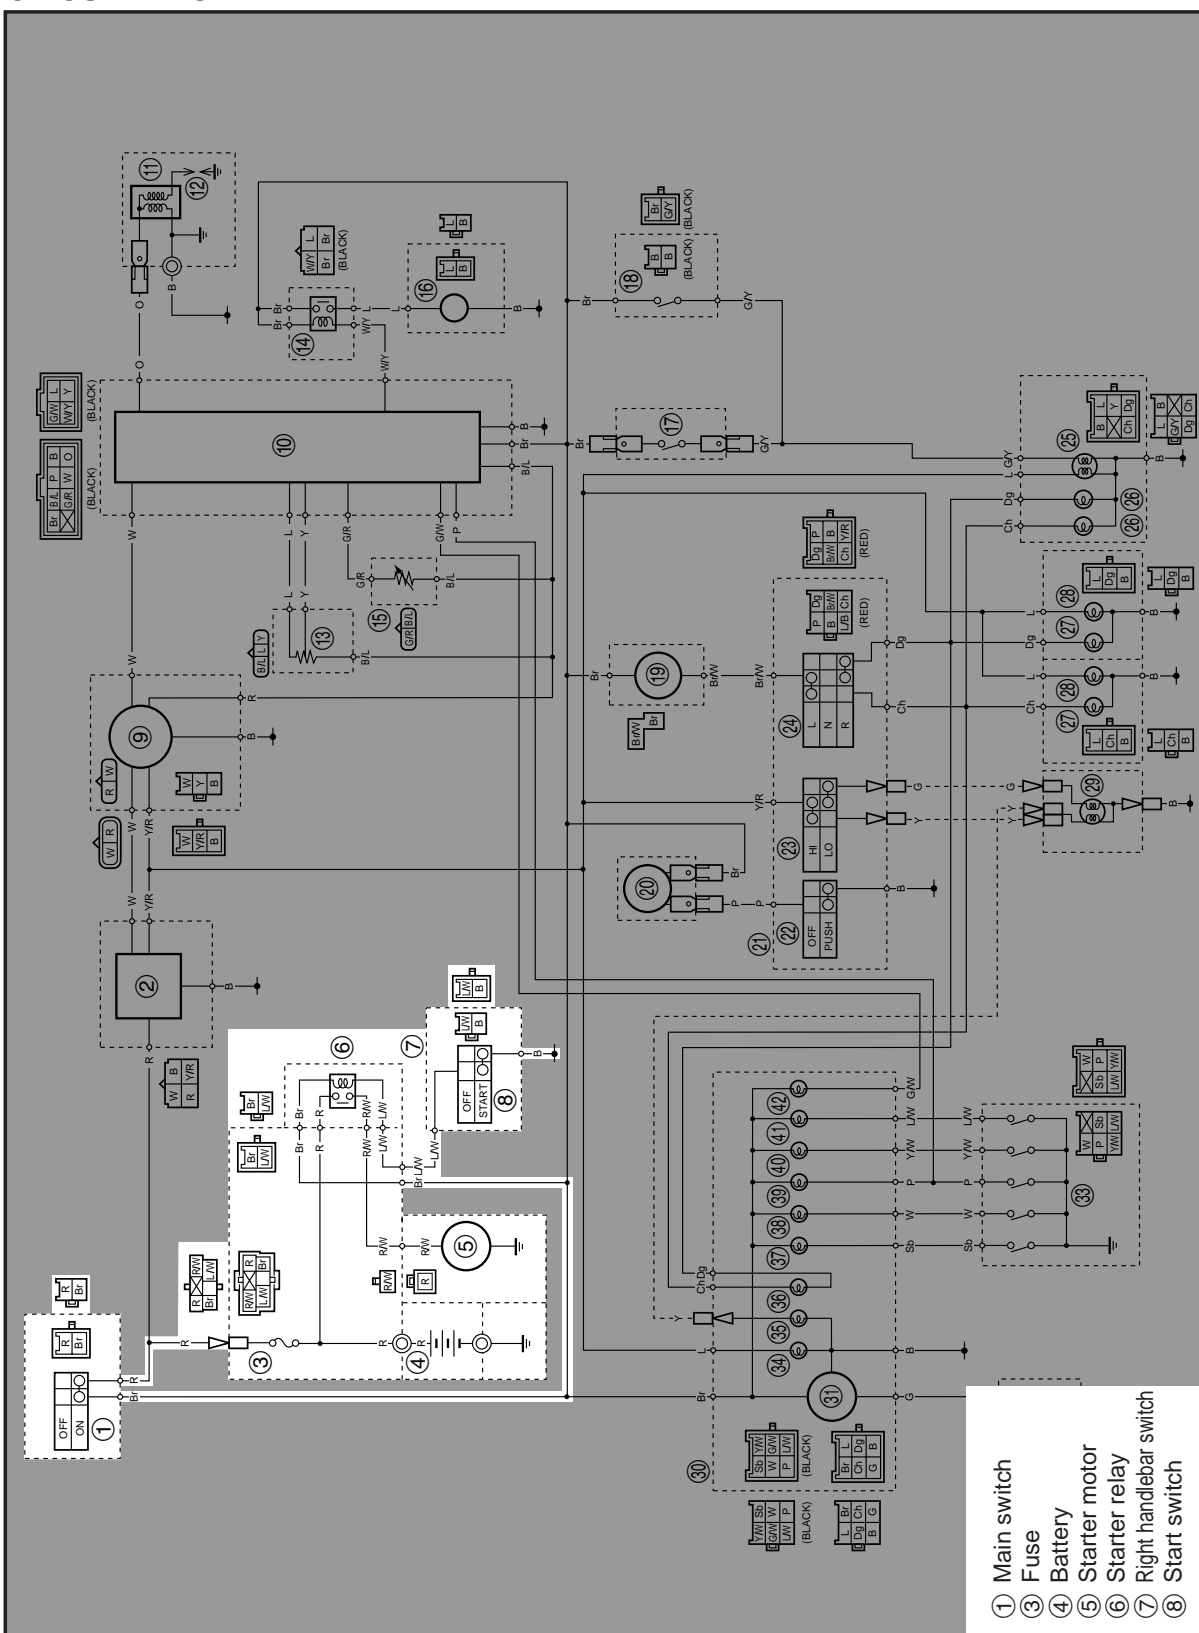

ELECTRIC STARTING SYSTEM (T135SE)

ELEC

EAS00757

TROUBLESHOOTING**The starter motor fails to turn.**

Check:

1. fuse
2. battery
3. starter motor
4. starter relay
5. main switch
6. start switch
7. wiring connections
(of the entire starting system)

NOTE:

- Before troubleshooting, remove the following part(s):
 1. side cowlings (left and right)
 2. front cowlings
 3. center panels (upper and lower)
 4. rear cowlings (left and right)
 5. inner panel
- Troubleshoot with the following special tool(s).


Pocket tester
90890-03112

EAS00738

1. Fuse

- Check the fuse for continuity.
Refer to "CHECKING THE FUSE" in chapter 3.
- 3.
- Is the fuse OK?

YES

NO

Replace the fuse.

EAS00739

2. Battery

- Check the condition of the battery.
Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.


Minimum open-circuit voltage
12.8 V or more at 20 °C

- Is the battery OK?

YES


NO

- Clean the battery terminals.
- Recharge or replace the battery.

EAS00758

3. Starter motor

- Connect the positive battery terminal ① and starter motor lead ② with a jumper lead ③.

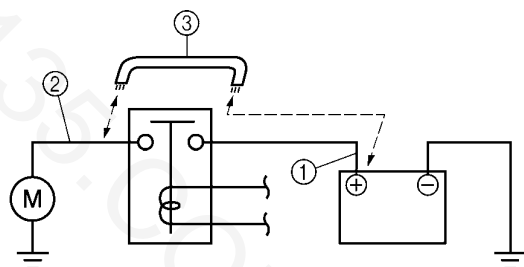

18210801

⚠ WARNING

- A wire that is used as a jumper lead must have at least the same capacity or more as that of the battery lead, other-wise the jumper lead may burn.
- This check is likely to produce sparks, therefore make sure nothing flammable is in the vicinity.

- Does the starter motor turn?

YES

NO

Repair or replace the starter motor.

ELECTRIC STARTING SYSTEM (T135SE)

ELEC



EAS00761

4. Starter relay


- Remove the starter relay from the starter relay coupler on the wire harness.
- Connect the pocket tester ($\Omega \times 1$) and battery (DC 12 V) to the starter relay coupler as shown.

Positive battery terminal → brown ①

Negative battery terminal → blue/white ②

Positive tester probe → red ③

Negative tester probe → red/white ④

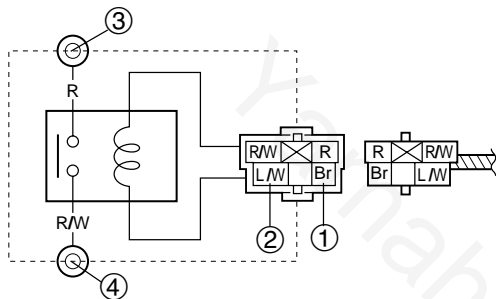

- Does the starter relay have continuity between red and red/white?

↓ YES

↓ NO

Replace the starter relay.

EAS00749

5. Main switch

- Check the main switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the main switch OK?

↓ YES

↓ NO

Replace the main switch.

EAS00764

6. Start switch

- Check the start switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the start switch OK?

↓ YES

↓ NO

Replace the right handlebar switch.

EAS00766

7. Wiring


- Check the entire starting system wiring. Refer to "CIRCUIT DIAGRAM".
- Is the starting system wiring properly connected and without defects?

↓ YES

↓ NO

The starting system circuit is OK.


Properly connect or repair the starting system wiring.



EASF0061



STARTER MOTOR (T135SE)

- ① Starter motor yoke
- ② Armature
- ③ Brush set
- ④ Starter motor lead
- ⑤ Starter motor front cover

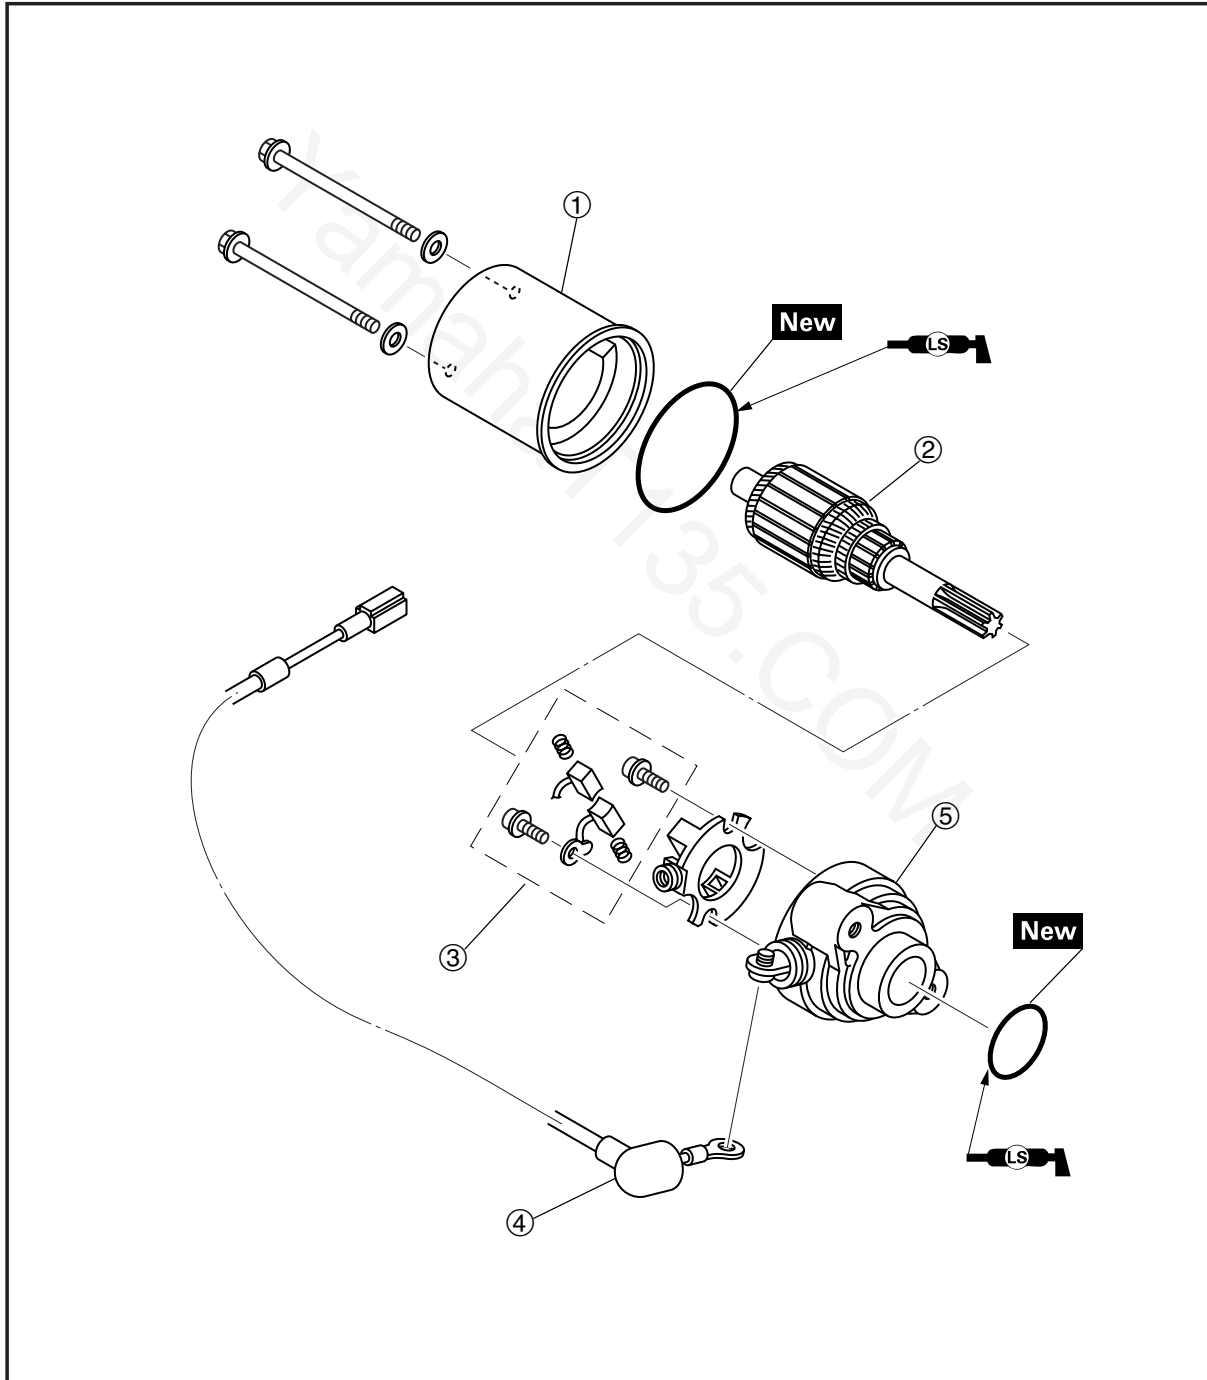

STARTER MOTOR (T135SE)


ELEC

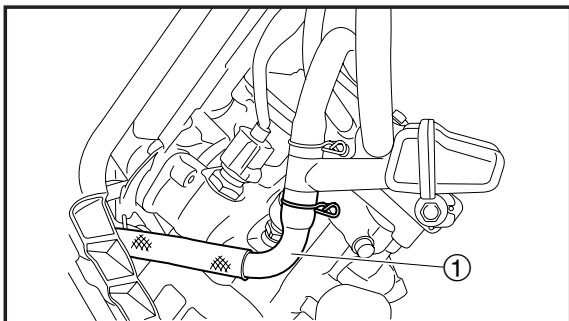

REMOVING THE STARTER MOTOR


1. Remove:

- breather pipe ①

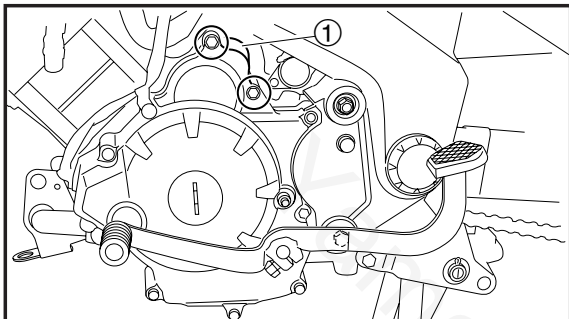


2. Remove:

- starter motor ①

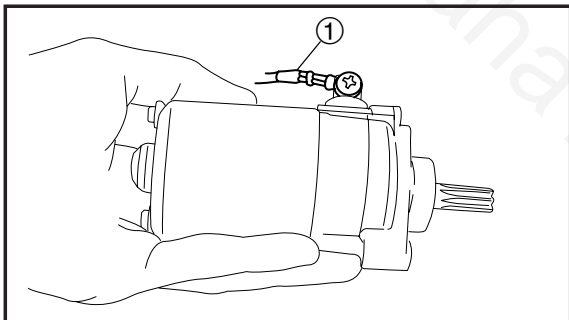

3. Remove:


- starter motor lead ①

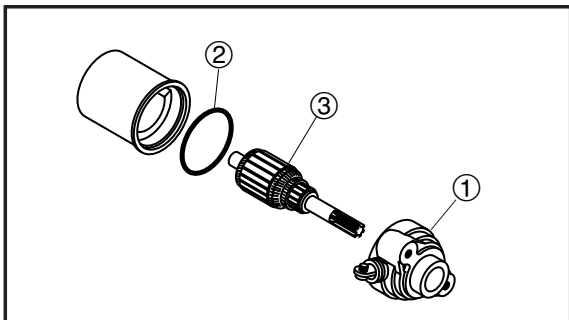

DISASSEMBLING THE STARTER MOTOR

1. Remove:

- starter motor front cover bolts (with washers)
- starter motor front cover ①
- O-ring ②
- armature ③

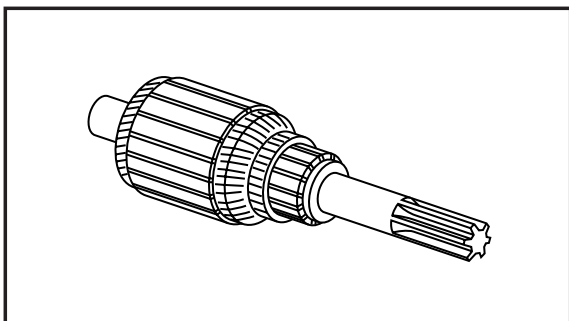


EAS00769

CHECKING THE STARTER MOTOR

1. Check:

- commutator
- Dirt → Clean with 600-grit sandpaper.

STARTER MOTOR (T135SE)

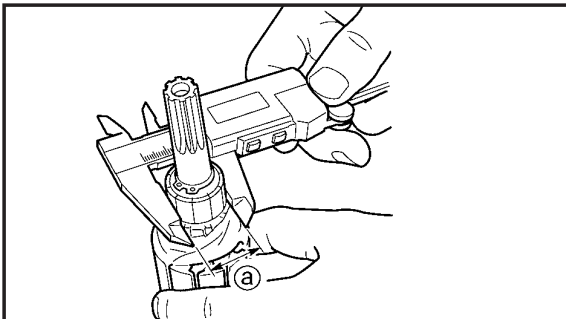ELEC


2. Measure:

- commutator diameter (a)

Out of specification → Replace the starter motor.



Commutator wear limit
16.6 mm (0.65 in)

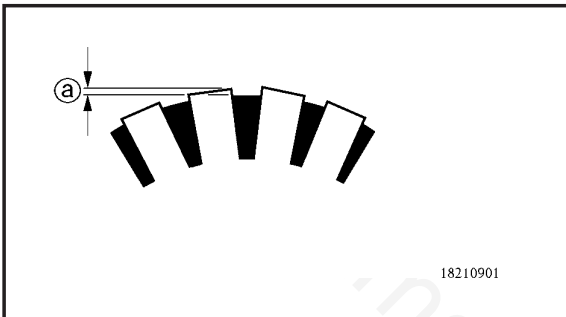

3. Measure:

- mica undercut (a)

Out of specification → Scrape the mica to the proper measurement with a hacksaw blade that has been grounded to fit the commutator.



Mica undercut
1.35 mm (0.05 in)

NOTE:

The mica of the commutator must be undercut to ensure proper operation of the commutator.

4. Measure:

- armature assembly resistances (commutator and insulation)

Out of specification → Replace the starter motor.



- a. Measure the armature assembly resistances with the pocket tester.




Pocket tester
90890-03112





Armature coil
Commutator resistance ①
0.0315–0.0385 Ω at 20°C (68°F)
Insulation resistance ②
Above 1 M Ω at 20°C (68°F)

- b. If any resistance is out of specification, replace the starter motor.

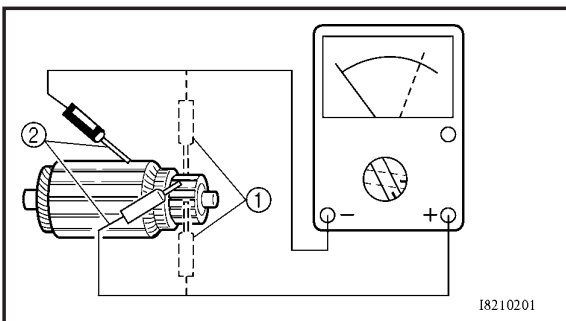

STARTER MOTOR (T135SE)

ELEC

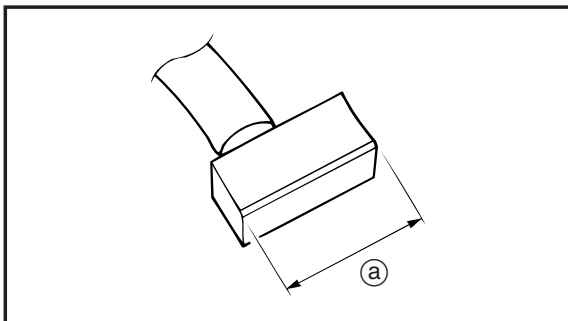


5. Measure:

- brush length (a)

Out of specification → Replace the brushes as a set.



Brush length wear limit
3.5 mm (0.14 in)

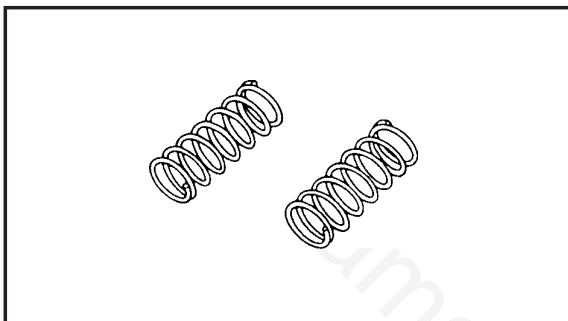

6. Measure:

- brush spring force

Out of specification → Replace the brush springs as a set.




Brush spring force
3.92–5.88 N (400–600 gf)

7. Check:

- gear teeth

Damage/wear → Replace the armature.

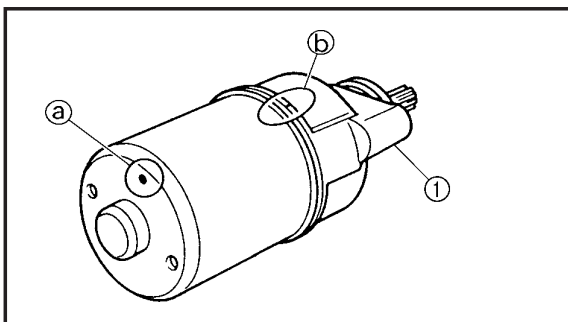

EAS00772

ASSEMBLING THE STARTER MOTOR

1. Install:


- O-ring **New**
- armature
(in start motor front cover ①)
- O-ring **New**
- starter motor yoke
- starter motor front cover bolts
(with washers)
- O-ring **New**

NOTE:

Align the mark (a) on the starter motor yoke with the mark (b) on the starter motor front cover.


INSTALLING THE STARTER MOTOR

For installation, reverse the removal procedure.



EAS00773

CHARGING SYSTEM CIRCUIT DIAGRAM

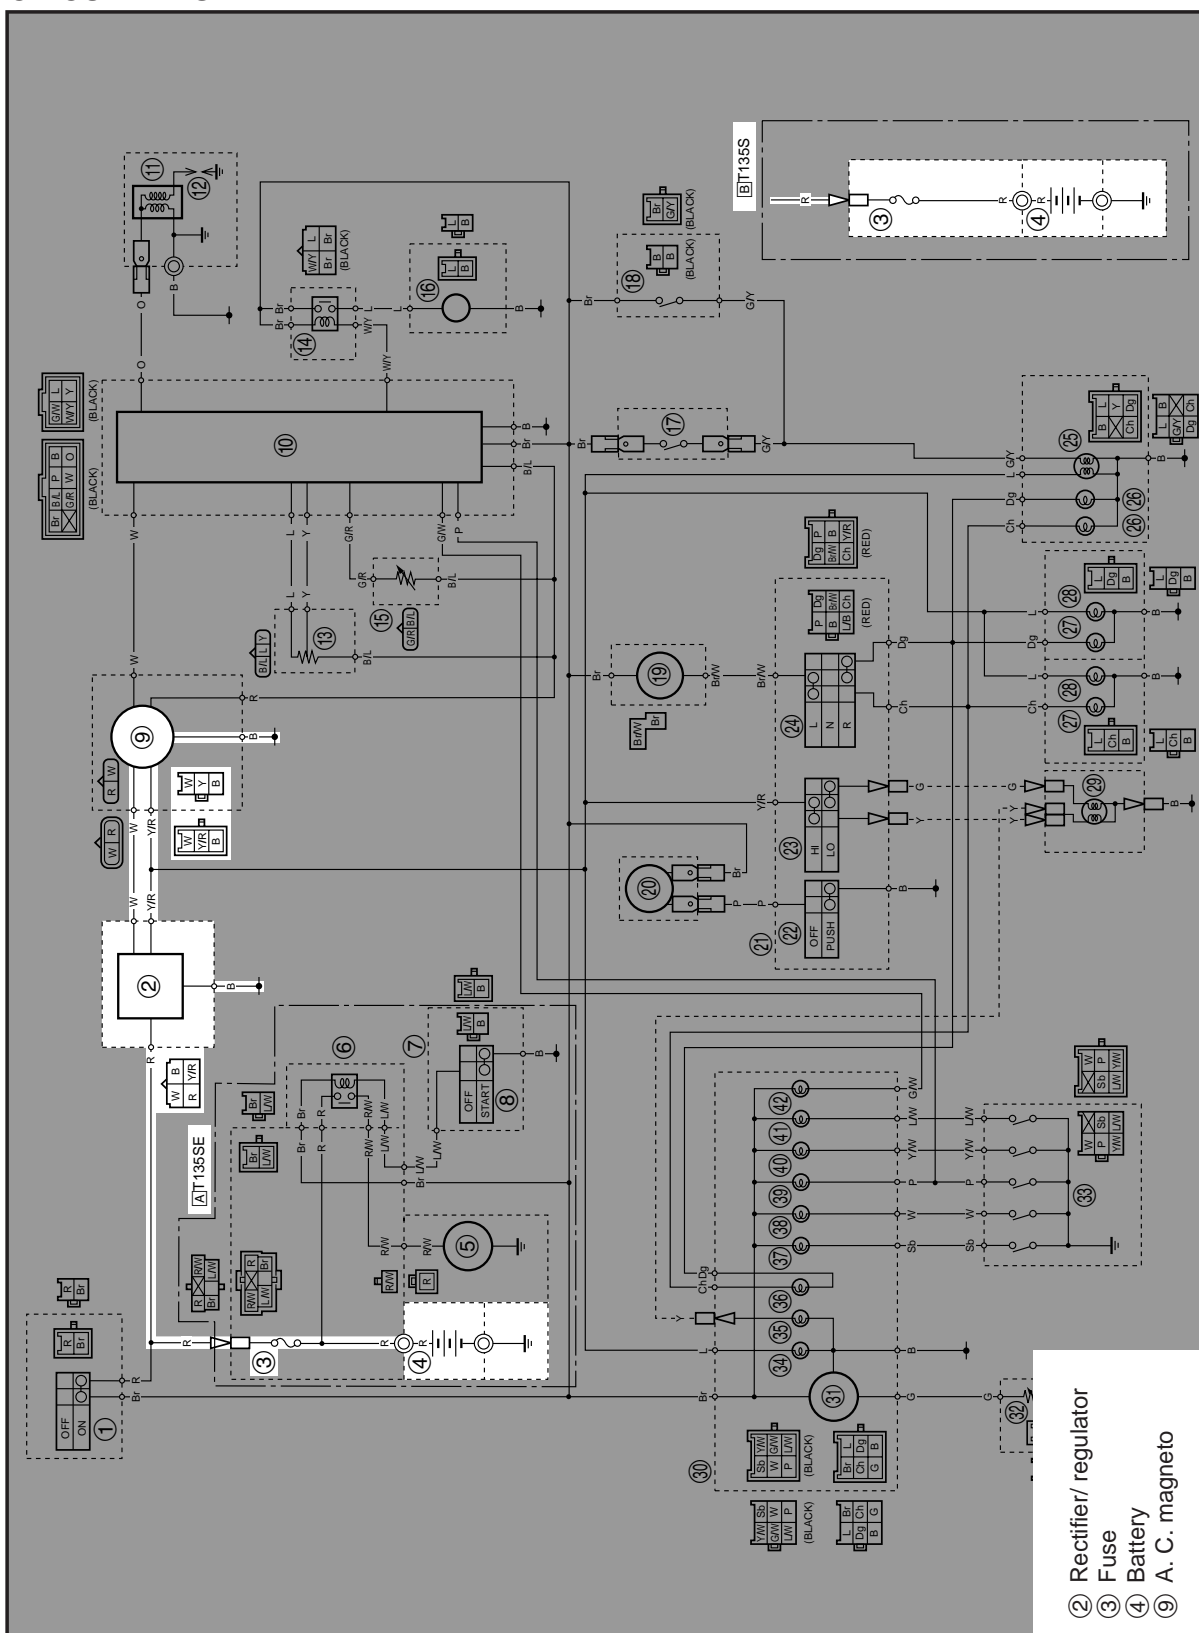



EAS00774

TROUBLESHOOTING

The battery cannot be charged.

Check:

1. fuse
2. battery
3. charging voltage
4. charging coil resistance
5. wiring connections
(of the entire charging system)

NOTE:

- Before troubleshooting, remove the following part(s):
 1. side cowlings (left and right)
 2. front cowlings
 3. center panels (upper and lower)
 4. rear cowlings (left and right)
 5. inner panel
- Troubleshoot with the following special tool(s).



Engine tachometer
90890-03113
Pocket tester
90890-03112

EAS00738

1. Fuse

- Check the fuse for continuity.
Refer to "CHECKING THE FUSE" in chapter 3.
- Is the fuse OK?

↓ YES

↓ NO

Replace the fuse.

EAS00739

2. Battery

- Check the condition of the battery.
Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.




Minimum open-circuit voltage
12.8 V or more at 20 °C

- Is the battery OK?

↓ YES

↓ NO

- Clean the battery terminals.
- Recharge or replace the battery.



EAS00775

3. Charging voltage


- Connect the engine tachometer to the spark plug lead.
- Connect the pocket tester (DC 20 V) to the battery as shown.

Positive tester probe →

positive battery terminal ①

Negative tester probe →

negative battery terminal ②

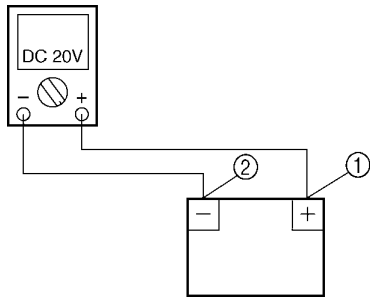

- Start the engine and let it run at approximately 5,000 r/min.
- Measure the charging voltage.



Charging voltage
14 V at 5,000 r/min

NOTE:

Make sure the battery is fully charged.

- Is the charging voltage within specification?



NO



YES

The charging circuit is OK.



EAS00776

4. Charging coil resistance

- Disconnect the stator coil coupler from the wire harness.
- Connect the pocket tester ($\Omega \times 1$) to the charging coil terminals as shown.

Positive tester probe → white ①

Negative tester probe → black ②

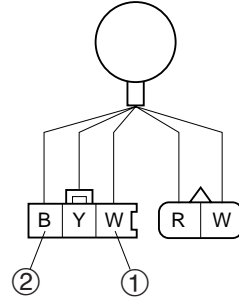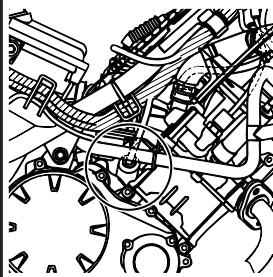

- Measure the charging coil resistances.



Charging coil resistance
0.38–0.58 Ω at 20°C (68°F) (W – B)

- Is the charging coil OK?



YES



NO

Replace the stator coil/pickup coil assembly.

EAS00779

5. Wiring

- Check the wiring connections of the entire charging system. Refer to "CIRCUIT DIAGRAM".
- Is the charging system wiring properly connected and without defects?




YES



NO


Replace the rectifier/regulator.


Properly connect or repair the charging system wiring.



EAS00780

LIGHTING SYSTEM CIRCUIT DIAGRAM

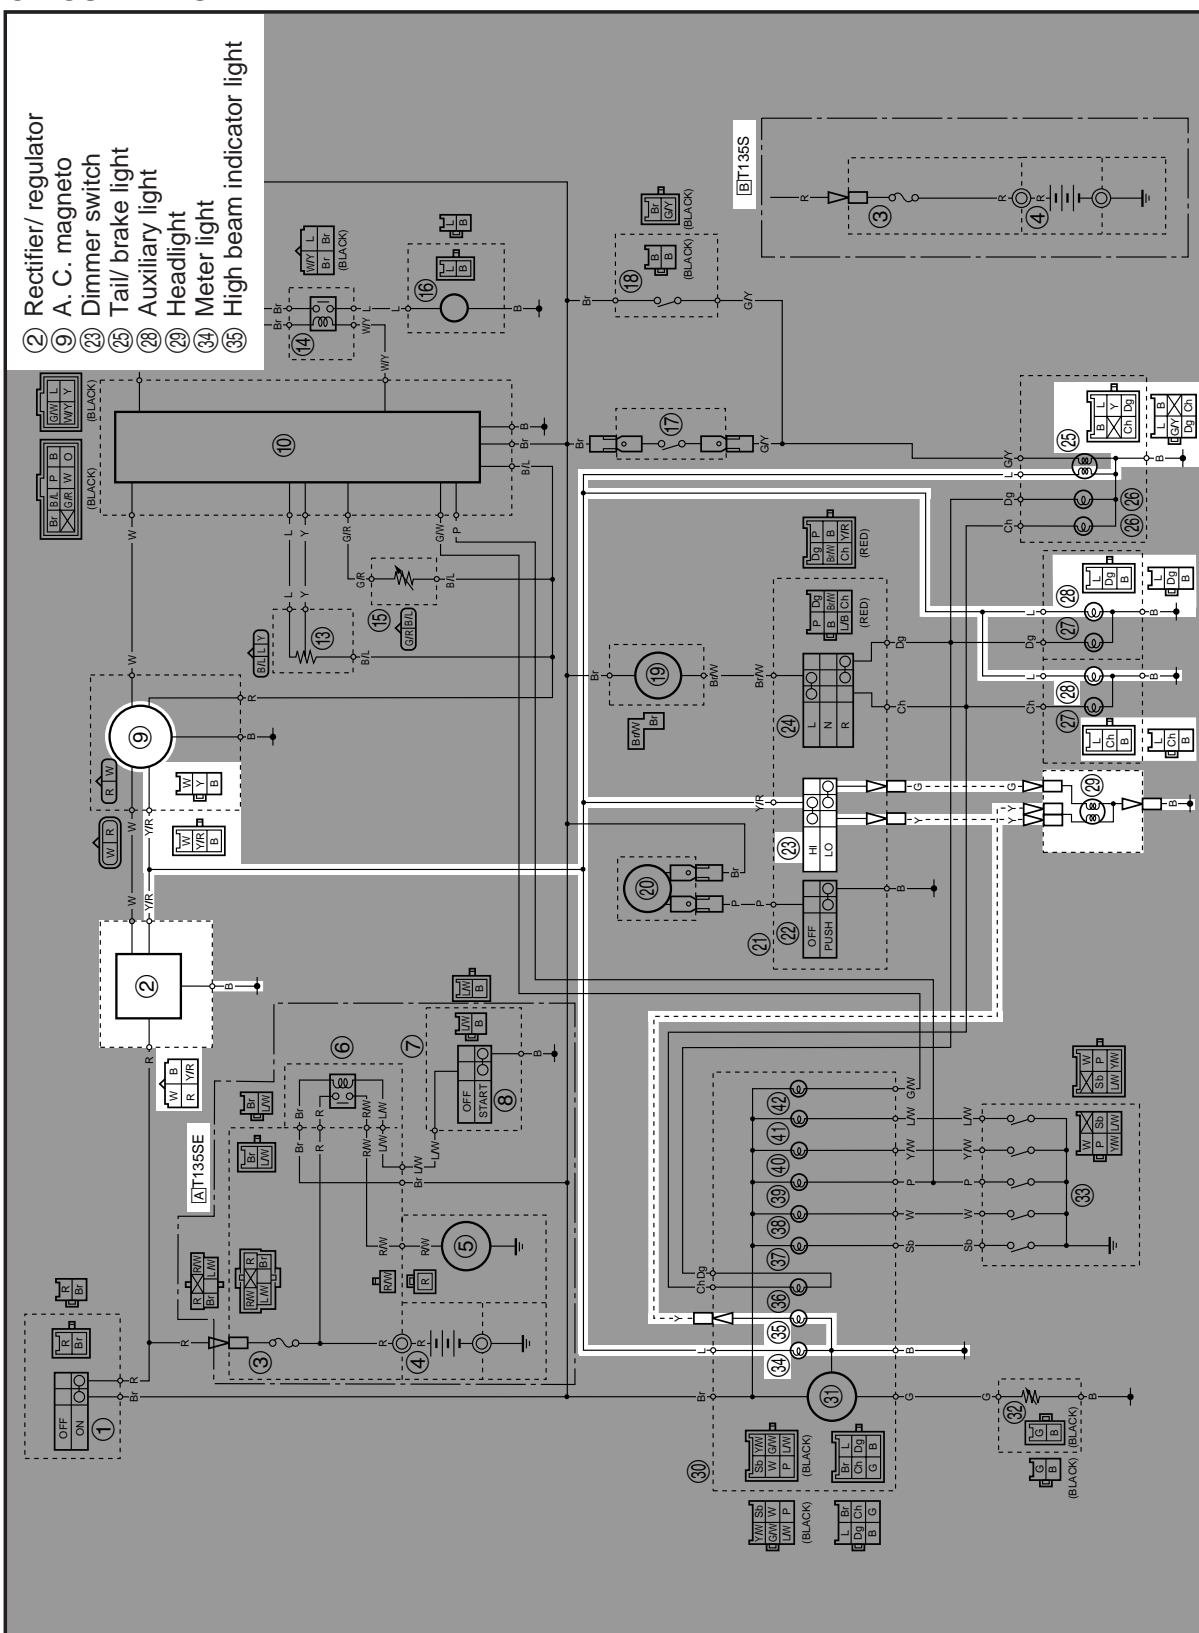



EAS00781

TROUBLESHOOTING

Any of the following fail to light: headlight, high beam indicator light, taillight, auxiliary light, or meter light.

Check:

1. lighting coil resistance
2. wiring connections
(of the entire lighting system)

NOTE:

- Before troubleshooting, remove the following part(s):
 1. side cowlings (left and right)
 2. front cowling
 3. center panels (upper and lower)
 4. rear cowling (right)
 5. inner panel
 6. headlight assembly
- Troubleshoot with the following special tool(s).



Pocket tester
90890-03112



EAS00776

1. Lighting coil resistance

- Disconnect the stator coil coupler from the wire harness.
- Connect the pocket tester ($\Omega \times 1$) to the lighting coil terminals as shown.

Positive tester probe → yellow ①

Negative tester probe → black ②

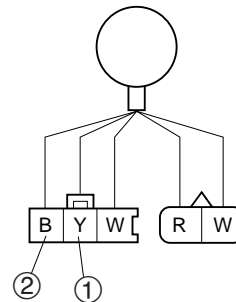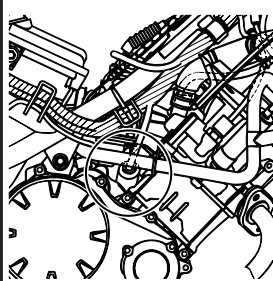

- Measure the lighting coil resistances.



Lighting coil resistance

0.29–0.43 Ω at 20°C (68°F) (Y – B)

- Is the lighting coil OK?

↓ YES

↓ NO

Replace the stator coil/pickup coil assembly.

EAS00787

2. Wiring


- Check the entire lighting system wiring. Refer to "CIRCUIT DIAGRAM".
- Is the lighting system wiring properly connected and without defects?

↓ YES

↓ NO

Check the condition of each of the lighting system circuits. Refer to "CHECKING THE LIGHTING SYSTEM".

Properly connect or repair the lighting system wiring.



EAS00788

CHECKING THE LIGHTING SYSTEM

1. The headlight and the high beam indicator light fail to come on.

EAS00784

1. Dimmer switch

- Check the dimmer switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the dimmer switch OK?



YES



NO

The dimmer switch is faulty. Replace the left handlebar switch.

2. Headlight bulb and socket

- Check the headlight bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the headlight bulb and socket OK?



YES



NO


Replace the headlight bulb, socket or both.

3. Voltage

- Connect the pocket tester (AC 20 V) to the headlight and high beam indicator light connectors as shown.

[A] When the dimmer switch is set to "D".

[B] When the dimmer switch is set to "D".

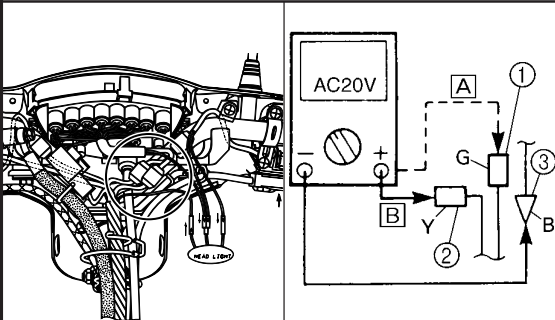


Headlight

Positive tester probe →

green ① or yellow ②

Negative tester probe → black ③

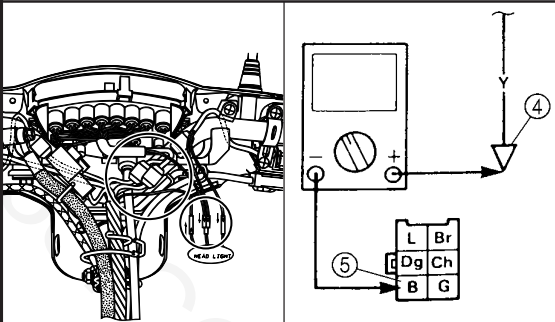

High beam indicator light

Positive tester probe → yellow ④

Negative tester probe → black ⑤

- Set the main switch to "ON".
- Start the engine.
- Set the dimmer switch to "D" or "D".
- Measure the voltage (AC 12 V) of green ① (yellow ②) on the headlight connector (wire harness side) and yellow ④ on the meter assembly connector (wire harness side).
- Is the voltage within specification?



YES



NO

This circuit is OK.

Replace the rectifier/regulator.



EAS00789

EAS00790

2. The meter light fails to come on.

1. Meter light bulb and socket

- Check the meter light bulb and socket for continuity.
Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the meter light bulb and socket OK?



YES



NO

Replace the meter light bulb, socket or both.

3. The tail/brake light fails to come on.

1. Tail/brake light bulb and socket

- Check the tail/brake light bulb and socket for continuity.
Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the tail/brake light bulb and socket OK?



YES



NO


Replace the tail/brake light bulb, socket or both.

2. Voltage

- Connect the pocket tester (AC 20 V) to the meter light coupler (wire harness side) as shown.

Positive tester probe → blue ①

Negative tester probe → black ②

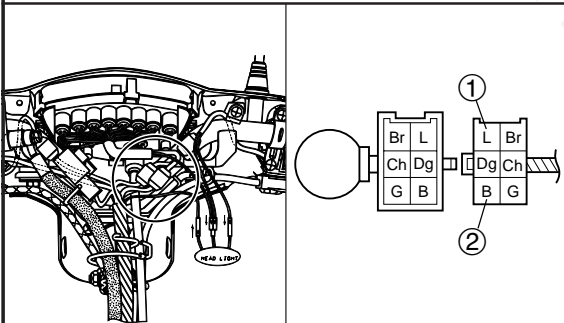

- Set the main switch to "ON".
- Start the engine.
- Measure the voltage (AC 12 V) of blue lead terminal ① on the meter light coupler (wire harness side).
- Is the voltage within specification?



YES



NO

This circuit is OK.


Replace the rectifier/regulator.

2. Voltage

- Connect the pocket tester (AC 20 V) to the tail/brake light coupler (wire harness side) as shown.

Positive tester probe → blue ①

Negative tester probe → black ②

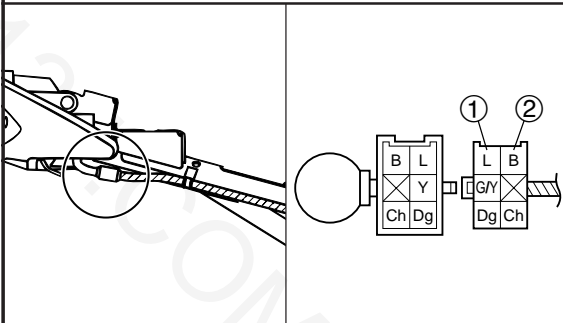

- Set the main switch to "ON".
- Start the engine.
- Measure the voltage (AC 12 V) of blue lead terminal ① on the tail/brake light coupler (wire harness side).
- Is the voltage within specification?




YES



NO

This circuit is OK.

Replace the rectifier/regulator.



4. The auxiliary light fails to come on.

1. Meter light bulb and socket

- Check the meter light bulb and socket for continuity.
Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the meter light bulb and socket OK?

↓ YES

↓ NO


Replace the auxiliary light bulb, socket or both.

2. Voltage

- Connect the pocket tester (AC 20 V) to the auxiliary light coupler (wire harness side) as shown.

Positive tester probe → blue ①

Negative tester probe → black ②

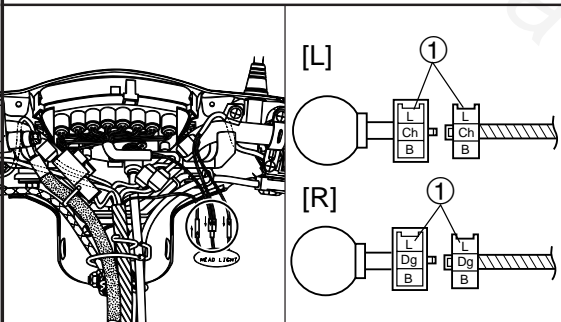


- Set the main switch to "ON".
- Start the engine.
- Measure the voltage (AC 12 V) of blue lead terminal ① on the auxiliary light coupler (wire harness side).
- Is the voltage within specification?

↓ YES

↓ NO


This circuit is OK.


Replace the rectifier/regulator.




EAS00793

SIGNALING SYSTEM CIRCUIT DIAGRAM

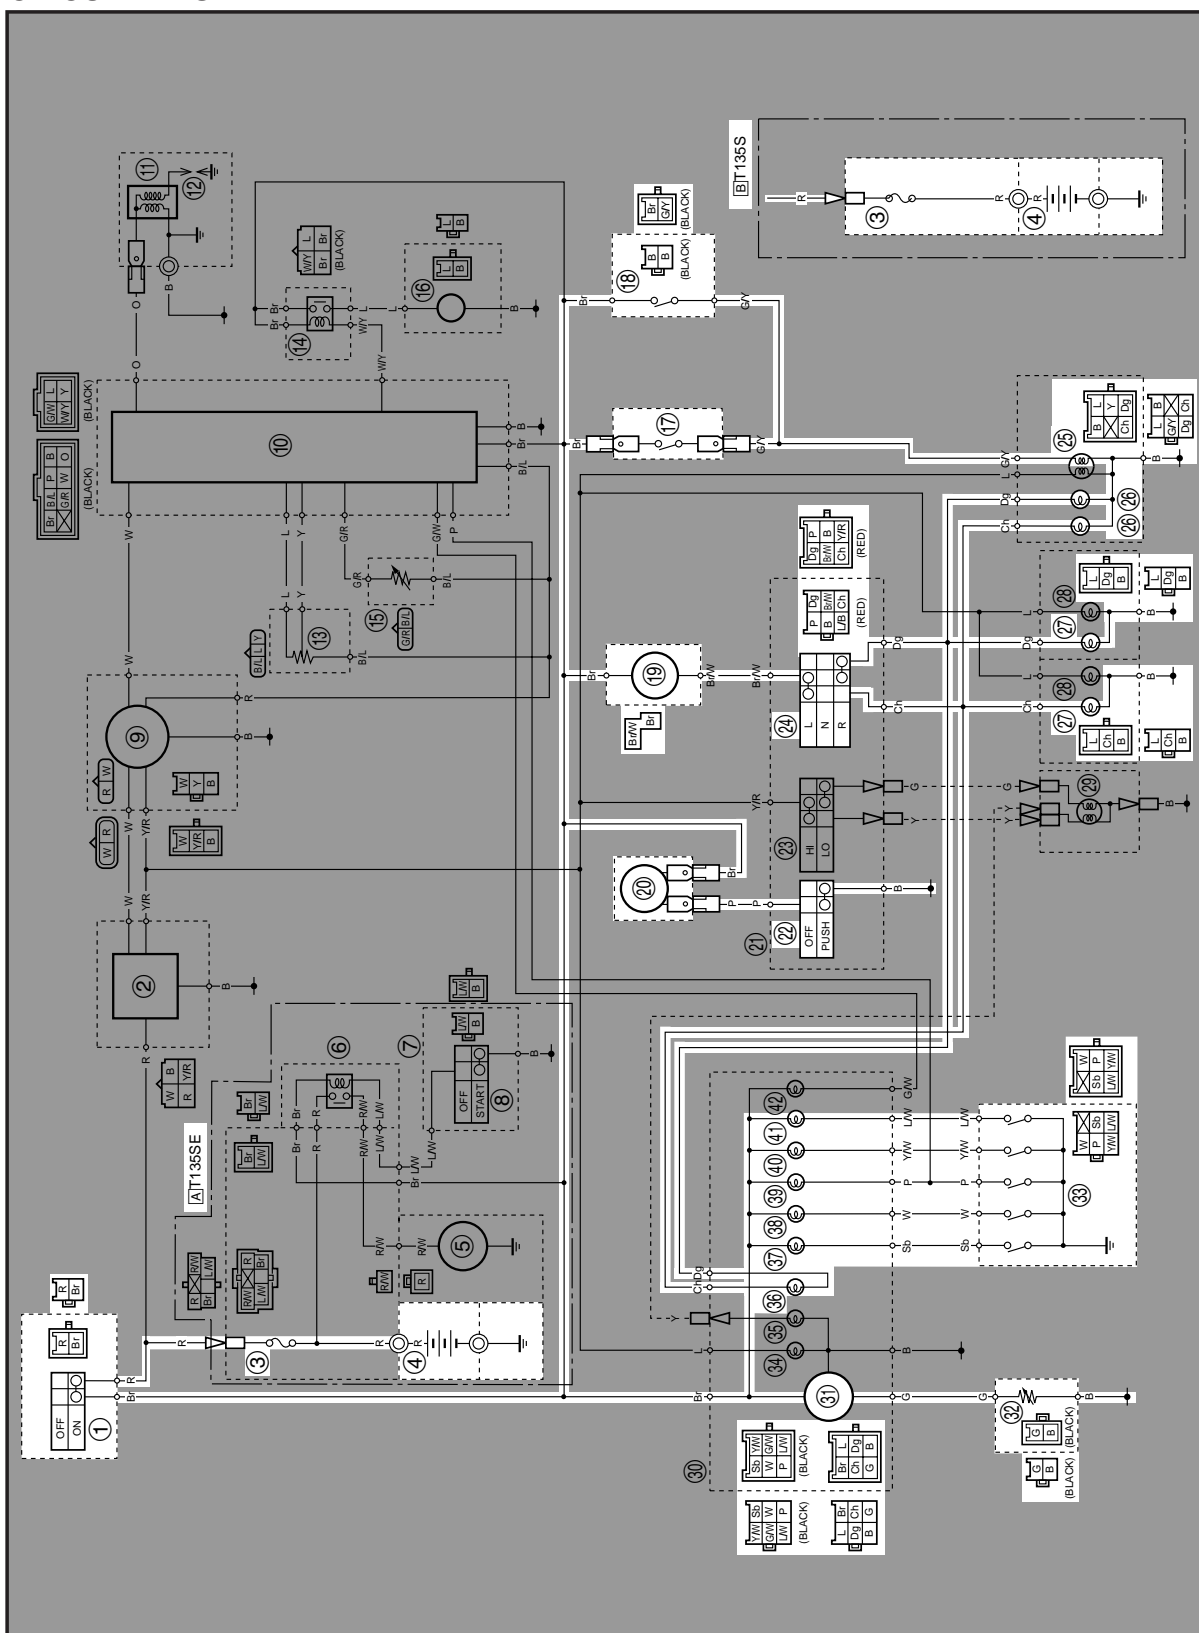



- ① Main switch
- ③ Fuse
- ④ Battery
- ⑰ Front brake light switch
- ⑱ Rear brake light switch
- ⑲ Turn signal relay
- ⑳ Horn
- ㉒ Horn switch
- ㉔ Turn signal switch
- ㉕ Tail/brake light
- ㉖ Rear turn signal light
- ㉗ Front turn signal light
- ㉙ Fuel gauge
- ㉚ Fuel sender
- ㉛ Neutral switch
- ㉜ Turn signal indicator light
- ㉝ Neutral indicator light
- ㉞ 1st gear position indicator light
- ㉟ 2nd gear position indicator light
- ㊱ 3rd gear position indicator light
- ㊲ 4th gear position indicator light



EAS00794

TROUBLESHOOTING

- Any of the following fail to light: turn signal light, brake light or an indicator light.
- The horn fails to sound.

Check:

1. fuse
2. battery
3. main switch
4. wiring connections
(of the entire signaling system)

NOTE:

- Before troubleshooting, remove the following part(s):
 1. side cowling (right)
 2. front cowling
 3. center panel (lower)
 4. rear cowling (right)
 5. headlight assembly
- Troubleshoot with the following special tool(s).



Pocket tester
90890-03112

EAS00738

1. Fuse

- Check the fuse for continuity.
Refer to "CHECKING THE FUSE" in chapter 3.
- Is the fuse OK?

↓ YES

↓ NO

Replace the fuse.

EAS00739

2. Battery

- Check the condition of the battery.
Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



Minimum open-circuit voltage
12.8 V or more at 20 °C (68 °F)

- Is the battery OK?

↓ YES

↓ NO

- Clean the battery terminals.
- Recharge or replace the battery.

EAS00783

3. Main switch

- Check the main switch for continuity.
Refer to "CHECKING THE SWITCHES".
- Is the main switch OK?

↓ YES

↓ NO

Replace the main switch.

EAS00795

4. Wiring

- Check the entire signaling system wiring.
Refer to "CIRCUIT DIAGRAM".
- Is the signaling system wiring properly connected and without defects?

↓ YES

↓ NO

Check the condition of each of the signaling system circuits.
Refer to "CHECKING THE SIGNALING SYSTEM".

Properly connect or repair the signaling system wiring.



EAS00796

CHECKING THE SIGNALING SYSTEM

1. The horn fails to sound.

1. Horn switch

- Check the horn switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the horn switch OK?


↓ YES

↓ NO

Replace the left handlebar switch.

2. Voltage

- Connect the pocket tester (DC 20 V) to the horn connector at the horn terminal as shown.

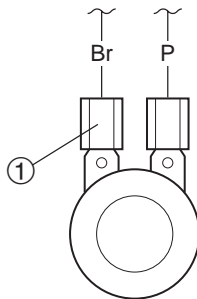Positive tester probe → brown ①**Negative tester probe → ground**

- Set the main switch to "ON".
- Measure the voltage (DC 12 V) of brown lead terminal at the horn terminal.
- Is the voltage within specification?


↓ YES

↓ NO

The wiring circuit from the main switch to the horn connector is faulty and must be repaired.

3. Horn

- Disconnect the pink connector at the horn terminal.
- Connect a jumper lead ① to the horn terminal and ground the jumper lead.
- Set the main switch to "ON".
- Does the horn sound?

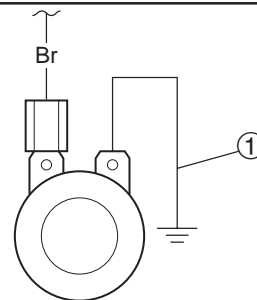


↓ NO

↓ YES

The horn is OK.

4. Voltage

- Connect the pocket tester (DC 20 V) to the horn connector at the pink terminal as shown.

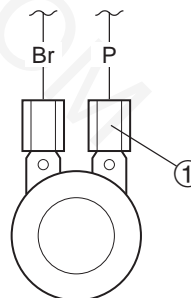Positive tester probe → pink ①**Negative tester probe → ground**

- Set the main switch to "ON".
- Measure the voltage (DC 12 V) of pink lead terminal ① at the horn terminal.
- Is the voltage within specification?

↓ YES

↓ NO

Repair or replace the horn.

Replace the horn.



EAS00797

2. The tail/brake light fails to come on.

1. Tail/brake light bulb and socket

- Check the tail/brake light bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the tail/brake light bulb and socket OK?

YES

NO

Replace the tail/brake light bulb, socket or both.

2. Brake light switches

- Check the brake light switches for continuity. Refer to "CHECKING THE SWITCHES".
- Is the brake light switch OK?

YES

NO


Replace the brake light switch.

3. Voltage

- Connect the pocket tester (DC 20 V) to the tail/brake light coupler (wire harness side) as shown.

Positive tester probe → green/yellow ①

Negative tester probe → black ②

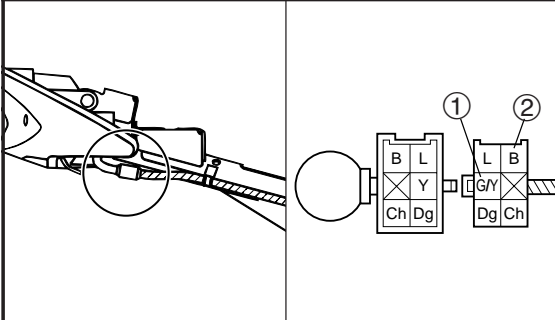


- Set the main switch to "ON".
- Pull in the brake lever or push down on the brake pedal.
- Measure the voltage (DC 12 V) of green/yellow lead terminal ① on the tail/brake light coupler (wire harness side).
- Is the voltage within specification?

YES

NO

This circuit is OK.

The wiring circuit from the main switch to the tail/brake light coupler is faulty and must be repaired.



EAS00799

3. The turn signal light, turn signal indicator light or both fail to blink.

1. Turn signal indicator light bulb and socket

- Check the turn signal light bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the turn signal light bulb and socket OK?

↓ YES

↓ NO

Replace the turn signal light bulb, socket or both.

2. Turn signal switch

- Check the turn signal switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the turn signal switch OK?

↓ YES

↓ NO


Replace the left handlebar switch.

3. Voltage

- Connect the pocket tester (DC 20 V) to the turn signal relay coupler as shown.

Positive tester probe → brown ①

Negative tester probe → ground

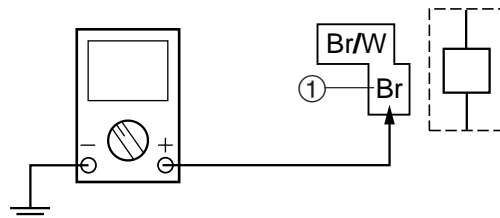


- Set the main switch to "ON".
- Measure the voltage (DC 12 V) on brown lead terminal ① at the turn signal relay coupler.
- Is the voltage within specification?

↓ YES

↓ NO


The wiring circuit from the main switch to the turn signal relay coupler is faulty and must be repaired.



4. Voltage

- Connect the pocket tester (DC 20 V) to the turn signal relay coupler as shown.

Positive tester probe → brown/white ①
Negative tester probe → ground

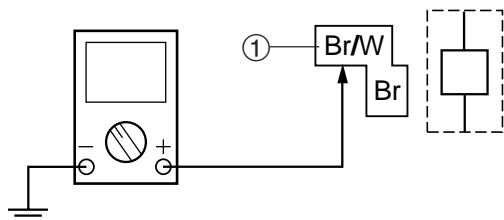

- Set the main switch to "ON".
- Measure the voltage (DC 12 V) on brown/white lead terminal ① at the turn signal relay coupler.
- Is the voltage within specification?

YES

NO

The turn signal relay is faulty and must be replaced.

5. Voltage

- Connect the pocket tester (DC 20 V) to the turn signal light coupler (wire harness side) as shown.

Turn signal light

[A] Rear

[B] Front

Left turn signal light

Positive tester probe → chocolate ①

Negative tester probe → ground

Right turn signal light

Positive tester probe → dark green ②

Negative tester probe → ground


[C] Turn signal indicator light

Positive tester probe → chocolate ③

Negative tester probe → ground


Positive tester probe → dark green ④

Negative tester probe → ground

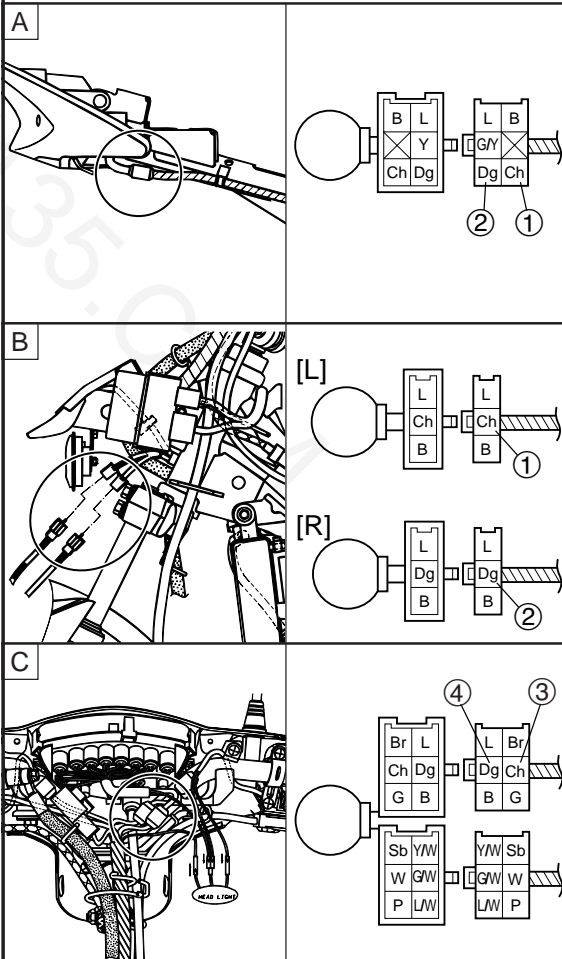

SIGNALING SYSTEM

ELEC



- Set the main switch to "ON".
- Set the turn signal switch to "←" or "→".
- Measure the voltage (DC 12 V) of the chocolate ① or dark green lead terminal ② at the turn signal light coupler (wire harness side) and chocolate ③ or dark green ④ at the turn signal indicator light coupler (wire harness side).
- Is the voltage within specification?



YES

This circuit is OK.



NO

The wiring circuit from the turn signal switch to the turn signal light coupler is faulty and must be repaired.

EAS00801

4. The gear position indicator lights fail to come on.

1. Gear position indicator light bulb and socket

- Check the gear position indicator light bulb and socket for continuity. Refer to "CHECKING THE BULBS AND BULB SOCKETS".
- Are the gear position indicator light bulb and socket OK?



YES



NO

Replace the gear position indicator light bulb, socket or both.

2. Neutral switch

- Check the neutral switch for continuity. Refer to "CHECKING THE SWITCHES".
- Is the neutral switch OK?



YES



NO

Replace the neutral switch.



EAS00804

3. Voltage

- Connect the pocket tester (DC 20 V) to the meter assembly coupler (wire harness side) as shown.

Neutral indicator light

Positive tester probe → sky blue ①

Negative tester probe → ground

1st gear position indicator light

Positive tester probe → white ②

Negative tester probe → ground

2nd gear position indicator light

Positive tester probe → pink ③

Negative tester probe → ground

3rd gear position indicator light


Positive tester probe → yellow/white ④

Negative tester probe → ground

4th gear position indicator light

Positive tester probe → blue/white ⑤

Negative tester probe → ground

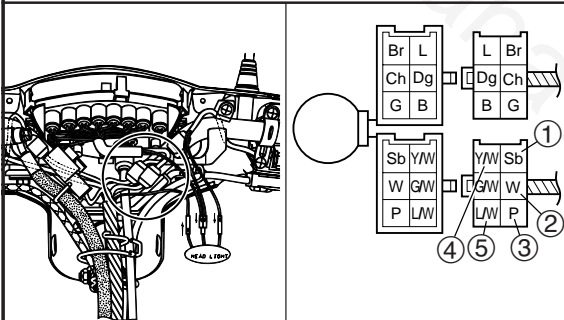

- Set the main switch to "ON".
- Shift the transmission into each gear.
- Measure the voltage (DC 12 V) of the sky blue ①, white ②, pink ③, yellow/white ④, or blue/white ⑤ lead terminal at the meter assembly coupler (wire harness side).
- Is the voltage within specification?

↓ YES

This circuit is OK.

↓ NO

The wiring circuit from the main switch to the meter assembly coupler is faulty and must be repaired.


5. The fuel level gauge fails to operate.

1. Fuel sender

- Remove the fuel sender from the fuel tank.
- Connect the pocket tester to the fuel sender coupler (fuel sender side) as shown.

Positive tester probe → green ①

Negative tester probe → black ②

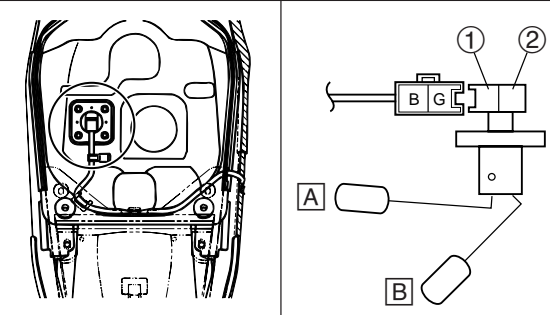

- Measure the fuel sender resistances.



Fuel sender resistance

(up position [A])

($\Omega \times 1$)

4–10 Ω at 20°C (68°F)

Fuel sender resistance

(down position [B])

($\Omega \times 10$)


90–100 Ω at 20°C (68°F)

- Is the fuel sender OK?

↓ YES

↓ NO

Replace the fuel sender.




2. Voltage

- Connect the pocket tester (DC 20 V) to the meter assembly coupler (wire harness side) as shown.

Positive tester probe → brown ①

Negative tester probe → ground

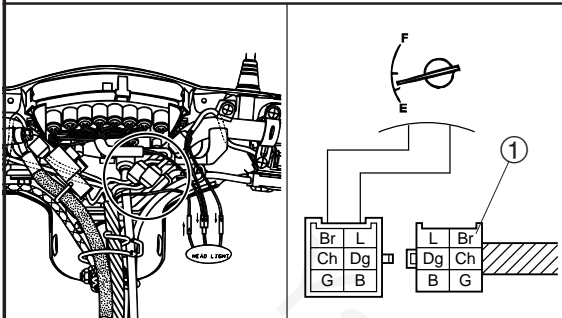

- Set the main switch to "ON".
- Measure the voltage (DC 12 V) of brown lead terminal ① on the meter assembly coupler (wire harness side).
- Is the voltage within specification?



YES



NO


Check the wiring connections of the entire signaling system

3. Fuel level gauge

- Set the main switch to "ON".
- Move the float up ① or down ②.
- Check that the fuel level gauge needle moves to "F" or "E".

NOTE:

Before reading the fuel level gauge, leave the float in one position (either up or down) for at least three minutes.

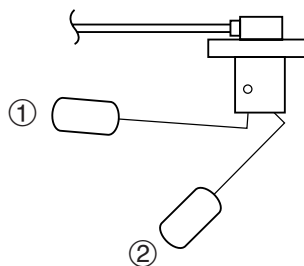

- Does the fuel level gauge needle move appropriately?



YES




NO


Replace the fuel level gauge.

4. Wiring


Check the entire signaling system's wiring.



COOLING SYSTEM CIRCUIT DIAGRAM

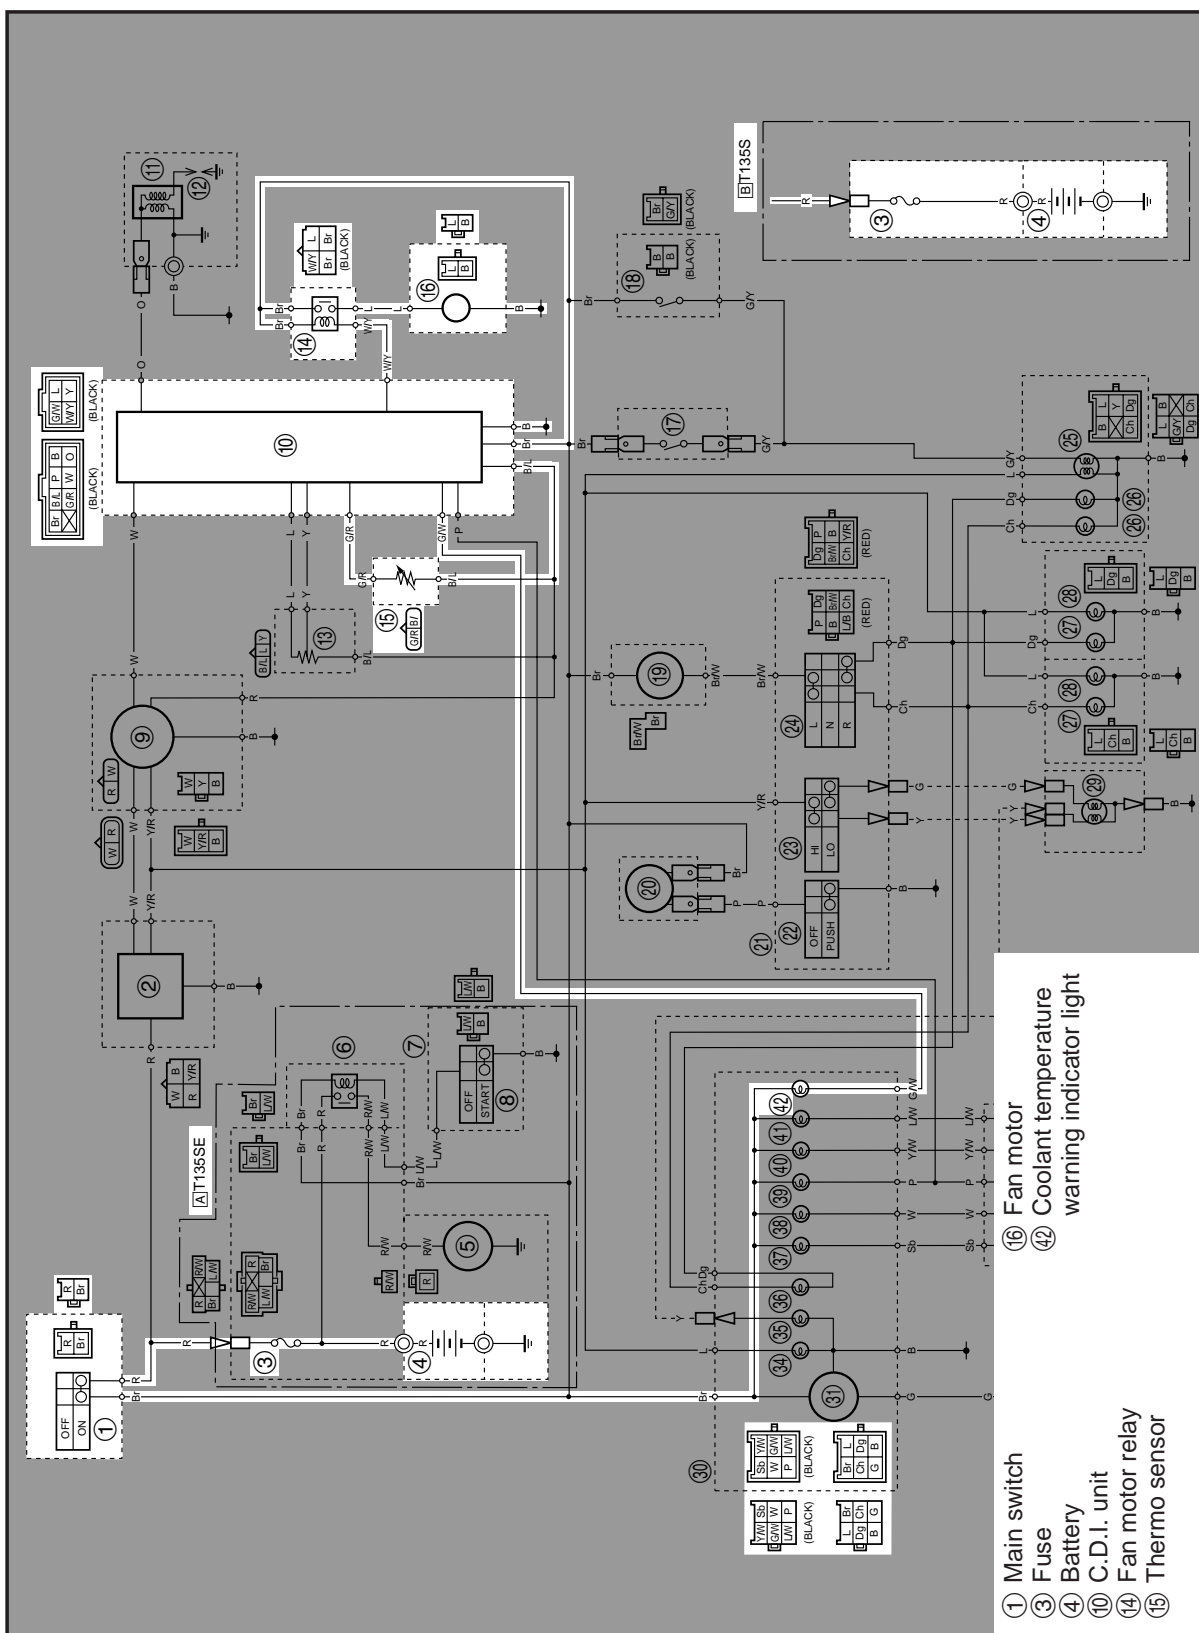

- ① Main switch
- ③ Fuse
- ④ Battery
- ⑩ C.D.I. unit
- ⑭ Fan motor relay
- ⑮ Thermo sensor
- ⑯ Fan motor
- ⑰ Coolant temperature warning indicator light



TROUBLESHOOTING

- The radiator fan motor fails to turn.

Check:

1. fuse
2. battery
3. main switch
4. fan motor
5. fan motor relay
6. thermo sensor
7. wiring harness
(of the entire cooling system)

NOTE:

- Before troubleshooting, remove the following part(s):
 1. side cowlings (left and right)
 2. center panel (lower)
 3. rear cowling (right)
 4. coolant
- Troubleshoot with the following special service tool(s).



Pocket tester
90890-03112
Digital circuit tester
90890-03174

EAS00738

1. Fuse

- Check the fuse for continuity.
Refer to "CHECKING THE FUSE" in chapter 3.
- Is the fuse OK?

↓ YES

↓ NO

Replace the fuse.

EAS00739

2. Battery

- Check the condition of the battery.
Refer to "CHECKING AND CHARGING THE BATTERY" in chapter 3.



Minimum open-circuit voltage
12.8 V or more at 20 °C (68 °F)

- Is the battery OK?

↓ YES

↓ NO

- Clean the battery terminals.
- Recharge or replace the battery.

EAS00783


3. Main switch

- Check the main switch for continuity.
Refer to "CHECKING THE SWITCHES".
- Is the main switch OK?

↓ YES

↓ NO

Replace the main switch.




4. Radiator fan motor

- Disconnect the radiator fan motor coupler from the wireharness.
- Connect the battery (12 V) as shown.

Battery positive lead → blue ①

Battery negative lead → black ②

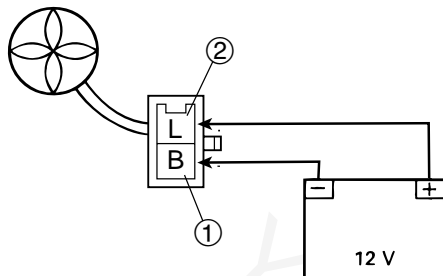

- Does the radiator fan motor turn?

↓ YES

↓ NO

The radiator fan motor is faulty and must be replaced.

5. Radiator fan motor relay


- Disconnect the radiator fan motor relay coupler.
- Connect the pocket tester to the radiator fan motor relay coupler (relay side) as shown.

Battery positive lead → brown ①

Battery negative lead → white/yellow ②

Positive tester probe → brown ③

Negative tester probe → blue ④

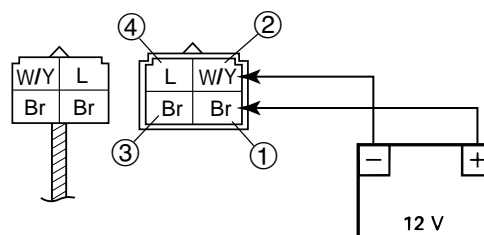

- Check the radiator fan motor relay blue and brown for continuity.
- Does the coupler is OK?

↓ YES

↓ NO

Replace the radiator fan motor relay.



6. Thermo sensor

- Remove the thermo sensor from the cylinder.
- Connect the digital circuit tester ($\Omega \times 100$) to the thermo switch ① as shown.
- Immerse the thermo sensor in a container filled with coolant ②.

NOTE:

Make sure that the thermo sensor terminals do not get wet.

- Place a thermometer ③ in the coolant.
- Slowly heat the coolant, then let it cool to the specified temperature as indicated in the table.
- Check the thermo sensor for continuity at the temperatures indicated in the table.



Thermo sensor resistance


2.32–2.59 k Ω at 20°C (68°F)

310–326 Ω at 80°C (176°F)

140–144 Ω at 110°C (230°F)

⚠ WARNING

- Handle the thermo sensor with special care.
- Never subject the thermo sensor to strong shocks. If the thermo sensor is dropped, replace it.

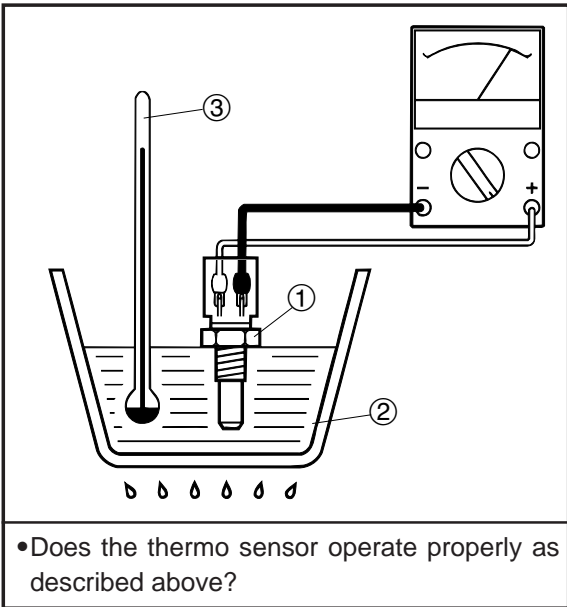

- Does the thermo sensor operate properly as described above?



YES

Tighten the thermo sensor to specified torque.



18 Nm
(1.8 m•kg, 13 ft•lb)



NO

Replace the thermo sensor.

EAS00795

7. Wiring

- Check the entire signaling system wiring. Refer to "CIRCUIT DIAGRAM".
- Is the signaling system wiring properly connected and without defects?



YES

Check the condition of each of the cooling system circuits. Refer to "CHECKING THE COOLING SYSTEM".



NO

Properly connect or repair the cooling system wiring.



SELF-DIAGNOSIS

The T135SE/S features a self-diagnosing system for following circuit (-s).

1. Throttle position sensor (TPS)
2. Thermo sensor




1. ENGINE TROUBLE INDICATOR LIGHT

When the main switch is turned to "ON", the following items are monitored and the condition codes are displayed on the coolant temperature warning indicator light (irrespective of whether the engine is running or not).

Item	Condition	Response	Display condition code
Throttle position sensor (TPS)	Disconnected Short-circuit	<ul style="list-style-type: none"> Enables the vehicle to run so that the ignition timing is fixed when the throttle is fully opened. 	Blinks in Fault code [1]
	Locked	<ul style="list-style-type: none"> Displays the condition code on the coolant temperature warning indicator light. 	Blinks in Fault code [2]
Thermo sensor	Disconnected Short-circuit	<ul style="list-style-type: none"> Enables the vehicle to run so that the ignition timing is fixed. Displays the condition code on the coolant temperature warning indicator light. 	Blinks in Fault code [3]



Display order on the coolant temperature warning indicator light
When one item being monitored

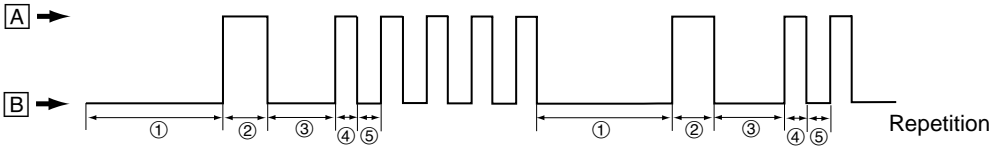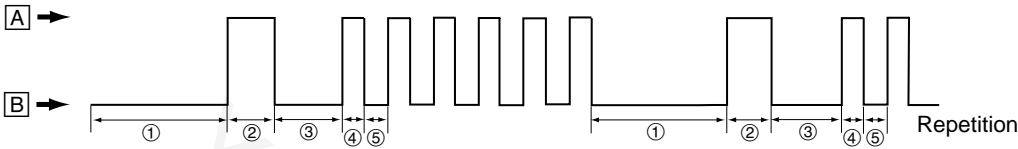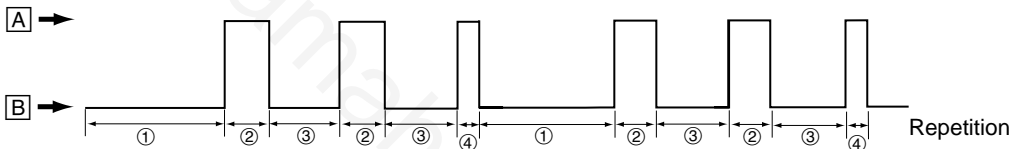Fault code	Condition
[1]	
[2]	
[3]	

- ① 3 seconds

② 1 second

③ 1.5 seconds

④ 0.5 seconds

⑤ 0.5 seconds
- A Light on

B Light off

When more than one item is being monitored

① Light off (seconds) 3 sconds

② Light on (seconds) 1 scond


③ Light off (seconds) 1.5 sconds

④ Light on (seconds) 0.5 sconds

⑤ Light off (seconds) 0.5 sconds

⑥ 1 cycle Fault code [1]

⑦ 1 cycle Fault code [2]

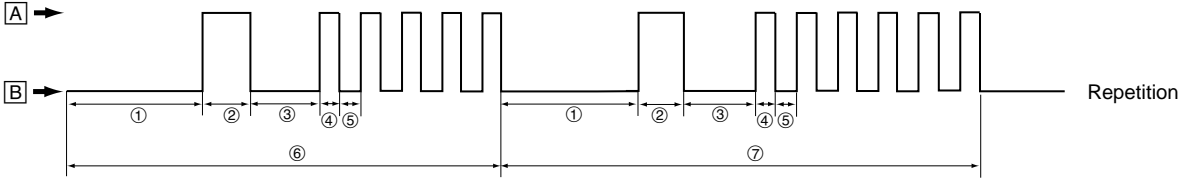

SELF-DIAGNOSIS

ELEC



TROUBLESHOOTING

The coolant temperature warning indicator light starts to display the self-diagnosis sequence.

Check:

1. throttle position sensor
2. thermo sensor


NOTE:

- Before troubleshooting, remove the following part(s):
 1. side cowlings (left and right)
 2. front cowling
 3. center panel (lower)
- Troubleshoot with the following special tool(s).



Pocket tester
90890-03112

1. Throttle position sensor
CIRCUIT DIAGRAM

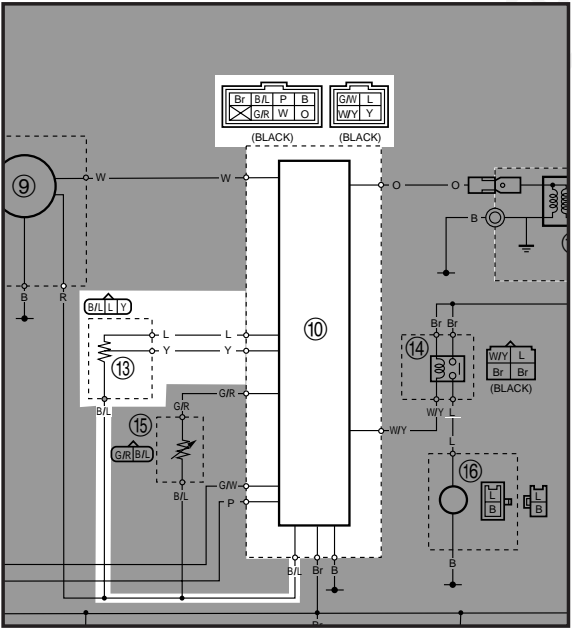

- ⑩ C.D.I. unit
⑬ Throttle position sensor

1. Wire harness

- Check the wire harness for continuity.
Refer to "CIRCUIT DIAGRAM".
- Is the wire harness OK?



YES



NO

Repair or replace the
wire harness.

2. Throttle position sensor

- Check the throttle position sensor for continuity.
Refer to "CHECKING AND ADJUSTING THE THROTTLE POSITION SENSOR" in chapter 6.
- Is the throttle position sensor OK?



YES




NO

Replace the C.D.I.
unit.

Replace the throttle
position sensor.

Replace the thermo sensor.



Repair or replace the wireharness.



YamahaT135.COM



CHAPTER 9
TROUBLESHOOTING

TROUBLESHOOTING9-1

 ELECTRICAL SYSTEM9-1

 COMPRESSION SYSTEM9-2

 INTAKE AND EXHAUST SYSTEM9-3

YamahaT135.COM

YamahaT135.COM

EASF0062

TROUBLESHOOTING

TROUBLESHOOTING
ELECTRICAL SYSTEM***CHECK ALL WIRES CONNECTIONS****MAIN SWITCH (see page 8-5)**


- Main switch is shorted

IGNITION COIL (see page 8-13)

- Primary or secondary windings are broken or faulty
- Spark plug wire is faulty
- Spark plug cap is faulty

C.D.I. unit

- C.D.I. unit is broken

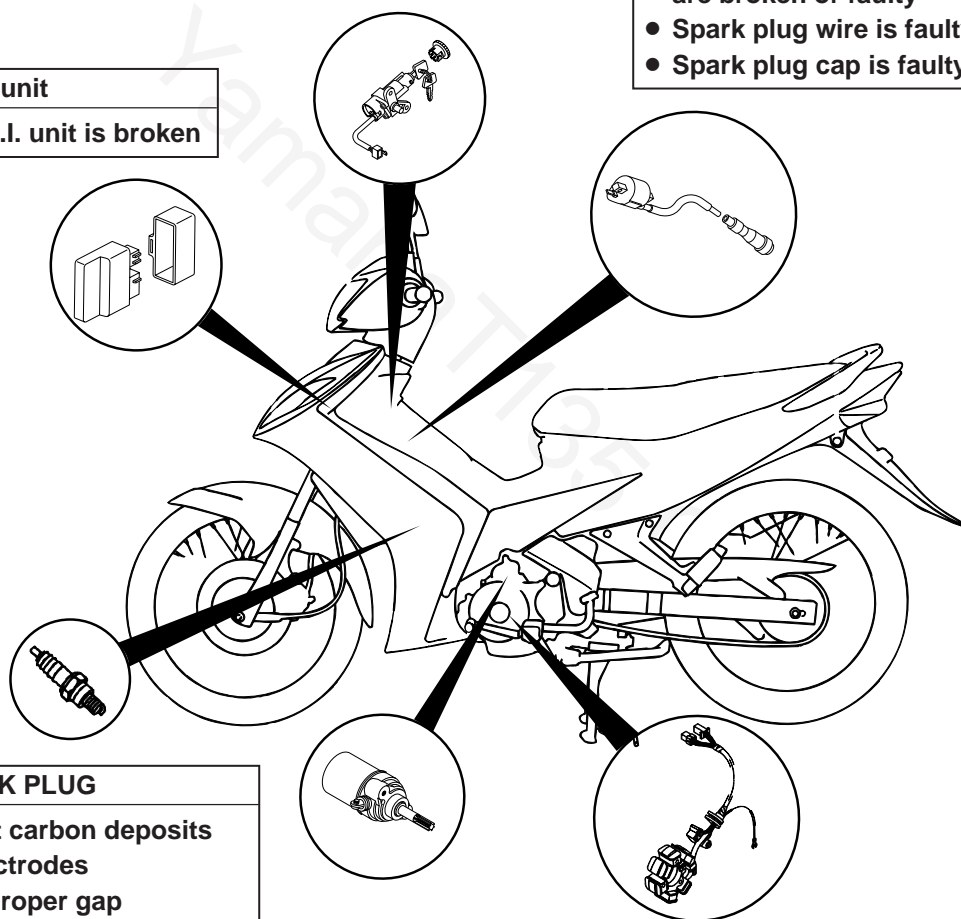**SPARK PLUG**

- Wet carbon deposits
- Electrodes
- Improper gap
- Broken


STARTER MOTOR (see page 8-18)

- Starter motor is broken or faulty
- Starter relay is broken
- Starter switch is broken


**CHARGING COIL (see page 8-24)/
PICKUP COIL (see page 8-13)**

- Windings are broken

COMPRESSION SYSTEM

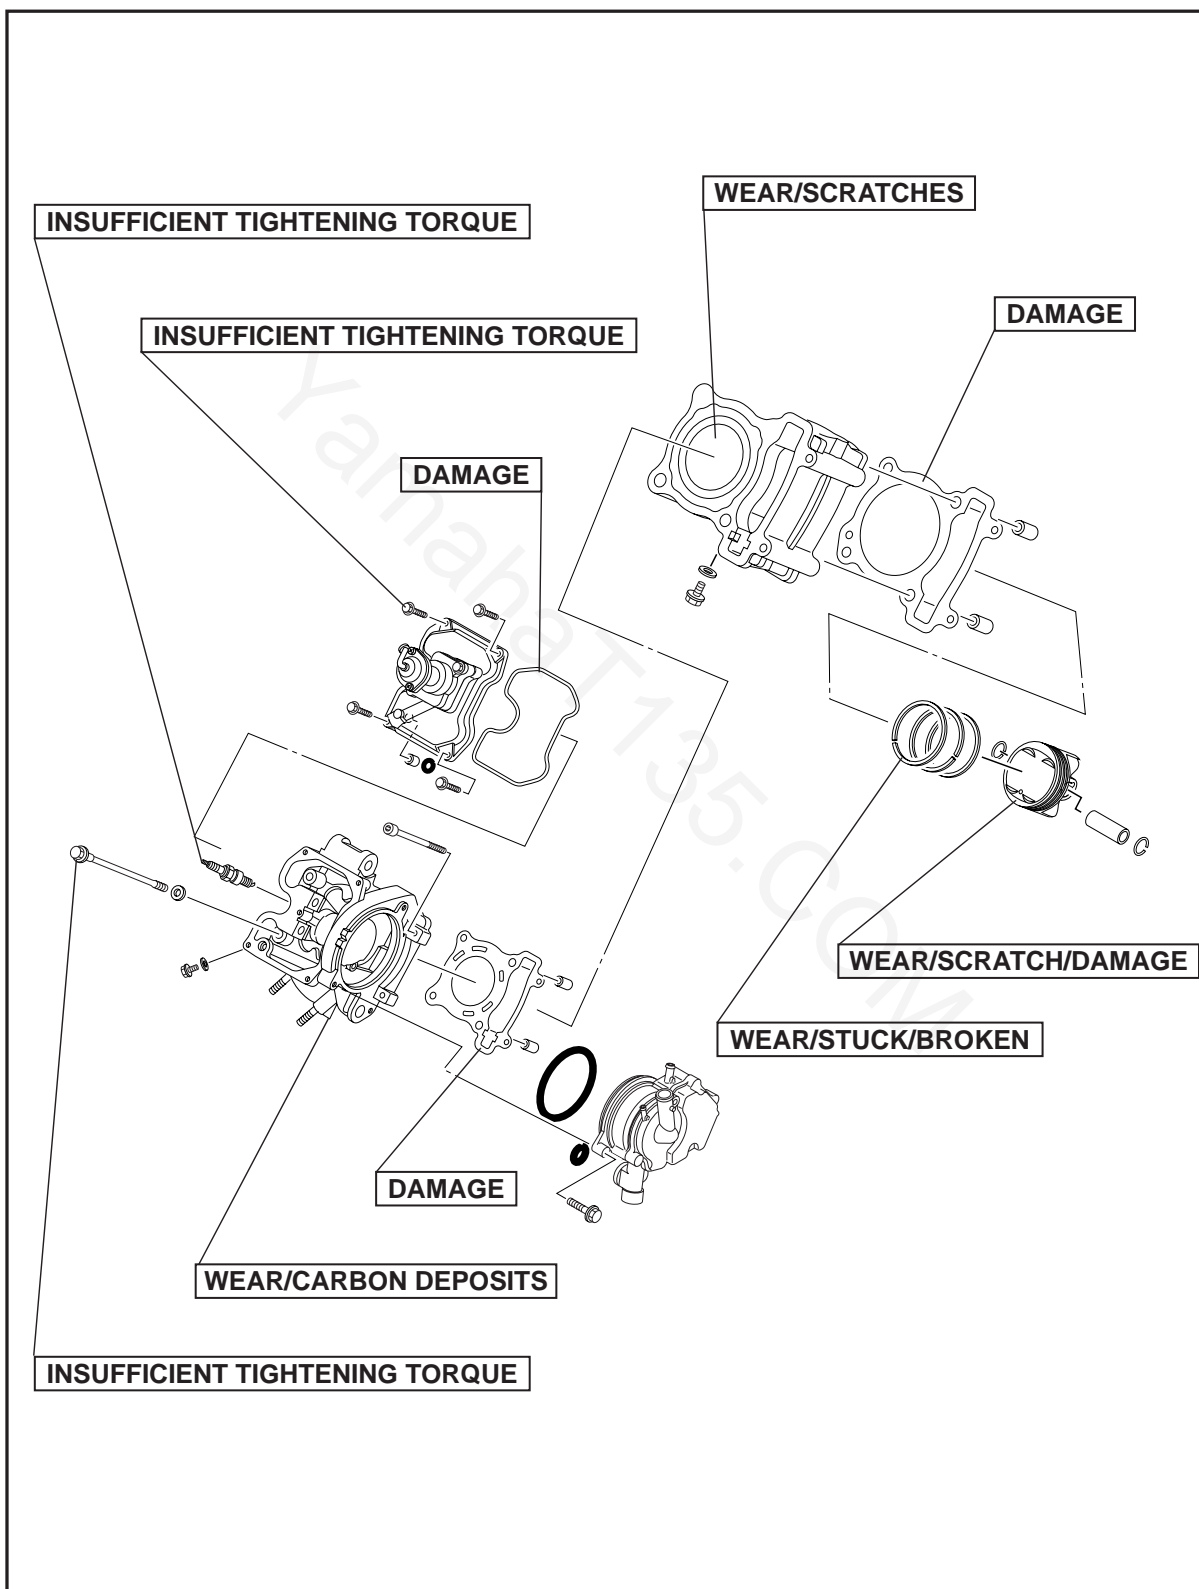

INTAKE AND EXHAUST SYSTEM

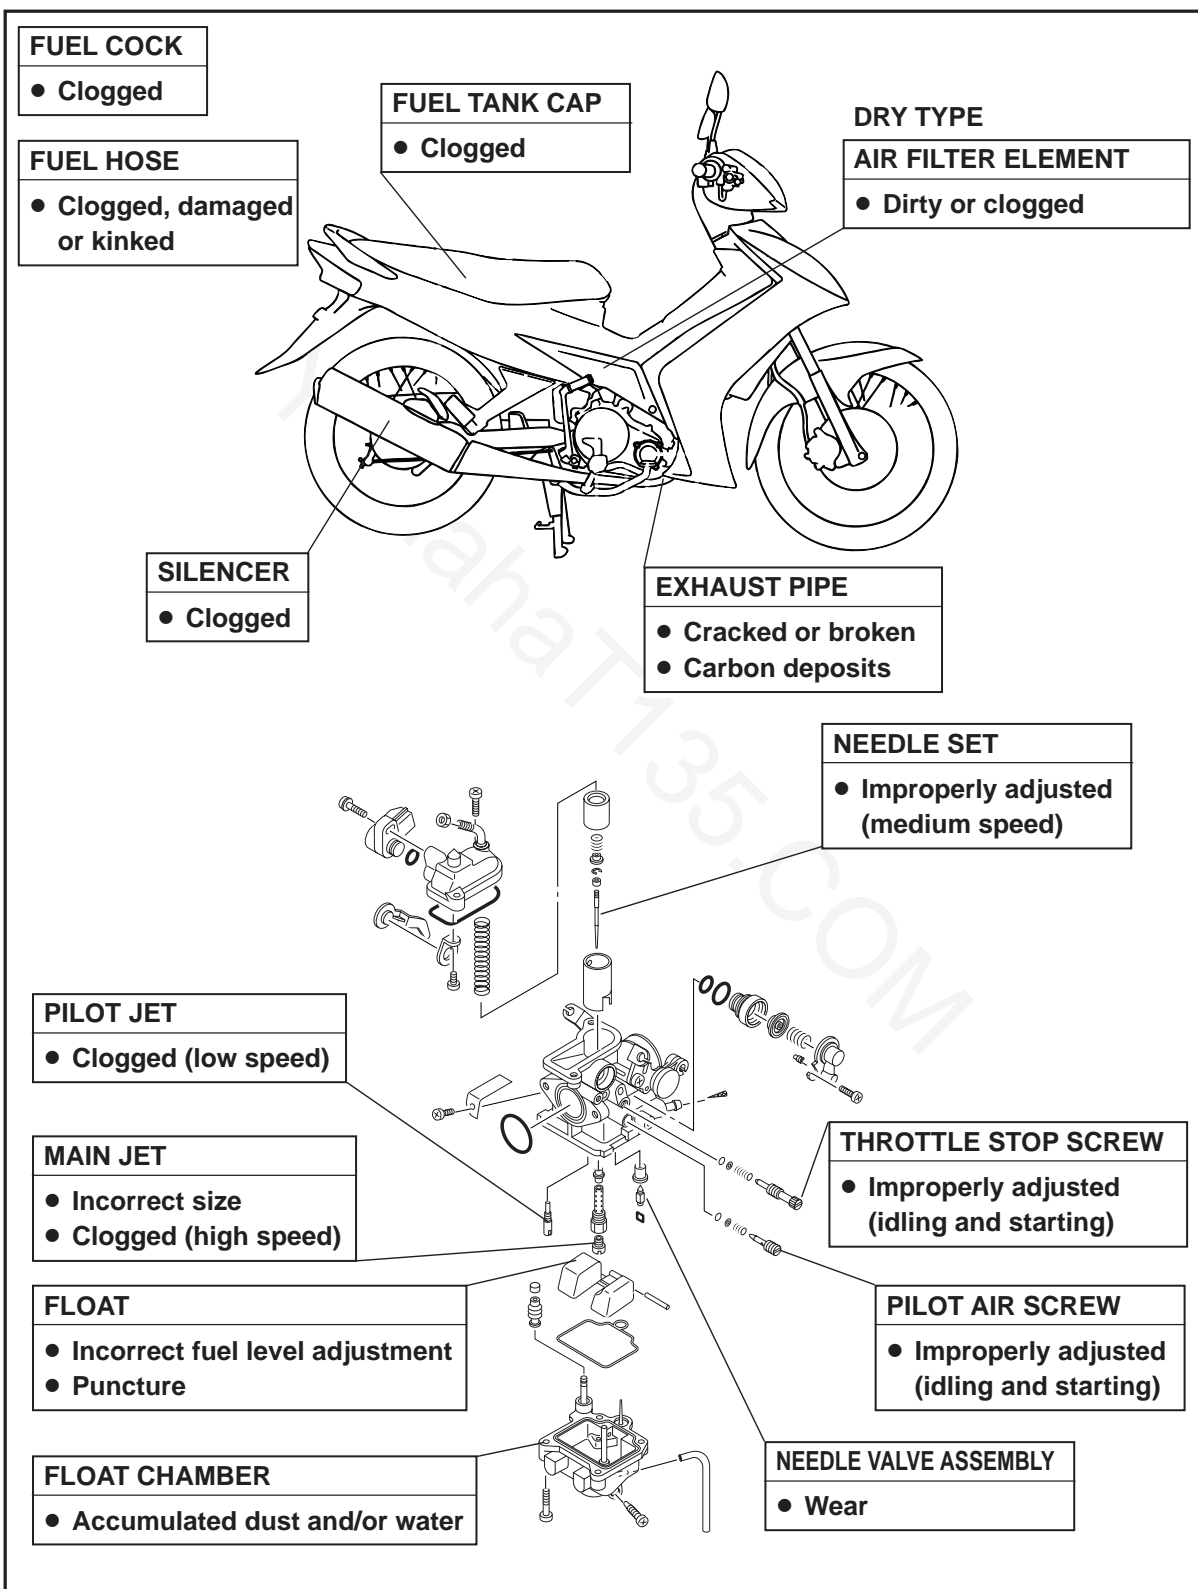

YamahaT135.COM

Yamaha T135 Service Manual

YamahaT135.COM

Yamaha T135 Service Manual

YamahaT135.COM




YAMAHA

YAMAHA MOTOR CO., LTD.
2500 SHINGAI IWATA SHIZUOKA JAPAN

YamahaT135.COM

Yamaha T135 Service Manual

T135SE/ T135S WIRING DIAGRAM

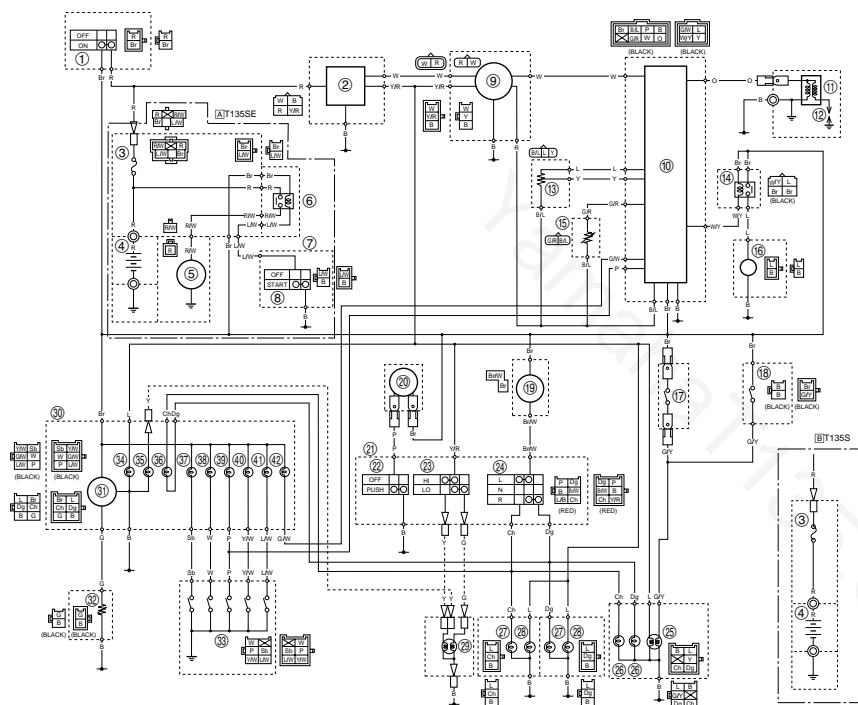

- ① Main switch
- ② Rectifier/regulator
- ③ Fuse
- ④ Battery
- ⑤ Starter motor
- ⑥ Starter relay
- ⑦ Right handlebar switch
- ⑧ Start switch
- ⑨ A.C. magneto
- ⑩ C.D.I. unit
- ⑪ Ignition coil
- ⑫ Spark plug
- ⑬ Throttle position sensor
- ⑭ Fan motor relay
- ⑮ Thermo sensor
- ⑯ Fan motor
- ⑰ Front brake light switch
- ⑱ Rear brake light switch
- ⑲ Turn signal relay
- ⑳ Horn
- ㉑ Left handlebar switch
- ㉒ Horn switch
- ㉓ Dimmer switch
- ㉔ Turn signal switch
- ㉕ Tail/brake light
- ㉖ Rear turn signal light
- ㉗ Front turn signal light
- ㉘ Auxiliary light
- ㉙ Headlight
- ㉚ Meter assembly
- ㉛ Fuel gauge
- ㉜ Fuel sender
- ㉝ Neutral switch
- ㉞ Meter light
- ㉟ High beam indicator light
- ㊱ Turn signal indicator light
- ㊲ Neutral indicator light
- ㊳ 1st gear position light
- ㊴ 2nd gear position light
- ㊵ 3rd gear position light
- ㊶ 4th gear position light
- ㊷ Coolant temperature warning indicator light

COLOR CORD

B.....Black
Br.....Brown
Ch.....Chocolate
Dg.....Dark green
G.....Green
L.....Blue
O.....Orange
Sb.....Sky blue

P.....Pink
R.....Red
W.....White
Y.....Yellow
B/L.....Black/Blue
Br/W.....Brown/White
G/R.....Green/Red
G/W.....Green/White

G/Y.....Green/Yellow
L/B.....Blue/Black
L/W.....Blue/White
R/W.....Red/White
W/Y.....White/Yellow
Y/R.....Yellow/Red
Y/W.....Yellow/White

YamahaT135.COM