



VMX12 '93

2EN-AE2

SUPPLEMENTARY SERVICE MANUAL

FOREWORD

This Supplementary Service Manual has been prepared to introduce new service and data for the VMX12 '93. For complete service information procedures it is necessary to use this Supplementary Service Manual together with the following manual.

VMX12 '86 SERVICE MANUAL: 2EN-ME1 VMX12 '91 SUPPLEMENTARY SERVICE MANUAL: 2EN-AE1
--

VMX12 '93 SUPPLEMENTARY SERVICE MANUAL ©1992 by Yamaha Motor Co., Ltd. 1st Edition, November 1992 All rights reserved. Any reprinting or unauthorized use without the written permission of Yamaha Motor Co., Ltd. is expressly prohibited.

NOTICE

This manual was written by Yamaha Motor Company Ltd. primarily for use by Yamaha dealers and qualified mechanics. It is not possible to put an entire mechanic's education into one manual, so persons using this book to perform maintenance and repairs on Yamaha motorcycles should have a basic understanding of the mechanical concepts and procedures inherent in motorcycle repair technology. Without such knowledge, attempted repairs or service to the motorcycle may render it unfit to use and/or unsafe.

Yamaha Motor Company Ltd. is continually striving to improve all models manufactured by Yamaha. Modifications and significant changes in specifications or procedures will be forwarded to all Authorized Yamaha dealers and will, where applicable, appear in future editions of this manual.

PARTICULARLY IMPORTANT INFORMATION

This material is distinguished by the following notation.



The Safety Alert Symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



Failure to follow WARNING instructions could result in severe injury or death to the motorcycle operator, a bystander, or a person inspecting or repairing the motorcycle.

CAUTION:

A CAUTION indicates special precautions that must be taken to avoid damage to the motorcycle.

NOTE:

A NOTE provides key information to make procedures easier or clearer.

HOW TO USE THIS MANUAL

CONSTRUCTION OF THIS MANUAL

This manual consists of chapters for the main categories of subjects. (See “Illustrated symbols”)

1st title ①: This is a chapter with its symbol on the upper right of each page.

2nd title ②: This title appears on the upper of each page on the left of the chapter symbol.
(For the chapter “Periodic inspection and adjustment” the 3rd title appears.)

3rd title ③: This is a final title.

MANUAL FORMAT

All of the procedures in this manual are organized in a sequential, step-by-step format. The information has been compiled to provide the mechanic with an easy to read, handy reference that contains comprehensive explanations of all disassembly, repair, assembly, and inspections.


A set of particularly important procedure ④ is placed between a line of asterisks “*” with each procedure preceded by “●”.

IMPORTANT FEATURES

- Data and a special tool are framed in a box preceded by a relevant symbol ⑤.
- An encircled numeral ⑥ indicates a part name, and an encircled alphabetical letter data or an alignment mark ⑦, the others being indicated by an alphabetical letter in a box ⑧.
- A condition of a faulty component will precede an arrow symbol and the course of action required the symbol ⑨.

EXPLODED DIAGRAM

Each chapter provides exploded diagrams before each disassembly section for ease in identifying correct disassembly and assembly procedures.

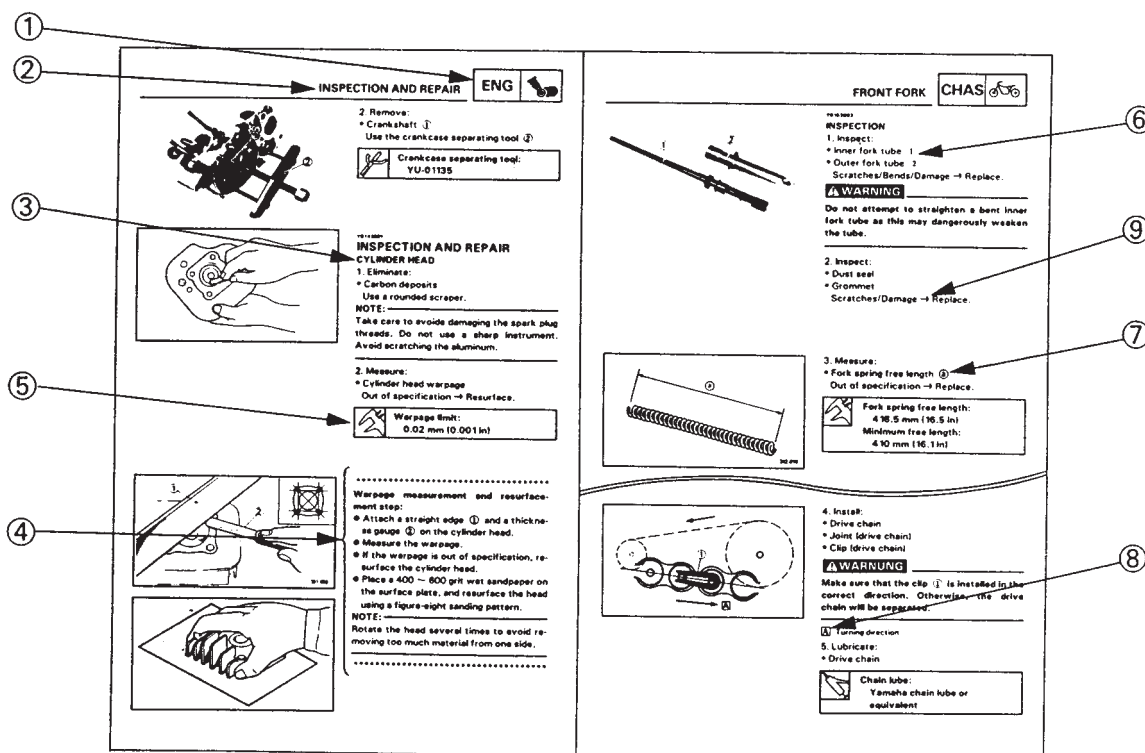

①	GEN INFO 	②	SPEC 		
③	INSP ADJ 	④	ENG 		
⑤	COOL 	⑥	CARB 		
⑦	CHAS 	⑧	ELEC 		
⑨	TRBL SHTG 	⑩			
⑪		⑫			
⑬		⑭			
⑮		⑯			
⑰		⑱		⑲	
⑳		㉑		㉒	
㉓		㉔	New		

ILLUSTRATED SYMBOLS (Refer to the illustration)

Illustrated symbols ① to ⑨ are designed as thumb tabs to indicate the chapter's number and content.

- ① General information
- ② Specifications
- ③ Periodic inspection and adjustment
- ④ Engine
- ⑤ Cooling system
- ⑥ Carburetion
- ⑦ Chassis
- ⑧ Electrical
- ⑨ Troubleshooting

Illustrated symbols ⑩ to ⑯ are used to identify the specifications appearing in the text.

- ⑩ Filling fluid
- ⑪ Lubricant
- ⑫ Special tool
- ⑬ Tightening
- ⑭ Wear limit, clearance
- ⑮ Engine speed
- ⑯ Ω , V, A

Illustrated symbols ⑰ to ㉔ in the exploded diagram indicate grade of lubricant and location of lubrication point.

- ⑰ Apply engine oil
- ⑱ Apply gear oil
- ⑲ Apply molybdenum disulfide oil
- ㉑ Apply wheel bearing grease
- ㉒ Apply lightweight lithium-soap base grease
- ㉓ Apply molybdenum disulfide grease
- ㉔ Apply locking agent (LOCTITE®)
- ㉕ Use new one

CONTENTS

GENERAL INFORMATION	1
MOTORCYCLE IDENTIFICATION	1
VEHICLE IDENTIFICATION NUMBER (For E)	1
FRAME SERIAL NUMBER (Except for E)	1
ENGINE SERIAL NUMBER	1
SPECIAL TOOL	2
FOR CHASSIS SERVICE	2
SPECIFICATIONS	3
GENERAL SPECIFICATIONS	3
MAINTENANCE SPECIFICATIONS	4
ENGINE	4
CHASSIS	4
ELECTRICAL	5
CHASSIS	6
FRONT AND REAR BRAKE	6
FRONT FORK	7
REMOVAL	8
DISASSEMBLY	9
INSPECTION	10
ASSEMBLY	11
INSTALLATION	14

MOTORCYCLE IDENTIFICATION

**GEN
INFO**




GENERAL INFORMATION

MOTORCYCLE IDENTIFICATION

VEHICLE IDENTIFICATION NUMBER (For E)


The vehicle identification number ① is stamped into the steering head pipe.

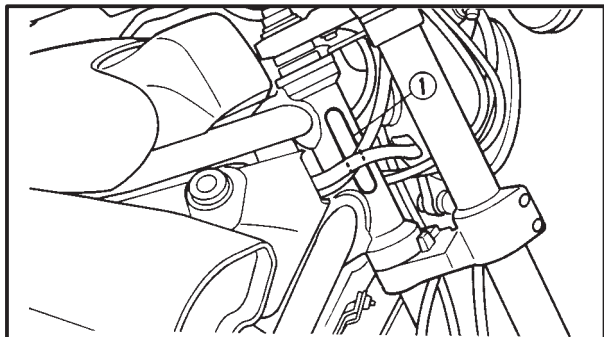

Starting serial number:
JYA2ENS0-PA041101

NOTE:

The vehicle identification number is used to identify your motorcycle and may be used to register your motorcycle with the licensing authority in your state.

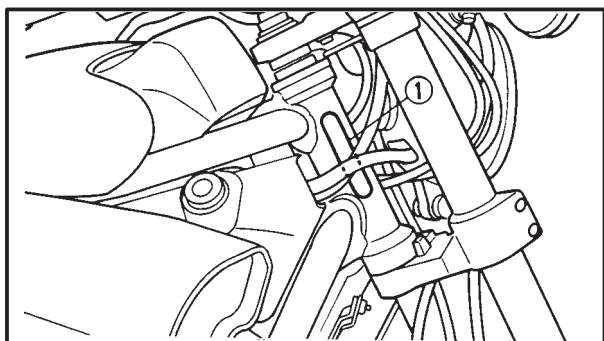


FRAME SERIAL NUMBER (Except for E)

The frame serial number ① is stamped into the right side of steering head.

Starting serial number:
2EN-031101 (F) (I) (B) (PRT) (GB)

NOTE:

The first three digits of these numbers are for model identifications; the remaining digits are the unit production number.

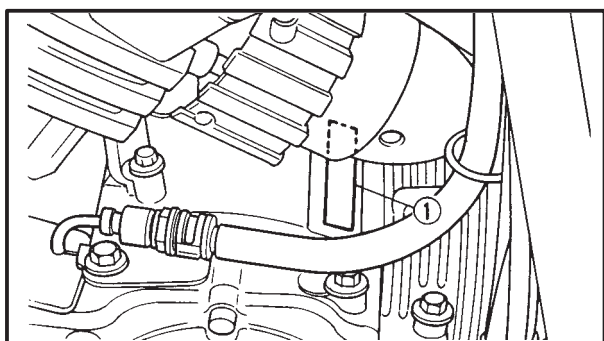

ENGINE SERIAL NUMBER

The engine serial number ① is stamped into the left side of the engine.

Starting serial number:
2EN-031101 (F) (I) (B) (PRT) (GB)
2EN-041101 (E)

NOTE:

- The first three digits of these numbers are for model identifications; the remaining digits are the unit production number.
- Designs and specifications are subject to change without notice.

SPECIAL TOOLS

**GEN
INFO**


SPECIAL TOOLS

The proper special tools are necessary for complete and accurate tune-up and assembly. Using the correct special tool will help prevent damage caused by the use of improper tools or improvised techniques.

The shape and part number used for the special tool differ by country, so two types are provided.

Refer to the list provided to avoid errors when placing an order.

P/N. YM-□□□□□, YU-□□□□□ For USA,
YS-□□□□□, YK-□□□□□ Califo-
ACC-□□□□□ mia,
CDN

P/N. 90890-□□□□□

For EUR,
AUS

FOR CHASSIS SERVICE

2

Front fork seal driver
(weight) ①

P/N. YM-33963


P/N. 90890-01367

Adapter (43 mm) ②

P/N. YM-8020

P/N. 90890-01374

These tools are used when installing the fork seal:

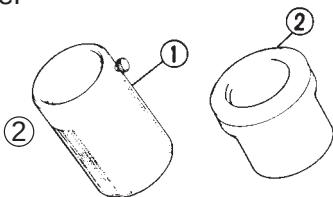
1

T-Handle ①

P/N. YM-01326

P/N. 90890-01326


For damper rod

holder (29 mm) ②

P/N. YM-33962

P/N. 90890-01375

These tools are used to loosen and tighten the front fork damper rod holding bolt.

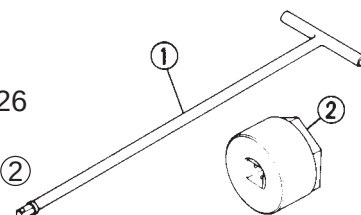

GENERAL SPECIFICATIONS

SPEC



SPECIFICATIONS

GENERAL SPECIFICATIONS

Model	VMX12
Model code number:	3LR8 (F) (I) (B) (PRT) (GB) 3LR9 (E)
Engine starting number:	2EN-031101 (F) (I) (B) (PRT) (GB) 2EN-041101 (E)
Frame starting number:	2EN-031101 (F) (I) (B) (PRT) (GB)
Vehicle identification number:	JYA2ENS0* PA041101 (E)
Minimum turning radius:	2,900 mm (114 in)
Tire:	
Type	Tubeless
Size (F)	110/90V 18 METZELER/ME33
Size (R)	150/90VB 15 M/C METZELER/ML2
Wear limit	1.0 mm (0.04 in)

MAINTENANCE SPECIFICATIONS

SPEC


MAINTENANCE SPECIFICATIONS ENGINE

Model	VMX12
Carburetor:	
I.D. Mark	3LR-01
Main jet (M.J.)	#150
Main air jet (M.A.J.)	ø2.0
Jet needle (J.N.)	5DZ19-3
Needle jet (N.J.)	Y-0
Pilot jet (P.J.)	#42.5
Pilot air jet (P.A.J.1)	#95
Pilot screw (P.S.)	2 and 1/2 turn out
Pilot outlet (P.O.)	0.9
Bypass 1 (B.P.1)	0.8
Bypass 2 (B.P.2)	0.8
Bypass 3 (B.P.3)	0.9
Valve seat size (V.S.)	1.5
Starter jet (G.S.1)	#45
Starter jet (G.S.2)	#0.8
Fuel level (F.L.)	15 ~ 17 mm (0.59 ~ 0.66 in)
Engine idling speed	950 ~ 1,050 r/min
Vacuum pressure at idling speed	200 mm Hg (7.87 in Hg)

CHASSIS

Model	VMX12
Front suspension:	
Front fork travel	140 mm (5.51 in)
Fork spring free length	386.5 mm (15.2 in)
<Limit>	<381.5 mm (15.0 in)>
Collar length	245 mm (9.65 in)
Spring rate:	
K1	3.75 N/mm (0.375 kg/mm, 21.0 lb/in)
K2	4.90 N/mm (0.5 kg/mm, 28.0 lb/in)
Stroke	
K1	0 ~ 78 mm (0 ~ 3.07 in)
K2	78 ~ 140 mm (3.07 ~ 5.51 in)
Optional spring	No.
Oil capacity	619 cm ³ (21.8 Imp oz, 20.9 US oz)
Oil level	123 mm (4.8 in)
Oil grade	Yamaha fork oil 10wt or equivalent
Enclosed air pressure (standard)	39.2 kPa (0.4 kg/cm ² , 5.7 psi)
<Min. ~ Max.>	<39.2 ~ 98.1 kPa (0.4 ~ 1.0 kg/cm ² , 5.7 ~ 14.2 psi)>
Front disc brake:	
Type	Dual
Disc outside diameter × thickness	298 × 5.0 mm (11.7 × 0.20 in)
Pad thickness Inner	5.0 mm (0.20 in)
<Limit>*	<0.5 mm (0.02 in)>
Pad thickness Outer	5.0 mm (0.20 in)
<Limit>*	<0.5 mm (0.02 in)>
	
Master cylinder inside diameter	15.87 mm (0.63 in)
Caliper cylinder inside diameter	33.96 + 30.23 mm (1.33 + 1.19 in)
Brake fluid type	DOT #4 or DOT #3

MAINTENANCE SPECIFICATIONS

SPEC


ELECTRICAL

Model	VMX12
T.C.I.:	
Pickup coil resistance (color)	81 ~ 121 Ω at 20°C (68°F) (Black – Orange)
T.C.I. Unit-model/Manufacturer	BB7224/HITACHI

CHASSIS

- ① Air bleed screw
- ② Retaining pin
- ③ Dust seal
- ④ Piston seal
- ⑤ Piston
- ⑥ Brake pad

- ⑦ Pad spring
- ⑧ Caliper assembly
- ⑨ Brake disc
- E** The arrow mark on the pad spring must point in the disc rotating direction.

B	PAD WEAR LIMIT: 0.5 mm (0.02 in)
---	-------------------------------------

C	MINIMUM DISC THICKNESS: 4.5 mm (0.18 in)
---	---

D	MAXIMUM DEFLECTION: 0.3 mm (0.01 in)
---	---

35 Nm (3.5 m•kg, 25 ft•lb)

5 Nm (0.5 m•kg, 3.6 ft•lb)

20 Nm (2.0 m•kg, 14 ft•lb)

35 Nm (3.5 m•kg, 25 ft•lb)

20 Nm (2.0 m•kg, 14 ft•lb)

FRONT FORK

CHAS




FRONT FORK

- | | |
|-----------------------|-------------------|
| ① Front fork assembly | ⑨ Outer fork tube |
| ② Inner fork tube | ⑩ Oil lock piece |
| ③ Piston metal | ⑪ Damper rod |
| ④ Dust cover | ⑫ Fork spring |
| ⑤ Retaining clip | ⑬ Spring seat |
| ⑥ Oil seal | ⑭ Collar |
| ⑦ Seal spacer | ⑮ Cap bolt |
| ⑧ Slide metal | ⑯ Fork cap |

A	FORK OIL (EACH):
B	CAPACITY: 619 cm ³ (21.8 Imp oz, 20.9 US oz)
C	GRADE: Yamaha Fork Oil 10wt or equivalent
D	STD. AIR PRESSURE: 39.2 kPa (0.4 kg/cm ² , 5.7 psi)
E	MIN. TO MAX. AIR PRESSURE: 39.2 ~ 98.1 kPa (0.4 ~ 1.0 kg/cm ² , 5.7 ~ 14.2 psi)

23 Nm (2.3 m•kg, 17 ft•lb)

F	FORK SPRING FREE LENGTH (LIMIT): 381.5 mm (15.0 in)
---	---

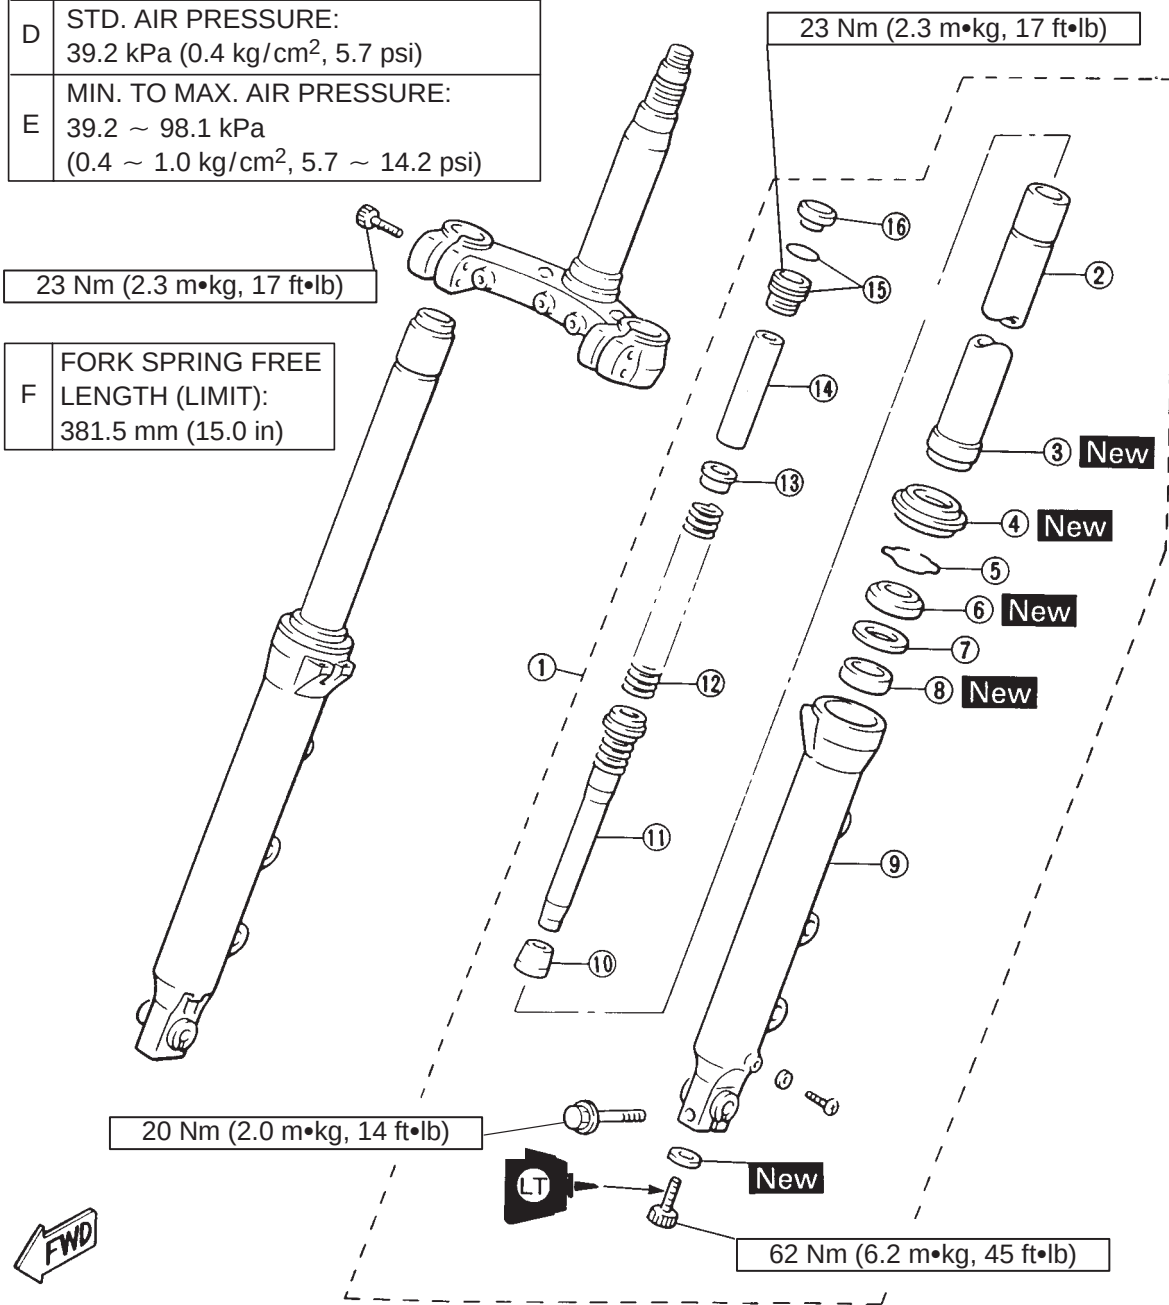

FRONT FORK

CHAS



REMOVAL

⚠ WARNING

Securely support the motorcycle so there is no danger of it falling over.

1. Place the motorcycle on a level place.
2. Elevate the front wheel by placing suitable stand under the engine.




3. Remove:
 - Caliper assembly ①
 - Brake hose holder ②
4. Disconnect:
 - Speedometer cable ③

NOTE:

Do not depress the brake lever when the wheel is off the motorcycle otherwise the brake pads will be forced shut.



5. Loosen:
 - Pinch bolt ① (wheel axle)
6. Remove:
 - Wheel axle ②
 - Front wheel assembly

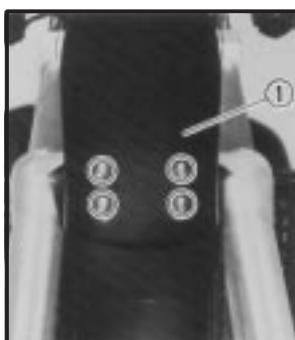


7. Remove:
 - Front fender ①
 - Fork brace ②



8. Remove:
 - Fork cap ①
 Depress the valve ② until all of the air has been released.

FRONT FORK

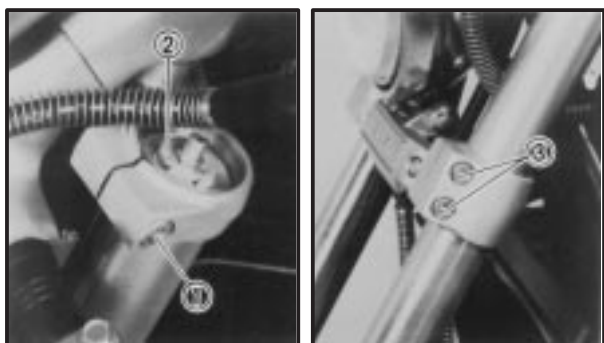
CHAS


9. Loosen:

- Pinch bolt ① (handle crown)
- Cap bolt ②
- Pinch bolts ③ (under bracket)

⚠ WARNING

Support the fork before loosening the pinch bolts.

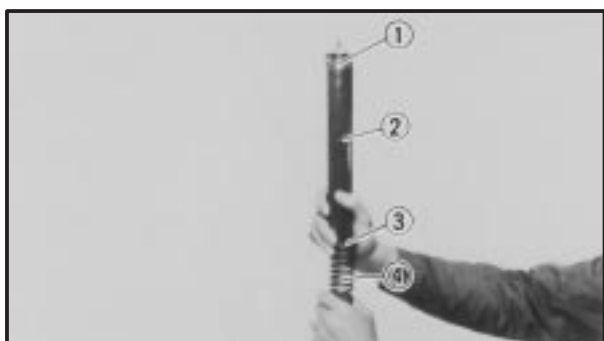


DISASSEMBLY

1. Remove:

- Cap bolt ①
- Spacer ②
- Spring seat ③
- Spring ④

2. Drain:

- Fork oil

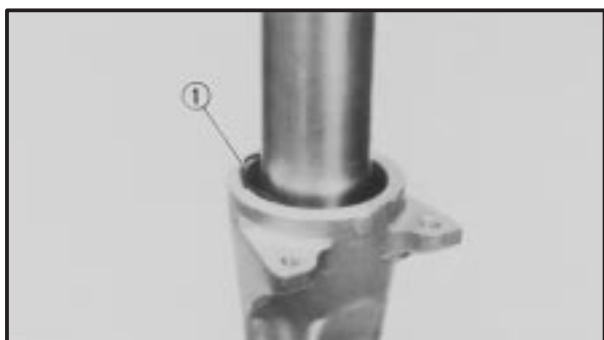


3. Remove:

- Dust seal
- Retaining clip ①

Use a thin slotted head screw driver.

CAUTION:

Take care not to scratch the inner tube.

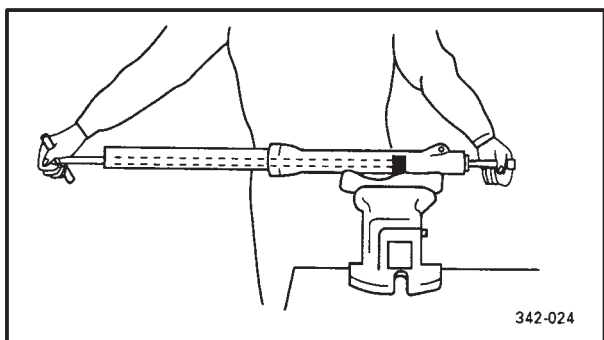

342-024

4. Remove:

- Bolt (damper rod)
- Copper washer

NOTE:

Loosen the bolt (damper rod) while holding the damper rod with the T-handle and holder.



T-handle:

YM-01326
90890-01326


Holder (29 mm):

YM-33962
90890-01375

5. Remove:

- Inner fork tube

FRONT FORK

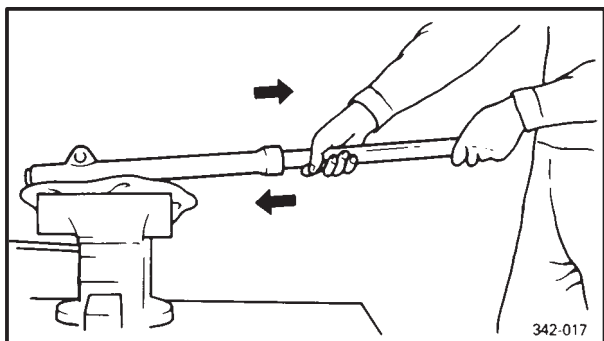
CHAS


Removal steps:

- Hold the fork leg horizontally.
- Clamp the caliper mounting boss of the outer tube securely in a vise with soft jaws.
- Pull out the inner fork tube from the outer tube by forcefully, but carefully, with drawing the inner tube.

CAUTION:

- Excessive force will damage the oil seal and/or the bushes. Damage oil seal and bushing must be replaced.
- Avoid bottoming the inner tube in the outer tube during the above procedure, as the oil lock piece will be damaged.

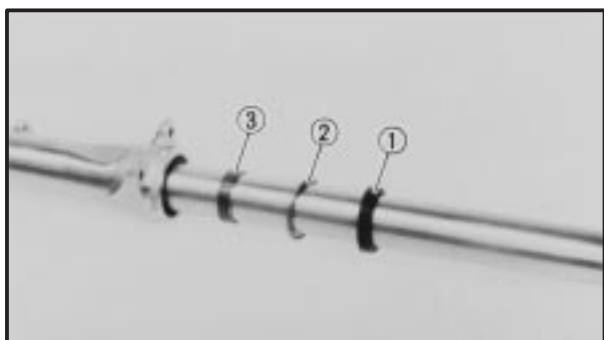

6. Remove:

- Oil seal ①
- Seal spacer ②
- Slide metal ③
- Piston metal
- Damper rod
- Oil lock piece



INSPECTION

1. Inspect:

- Inner fork tube
- Outer fork tube

Scratches/Bends/Damage → Replace.

⚠ WARNING


Do not attempt to straighten a bent inner fork tube as this may dangerously weaken the tube.

2. Measure:

- Fork spring
- Over specified limit → Replace.



**Fork spring free length (limit):
381.5 mm (15.0 in)**

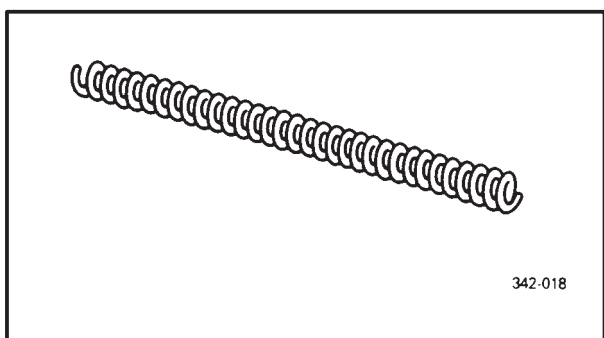

FRONT FORK

CHAS


3. Inspect:

- Damper rod
Wear/Damage → Replace.
Contamination → Blow out all oil passages with compressed air.

4. Inspect:

- Oil lock piece
- O-ring (cap bolt)
Wear/Damage → Replace.

ASSEMBLY

Reverse the "DISASSEMBLY" procedure.
Note the following points.

NOTE:

- In front fork reassembly, be sure to use following new parts.
 - * Piston metal
 - * Slide metal
 - * Oil seal
 - * Dust seal
- Make sure that all components are clean before reassembly.


1. Install:

- Damper rod

CAUTION:

Allow the damper rod to slide slowly down the inner fork tube until it protrudes from the bottom, being careful not to damage the inner fork tube.

FRONT FORK

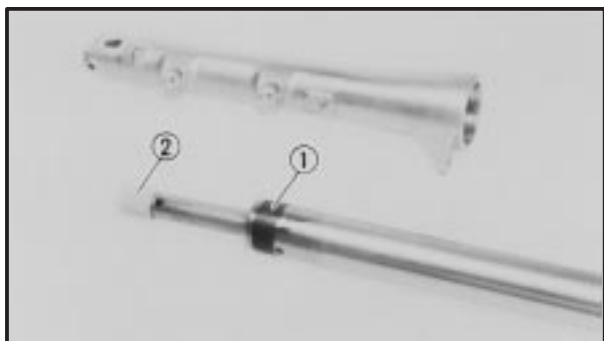CHAS


2. Lubricate:


- Inner fork tube (outer surface)



Recommended lubricant:
Fork oil 10w or equivalent

3. Install:

- Piston metal ①
- Oil lock piece ②

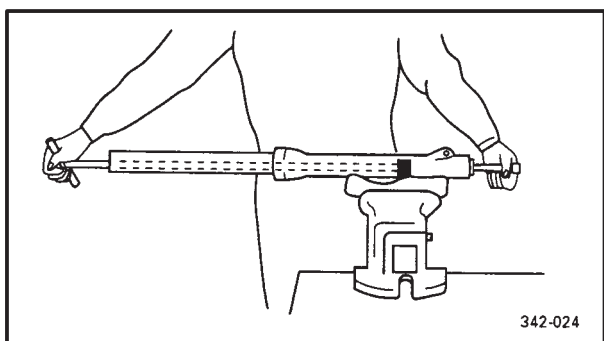

4. Tighten:

- Bolt (damper rod)



Bolt (damper rod):
62 Nm (6.2 m•kg, 45 ft•lb)
LOCTITE®

NOTE:

Tighten the bolt (damper rod) while holding the damper rod with the T-handle and holder.



T-handle:
YM-01326
90890-01326
Holder (29 mm):
YM-33962
90890-01375



5. Install:

- Slide metal
- Seal spacer
- Oil seal ①

Use the fork seal driver weight and adapter



Fork seal driver weight:
YM-33963
90890-01367
Adapter (43 mm):
YM-8020
90890-01374

NOTE:


Before installing the oil seal, apply the lithium soap base grease onto the oil seal lips.

CAUTION:

Be sure that the oil seal numbered side face upward.

FRONT FORK

CHAS

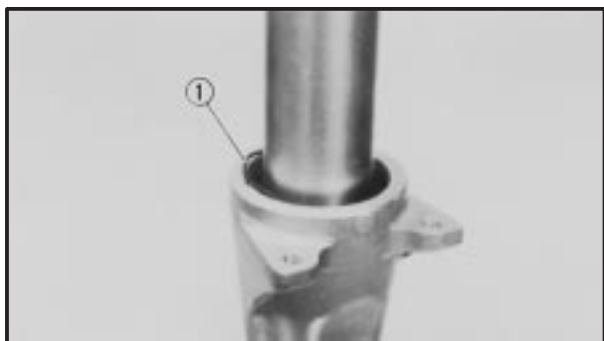

6. Install:

- Retaining clip ①

NOTE:

Fit the retaining clip correctly in the groove in the outer tube.



7. Install:

- Dust seal ①
- Use the fork seal driver weight.



Fork seal driver weight:

YM-33963

90890-01367

8. Fill:

- Fork oil



Each fork

619 cm³

(21.8 Imp oz, 20.9 US oz)

Fork oil 10w or equivalent after filling, slowly pump the fork up and down to distribute oil.



Oil level:

123 mm (4.8 in)

from the top of inner fork tube fully compressed without spring.

NOTE:

Place the front fork on upright position.



9. Install:

- Fork spring ①
- Spring seat ②
- Spacer collar ③
- Cap bolt ④

NOTE:

- Fork spring must be installed with the smaller pitch upward.
- Before installing the cap bolt, apply the grease to the O-ring.
- Temporarily tighten the cap bolt.

FRONT FORK

CHAS


INSTALLATION


Reverse the "REMOVAL" procedure.
Note the following points.

1. Install:

- Front fork(s)
- Temporary tighten the pinch bolts.

NOTE:

Be sure the inner fork tube end is flush with the top of the handle crown.

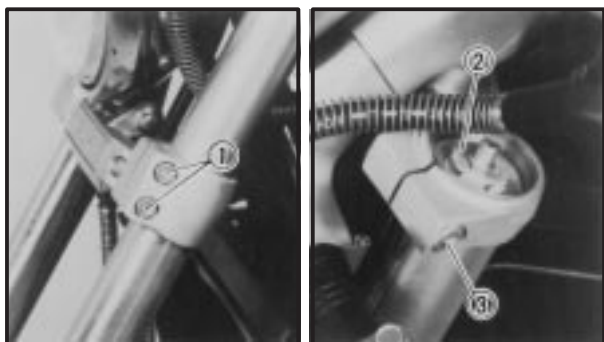

2. Tighten

- Pinch bolts ① (under bracket)
- Cap bolt ② (front fork)
- Pinch bolt ③ (handle crown)



Pinch bolt (lower bracket):


23 Nm (2.3 m•kg, 17 ft•lb)

Cap bolt (front fork):

23 Nm (2.3 m•kg, 17 ft•lb)

Pinch bolt (handle crown):

23 Nm (2.3 m•kg, 17 ft•lb)

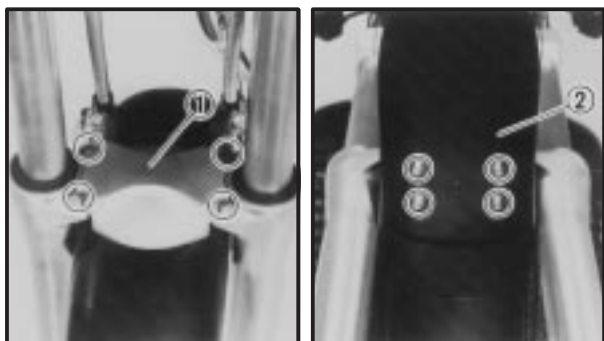

3. Adjust:

- Front fork air pressure
- Refer to "FRONT FORK ADJUSTMENT" in the CHAPTER 2.

4. Install:

- Fork brace ①
- Front fender ②

5. Install:

- Front wheel



Front wheel axle:

60 Nm (6.0 m•kg, 43 ft•lb)

Pinch bolt (wheel axle):

20 Nm (2.0 m•kg, 14 ft•lb)

FRONT FORK**CHAS**

6. Install:

- Caliper assembly ①
- Brake hose holder ②
- Speedometer cable ③

**Bolt (caliper bracket):**
35 Nm (3.5 m•kg, 25 ft•lb)**⚠ WARNING**

Make sure that the brake hose are routed properly.
